

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

100219 Counter Height Chair

REVISION 0: 01/10/2006 REVISION 1: 03/15/2012 REVISION 2: 04/18/2016 REVISION 3: 12/11/2020

PAGE 1 OF 4

COASTER

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

Α	BACK FRAME	1PC
В	FRONT LEG FRAME	1PC
С	SIDE RAIL	2PCS
D1	RIGHT SIDE STRETCHER	1PC
E1	LEFT SIDE STRETCHER	1PC
F	SEAT CUSHION	1PC

HARDWARE IDENTIFICATION


1	ALLEN WRENCH (M4 x 110mm - BLK)		1PC
2	BOLT (M6 x 50mm- RBW)		6PCS
3	LOCK WASHER (1/4" - BLK)	@	6PCS
4	SHORT PAN HEAD SCREW (#8 X 1" - BLK)	<i>←mmm</i> ()	4PCS
5	LONG PAN HEAD SCREW	<ammunut(⊕< td=""><td>4PCS</td></ammunut(⊕<>	4PCS

NOTE:


Phillips head screw driver is required in the assembly process; However, manufacturer does not provide this item. Quantities shown are for one chair.



ASSEMBLY INSTRUCTIONS STEP 1

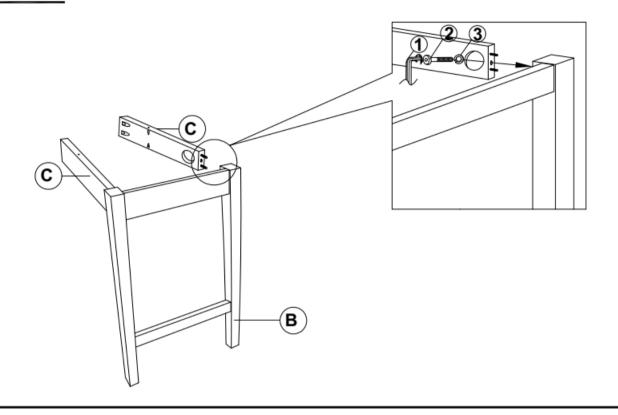


STEP 2

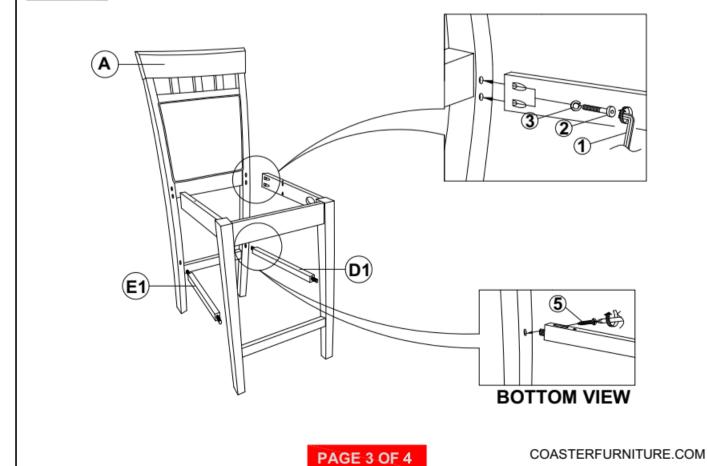


COASTER FINE FURNITURE

ASSEMBLY INSTRUCTIONS

STEP 3

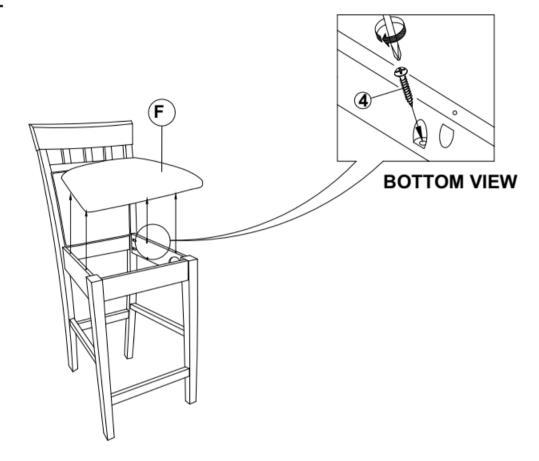


STEP 4 COMPLETE

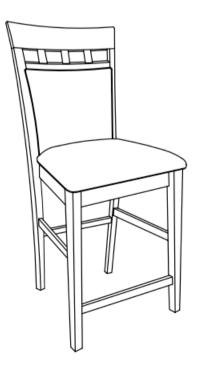





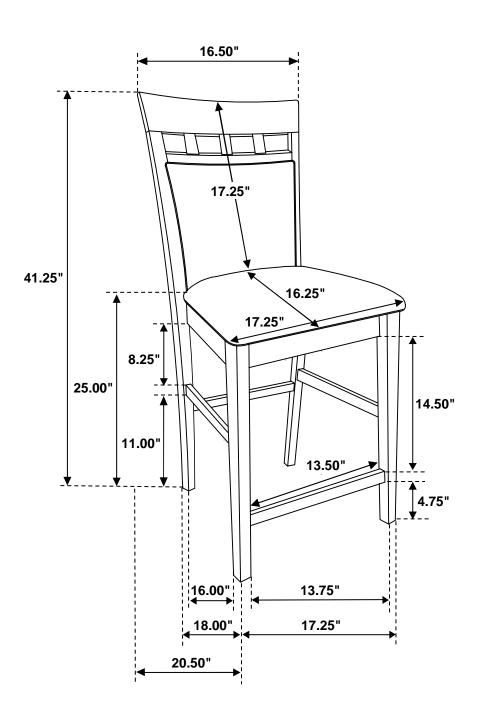

Note: Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

100438(B1&B2) Counter Height Table & Lazy Susan

REVISION 0: 01/10/2007 REVISION 1: 03/30/2012 REVISION 2: 04/26/2012 REVISION 3: 05/28/2020 REVISION 4: 05/28/2024 REVISION 5: 07/01/2024

PAGE 1 OF 6

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

40 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

Α	TOP WITH MOUNTING PLATE		1PC
G	LAZY SUSAN		1PC
B2 (BO)	<u>(2)</u>		
В	LEG	#	4PCS
С	SIDE PANEL		2PCS
D	DOOR PANEL		2PCS
E	TOP PANEL		1PC
F	BOTTOM PANEL		1PC

HARDWARE IDENTIFICATION

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 100438(B2)


1	ALLEN WRENCH (M4 x 110MM - BLK)	1PC
2	BOLT (M6 x 30MM - RBW)	24PCS
3	HEX HEAD SCREW (M7 x 40MM - RBW)	4PCS
4	KNOB WITH SCREW	2SETS
5	RUBBER DISC (356.21420)	8PCS
6	FLAT WASHER (5/16" - RBW)	4PCS

PAGE 2 OF 6


COASTER

ASSEMBLY INSTRUCTIONS

STEP 1

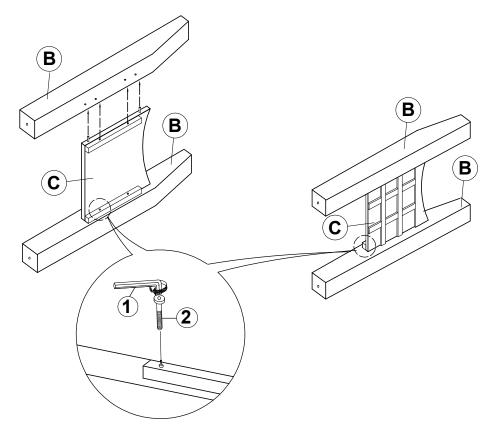


STEP 2

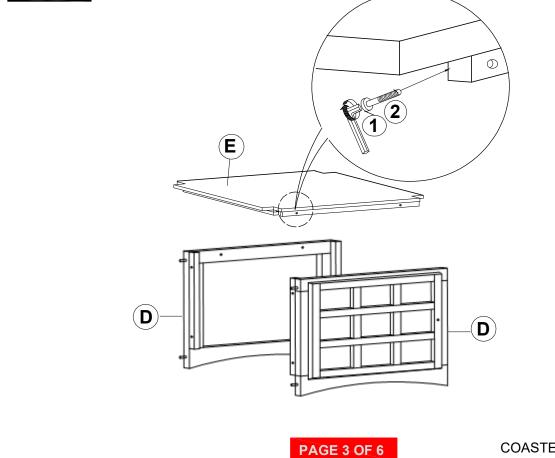




ASSEMBLY INSTRUCTIONS

STEP 3

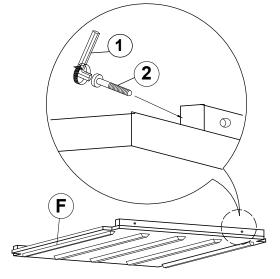

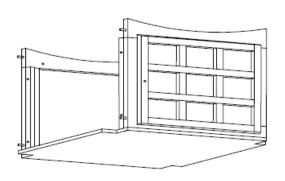

PAGE 4 OF 6 COASTERFURNITURE.COM




ASSEMBLY INSTRUCTIONS


STEP 5

Attention:

Unscrew bolt with Allen wrench to detach the mounting plate from table top. Align and fasten mounting plate to legs using. Allen cap screw and tighten with Allen wrench.


(Please ensure the wood dowel on the mounting plate is facing up).

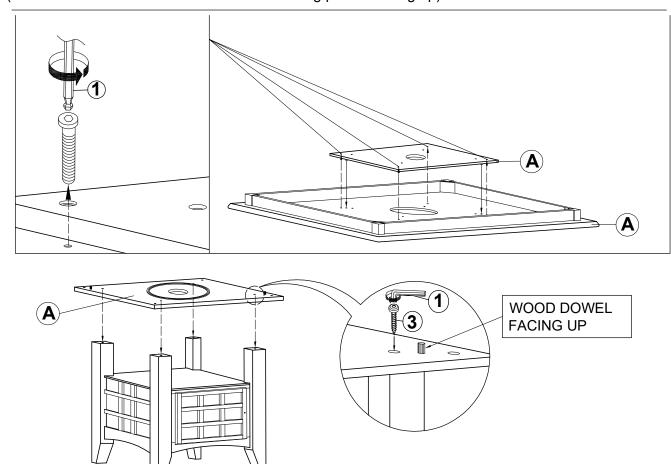

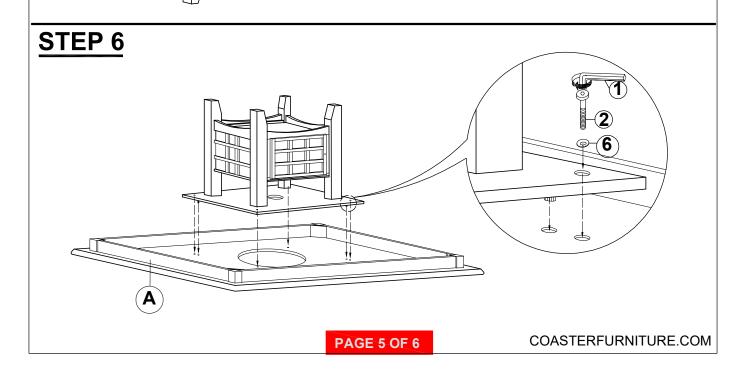




ASSEMBLY INSTRUCTIONS

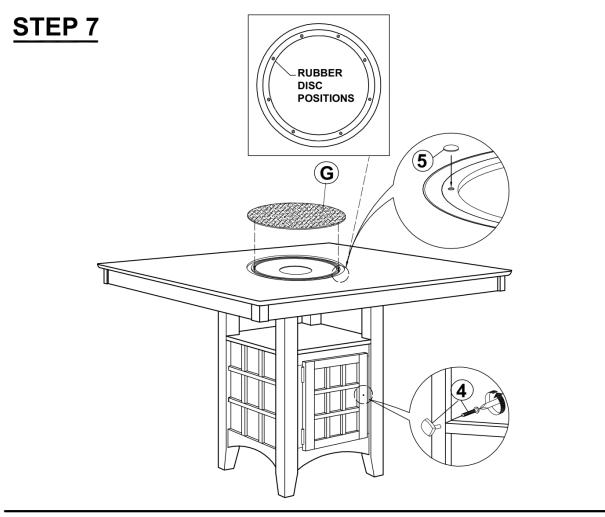


STEP 8 COMPLETE

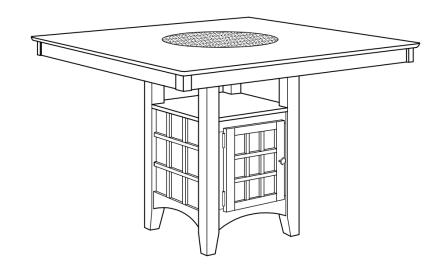





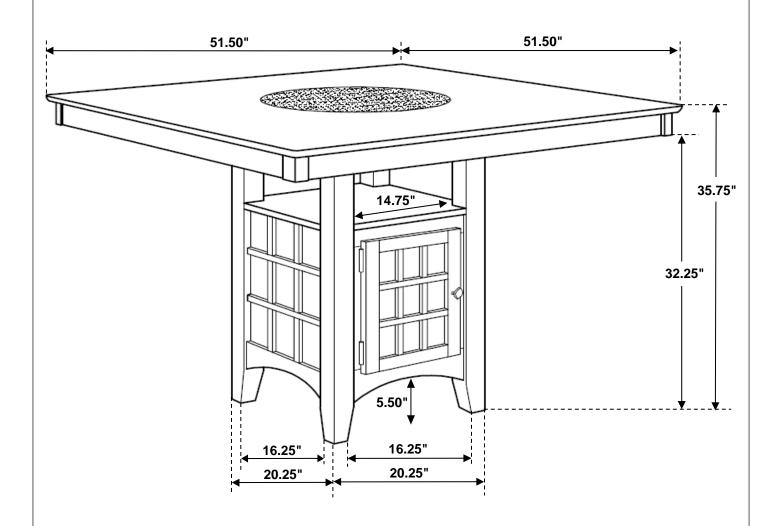

Note: Dimension tolerance ±5%