



ASSEMBLY INSTRUCTION

COASTER FINE FURNITURE



Fine Furniture for every stage of life

101059

COUNTER HEIGHT STOOL

REVISION 0 : 05/24/2019
REVISION 1 : 11/15/2023

PAGE 1 OF 4

COASTERFURNITURE.COM

ITEM: 101059



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

20 MINUTES


PARTS IDENTIFICATION

A SEAT

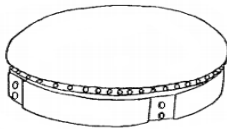


1PC

B BASE

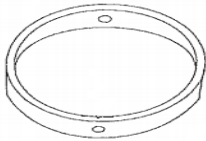

1PCS

 C LEG



4PCS

HARDWARE IDENTIFICATION

1 WRENCH
4mm



1PC

2 LONG BOTL
1/4"×1-3/4"



8PCS

3 LOCK WASHER
1/4"×11mm



12PCS

4 FLAT WASHER#1
1/4"×12mm



4PCS

5 FLAT WASHER#2
1/4"×19mm



8PCS

6 SHORT BOLT
1/4"×1-1/8"



4PCS

7 WOOD CAP
9mm



4PCS

NOTE :


QUANTITIES SHOWN ARE FOR ONE STOOL.

PHILLIPS HEAD SCREW DRIVER IS REQUIRED IN THE ASSEMBLY PROCESS;HOWEVER, MANUFACTURER DOES NOT PROVIDE THIS ITEM.

ITEM: 101059

ASSEMBLY INSTRUCTIONS


STEP 1

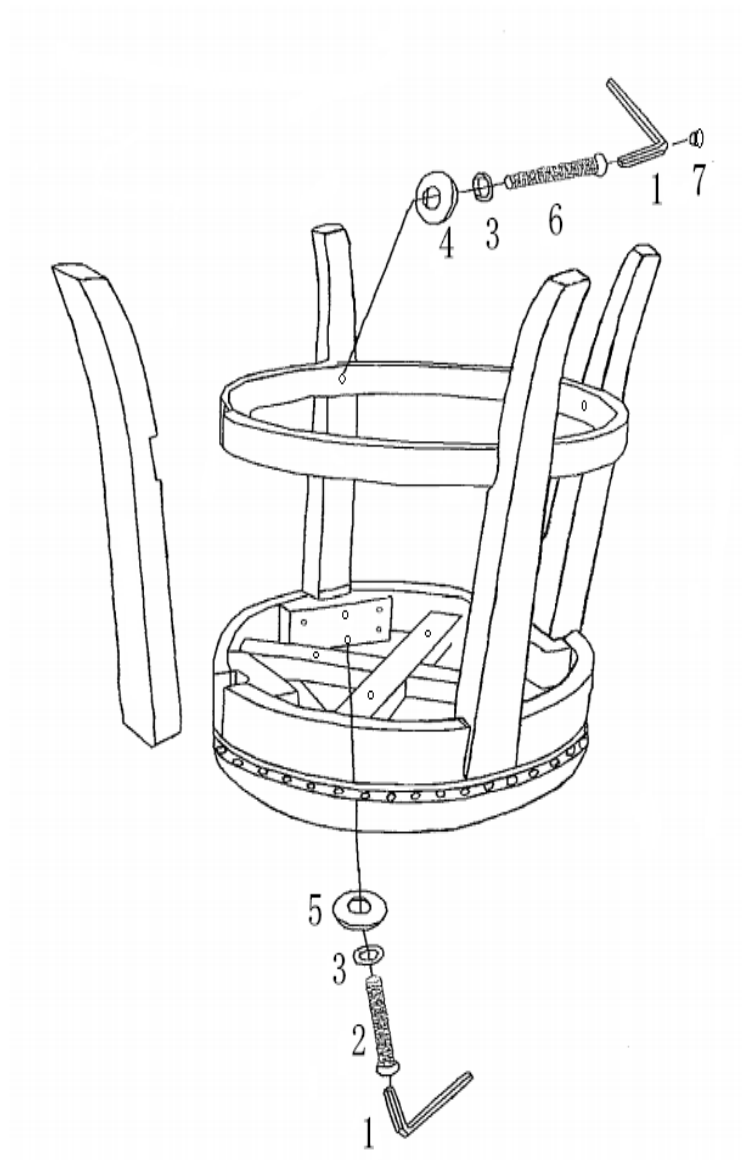

NOTE :

PHILLIPS HEAD SCREW DRIVER IS REQUIRED IN THE ASSEMBLY PROCESS;HOWEVER, MANUFACTURER DOES NOT PROVIDE THIS ITEM.

ITEM:101059

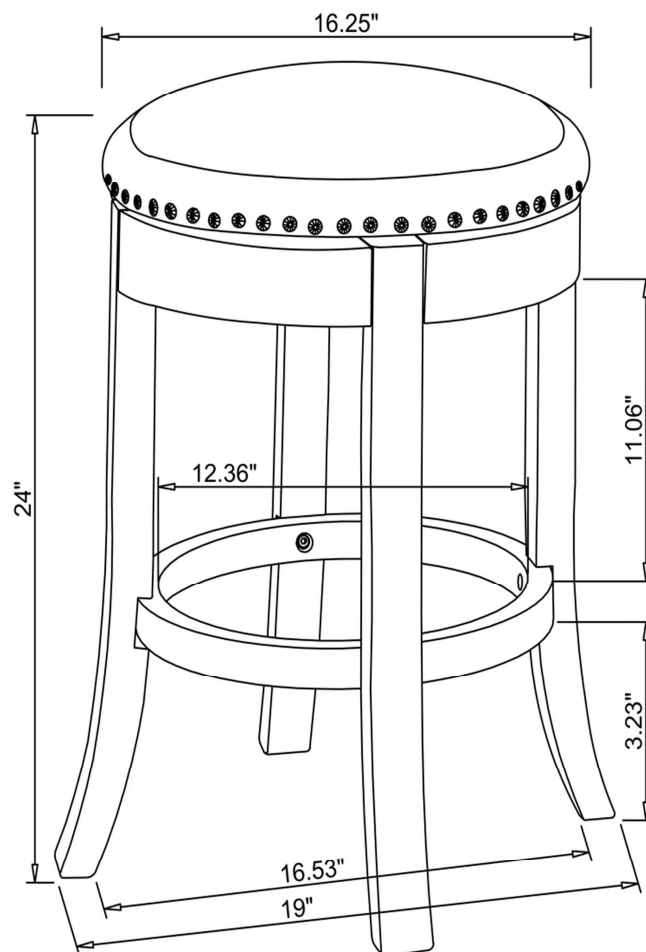

NOTE:

Dimension tolerance $\pm 5\%$