

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

103061 Dining Table

REVISION 0: 12/12/2013 REVISION 1: 04/09/2017 REVISION 2: 03/05/2020

PAGE 1 OF 3

COASTERFURNITURE.COM



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A TOP 1PC

B LEG 4PCS


HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M4 x 63mm - BLK)	1PC
2	BOLT (M6 x 60mm - RBW)	8PCS
3	LOCK WASHER (1/4" - BLK)	8PCS
4	FLAT WASHER (5/16" - RBW)	8PCS

ITEM: 103061 ASSEMBLY INSTRUCTIONS



STEP 1

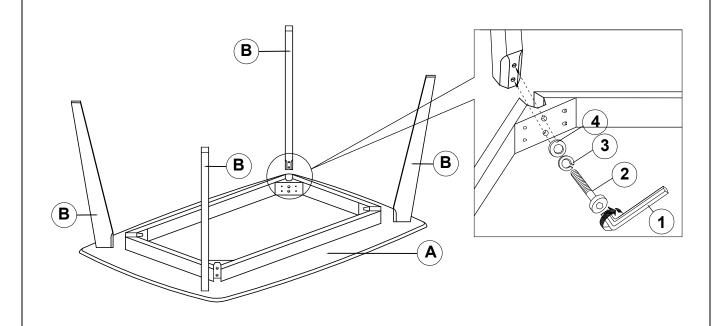


STEP 2 COMPLETE







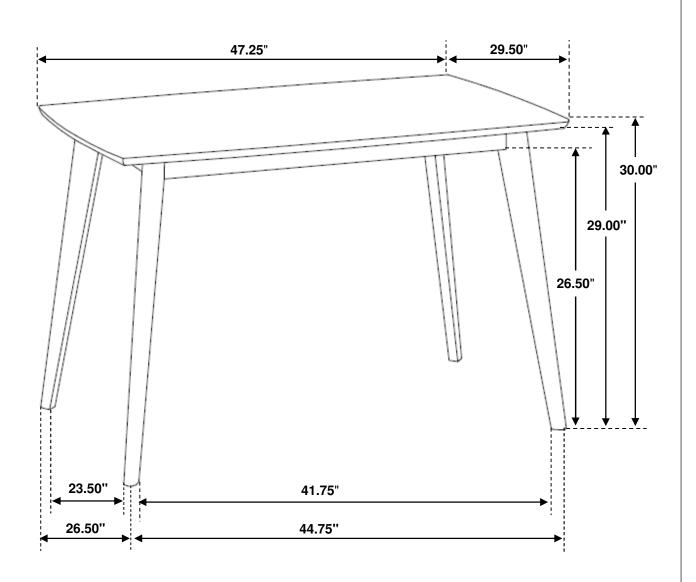

Note: Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

103062 Dining Side Chair

REVISION 1: 12/12/2013 REVISION 1: 08/19/2014 REVISION 2: 02/18/2016 REVISION 3: 11/13/2020

PAGE 1 OF 5

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS

COASTER

 
ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

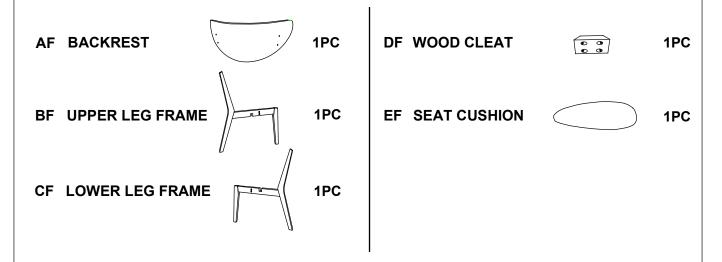

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M4 x 110MM - BLK)	1PC	5	BOLT (M7 x 50MM - ZB)	<u>@</u>	1PC
2	LONG BOLT (M6 x 60MM - RBW)	4PCS	6	LOCK WASHER (1/4" - BLK)	0	8PCS
3	MEDIUM BOLT (M6 x 35MM - RBW)	4PCS	7	FLAT WASHER (M6 X 13MM - RBW)		4PCS
4	SHORT BOLT (M6 x 25MM - RBW)	4PCS	8	WOOD PLUG (Ø14.5 X 9MM)		4PCS


NOTE:

Phillips head screw driver is required in the assembly process; However, manufacturer not provide this item. Quantities shown are for one chair.


COASTER

ASSEMBLY INSTRUCTIONS

STEP 1

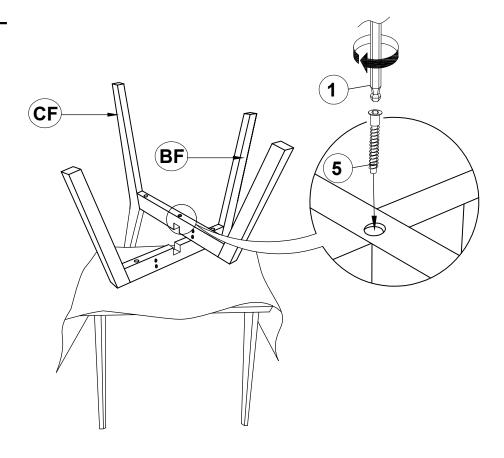

STEP 2

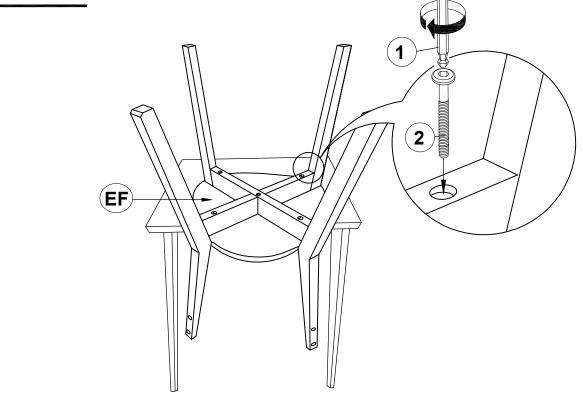


PAGE 3 OF 5

COASTERFURNITURE.COM


COASTER

ASSEMBLY INSTRUCTIONS

STEP 3

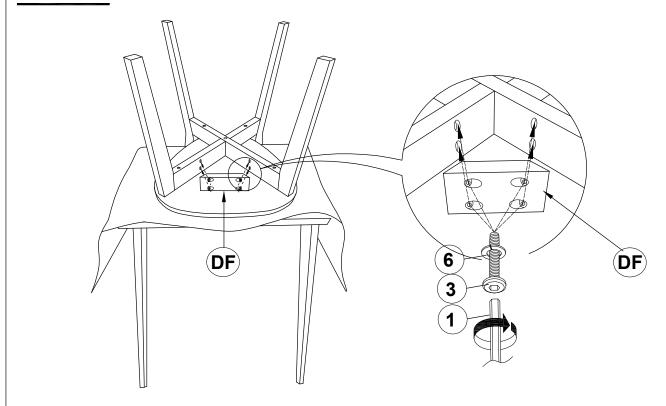


STEP 4

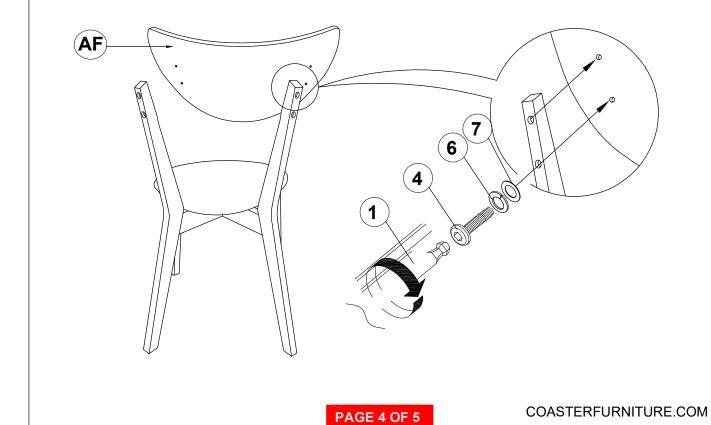


ASSEMBLY INSTRUCTIONS

COASTER

STEP 5

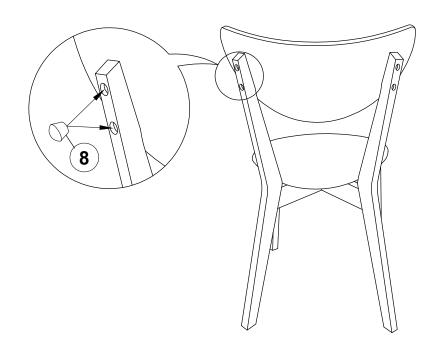


STEP 6 COMPLETE

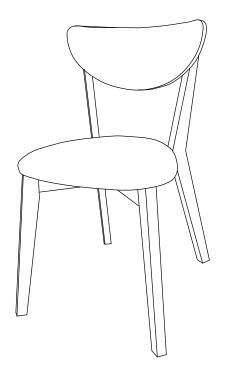





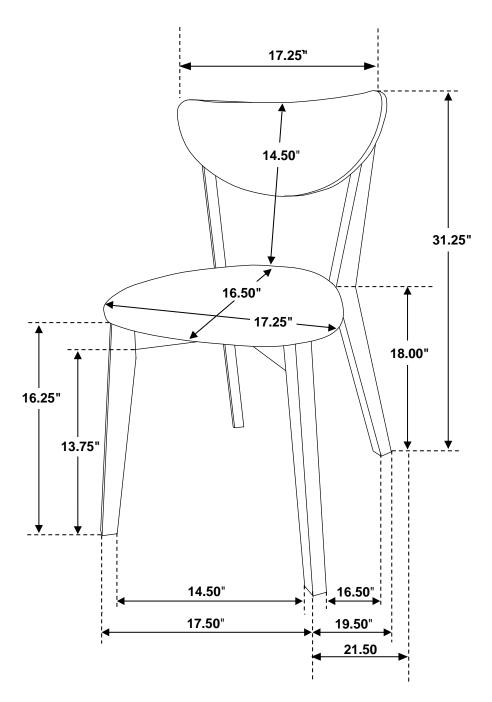

Note: Dimension tolerance ±5%