


# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

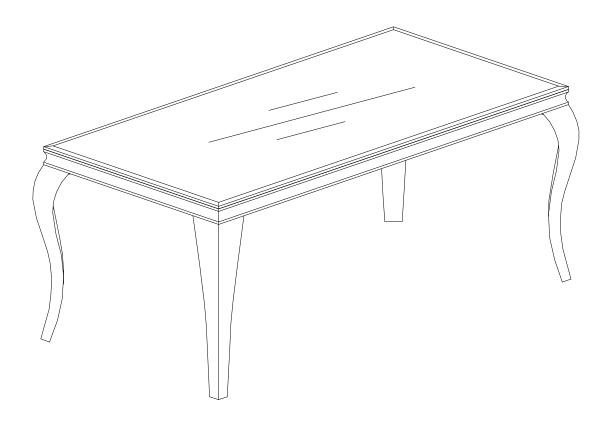

Fine Furniture for every stage of life

REVISION 0: 04/20/2020

105071(B1-B3) *Dining Table* 

PAGE 1 OF 3

COASTERFURNITURE.COM

# ITEM: **105071(B1-B3)**

#### **ASSEMBLY INSTRUCTIONS**



1. Remove hardware from box and sort by size.

2. Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!


Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
This product is for home use only and not intended for commercial establishments.



**ASSEMBLY TIME** 


**10 MINUTES** 

### PARTS IDENTIFICATION

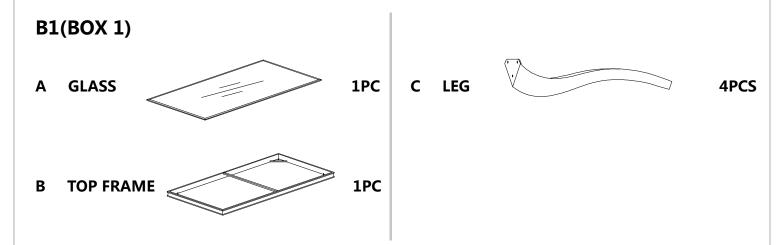

#### Z HARDWARE IDENTIFICATION

#### **B3(BOX 3)-HARDWARE PACK IS LOCATED IN 105071(B3)**

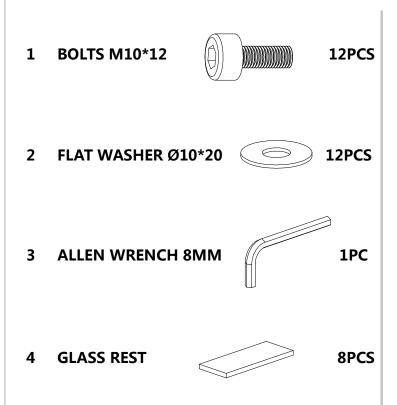


# ITEM: **105071(B1-B3)**


## **ASSEMBLY INSTRUCTIONS**




#### STEP1

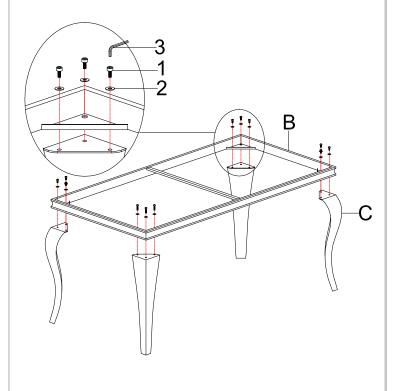


### STEP2

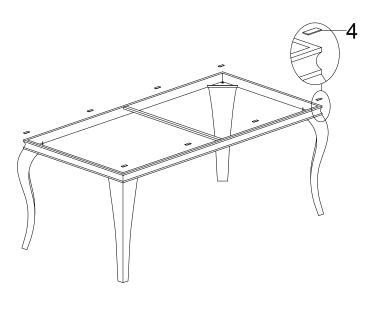


#### STEP3

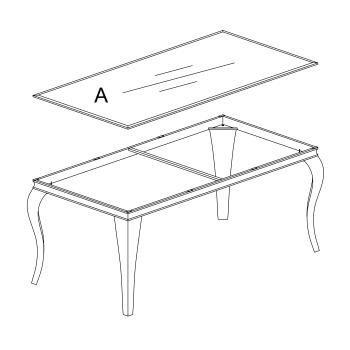

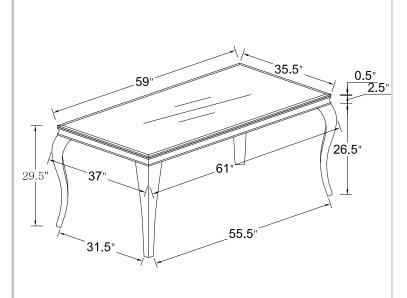



# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

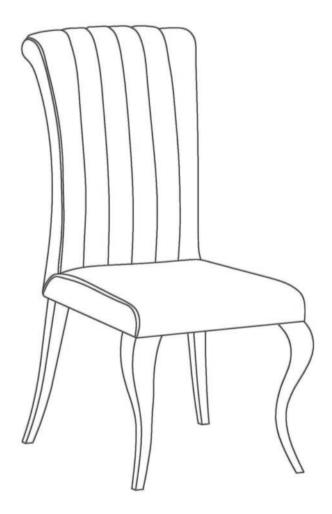

Fine Furniture for every stage of life


105077(B1-B2) *Side Chair* 

# ITEM: 105077(B1-B2)
 
#### ASSEMBLY INSTRUCTIONS



1. Remove hardware from box and sort by size.



3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!

Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

**5 MINUTES** 

## PARTS IDENTIFICATION

**B1(BOX 1) B2(BOX 2) SEAT AND BACK** 1PC **BASE** 1PC

#### Z HARDWARE IDENTIFICATION

**BOLTS M6\*25** 4PCS

**FLAT WASHER Ø6\*16 4PCS** 

**ALLEN WRENCH 4MM** 1PC

NOTE:

Quantities shown are for one chair.

Hardware pack is located in 105077B2

PAGE 2 OF 3

# ITEM: 105077(B1-B2)

### **ASSEMBLY INSTRUCTIONS**



STEP1

