


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

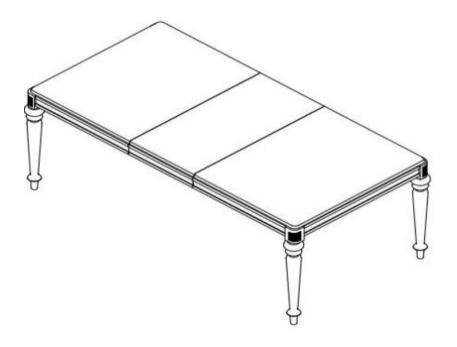

Fine Furniture for every stage of life

106471 *Dining Table*

REVISION 0: 07/29/2015 REVISION 1: 08/13/2019

PAGE 1 OF 4

ASSEMBLY INSTRUCTIONS



 
ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

Α	ТОР		1PC
В	LEAF		1PC
С	LEG	MAT TO	4PCS


HARDWARE IDENTIFICATION

1	ALLEN WRENCH (4MM - RBW)		1PC
2	BOLT (Ø5/16" x 2-3/8" - RBW)	••••••••••	8PCS
3	LOCK WASHER (Ø5/16" - RBW)		8PCS
4	FLAT WASHER (Ø5/16" - RBW)		8PCS


COASTER

ASSEMBLY INSTRUCTIONS


STEP 1

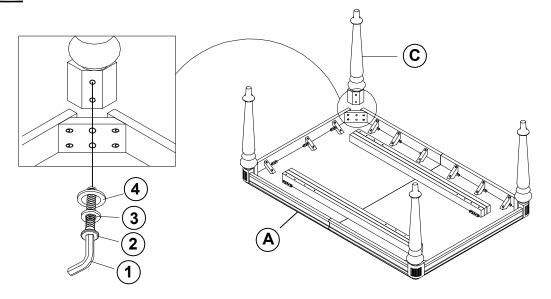

STEP 2

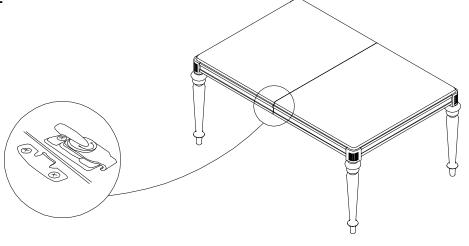

STEP 3

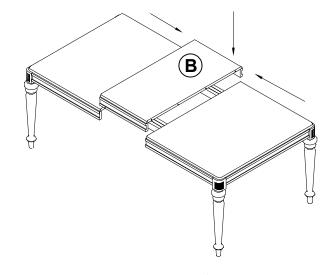


PAGE 3 OF 4


COASTER

ASSEMBLY INSTRUCTIONS

STEP 4

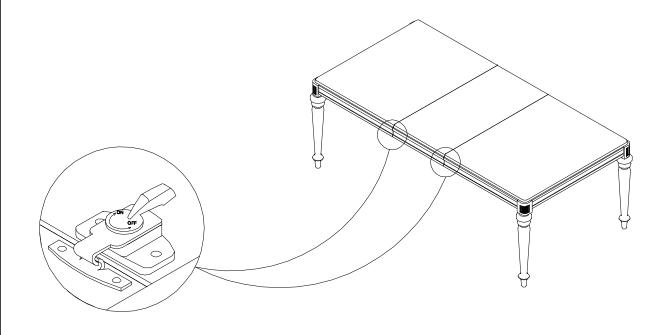


STEP 5 COMPLETE

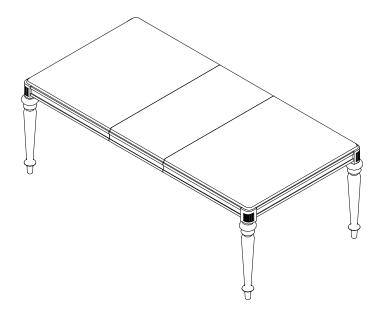





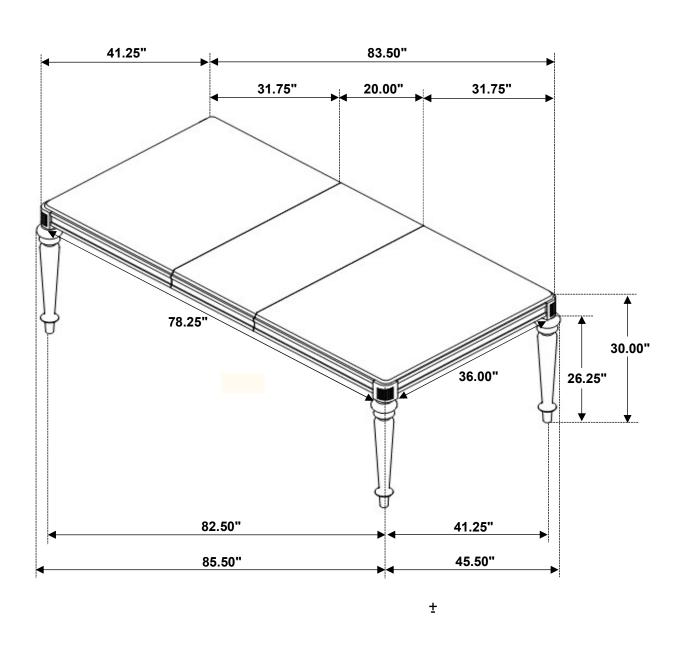

Note: Dimension tolerance ± 5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

106472 Dining Side Chair

ASSEMBLY INSTRUCTIONS



 
ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A BACK FRAME 1PC

B SEAT CUSHION WITH 1PC

C FRONT LEG 2PCS

HARDWARE IDENTIFICATION


1	ALLEN WRENCH (4MM - RBW)	1PC	4	SHORT BOLT (Ø5/16" x 1-1/2" - RBW)	2PCS
2	LONG BOLT (Ø5/16" x 3-1/7" - RBW)	4PCS	5	LOCK WASHER (Ø5/16" - RBW)	10PCS
3	MEDIUM BOLT (Ø5/16" x 2-3/8" - RBW)	4PCS	6	FLAT WASHER (Ø5/16" - RBW)	10PCS

NOTE:

Quantities shown are for one chair.

ITEM:**106472 ASSEMBLY INSTRUCTIONS** STEP 1 (**B**) STEP 2 **(C)** 0 0 STEP 3 COMPLETE PAGE 3 OF 3




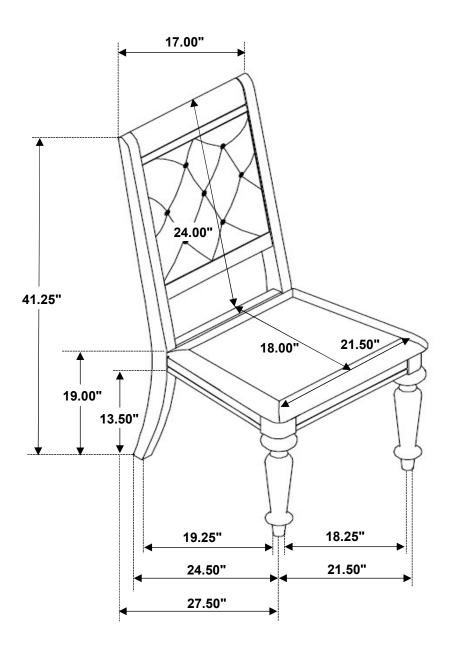

Note: Dimension tolerance ± 5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

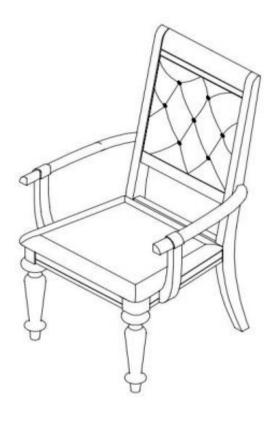

Fine Furniture for every stage of life

106473 Dining Arm Chair

ASSEMBLY INSTRUCTIONS



 
ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A	BACK FRAME	1PC
В	SEAT CUSHION WITH FRAME	1PC
С	FRONT LEG	2PCS
D	LEFT ARM REST	1PC
E	RIGHT ARM REST	1PC

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (4MM - RBW)	1PC	5 LOCK WASHER (Ø5/16" - RBW)		12PCS
2	BOLT 4 (Ø5/16" x 3-1/7" - RBW)	4PCS	6 FLAT WASHER (Ø5/16" - RBW)		12PCS
3	BOLT 3 (Ø5/16" x 2-3/8" - RBW)	4PCS	7 BOLT 1 (Ø5/16" x 1-5/8" - RBW)		2PCS
4	BOLT 2 (Ø5/16" x 1-1/2" - RBW)	2PCS	8 PAN HEAD SCREW (Ø8/1-1/2" - RWB)	<i>⊕</i>	2PCS


NOTE:

Quantities shown are for one chair.


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



ASSEMBLY INSTRUCTIONS STEP 1

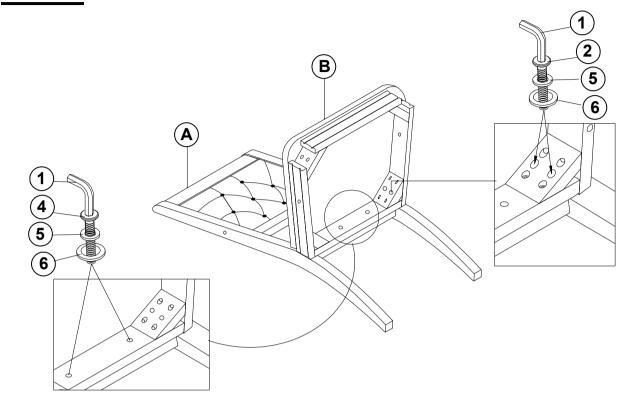


STEP 2

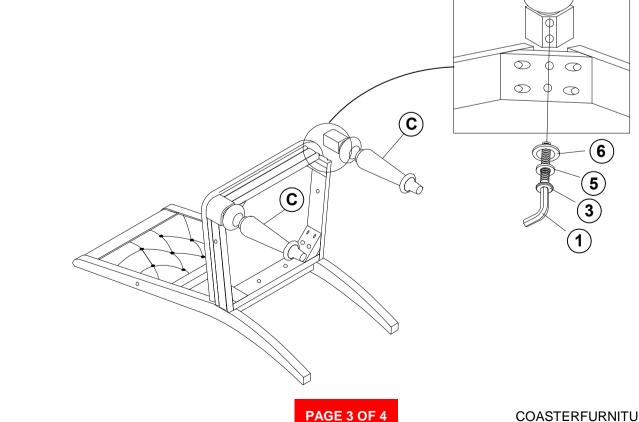





ASSEMBLY INSTRUCTIONS STEP 3

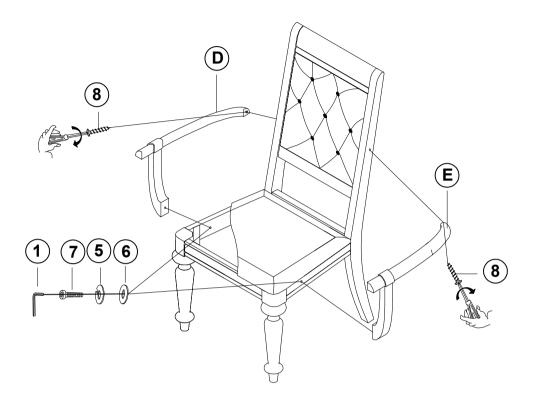

STEP 4 COMPLETE

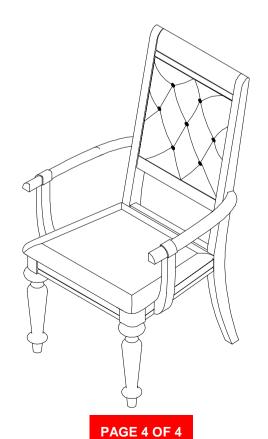



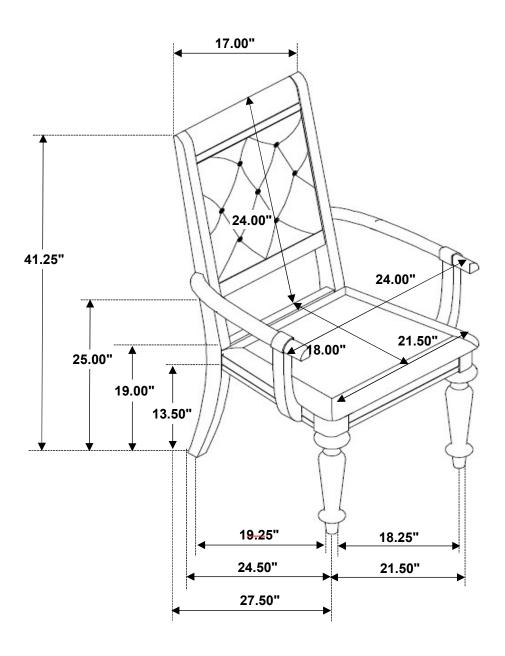

Note: Dimension tolerance ± 5%