

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

106582 Dining Side Chair

REVISION 0:02/10/2015 REVISION 1:10/16/2017 REVISION 2:07/22/2019

PAGE 1 OF 4

COASTERFURNITURE.COM

ITEM: 106582

ASSEMBLY INSTRUCTIONS

COASTER

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A BACK FRAME

B SEAT CUSHION WITH FRAME

C FRONT LEG

1PC

2PCS

HARDWARE IDENTIFICATION

1	LONG BOLT WITH WASHER (M6 x 80mm - BLK)	4PCS
2	MEDIUM BOLT WITH WASHER (M6 x 60mm - BLK)	4PCS
3	SHORT BOLT WITH WASHER (M6 x 45mm - BLK)	3PCS
4	ALLEN WRENCH (M4 - GD)	1PC

NOTE:


Quantities shown are for one chair.

ITEM: 106582


ASSEMBLY INSTRUCTIONS



STEP 1

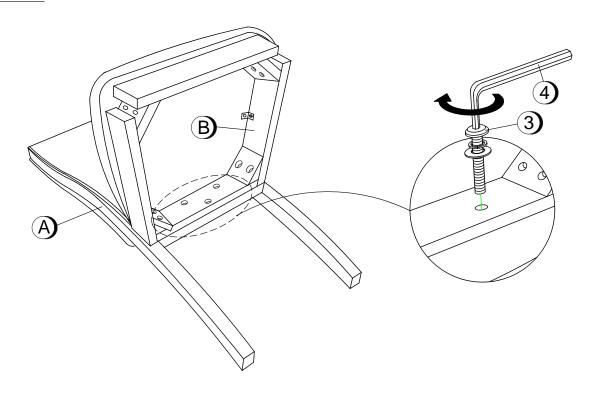

STEP 2

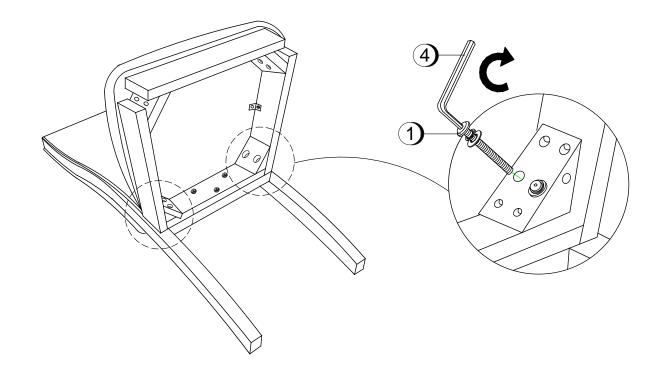


ITEM :106582


ASSEMBLY INSTRUCTIONS



STEP 3

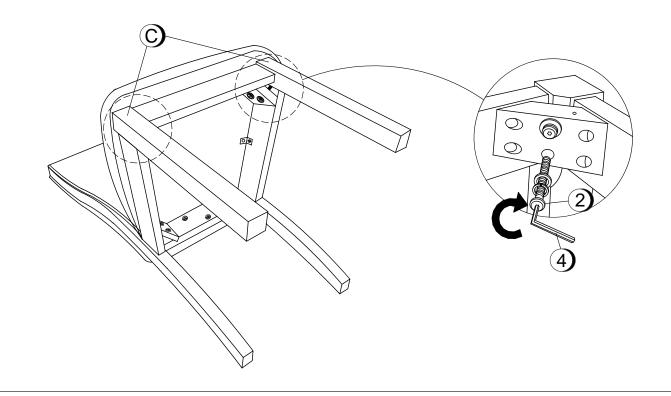

STEP 4 COMPLETE

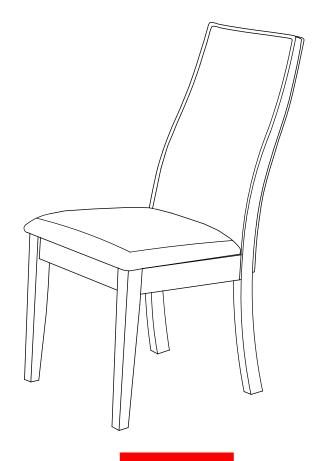




COASTERFURNITURE.COM

ITEM: 106582



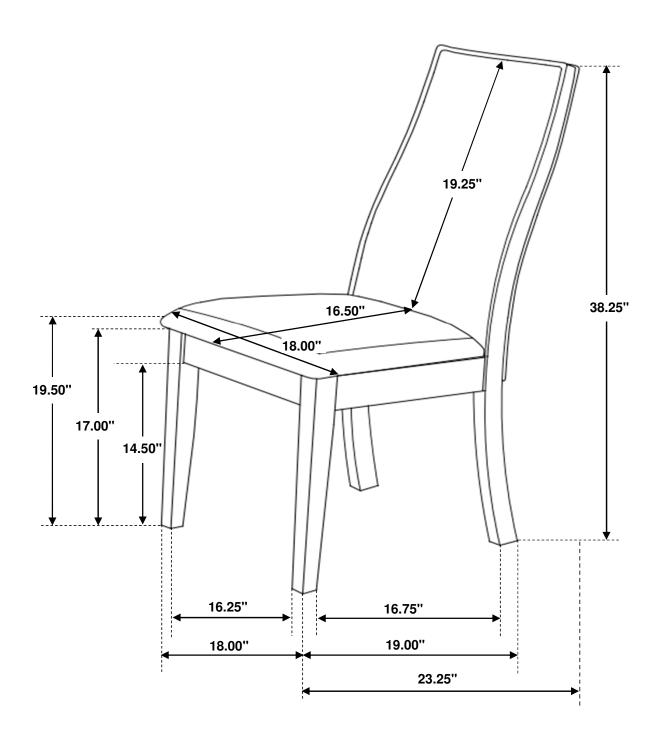

Note: Dimension tolerance ±5%