

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

107451
Dining Table

ITEM: **107451**

ASSEMBLY INSTRUCTIONS



 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!






1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

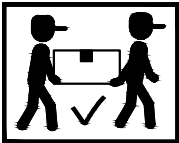



ASSEMBLY TIME

25 MINUTES

     PARTS IDENTIFICATION

A	TOP		1PC	D	MOUNTING PLATE		2PCS
B	LEAF		1PC	E	CROSSBAR		1PC
C	LEG FRAME		2PCS				

  HARDWARE IDENTIFICATION

1	LONG BOLT (Ø5/16" x 70mm - RBW)		2PCS	4	LOCK WASHER (Ø5/16" - RBW)		26PCS
2	MEDIUM BOLT (Ø5/16" x 55mm - RBW)		8PCS	5	FLAT WASHER (Ø5/16" x 19 x 1.5mm - RBW)		26PCS
3	SHORT BOLT (Ø5/16" x 35mm - RBW)		16PCS	6	ALLEN WRENCH (74 x 30 x 4mm - RBW)		1PC

 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **107451**

ASSEMBLY INSTRUCTIONS

STEP 1

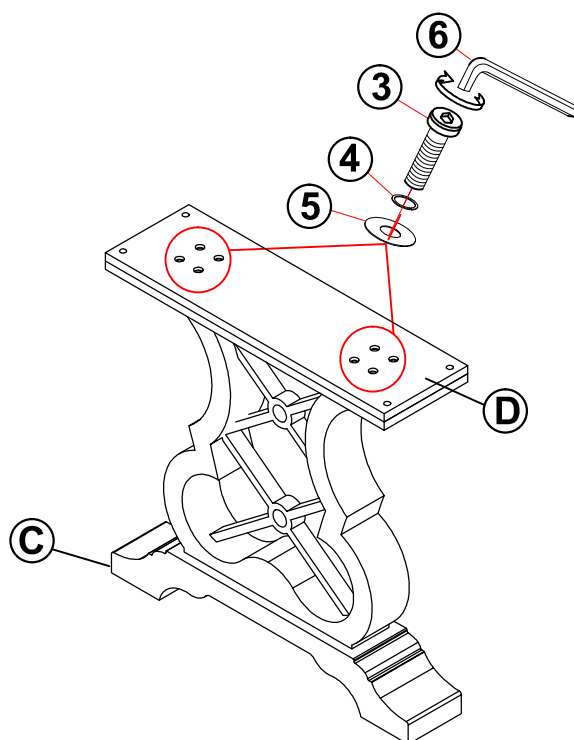

 
STEP 2

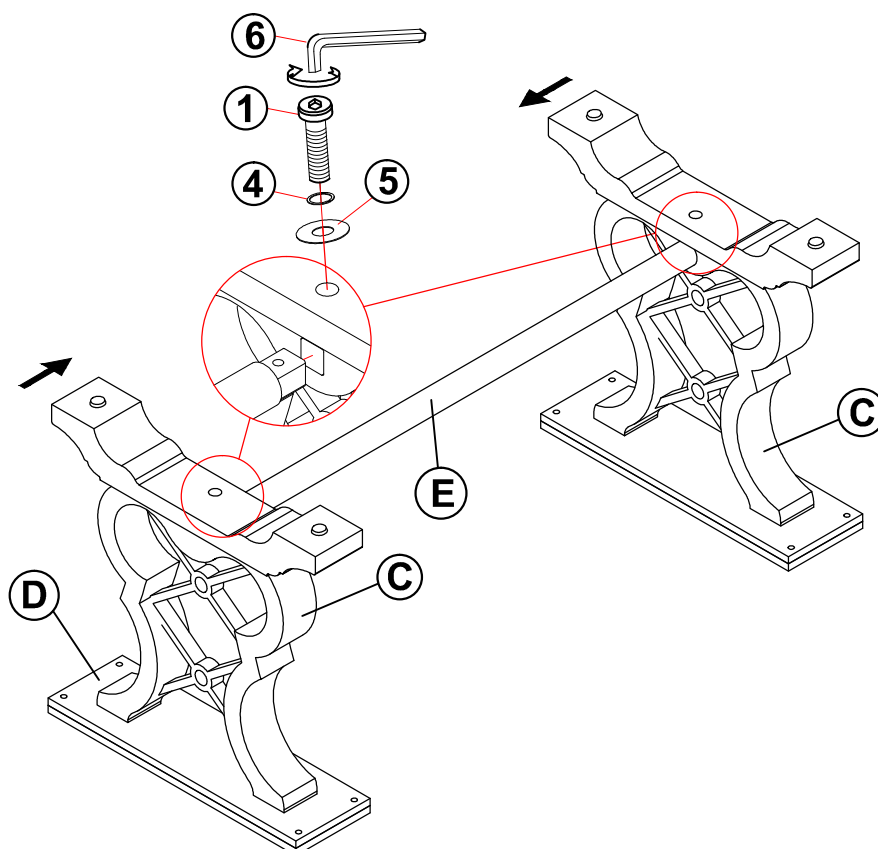


ITEM: **107451**

ASSEMBLY INSTRUCTIONS

 STEP 3

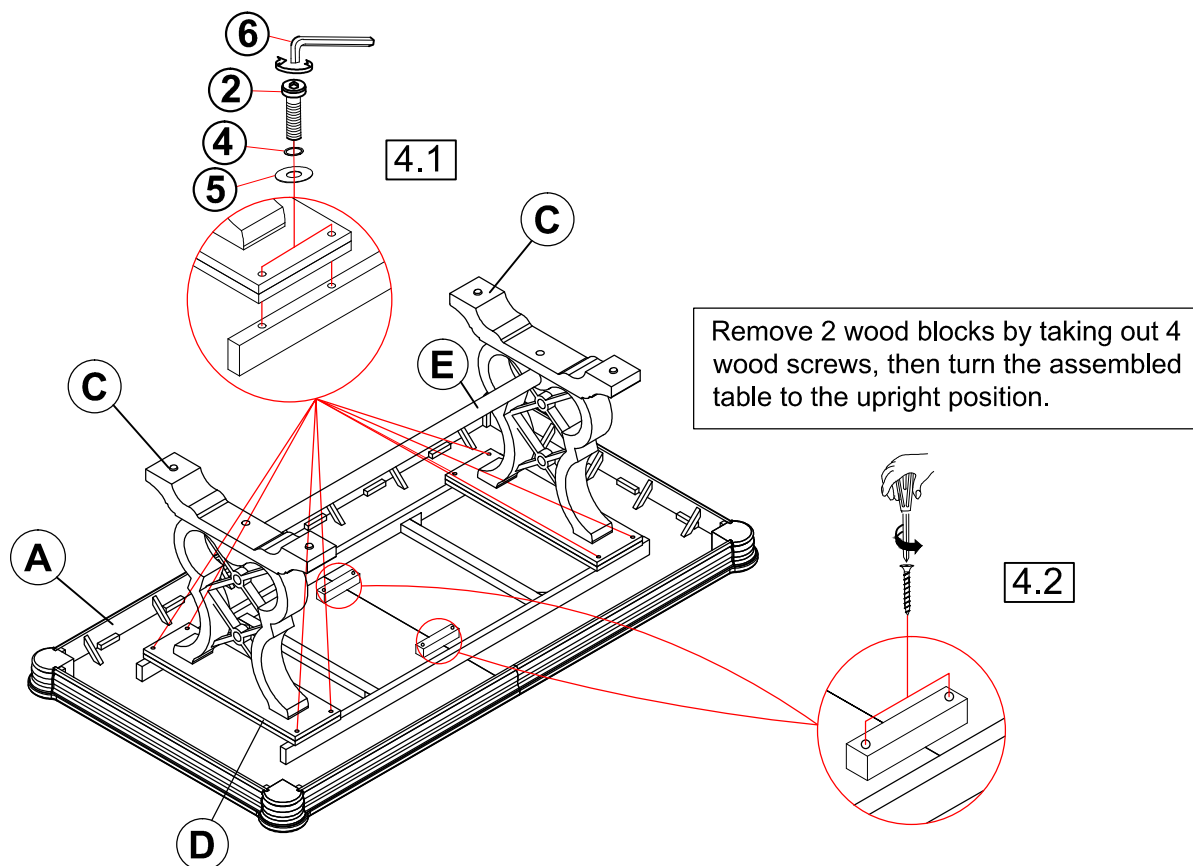

 
STEP 4

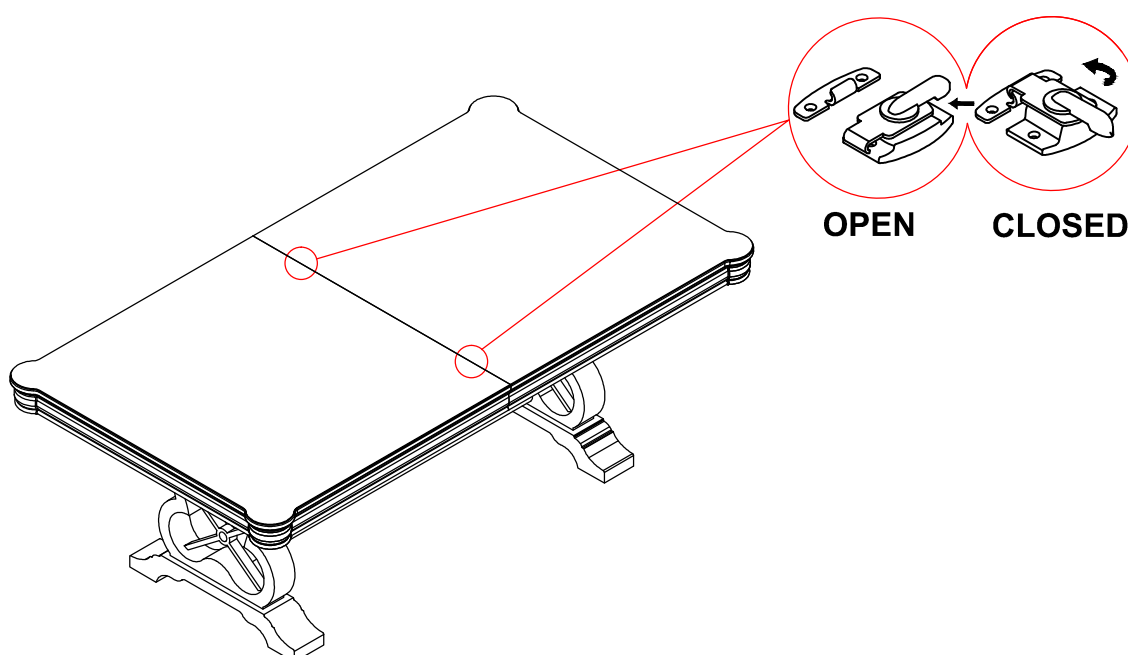

ITEM: **107451**



ASSEMBLY INSTRUCTIONS

 STEP 5

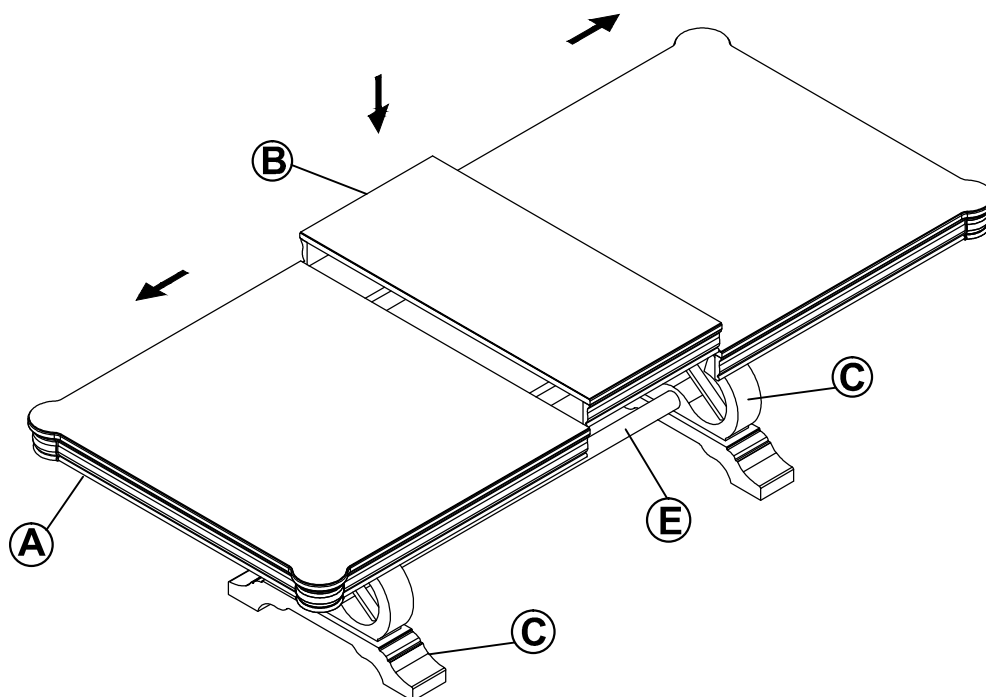


STEP 6

  COMPLETE

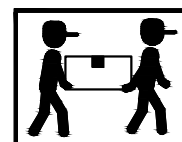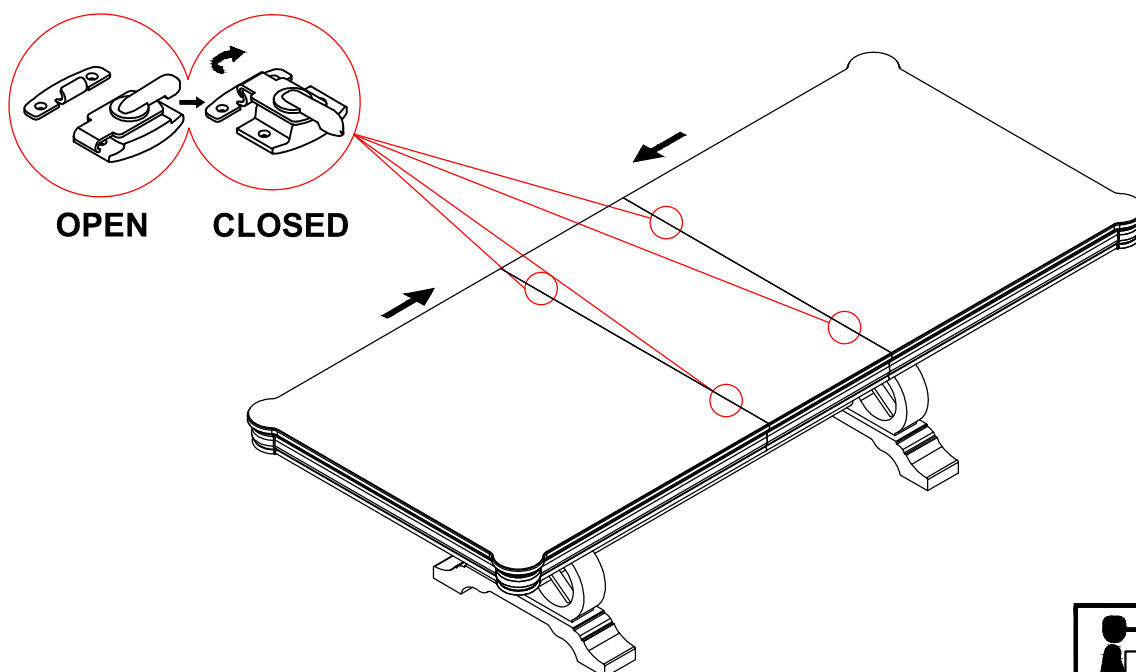

ITEM: **107451**

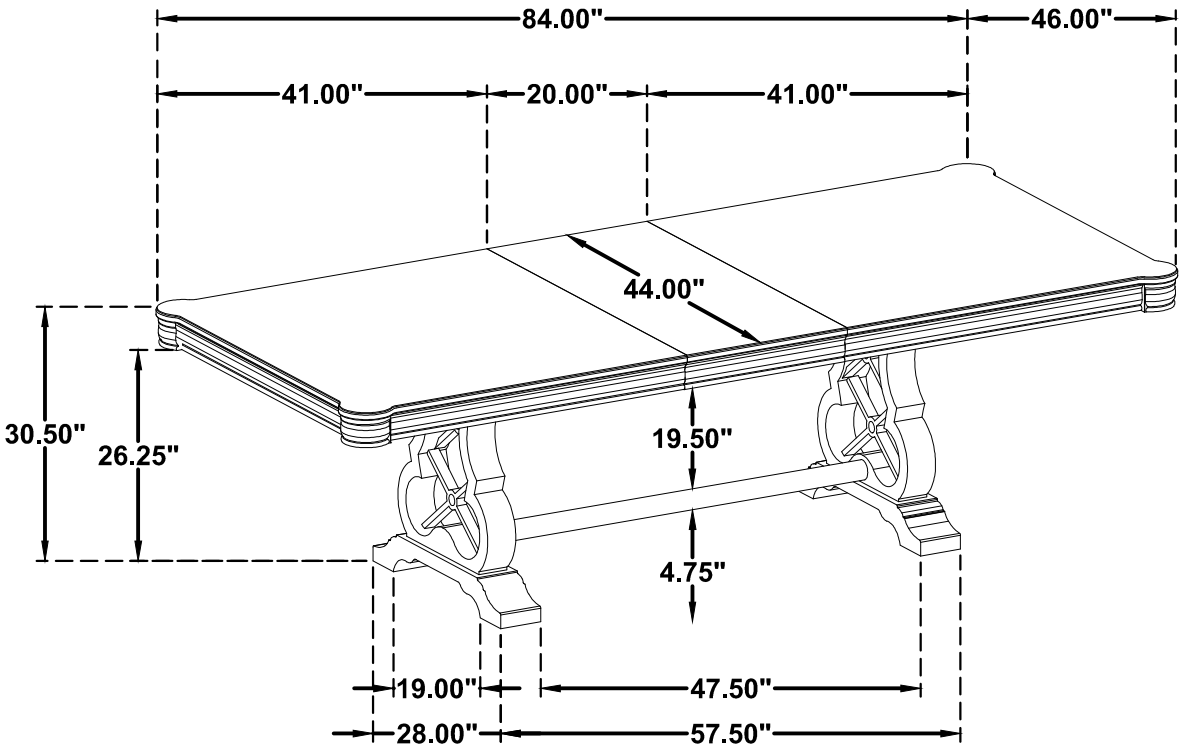 

Note: Dimension tolerance $\pm 5\%$