

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

108080 Dining Table

REVISION 0: 12/01/2017 REVISION 1: 07/13/2020

PAGE 1 OF 5

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A TOP 1PC

B LEG 4PCS


HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M4 x 63mm - BLK)	1PC
2	BOLT (M6 x 60mm - RBW)	8PCS
3	LOCK WASHER (1/4" - BLK)	8PCS
4	FLAT WASHER (5/16" - RBW)	8PCS


ITEM: 108080 ASSEMBLY INSTRUCTIONS



STEP 1

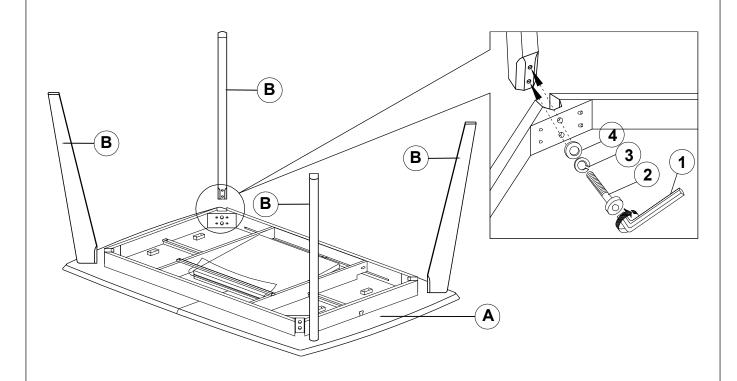

STEP 2

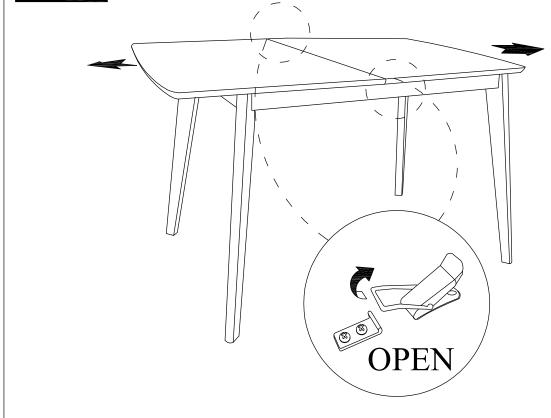


PAGE 3 OF 5


ITEM: 108080 ASSEMBLY INSTRUCTIONS



STEP 3

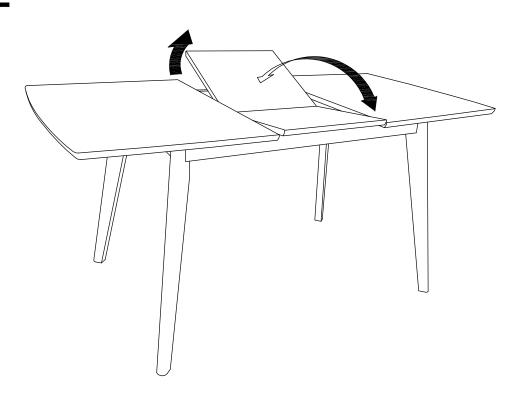

STEP 4

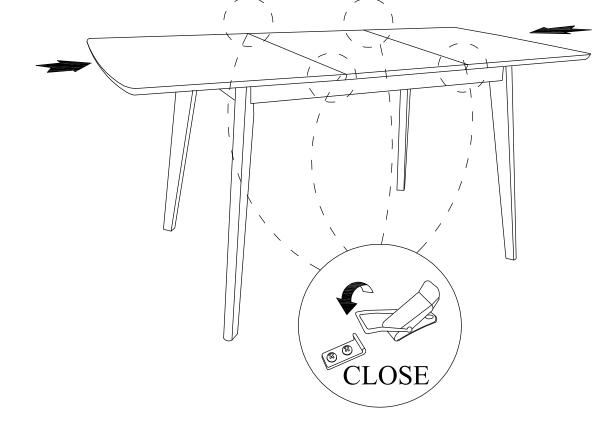


PAGE 4 OF 5

ITEM: 108080 ASSEMBLY INSTRUCTIONS




STEP 5 COMPLETE

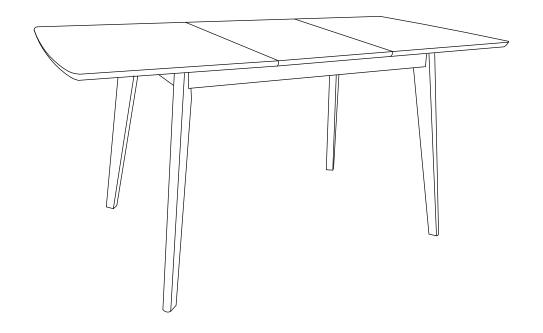





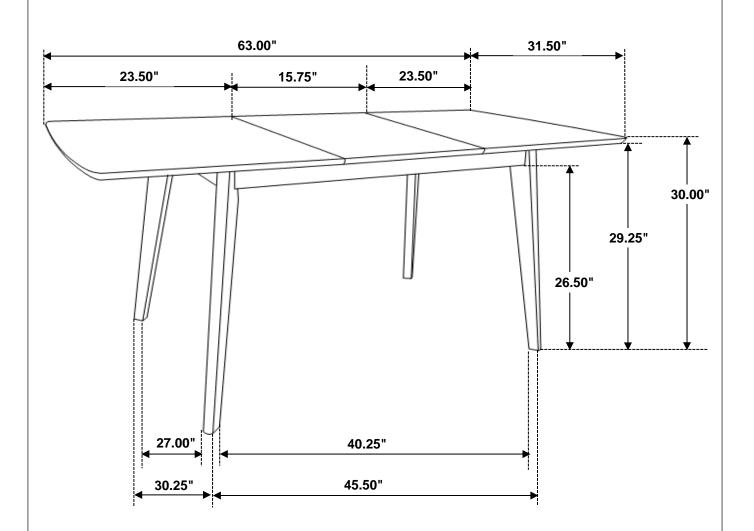

Note: Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

108082 *Dining Chair*

REVISION 0: 12/01/2017 REVISION 1: 01/08/2018 REVISION 2: 03/11/2020

PAGE 1 OF 5

ASSEMBLY INSTRUCTIONS

COASTER®

 
ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A	BACKREST		1PC
В	UPPER LEG FRAME		1PC
С	LOWER LEG FRAME		1PC
D	SEAT CUSHION		1PC
E	WOOD CLEAT	© 3	1PC

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M4 x 110mm - BLK)	1PC
2	LONG BOLT (M6 x 60mm - RBW)	4PCS
3	HEX BOLT (M7 x 50mm - ZB)	1PC
4	MEDIUM BOLT (M6 x 35mm - RBW)	4PCS
5	SHORT BOLT (M6 x 25mm - RBW)	4PCS
6	LOCK WASHER (1/4" - BLK)	8PCS
7	FLAT WASHER (M6 x 13mm - RBW)	4PCS
8	WOOD PLUG (Ø14.5 x 9mm)	4PCS


NOTE:

Quantities shown are for one chair.






STEP 1

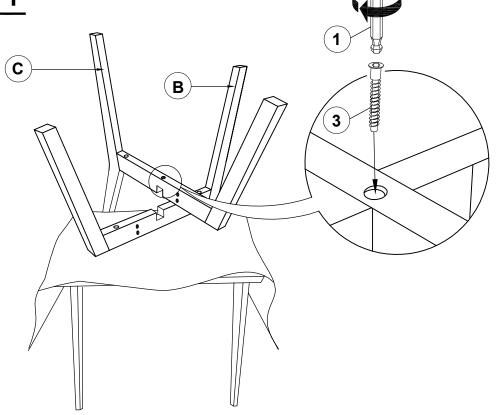

STEP 2

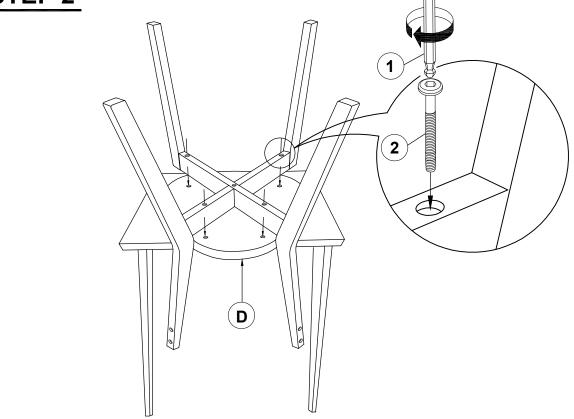


PAGE 3 OF 5


ITEM: 108082 ASSEMBLY INSTRUCTIONS



STEP 3

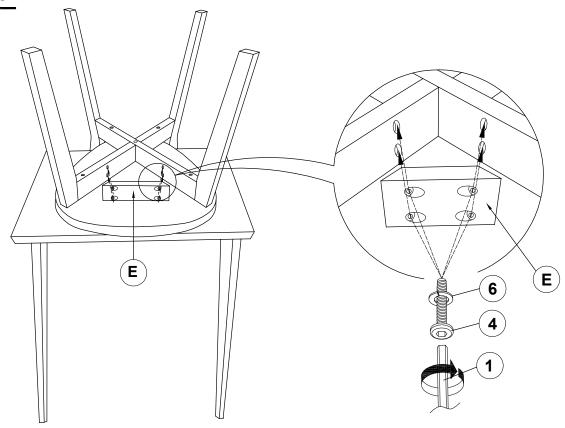


STEP 4

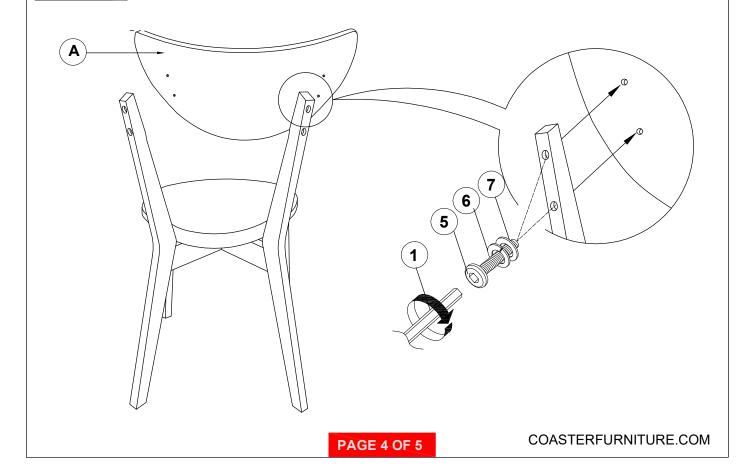

ASSEMBLY INSTRUCTIONS




STEP 5

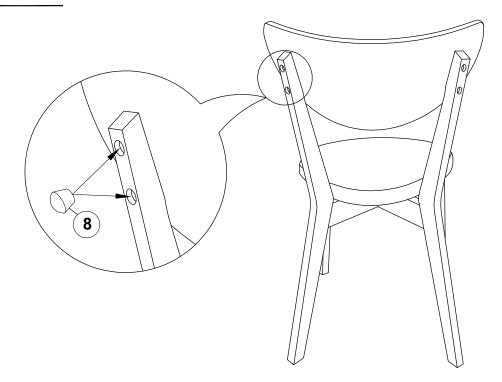


 STEP 6 COMPLETE







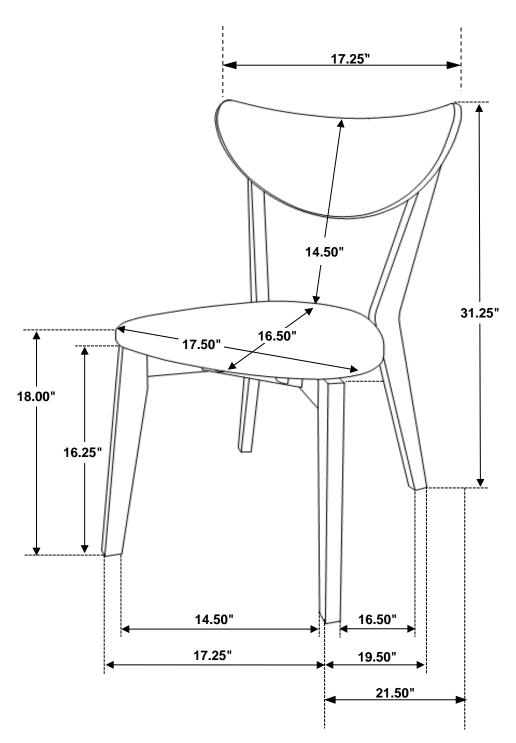

Note: Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

108083 *Bench*

REVISION 0: 12/01/2017 REVISION 1: 07/13/2020

PAGE 1 OF 3

ASSEMBLY INSTRUCTIONS



 
ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

8 MINUTES

PARTS IDENTIFICATION

A BENCH SEAT 1PC

B LEG 4PCS


HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M4 x 63MM - BLK)	1PC
2	BOLT (M6 x 60MM - RBW)	8PCS
3	LOCK WASHER (1/4" - BLK)	8PCS
4	FLAT WASHER (1/4" - RBW)	8PCS

ITEM: 108083 ASSEMBLY INSTRUCTIONS




STEP 1

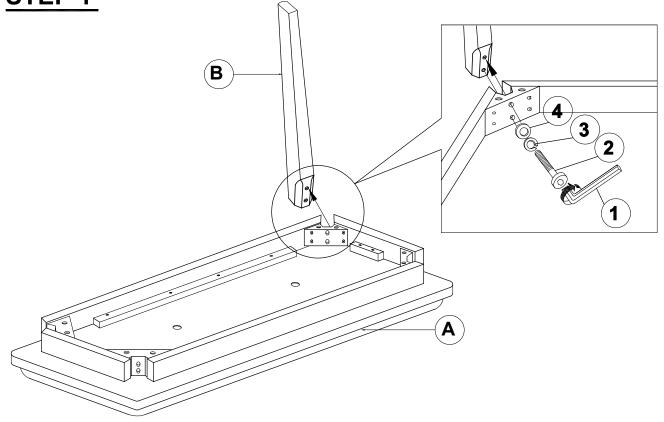

STEP 2 COMPLETE





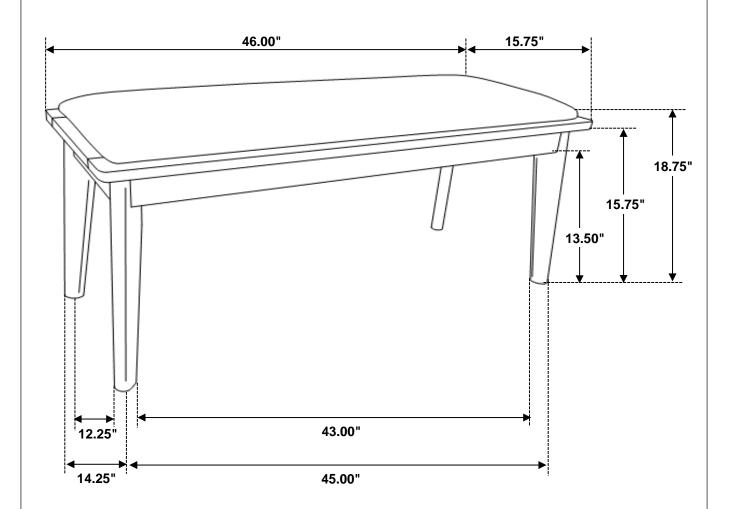

Note: Dimension tolerance ±5%