

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



108531 DINING TABLE

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- Please check to see that all hardware and parts are present prior to start of assembly.
 Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.


ASSEMBLY TIME

5 MINUTES

B1: TOP

A

TOP

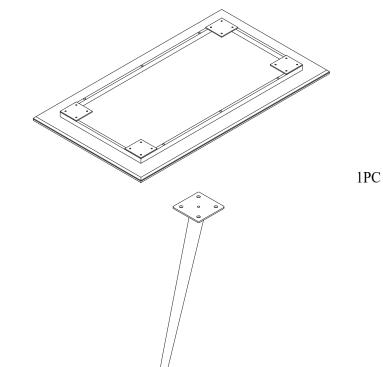

B2:BASE

В

LEG

Z	HARDWARE IDENTIFICATION			
NO	DESCRIPTION	FIGURE	QTY	
1	BOLT (M8 × 12mm - BLK)	9	16PCS	
2	FLAT WASHER		16PCS	
3	ALLEN WRENCH (M5 - BLK)		1PC	


NOTE:

Hardware pack is located in 108531B2

4PCS

ASSEMBLY INSTRUCTIONS



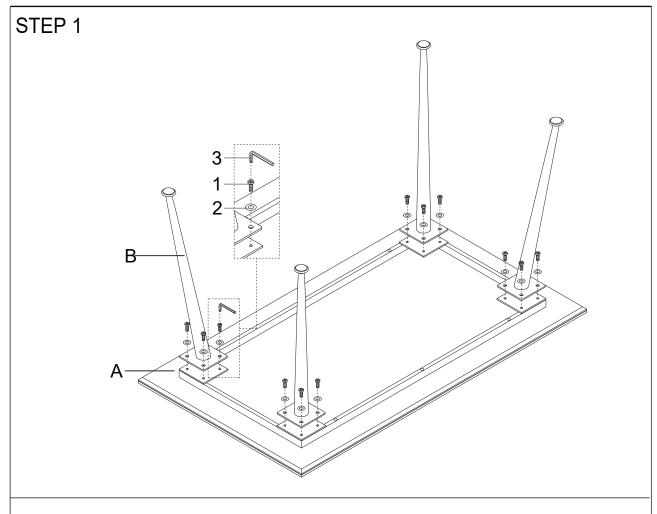



ASSEMBLY INSTRUCTIONS



COASTERFURNITURE.COM





ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



108532 SIDE CHAIR

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- Please check to see that all hardware and parts are present prior to start of assembly.
 Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

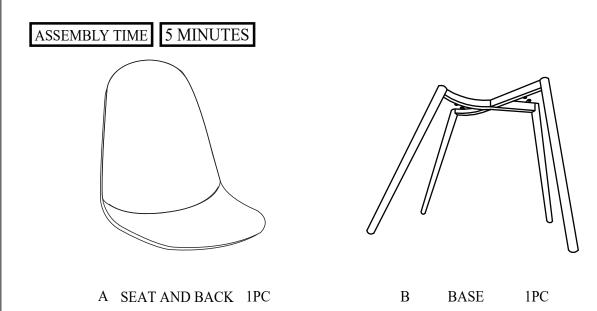


Z	HARDWARE IDENTIFICATION			
NO	DESCRIPTION	FIGURE	QTY	
1	BOLT (M6 × 16mm - BLK)	(1)	4PCS	
2	FLAT WASHER	0	4PCS	
3	ALLEN WRENCH (M5 - BLK)		1PC	

NOTE:

Quantities shown are for one chair.


ASSEMBLY INSTRUCTIONS



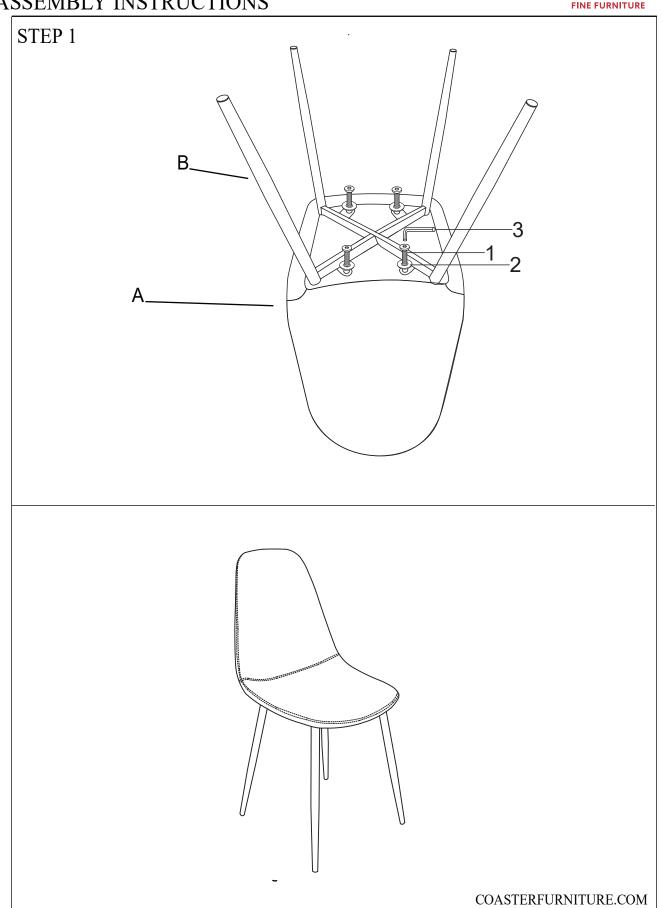

ASSEMBLY INSTRUCTIONS



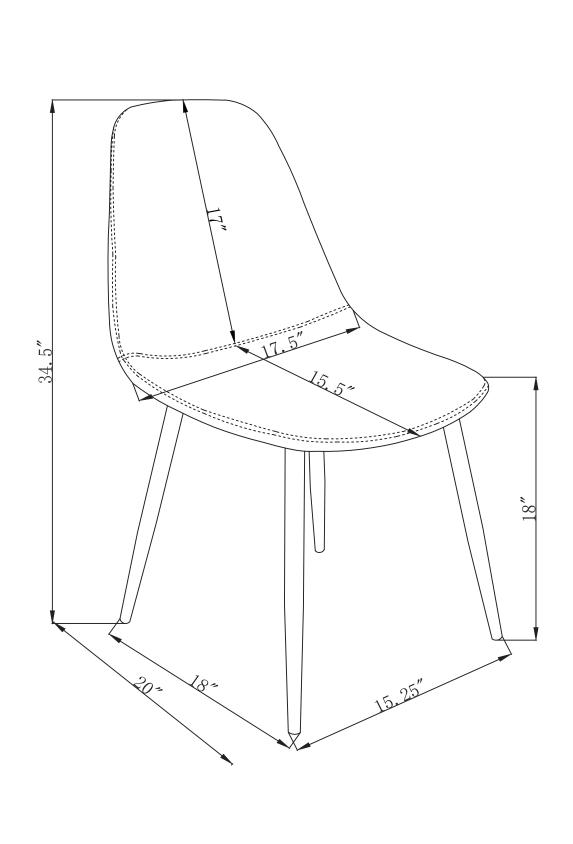

COASTERFURNITURE.COM