



*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**108541 (B1&B2)**  
**Dining Table**

# ITEM: 108541(B1&B2)

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



 
ASSEMBLY TIME

15 MINUTES

## PARTS IDENTIFICATION

### B1 (BOX 1)

A TOP



1PC

B LEAF



2PCS

C APRON



 
2PCS

D CROSSBAR



1PC


E MIDDLE CROSSBAR



2PCS

### B2 (BOX 2)

 F LEG FRAME



2PCS

## HARDWARE IDENTIFICATION

### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 108541(B1)

1 SHORT BOLT  
(Ø5/16" x 1-1/2" - RBW)



12PCS

2 LONG BOLT  
(Ø5/16" x 2" - RBW)



4PCS

3 THREADED BOLT  
(Ø5/16" x 3" - RBW)



4PCS

4 LOCK WASHER  
(Ø5/16" - RBW)



16PCS

5 FLAT WASHER  
(Ø5/16" - RBW)



16PCS

6 HEX NUT  
(Ø5/16" - RBW)



4PCS

7 HALF ROUND NUT  
(Ø5/16" - RBW)



4PCS

8 ALLEN WRENCH  
(4MM - RBW)



1PC

9 WRENCH  
(RBW)




1PC

ITEM: **108541(B1&B2)**


## ASSEMBLY INSTRUCTIONS




### STEP 1

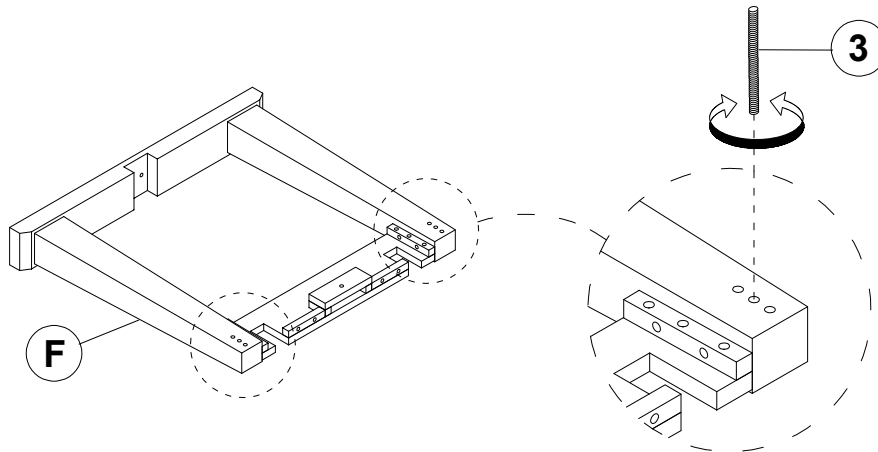

### STEP 2

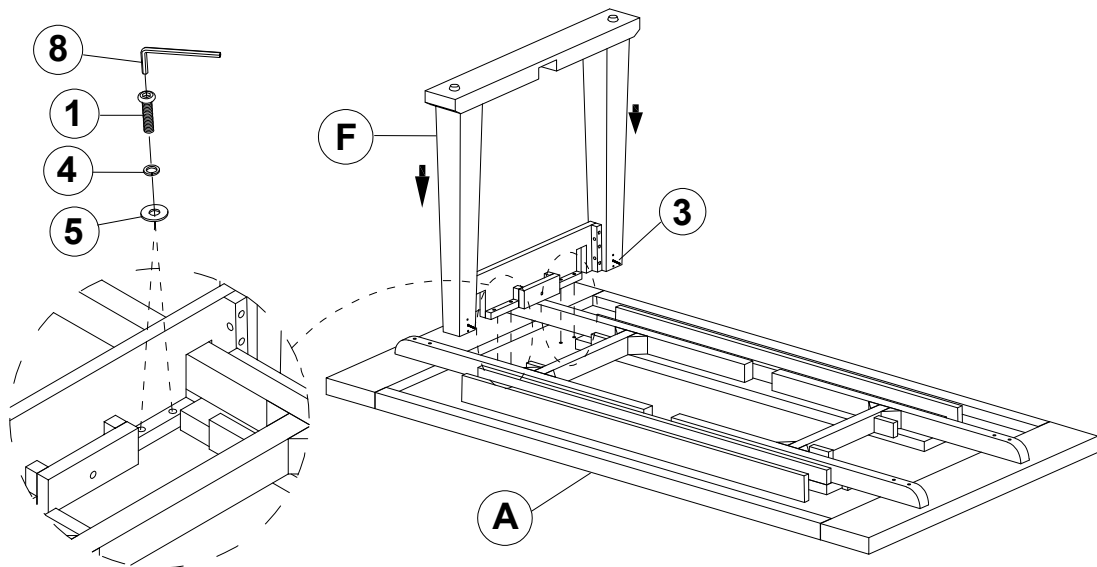

### STEP 3

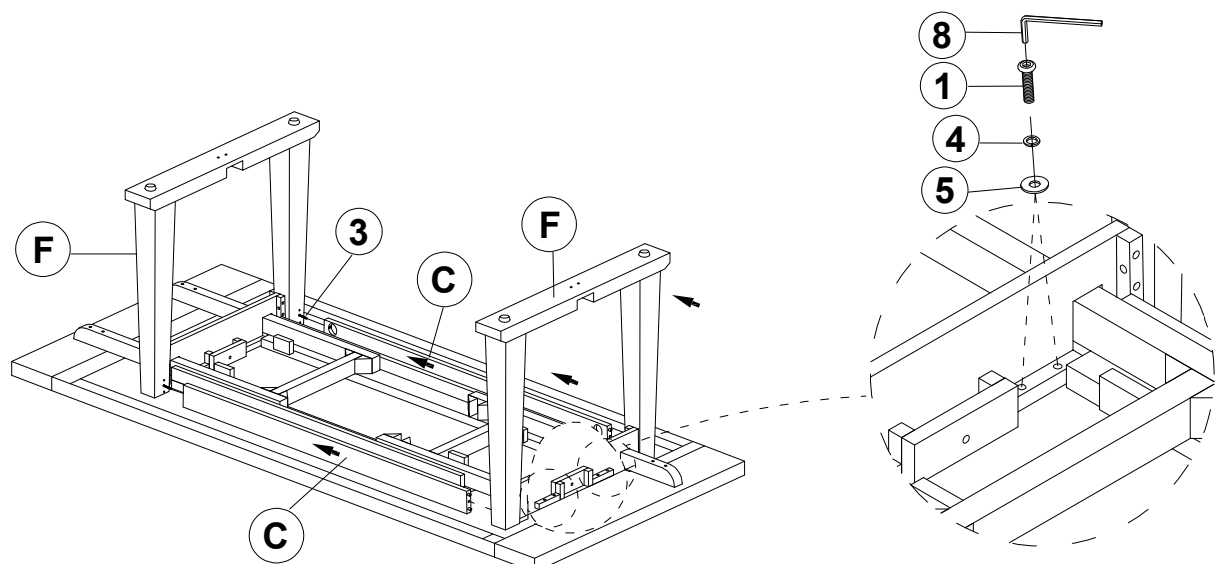


ITEM: **108541(B1&B2)**


## ASSEMBLY INSTRUCTIONS



### STEP 4

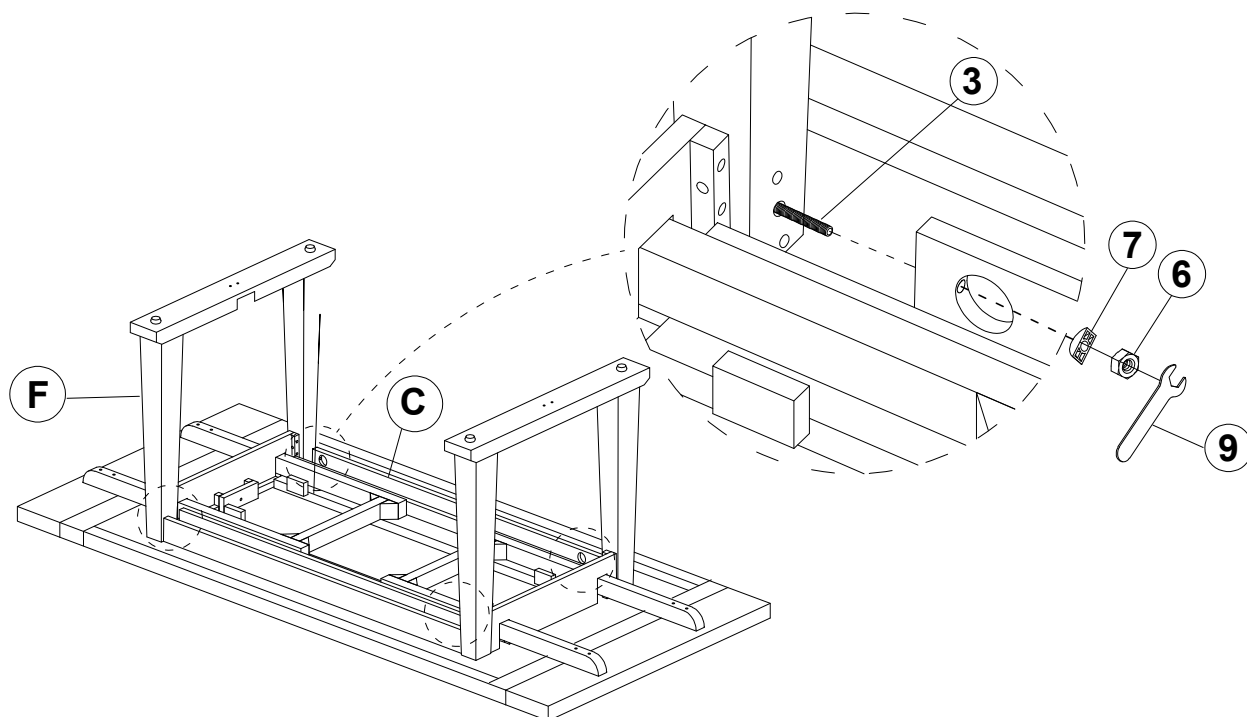


### STEP 5

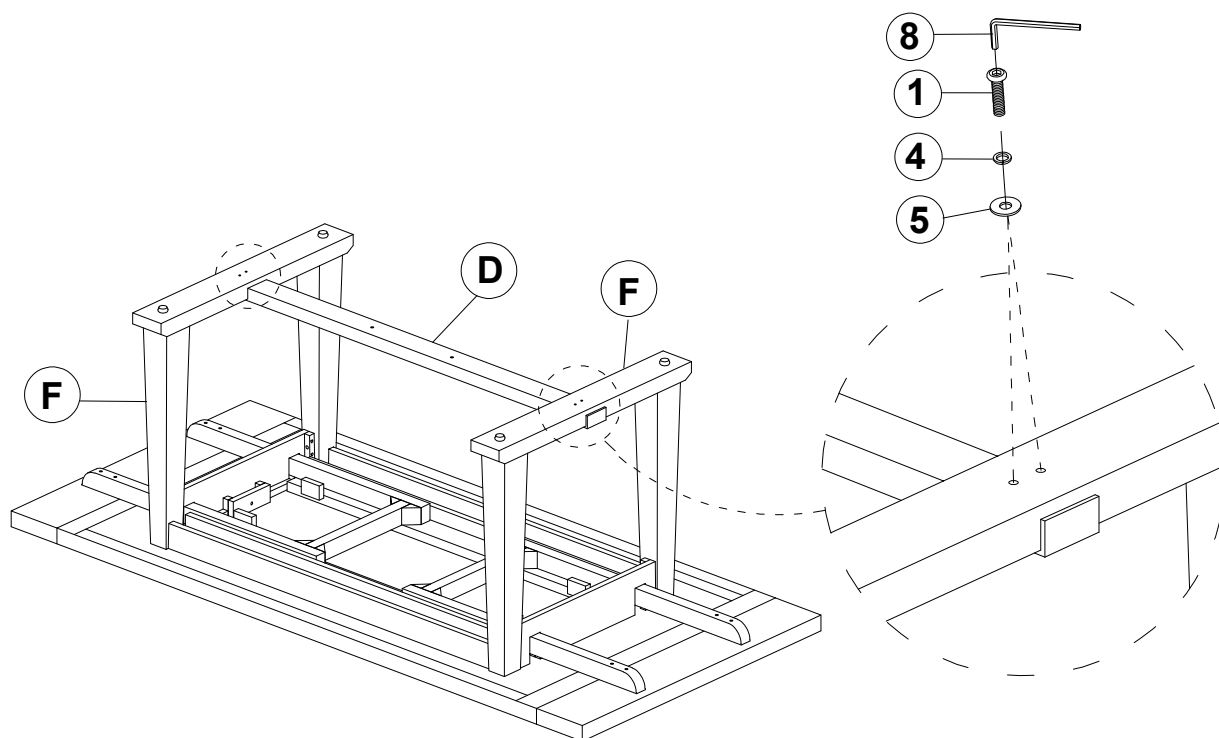


ITEM: **108541(B1&B2)**

## ASSEMBLY INSTRUCTIONS


### STEP 6

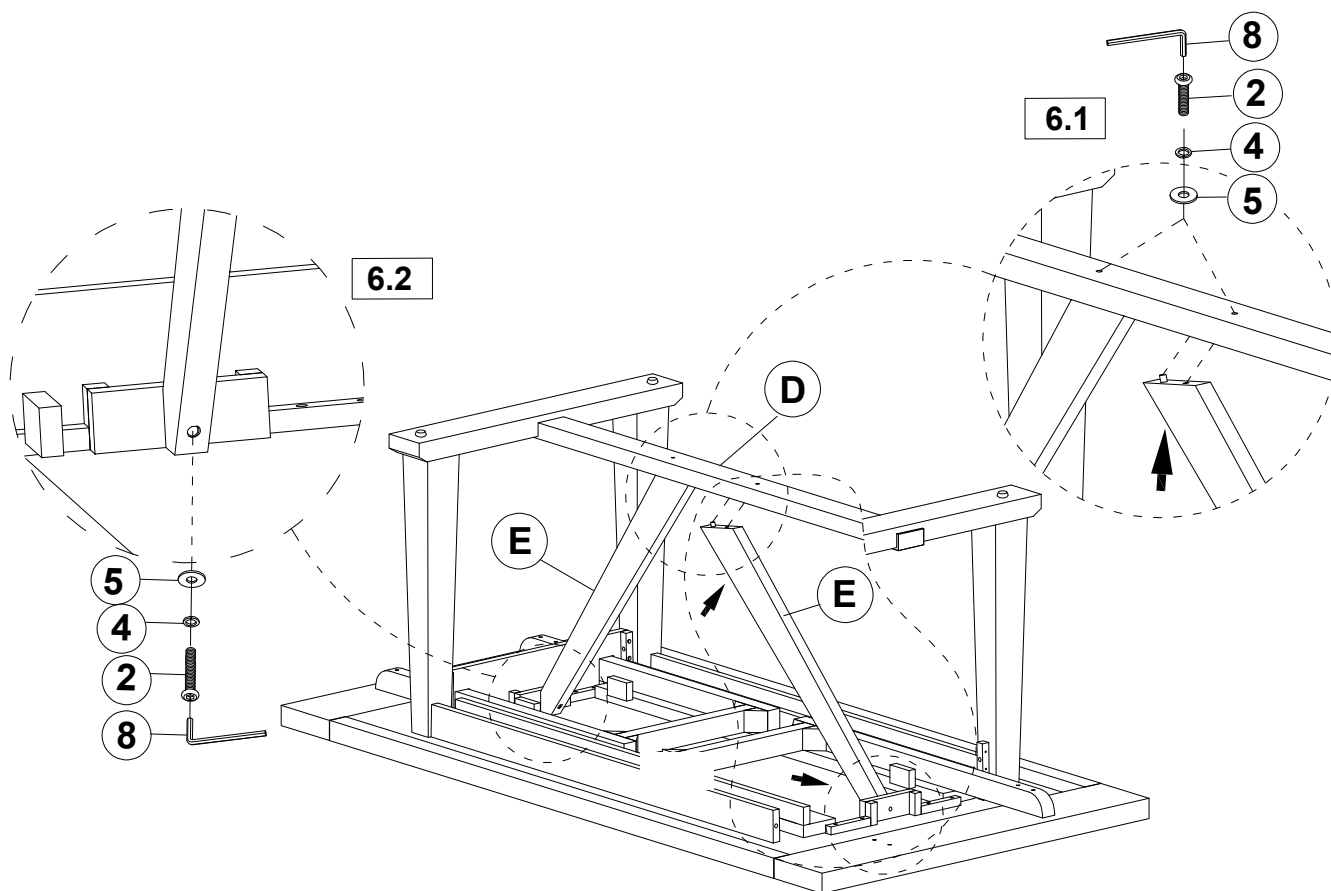

### STEP 7 COMPLETE

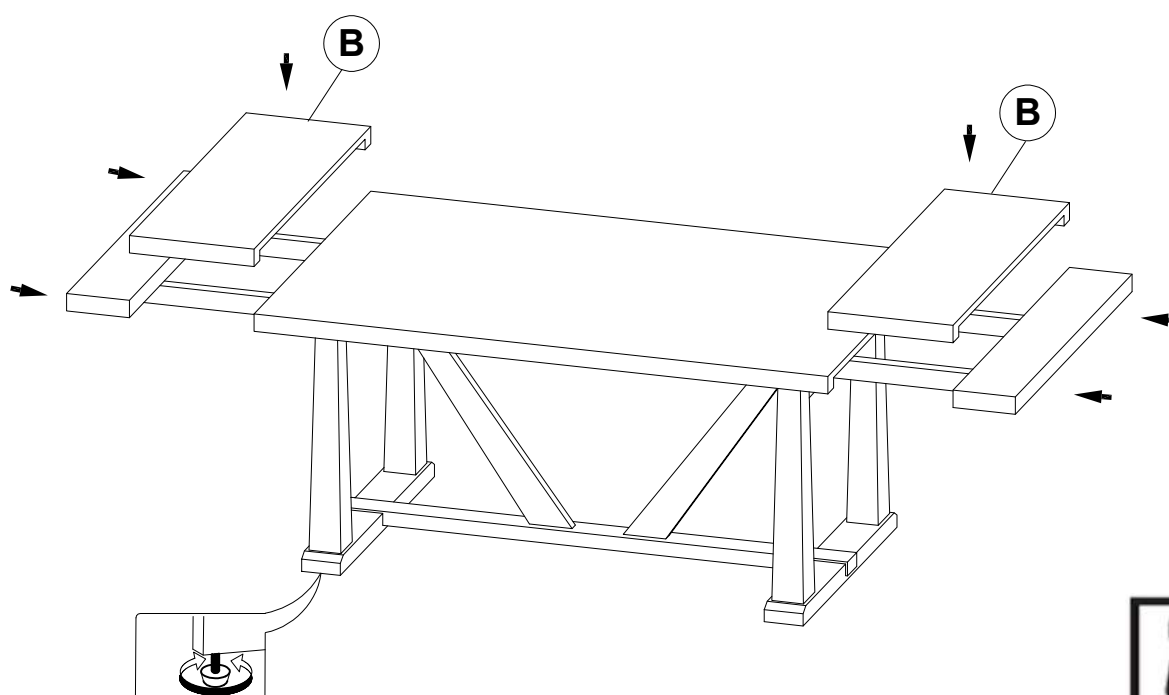

ITEM: **108541(B1&B2)**

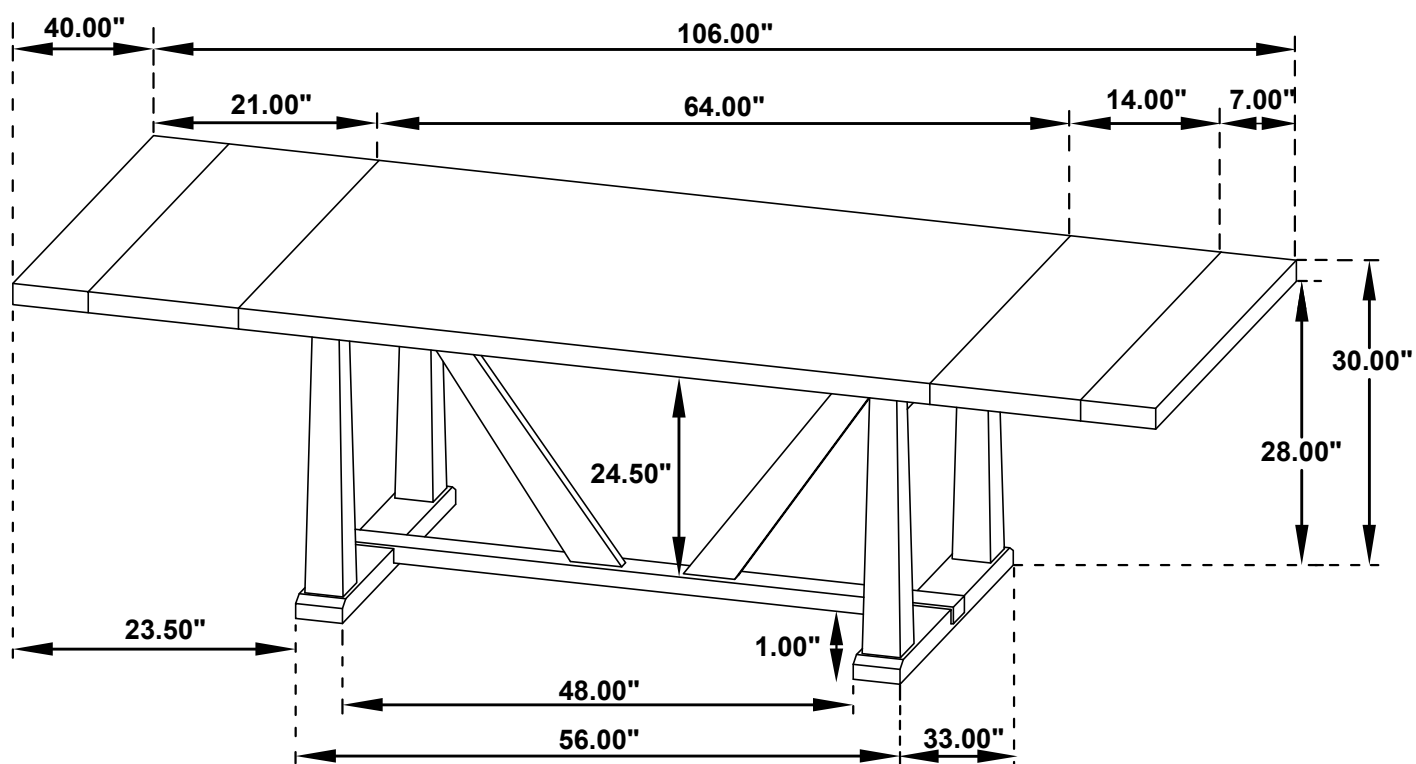

**Note: Dimension tolerance  $\pm 5\%$**