



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

109292

Dining Side Chair

REVISION 0 : 04/08/2020
REVISION 1 : 12/26/2022

ITEM: **109292**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

AV


BASE

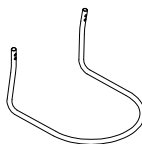

1PC

BV

SEAT AND BACK

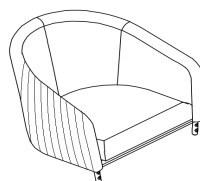

1PC

HARDWARE IDENTIFICATION

1

BOLT
(Ø5/16" x 15mm - BLK)



4PCS

2

LOCK WASHER
(Ø5/16" - BLK)



4PCS

3

 
FLAT WASHER
(Ø5/16" - BLK)



4PCS

4

ALLEN WRENCH
(M4 - BLK)




1PC


ITEM: **109292**




ASSEMBLY INSTRUCTIONS
STEP 1

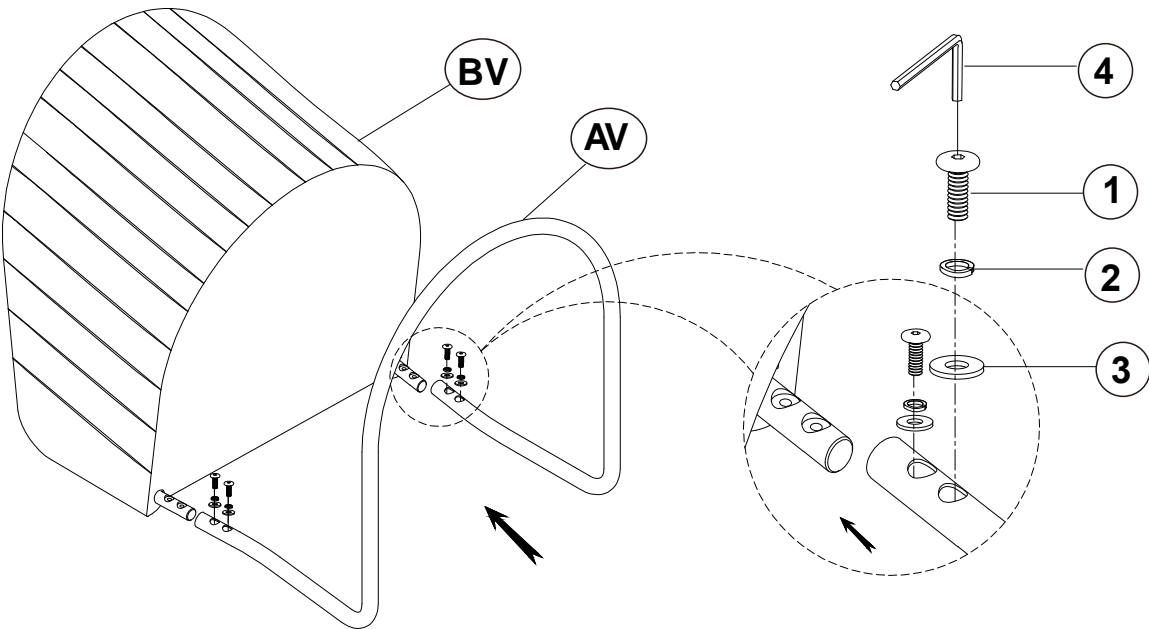

STEP 2
COMPLETE

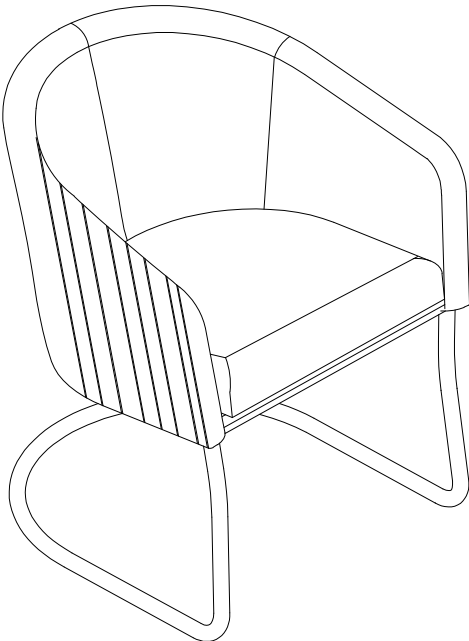

ITEM: **109292**

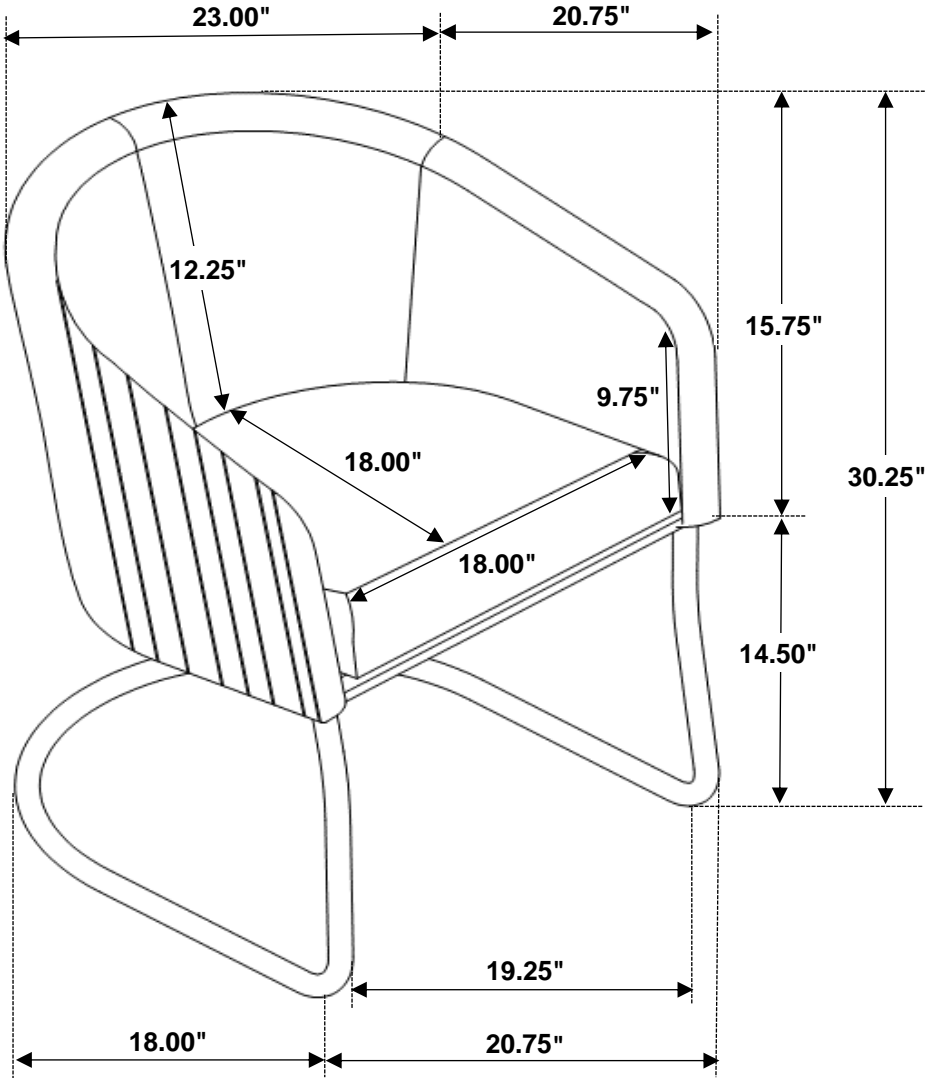

Note: Dimension tolerance $\pm 5\%$