

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

109381 (B1&B2) *Dining Table*

REVISION 0: 01/08/2025

PAGE 1 OF 5 COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS



- Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A TOP



1PC

B LEAF

1PC

B2 (BOX 2)

C LEFT BASE WITH "L" LABEL



1PC

D RIGHT BASE WITH "R" LABEL



1PC

E CROSSBAR



1PC

COVER CAP

2PCS

HARDWARE IDENTIFICATION

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 109381 (B2)

1 BOLT (ø5/16" x 45MM- RBW)



12PCS

FLAT WASHER (Ø5/16" - RBW)



12PCS

2 LOCK WASHER (Ø5/16" - RBW)



12PCS

4 ALLEN WRENCH (M4 x 60MM -RBW)

1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS

COASTE


STEP 1

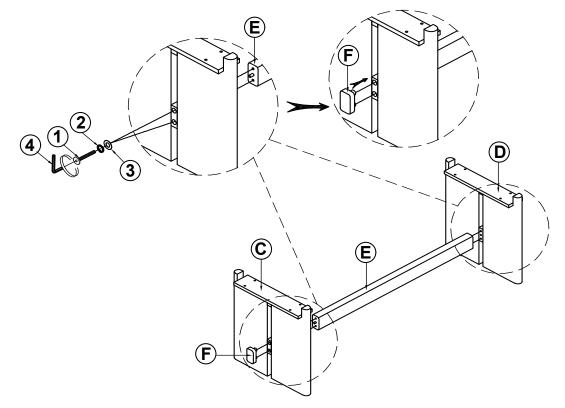


*BOTTOM VIEW PAGE 3 OF 5 COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS STEP 3



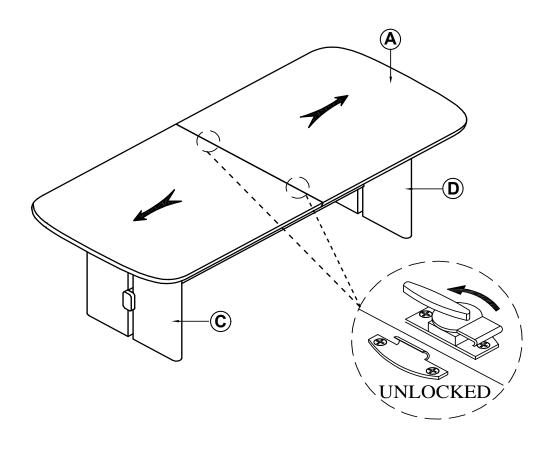

STEP 4

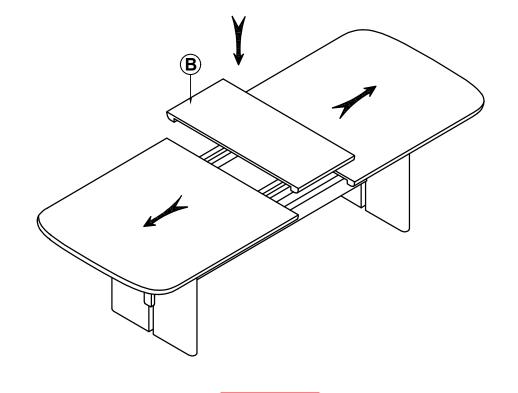


PAGE 4 OF 5


COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS STEP 5



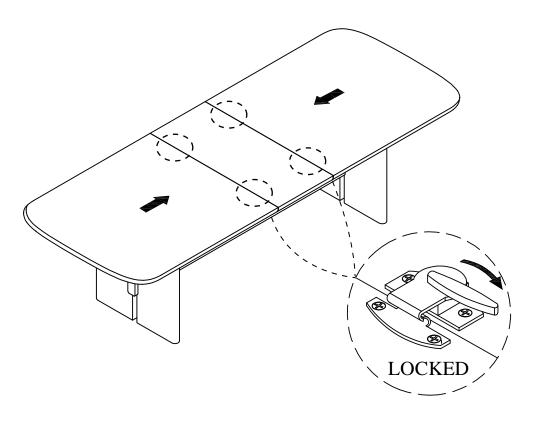


STEP 6 COMPLETE

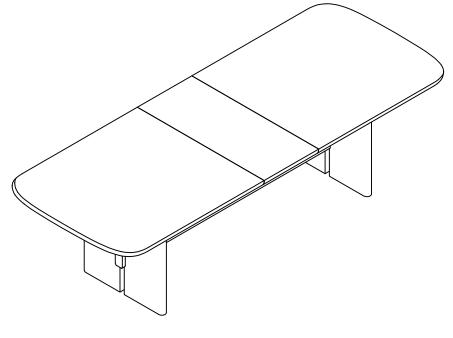





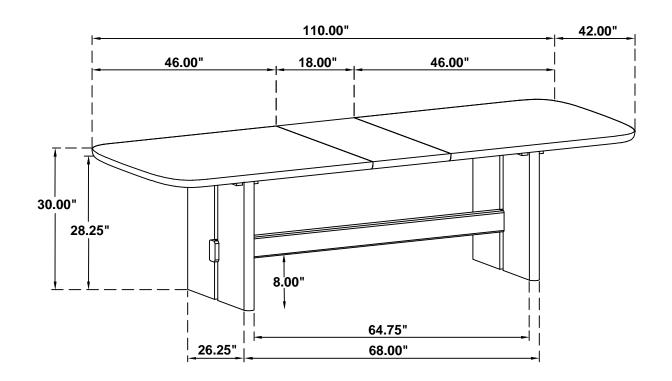

Note: Dimension tolerance ±5%