

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**109541**  
***Dining Table***

ITEM: **109541**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

## PARTS IDENTIFICATION

A TOP



1PC

B LEG



4PCS

## HARDWARE IDENTIFICATION

1 BOLT  
( Ø5/16" x 2-1/2" - RBW )



8PCS

2 LOCK WASHER  
( Ø5/16" - RBW )



 
8PCS

3 FLAT WASHER  
( Ø5/16" - RBW )



8PCS

4 ALLEN WRENCH  
( 4MM - RBW )




1PC

ITEM: **109541**




## ASSEMBLY INSTRUCTIONS
 
### STEP 1

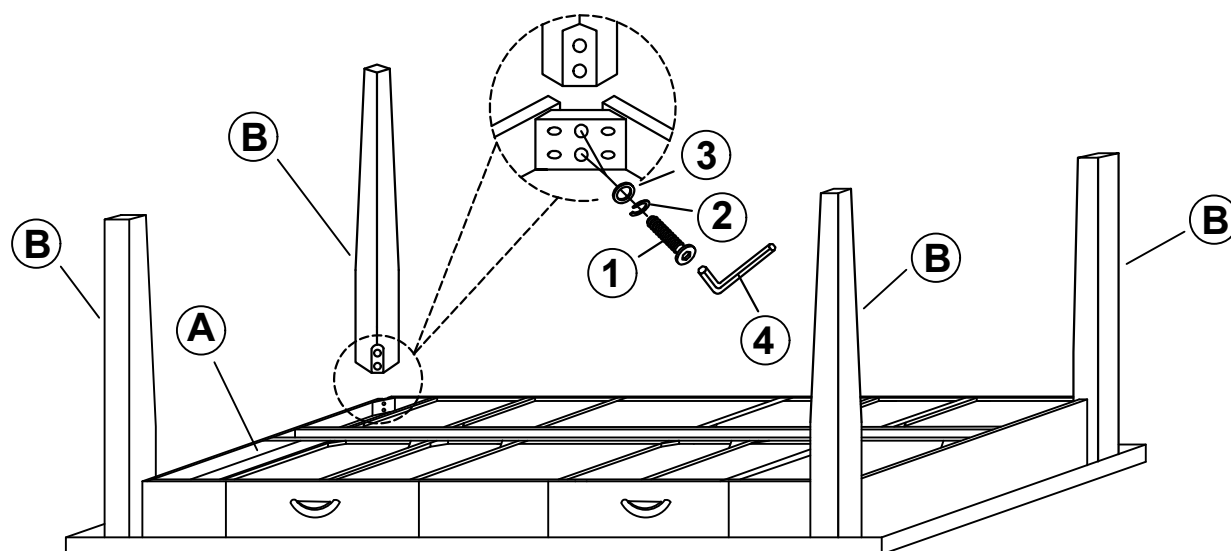


### STEP 2 COMPLETE

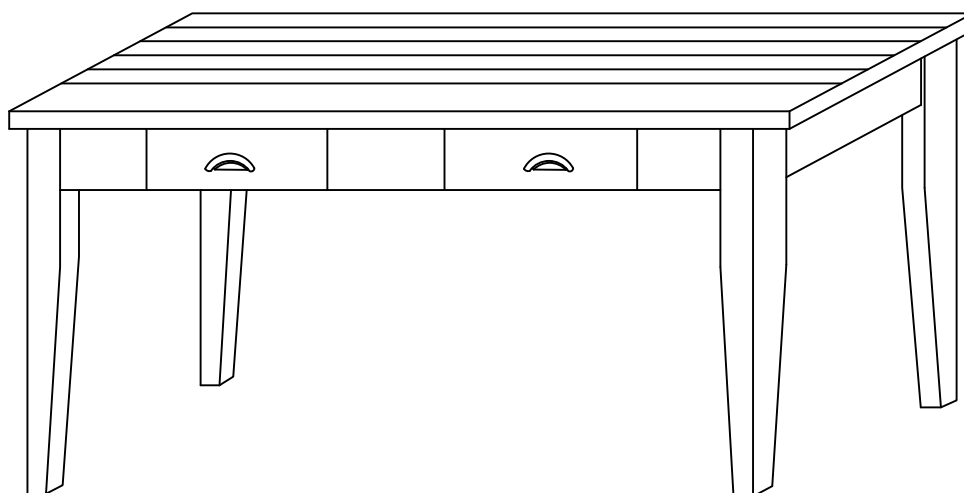 

ITEM: **109541**



 Inner Size of Drawer : 14.00"W X 13.00"D X 2.50"H X 0.25"T

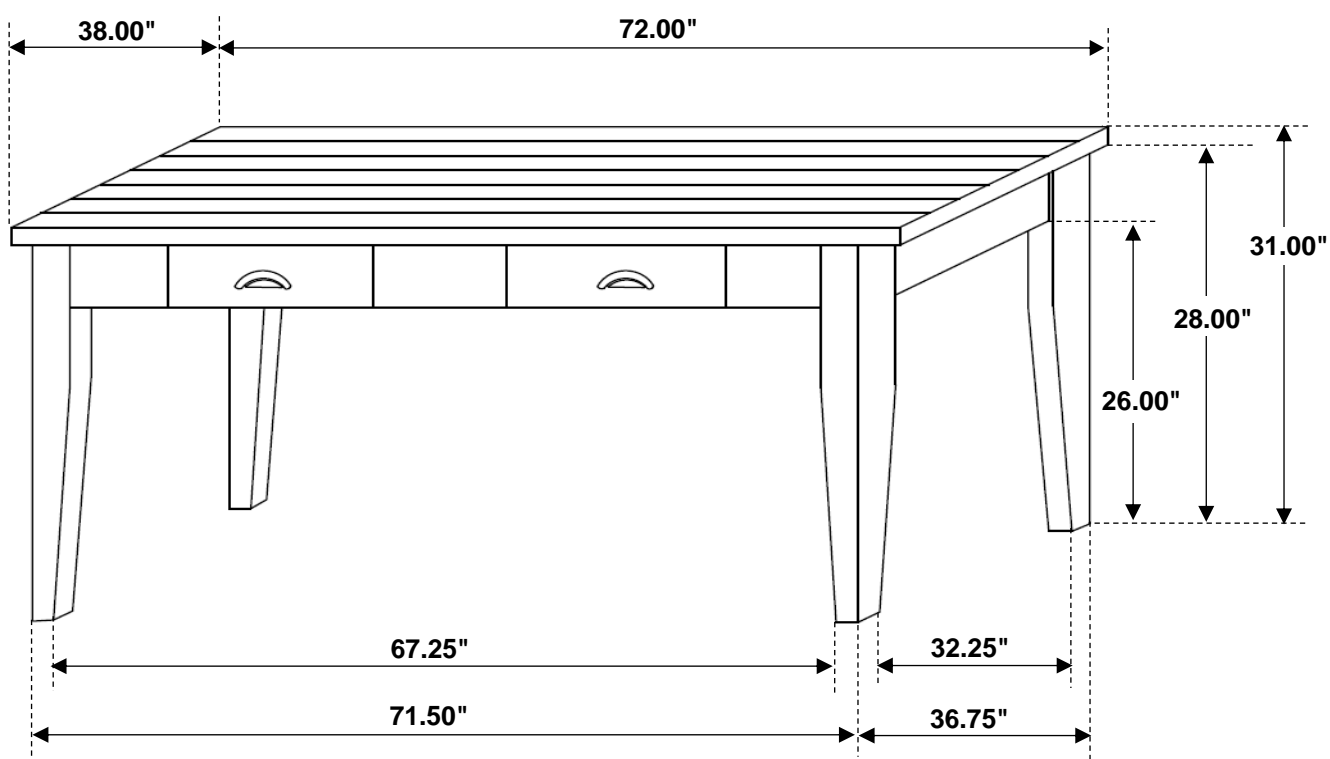

Note: Dimension tolerance  $\pm 5\%$



# *ASSEMBLY INSTRUCTIONS*

## *COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**109542**  
***Dining Side Chair***

ITEM: **109542**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!


 
 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.








 
ASSEMBLY TIME

15 MINUTES

## PARTS IDENTIFICATION

A	BACK FRAME		1PC
B	WOODEN SEAT WITH FRAME		1PC
C	FRONT LEG		2PCS

## HARDWARE IDENTIFICATION

1	LONG BOLT ( Ø1/4" x 3" - RBW )		4PCS
2	MEDIUM BOLT ( Ø1/4" x 2-3/8" - RBW )		4PCS
3	SHORT BOLT ( Ø1/4" x 1-3/8" - RBW )		1PC
4	LOCK WASHER ( Ø5/16" - RBW )		9PCS
5	FLAT WASHER ( Ø5/16" - RBW )		9PCS
6	ALLEN WRENCH ( 4MM - RBW )		1PC

 
### NOTE:

Quantities shown are for one chair.


ITEM: **109542**

## ASSEMBLY INSTRUCTIONS


### STEP 1

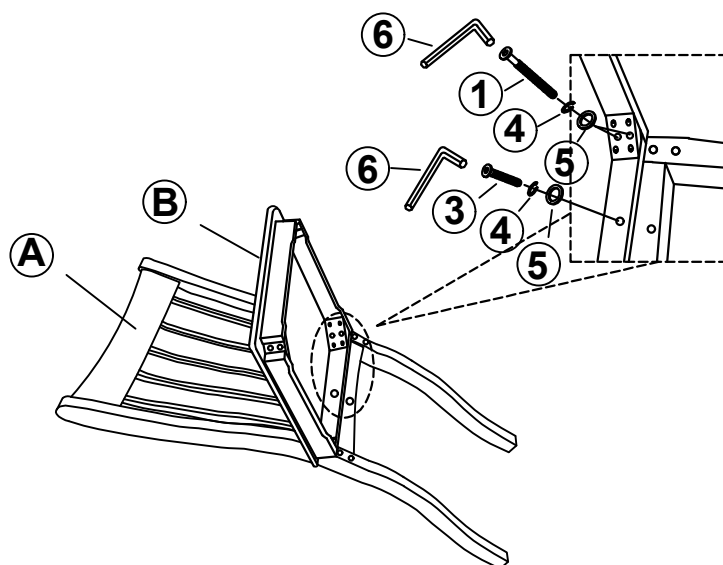


### STEP 2

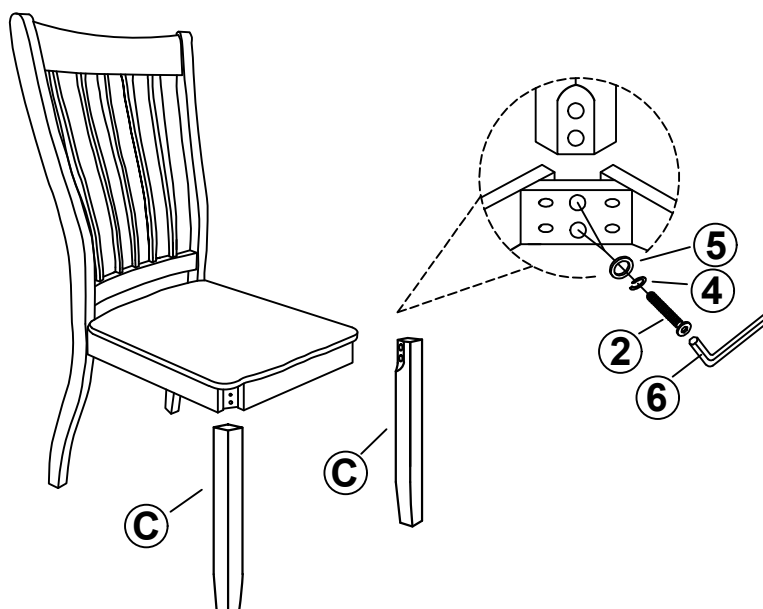 

### STEP 3 **COMPLETE**

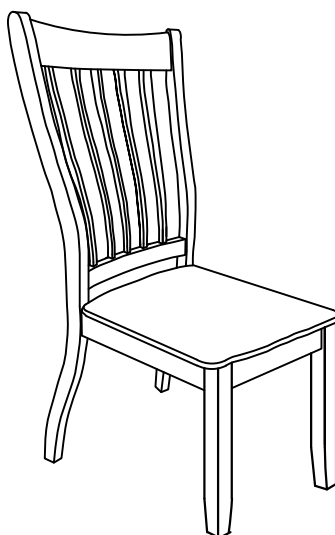 

ITEM: **109542**

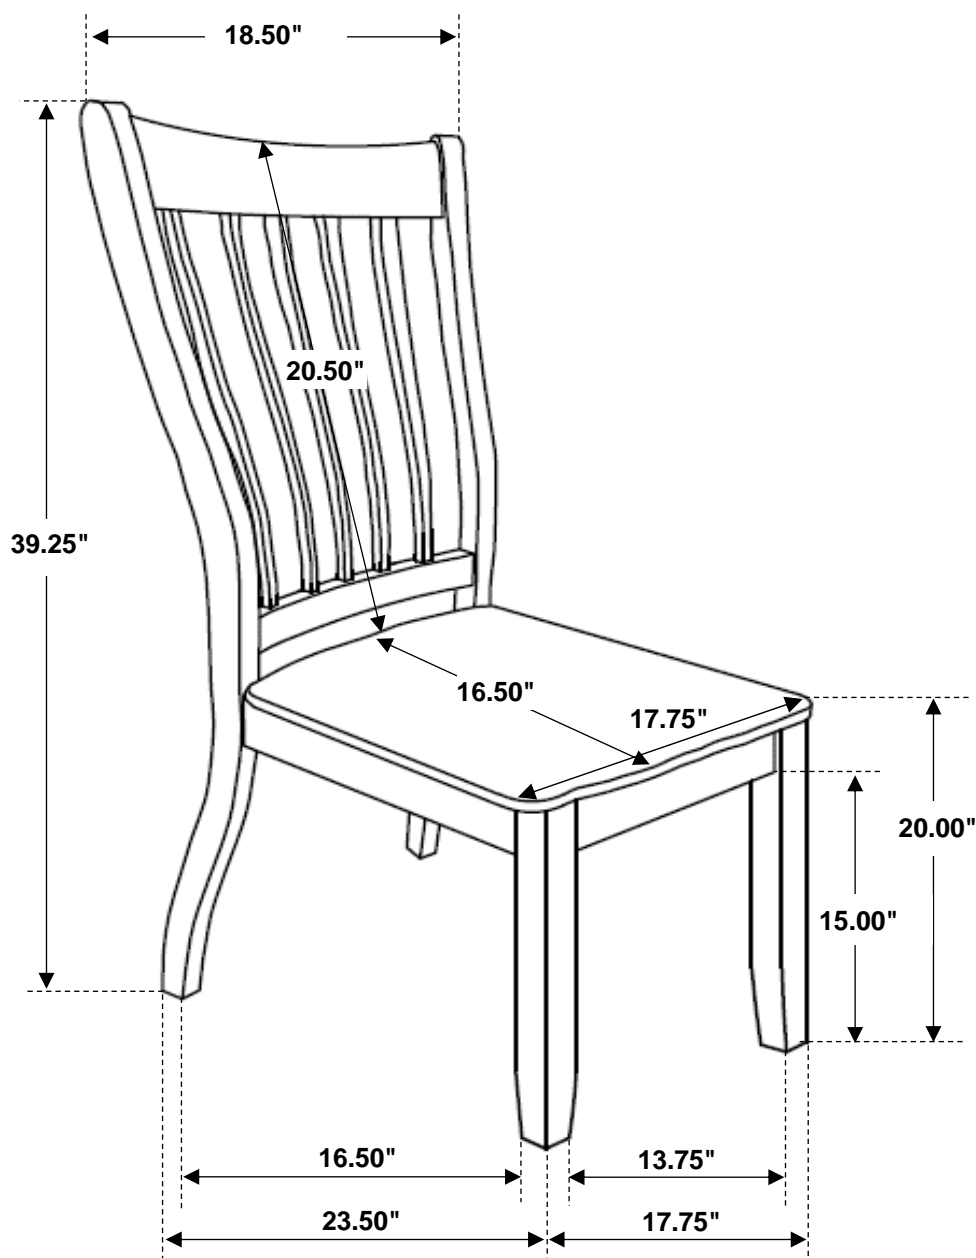 

**Note: Dimension tolerance  $\pm 5\%$**



# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**109543**  
***Bench***

ITEM: **109543**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 


ASSEMBLY TIME

15 MINUTES


## PARTS IDENTIFICATION

A SEAT



1PC

 B LEG



4PCS

## HARDWARE IDENTIFICATION

1

**BOLT**  
( Ø5/16" x 2-1/2" - RBW )



8PCS

2

**LOCK WASHER**  
( Ø5/16" - RBW )



8PCS

3

 
**FLAT WASHER**  
( Ø5/16" - RBW )



8PCS

4

**ALLEN WRENCH**  
( 4MM - RBW )




1PC


ITEM: **109543**

## ASSEMBLY INSTRUCTIONS

 
### STEP 1

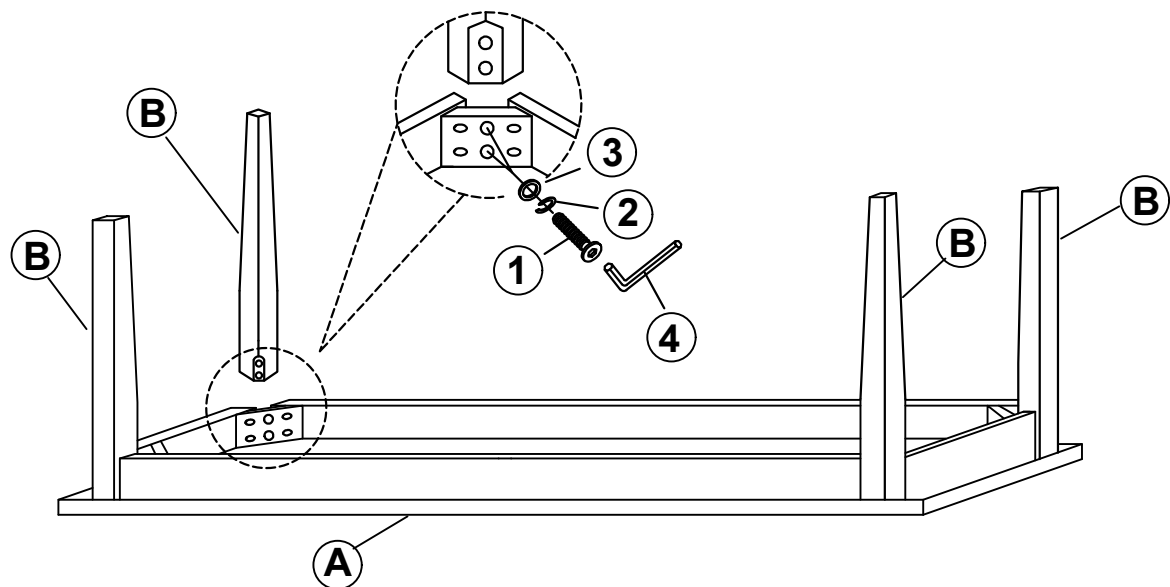

### STEP 2 COMPLETE

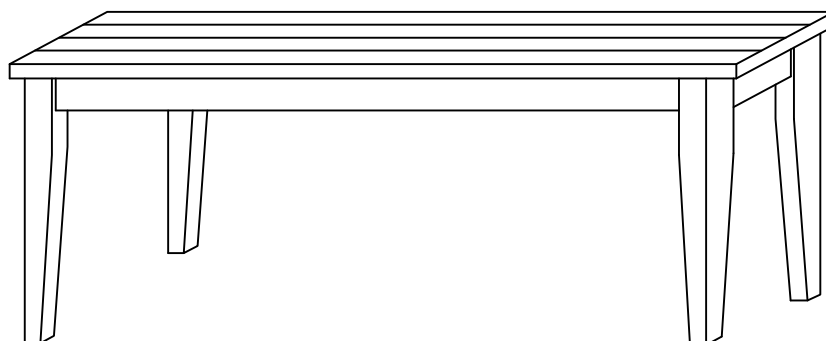 

ITEM: **109543**

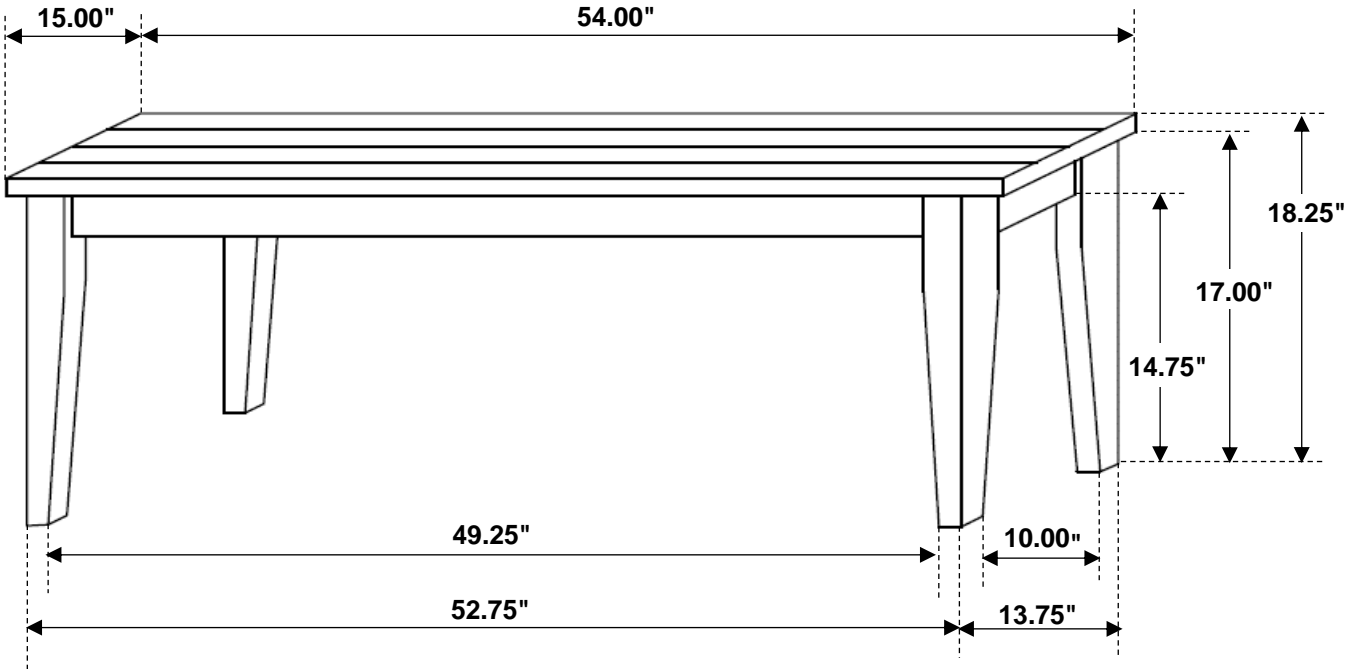 

**Note: Dimension tolerance  $\pm 5\%$**