



# *ASSEMBLY INSTRUCTIONS*

## *COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**115231**  
**DINING TABLE**

ITEM:115231



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES


## PARTS IDENTIFICATION

A TOP

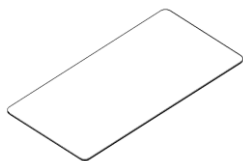


1PC

B FRAME

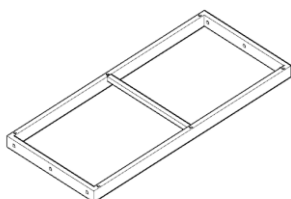

1PC

C LEG

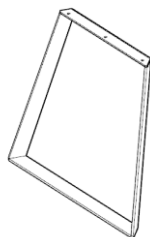

2PC

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:115231



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!





 

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

## HARDWARE IDENTIFICATION

1	ALLEN KEY (5MM )		1PC
2	FLAT WASHER ( $\phi 8 \times 20 \times 1.2$ )		12PCS
3	ALLEN SCREW (M8*20)		6PCS
4	ALLEN SCREW (M8*30)		6PCS
5	SPRING WASHER ( $\Phi 8.5 \times 1.5$ )		6PCS
6	STICKER (50*50*2 )		8PCS


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **115231**

## ASSEMBLY INSTRUCTIONS

### STEP:1

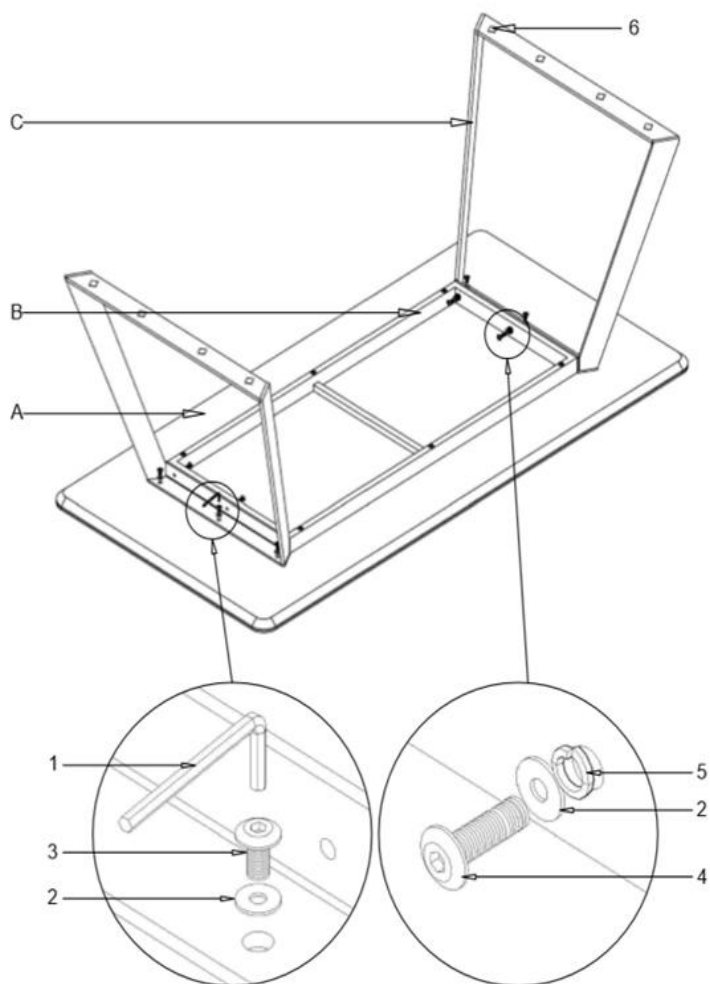


### COMPLETE

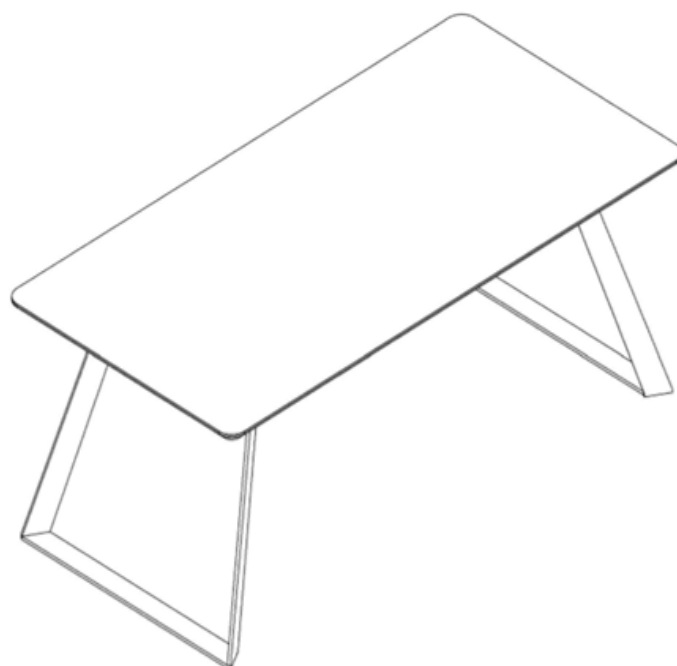

ITEM: **115231**

ASSEMBLY INSTRUCTIONS

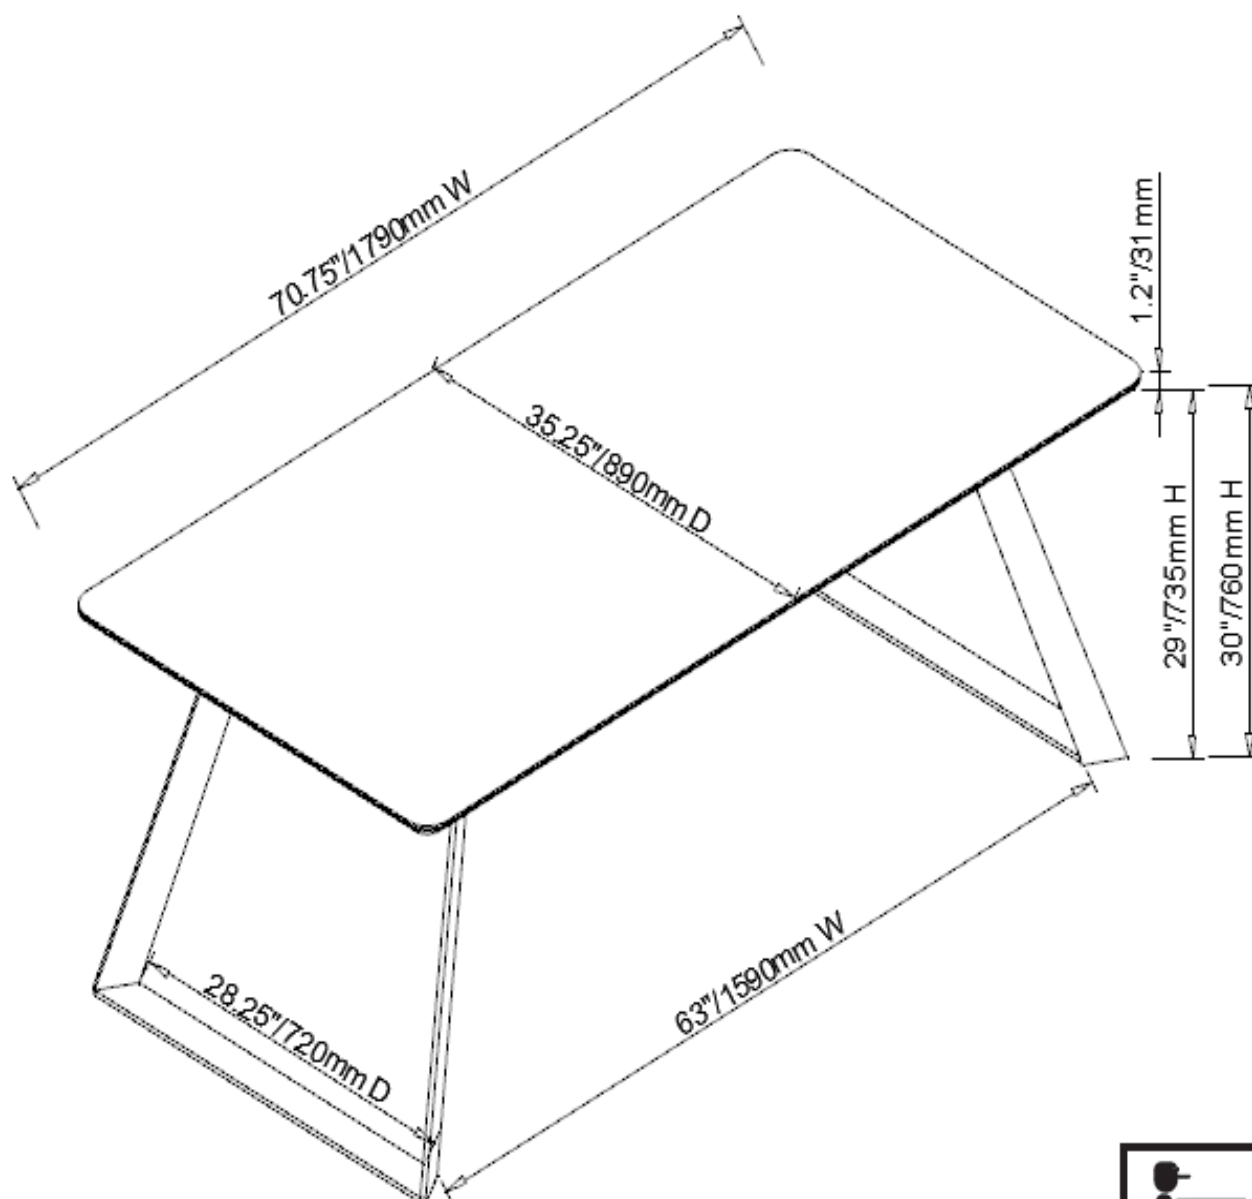

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

# 190442 Dining Chair

REVISION 0: 06/24/2021

REVISION 1: 08/11/2022

REVISION 2: 11/15/2023

PAGE 1 OF 3

COASTERFURNITURE.COM

# ITEM:190442



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

### Warning !!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

**ASSEMBLY TIME**

**15 MINUTES**

## PARTS IDENTIFICATION

A CHAIR SEAT & BACK

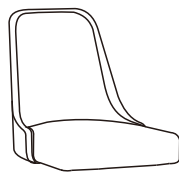


1PC

C UPPER LEG FRAME



1PC

B LOWER LEG FRAME

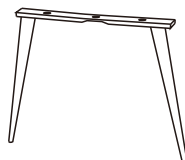

1PC

Z

## HARDWARE IDENTIFICATION

1 BOLT (M6 x 30mm - BLK)



5PCS

2 WASHER (Ø6 x 20 x 2mm - BLK)



5PCS

3 ALLEN WRENCH (5mm - GD)



1PC


### NOTE:

Quantities shown are for one chair.

ITEM:190442


## ASSEMBLY INSTRUCTIONS

### STEP 1

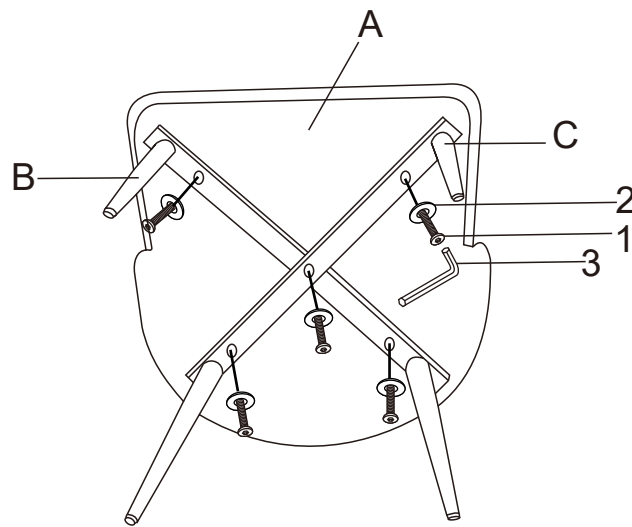


### STEP 2

### COMPLETE

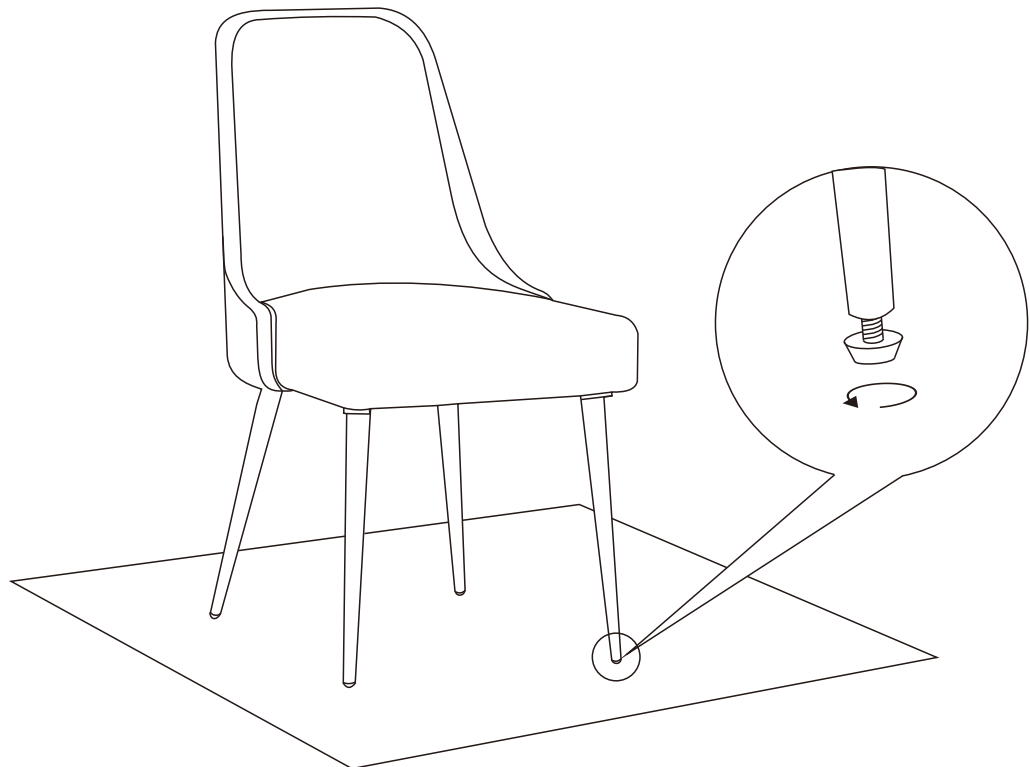



# ITEM:190442

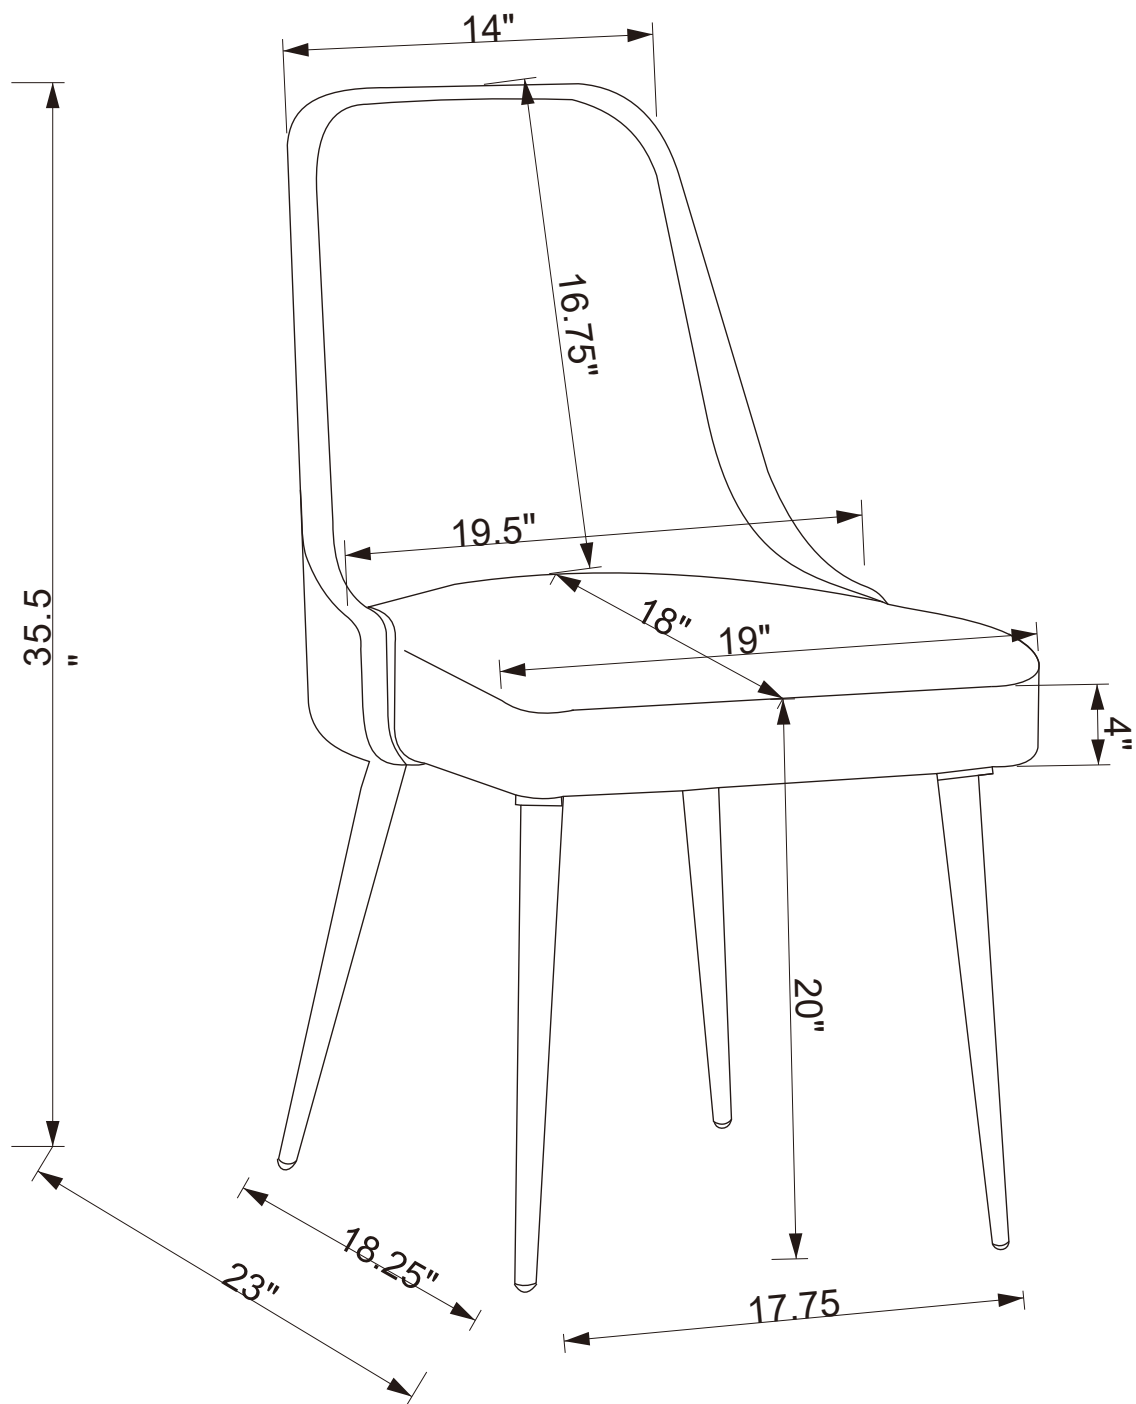

Note: Dimension tolerance  $\pm 5\%$