



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

115480DWA(B1)

Dining Table Base

ITEM: 115480DWA(B1)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

20 MINUTES


PARTS IDENTIFICATION

A	TOP SUPPORT FRAME		1PC
B	CURVED LEG		5PCS
C	BOTTOM BASE		1PC

 
HARDWARE IDENTIFICATION

1	BOLT (Ø5/16" x 25mm - BLK)		20PCS
2	LOCK WASHER (Ø5/16" x 2mm - BLK)		20PCS
3	FLAT WASHER (Ø5/16" x 2mm - BLK)		20PCS
4	ALLEN WRENCH (4mm x 57mm - BLK)		1PC
5	GLASS GASKET (Ø20mm x 3mm)		4PCS

ITEM: **115480DWA(B1)**
ASSEMBLY INSTRUCTIONS
STEP 1

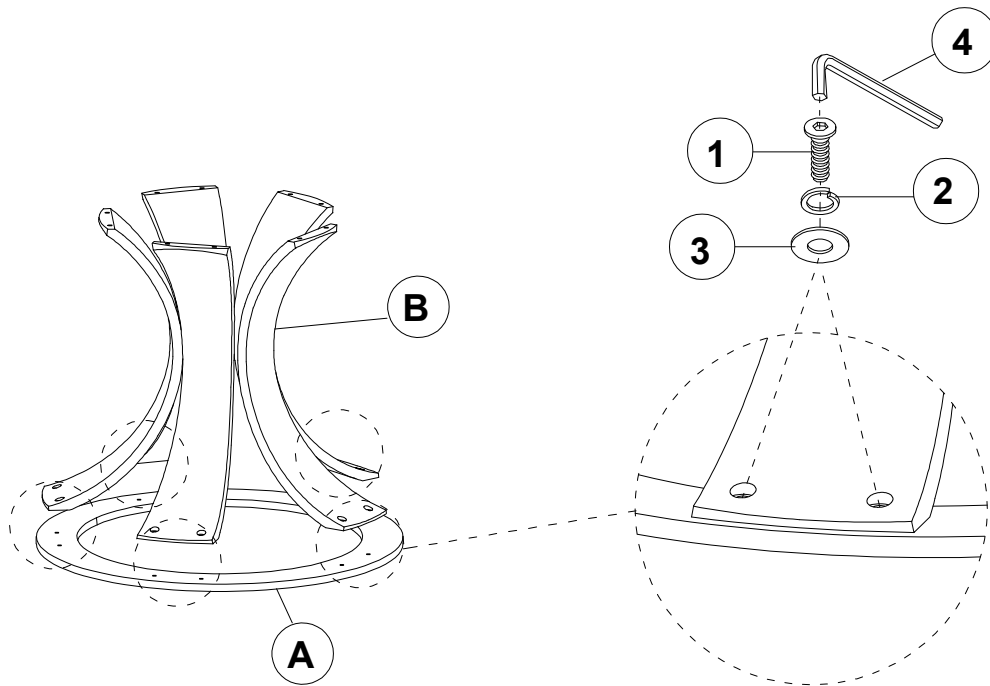

STEP 2

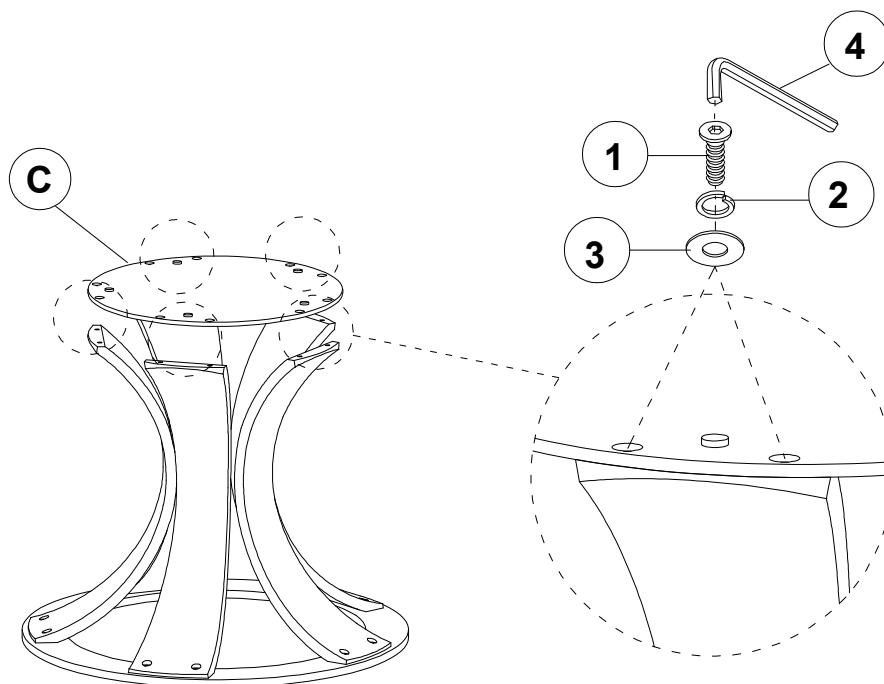


ITEM: 115480DWA(B1)

ASSEMBLY INSTRUCTIONS





STEP 3

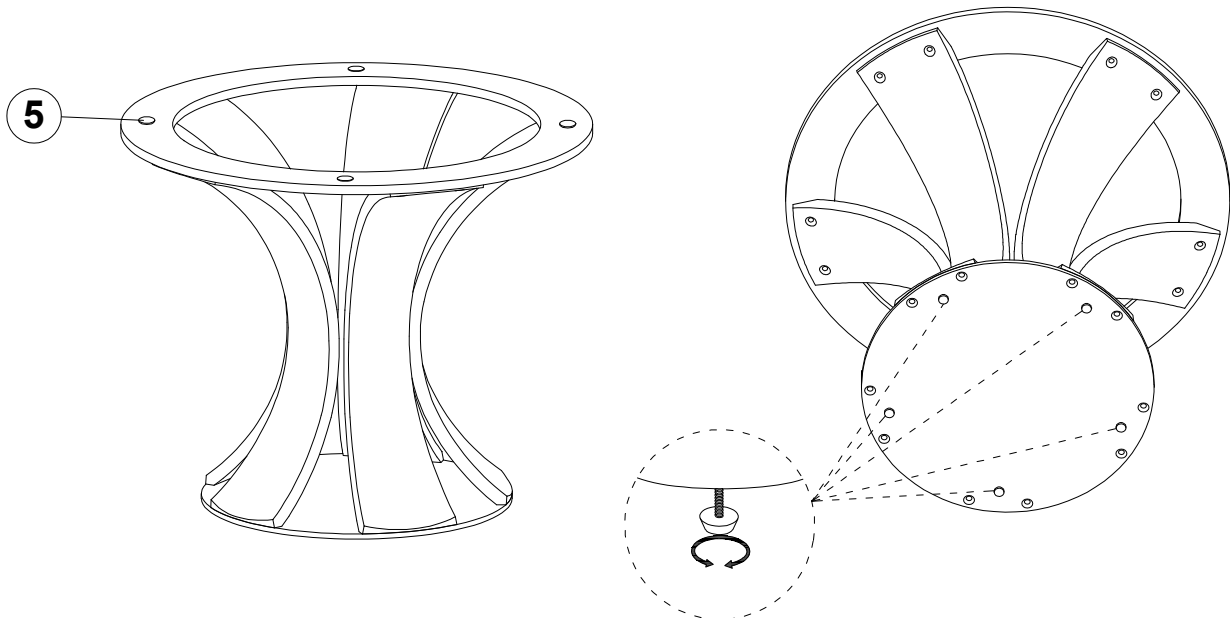


ADJUSTABLE LEVELER

STEP 4

COMPLETE

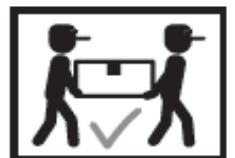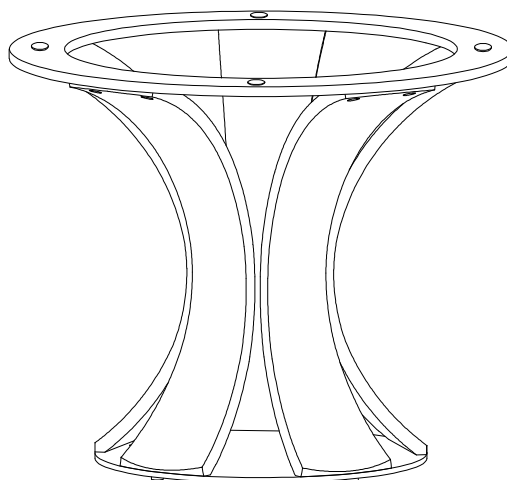

ITEM: **115480DWA(B1)**

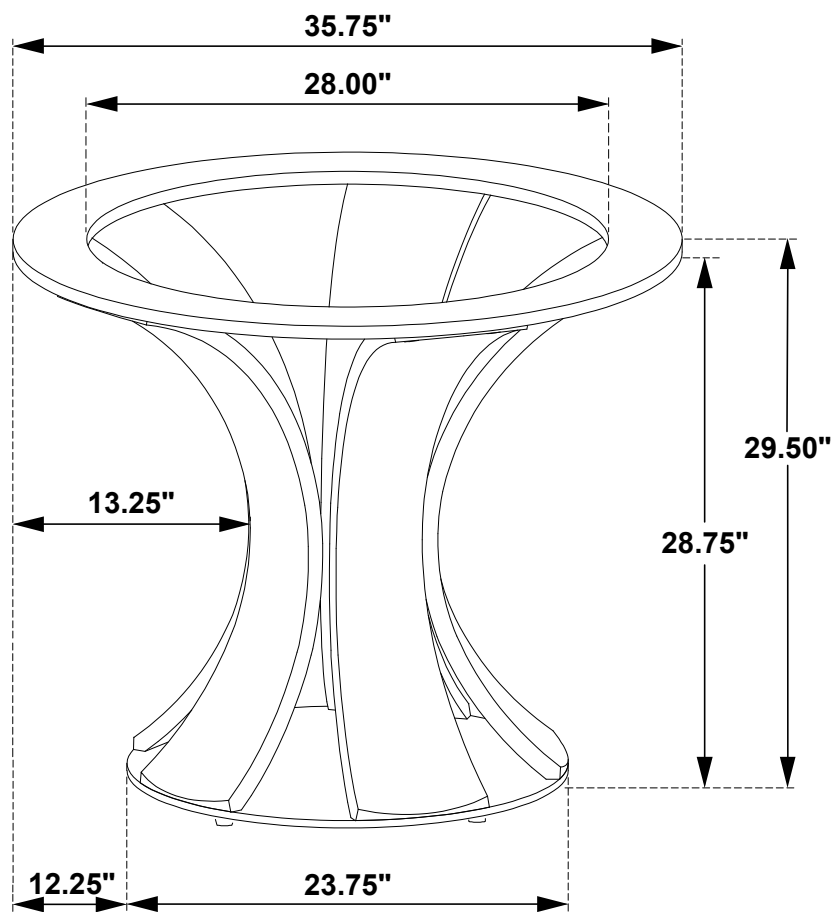

Note: Dimension tolerance $\pm 5\%$