



*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**120400**  
***DINING TABLE***

REVISION 0 : 12/14/2023

PAGE 1 OF 5

COASTERFURNITURE.COM

ITEM:120400



# ASSEMBLY INSTRUCTIONS


## ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



## WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

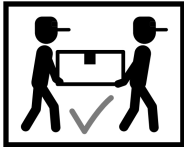

ASSEMBLY TIME 20 MINUTES


## PARTS IDENTIFICATION

A TOP PANEL

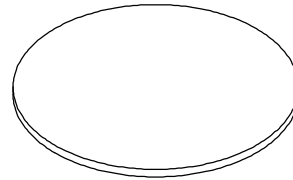


1PC

B BOTTOM FRAME

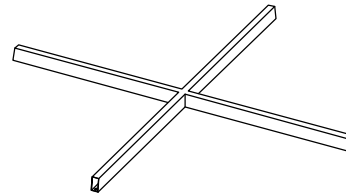

1PC

C LEG

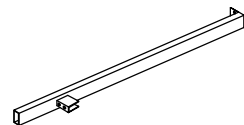

4PCS

Z

## HARDWARE IDENTIFICATION

1

SHORT BOLT  
(1/4" x 15mm SR)



24PCS

3

ALLEN WRENCH  
(4mm)



1PC

2

CAP  
(20 x 40mm BLK)



4PCS


ITEM:120400




# ASSEMBLY INSTRUCTIONS

## STEP 1

Do not tighten until each step is completed or instructed.

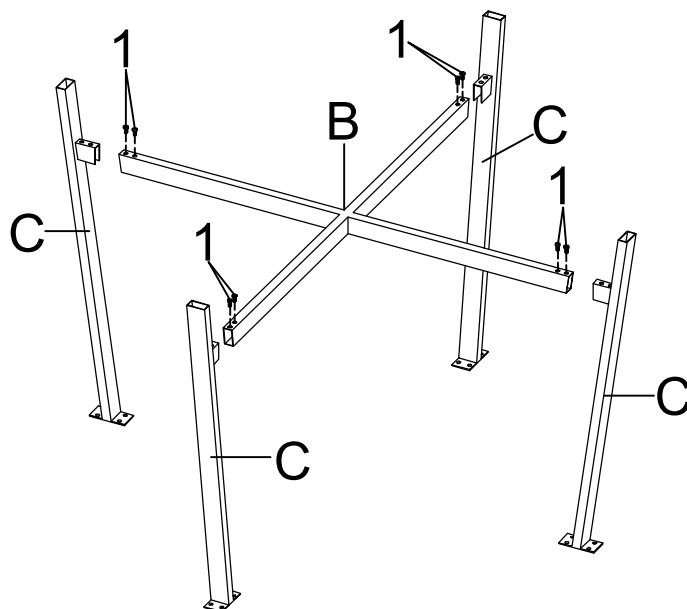


## STEP 2

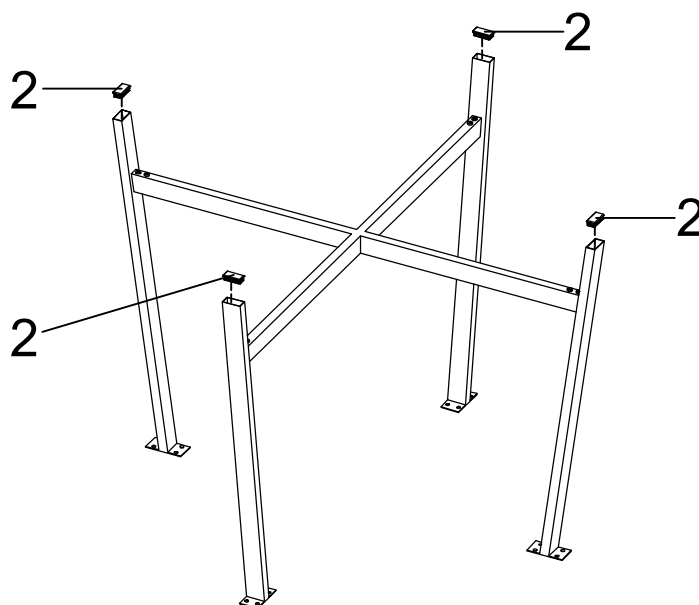



ITEM:120400

# ASSEMBLY INSTRUCTIONS

## STEP 3

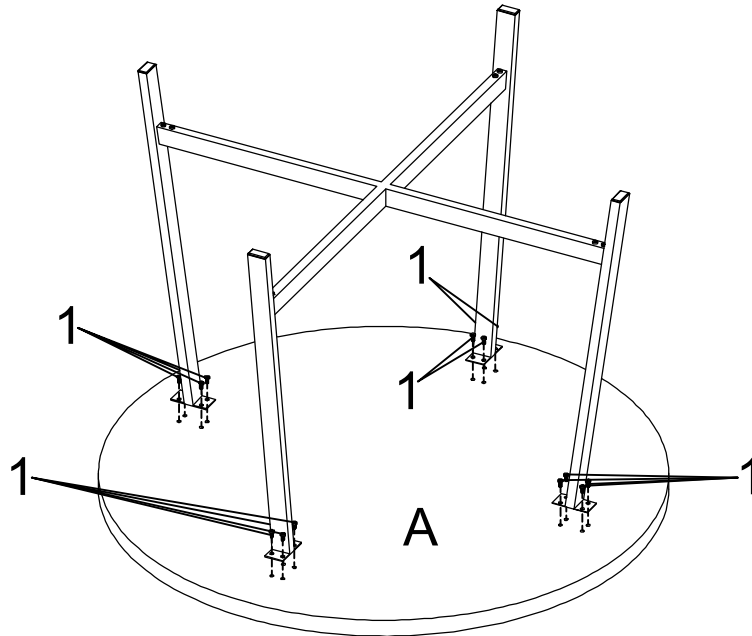

## STEP 4

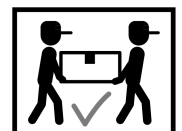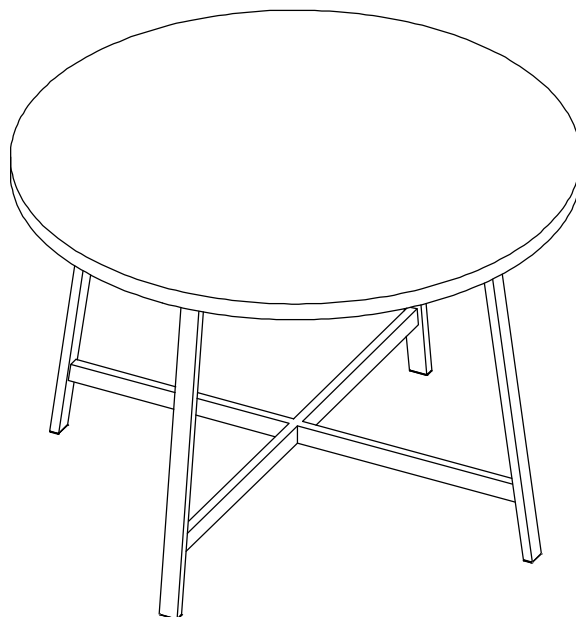


# ITEM:120400

## ASSEMBLY INSTRUCTIONS



**Product Size : 1143 DIA X 775 H (MM)**

**Product Size : 45" DIA X 30.5"**

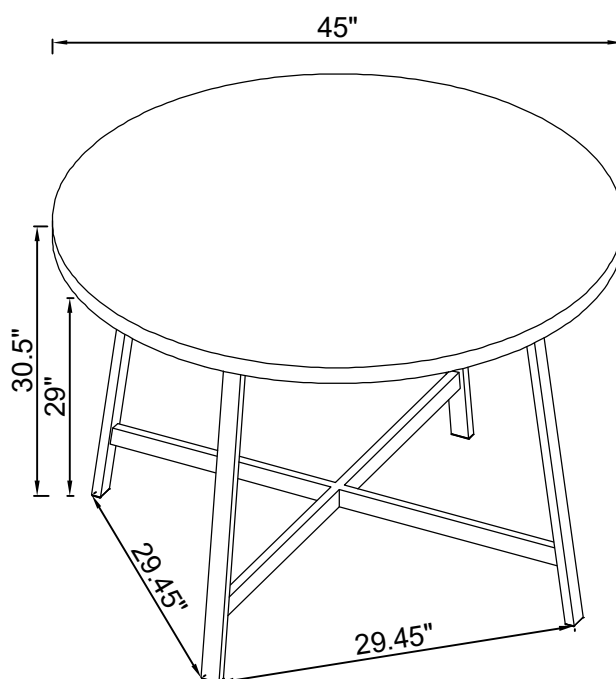

Note : Dimension tolerance  $\pm 5\%$