



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

107283

ARM CHAIR

REVISION 0: 12/23/2016
REVISION 1: 05/20/2019
REVISION 2: 11/30/2019
REVISION 3: 12/14/2019
REVISION 4: 08/15/2022
REVISION 5: 12/24/2024
REVISION 6: 02/06/2025

PAGE 1 OF 4

COASTERFURNITURE.COM

ITEM:107283



ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

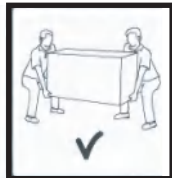

ASSEMBLY TIME

10 MINUTES


PARTS IDENTIFICATION

A		SEAT AND BACK	1PC
B		BACK RIGHT LEG	1PC
C		BACK LEFT LEG	1PC
D		FRONT LEG	2PCS

HARDWARE IDENTIFICATION


1		LARGE BOLT (M8×65mm)	4PCS
2		SMALL BOLT (M8×60mm)	4PCS
3		ALLEN KEY (M8)	1PC
4		LOCK WASHER (Φ8)	8PCS
5		FLAT WASHER (Φ8)	8PCS

 STEP 1

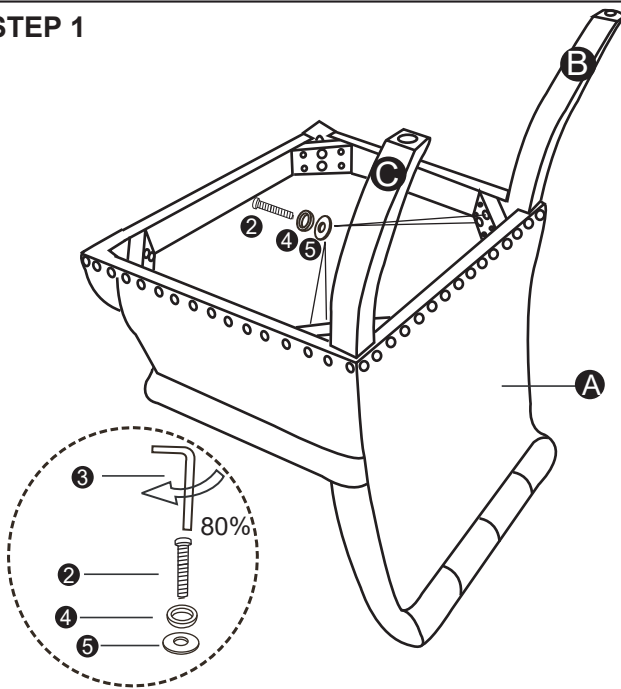


STEP 2

 
Front legs

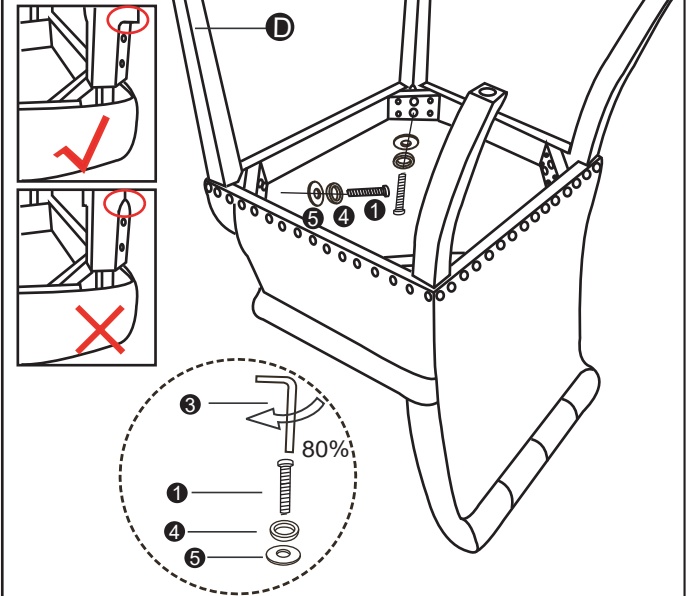

 
STEP 3

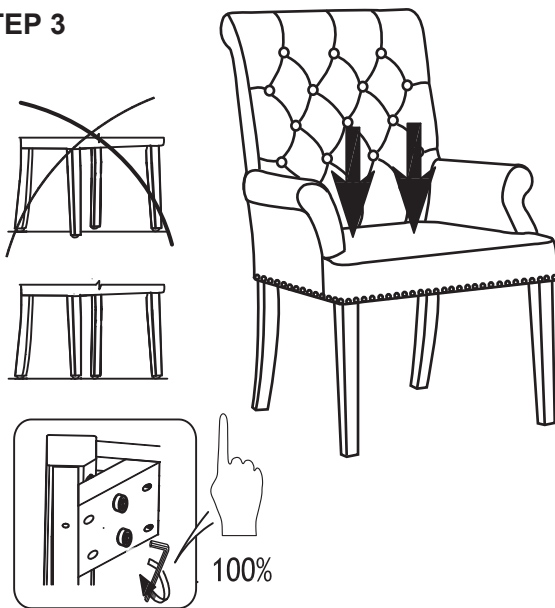

 STEP 4

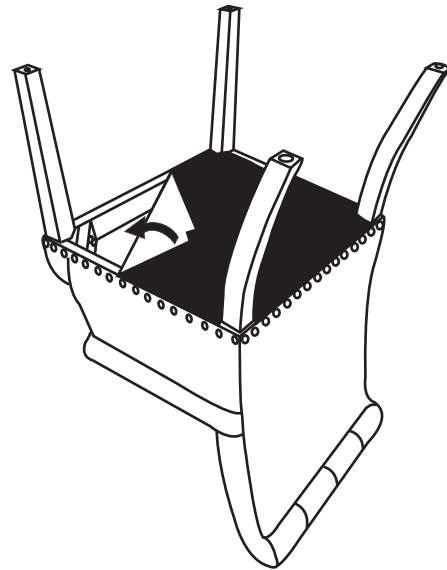

 
STEP 5

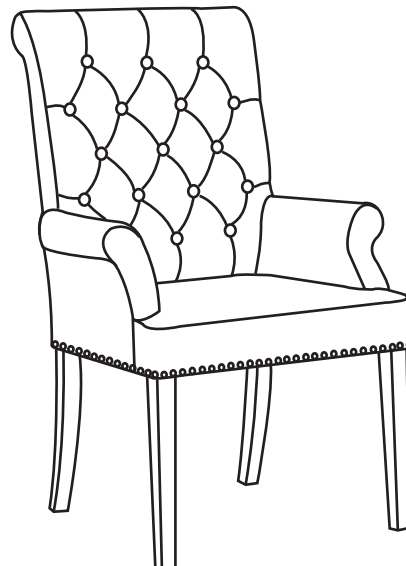

ITEM: **107283**



 ASSEMBLY INSTRUCTIONS

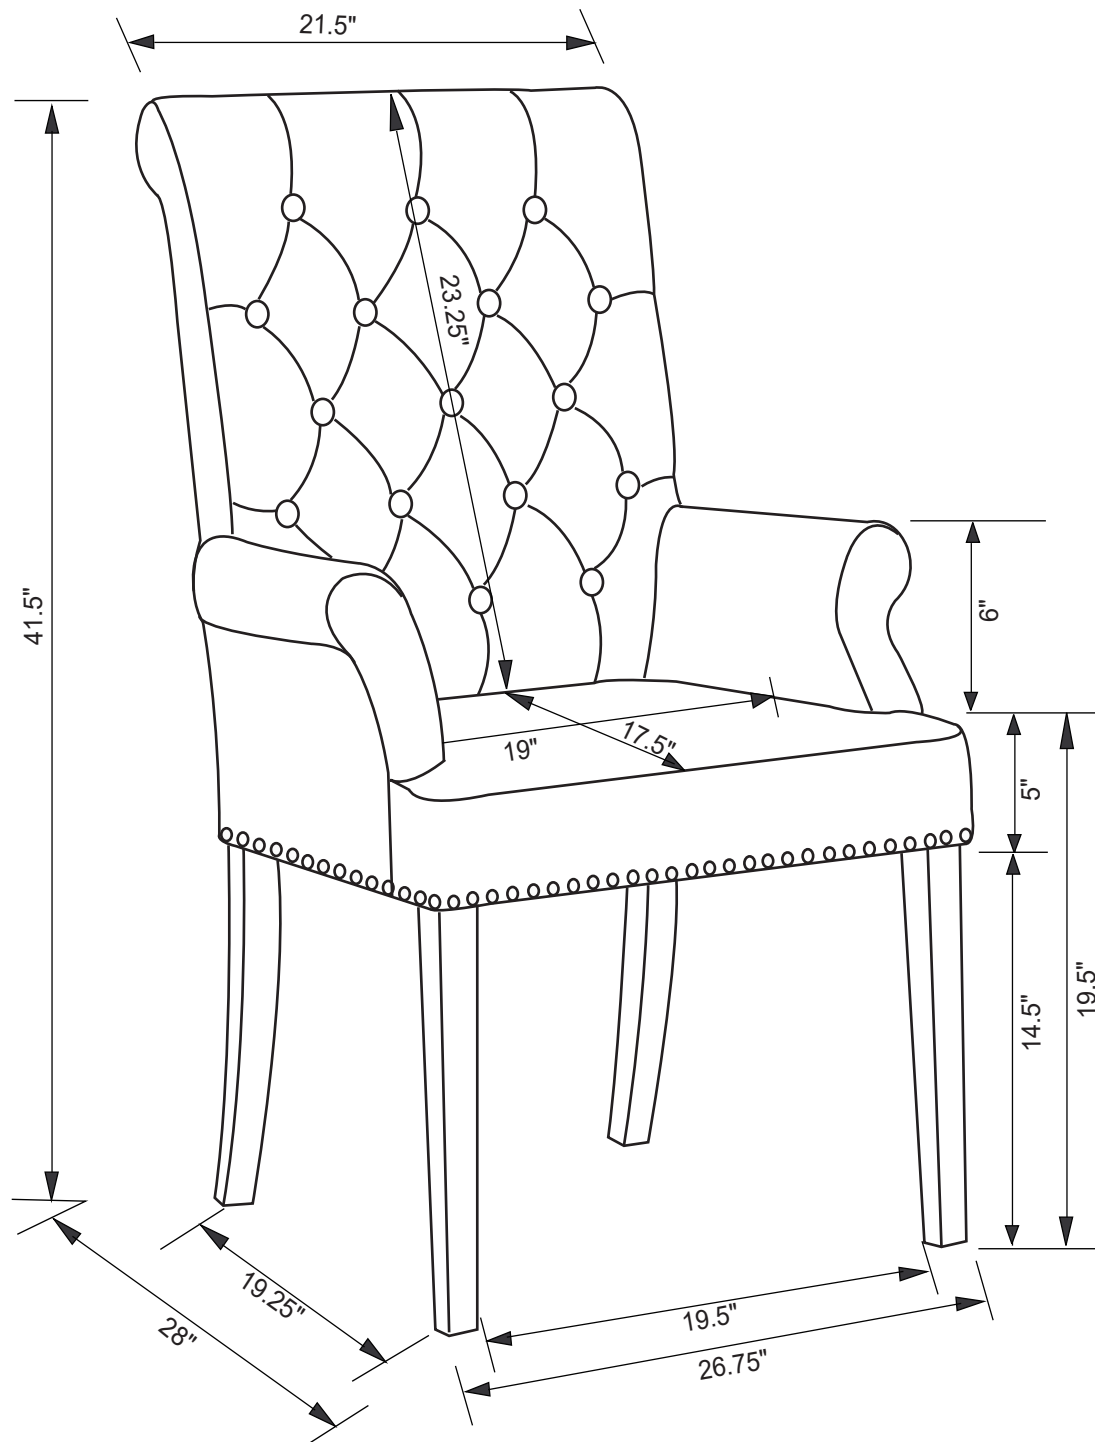

Note : Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

REVISION 0: 12/23/2016
REVISION 1: 05/20/2019
REVISION 2: 11/30/2019
REVISION 3: 12/14/2019
REVISION 4: 07/28/2022
REVISION 5: 12/24/2024
REVISION 6: 02/06/2025

PAGE 1 OF 4

107286

SIDE CHAIR

COASTERFURNITURE.COM

ITEM:107286



ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 

 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

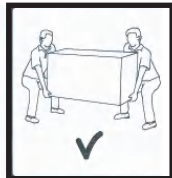




 


ASSEMBLY TIME

10 MINUTES

 
PARTS IDENTIFICATION

- A**  **BACK FRAME 1PC**
- B**  **SEAT CUSHION 1PC**
- C**  **FRONT LEG 2PCS**


HARDWARE IDENTIFICATION

- 1**  **LARGE BOLT (M8×75mm) 4PCS**
- 2**  **SMALL BOLT (M8×65mm) 4PCS**
- 3**  **SMALL BOLT (M8×55mm) 1PC**
- 4**  **ALLEN KEY (M8) 1PC**
- 5**  **LOCK WASHER (Φ8) 9PCS**
- 6**  **FLAT WASHER (Φ8) 9PCS**

STEP 1



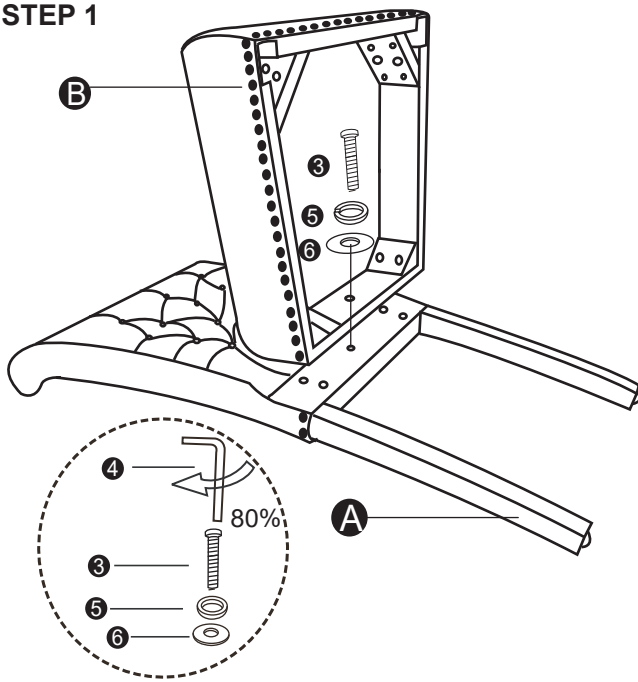


 STEP 2



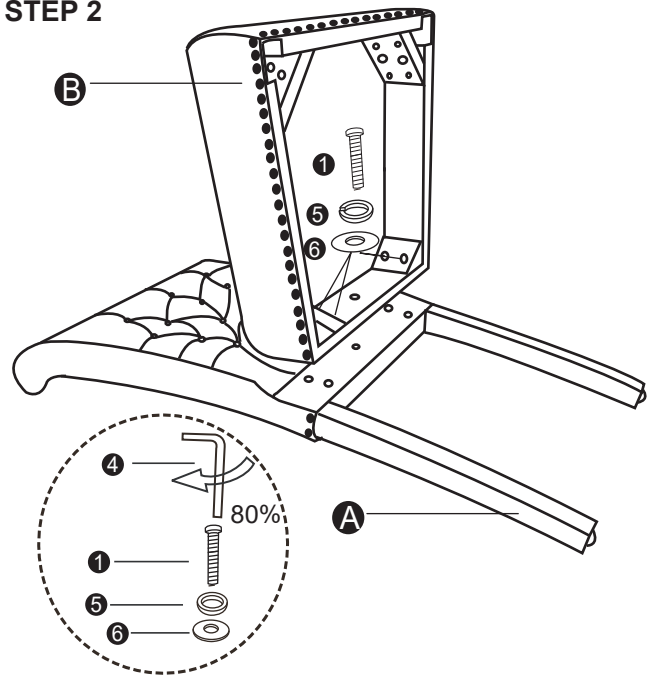


STEP 3

   
Front legs

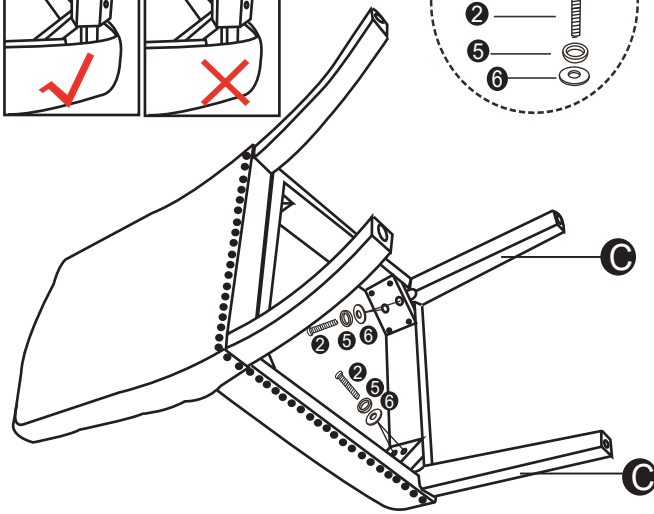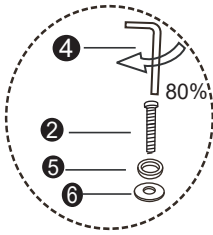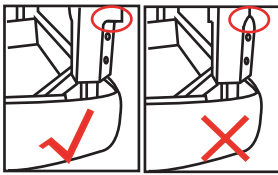

   
STEP 4

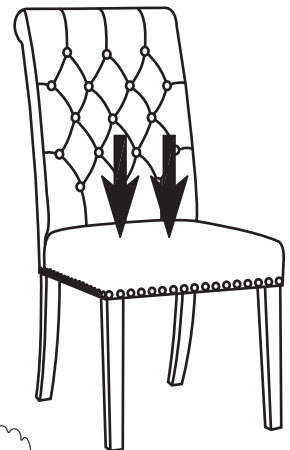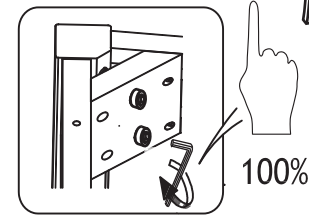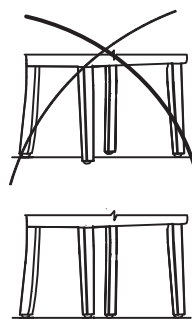

 STEP 5

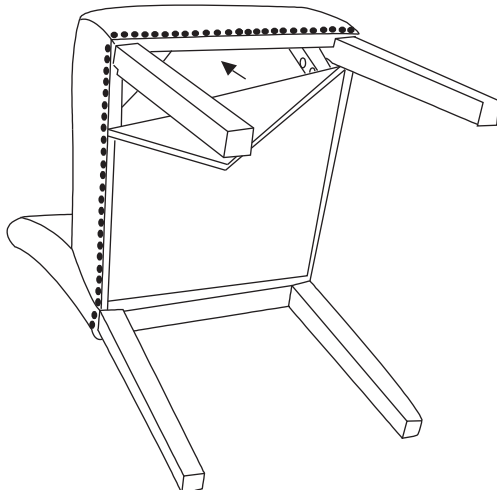

 
STEP 6

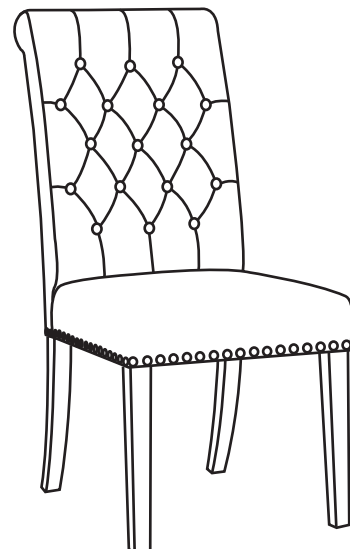

ITEM: **107286**



 ASSEMBLY INSTRUCTIONS

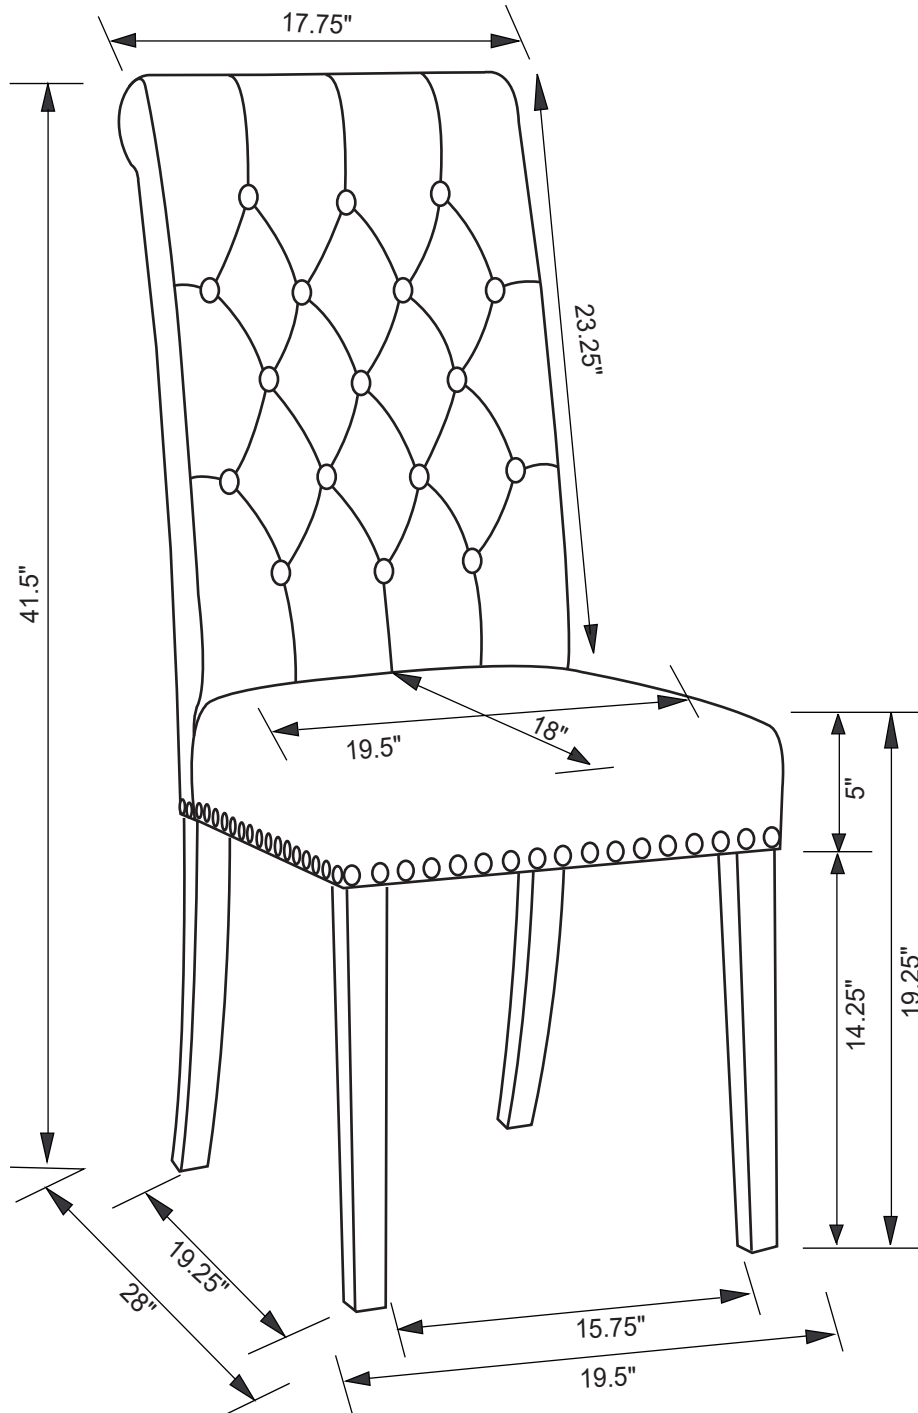

Note : Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

121231(B1&B2) *Dining Table*

REVISION 0 : 05/30/2018
REVISION 1 : 09/04/2018
REVISION 2 : 07/01/2020

ITEM:121231(B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



 
ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A TOP



1PC

B LEAF



 
2PCS

C MOUNTING PLATE



2PCS

D BASE



2PCS

E CROSS BAR



1PC

B2 (BOX 2)

F PEDESTAL COLUMN



2PCS

HARDWARE IDENTIFICATION

Z-B1(BOX 1) - HARDWARE PACK IS LOCATED IN 121231(B1)

1 LONG BOLT
(5/16" x 45mm - BLK)



12PCS

2 SHORT BOLT
(5/16" x 38mm - BLK)



8PCS

3 HEX NUT
(5/16" x 12mm - BLK)



8PCS

4 LOCK WASHER
(5/16" x 12D x 1.1mm - BLK)



28PCS

5 FLAT WASHER
(5/16" x 22D x 2mm - BLK)



28PCS

6 ALLEN WRENCH
(4mm - BLK)



1PC

7 WRENCH
(12mm - BLK)



 
1PC

ITEM: **121231(B1&B2)**




ASSEMBLY INSTRUCTIONS

STEP 1

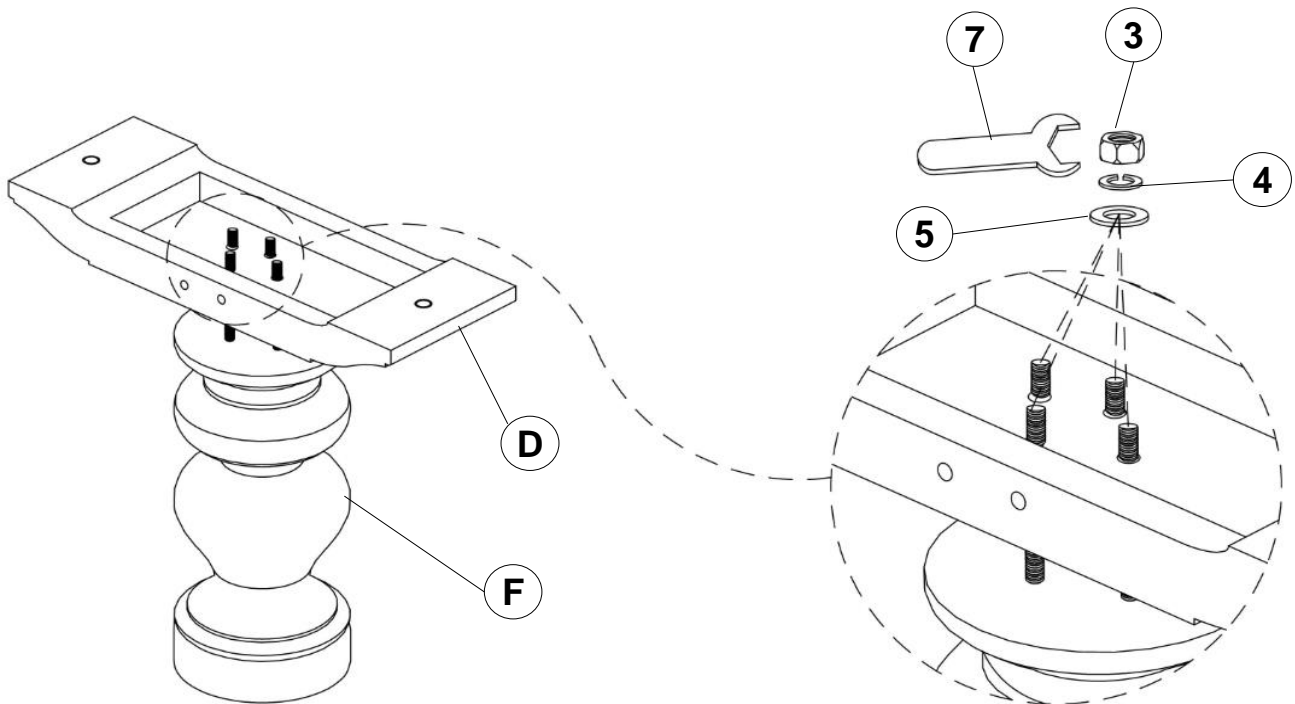

 STEP 2

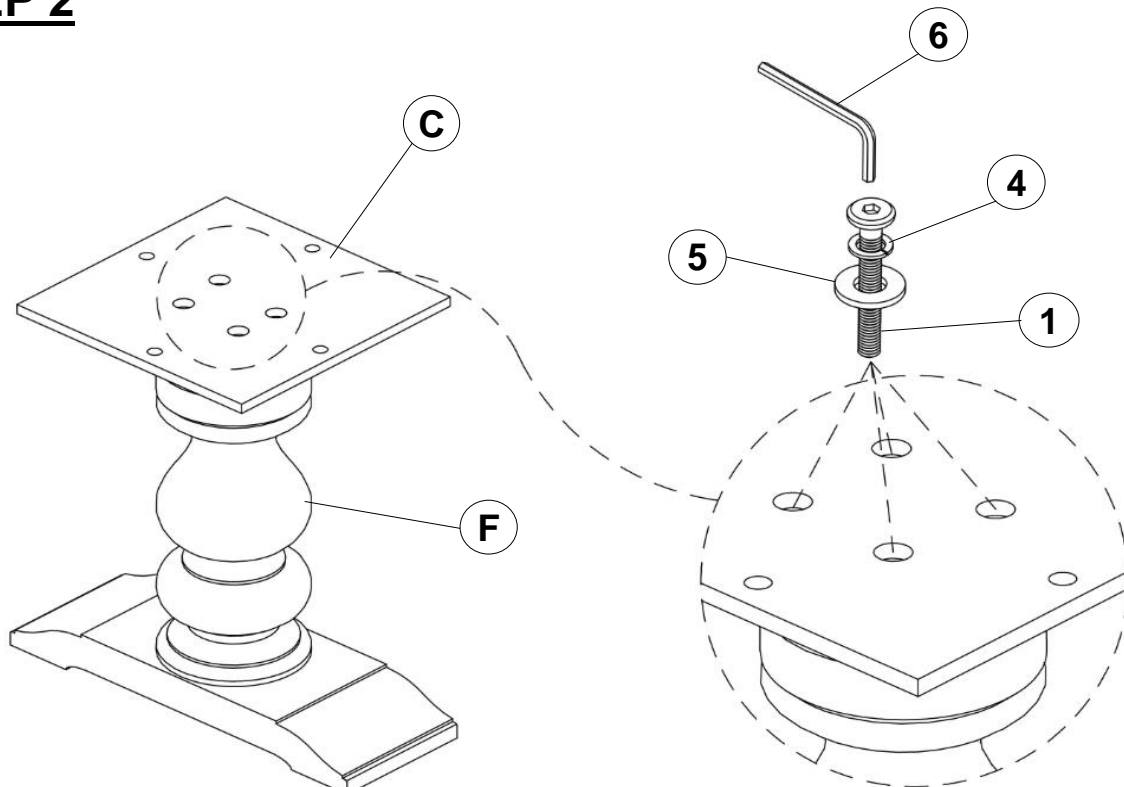


ITEM: **121231(B1&B2)**




ASSEMBLY INSTRUCTIONS

 STEP 3

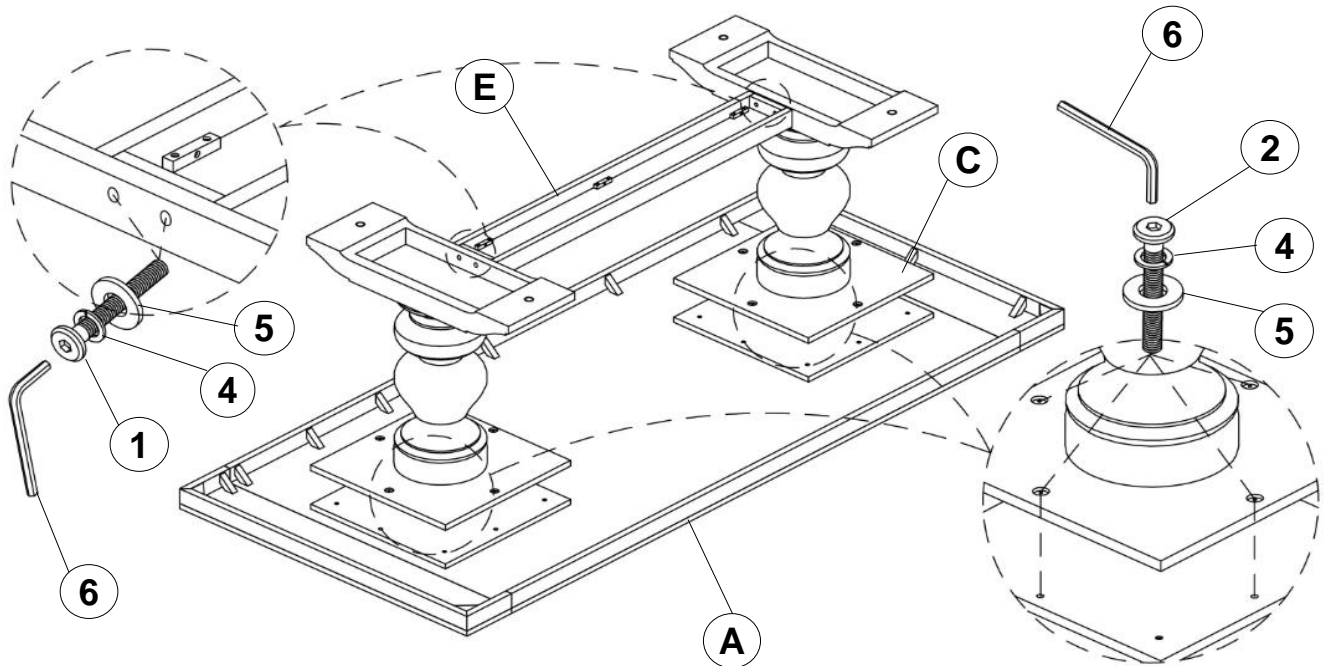

 STEP 4

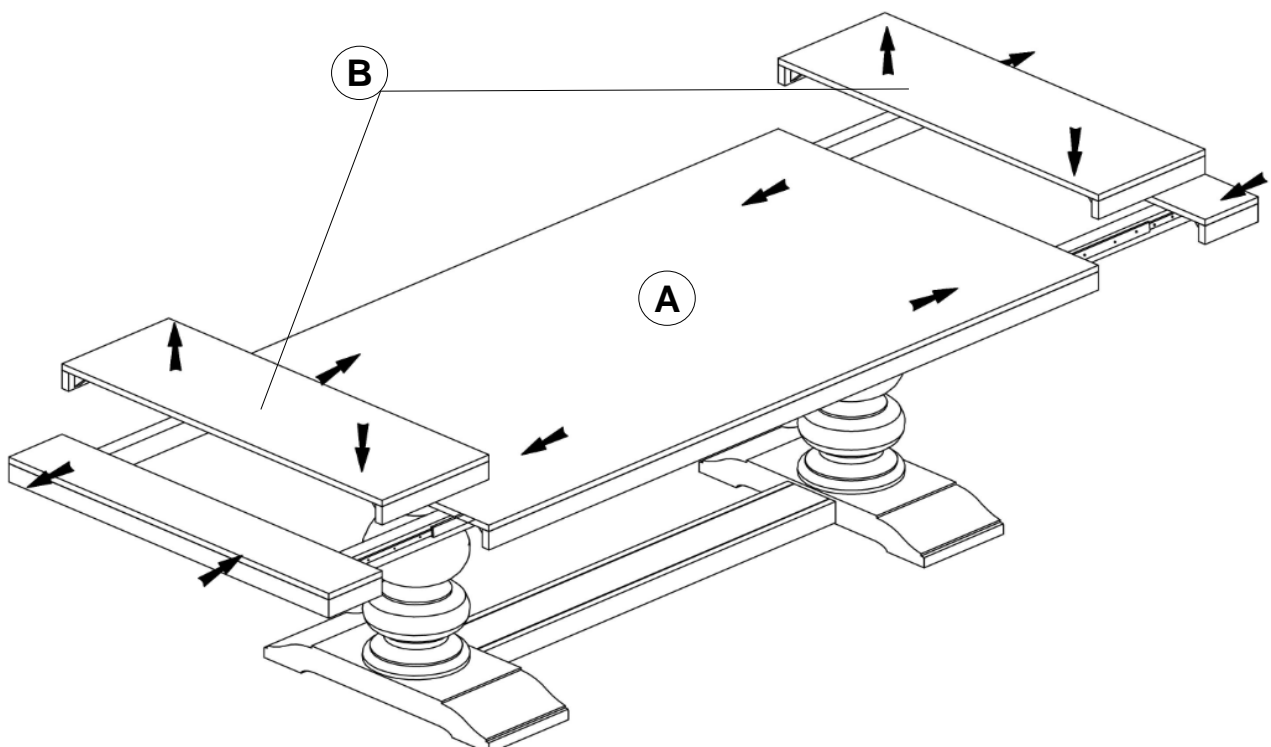


ITEM: **121231(B1&B2)**




ASSEMBLY INSTRUCTIONS

 STEP 5

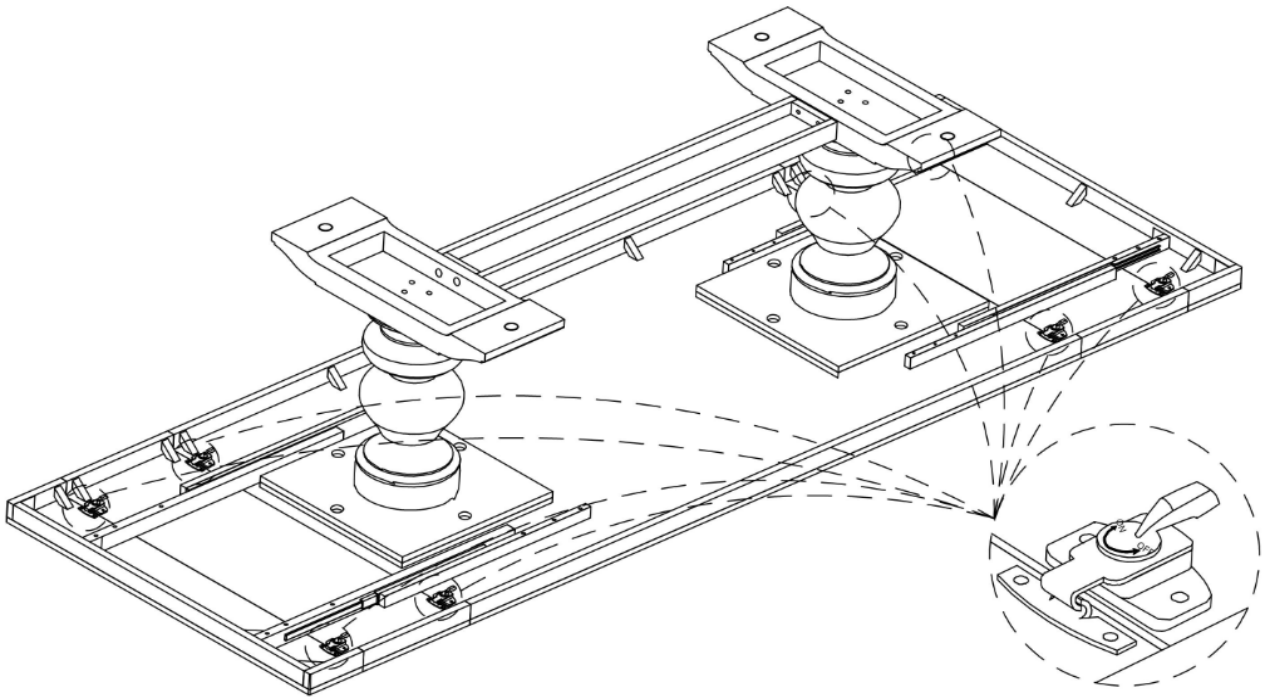

 
STEP 6 **COMPLETE**

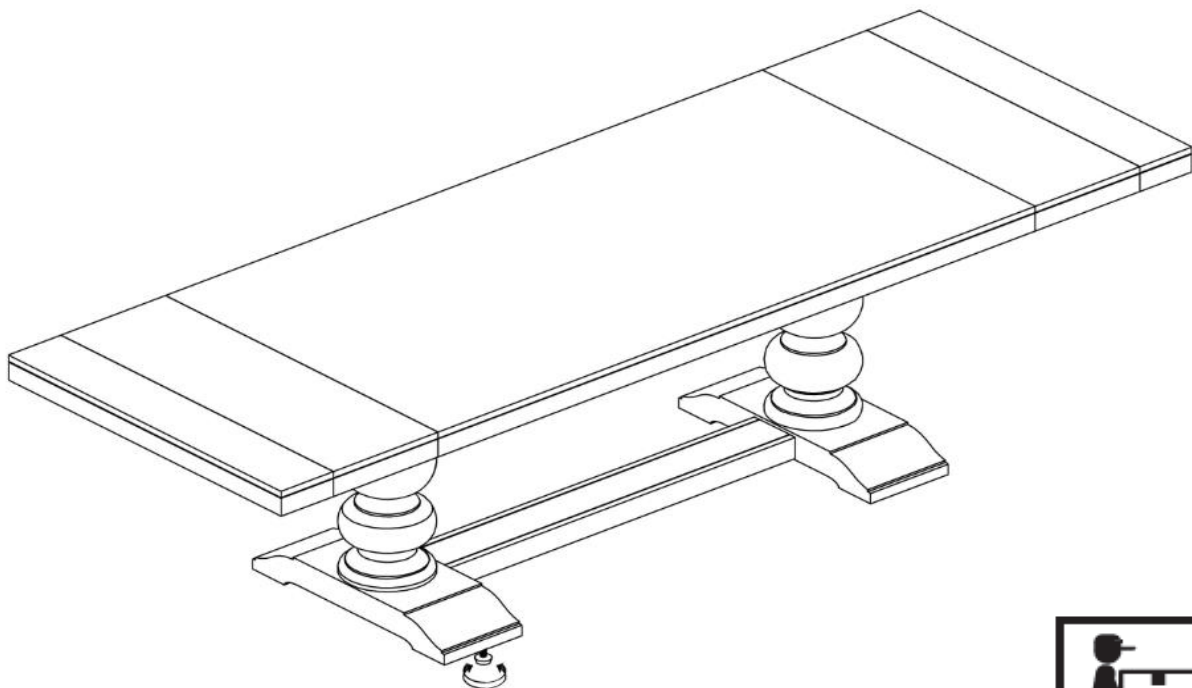

ADJUSTABLE LEVELER



 ITEM: **121231(B1&B2)**

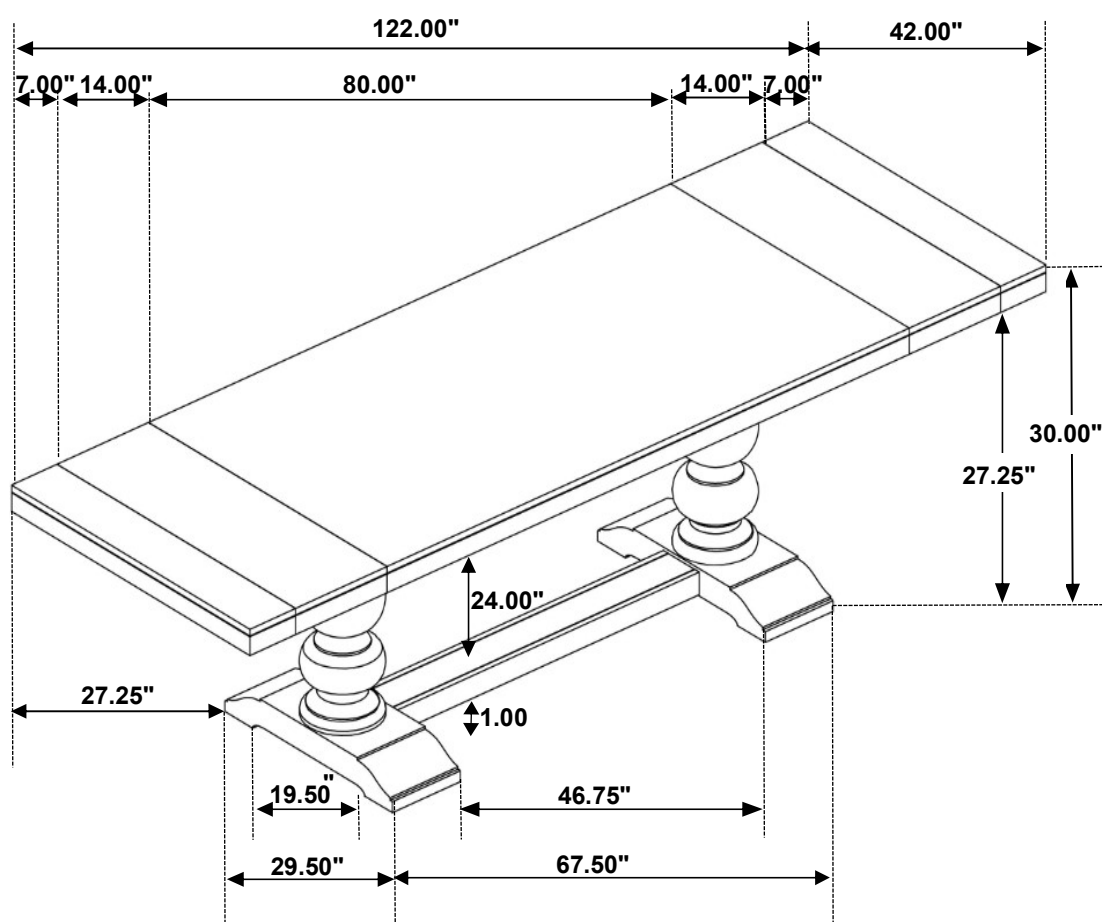

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

121235
Server

ITEM: **121235**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



 
ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION


A

SERVER

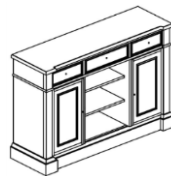

1PC

 STEP 1

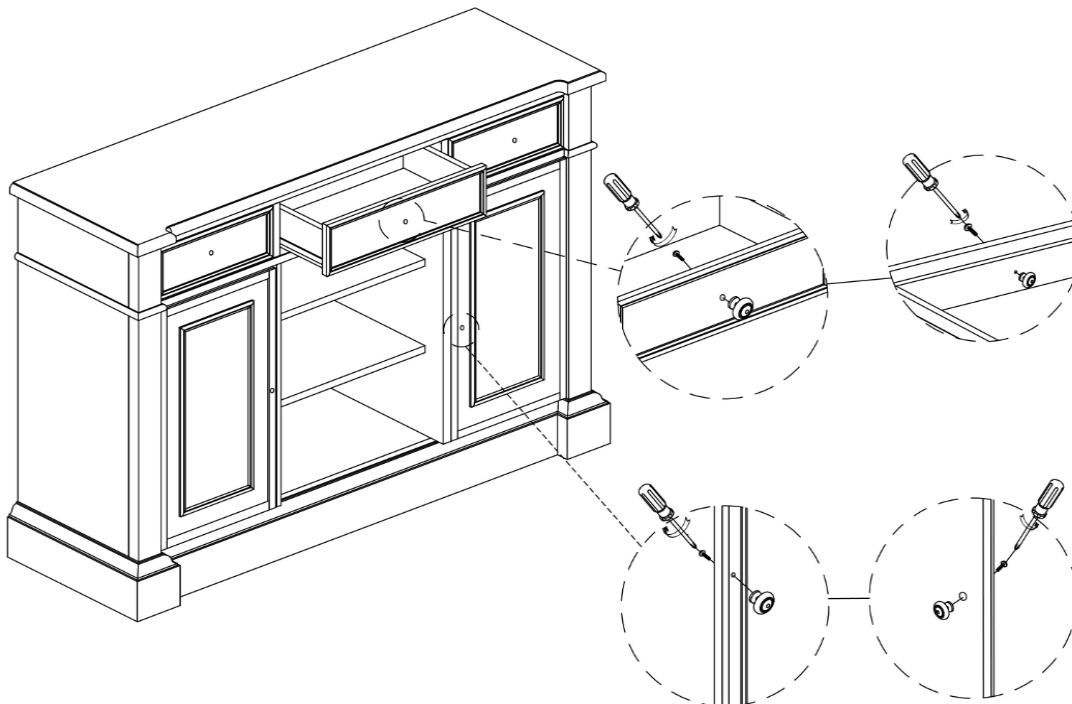


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **121235**



 
OPTIONAL ADJUSTABLE SHELF

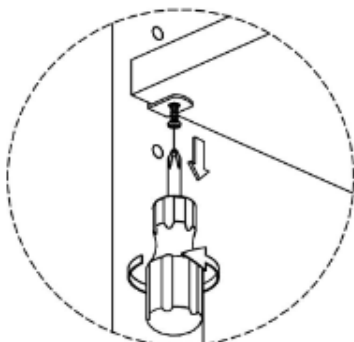

 
1.1

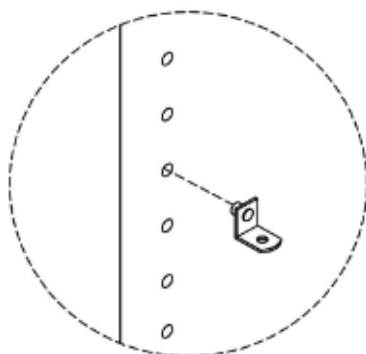

 1.2

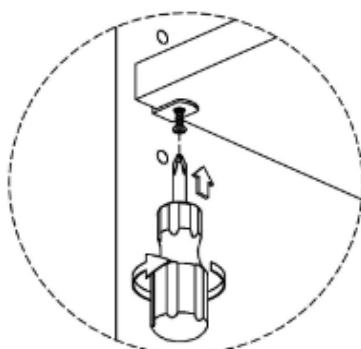

 1.3

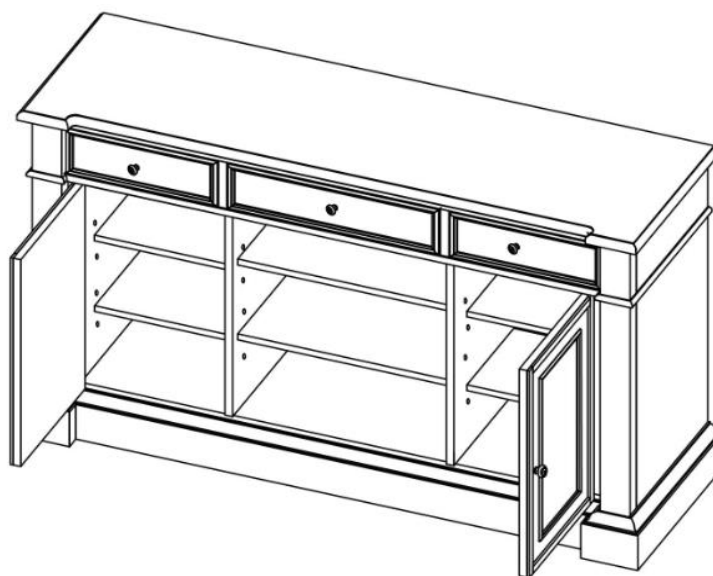


ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.

 
1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

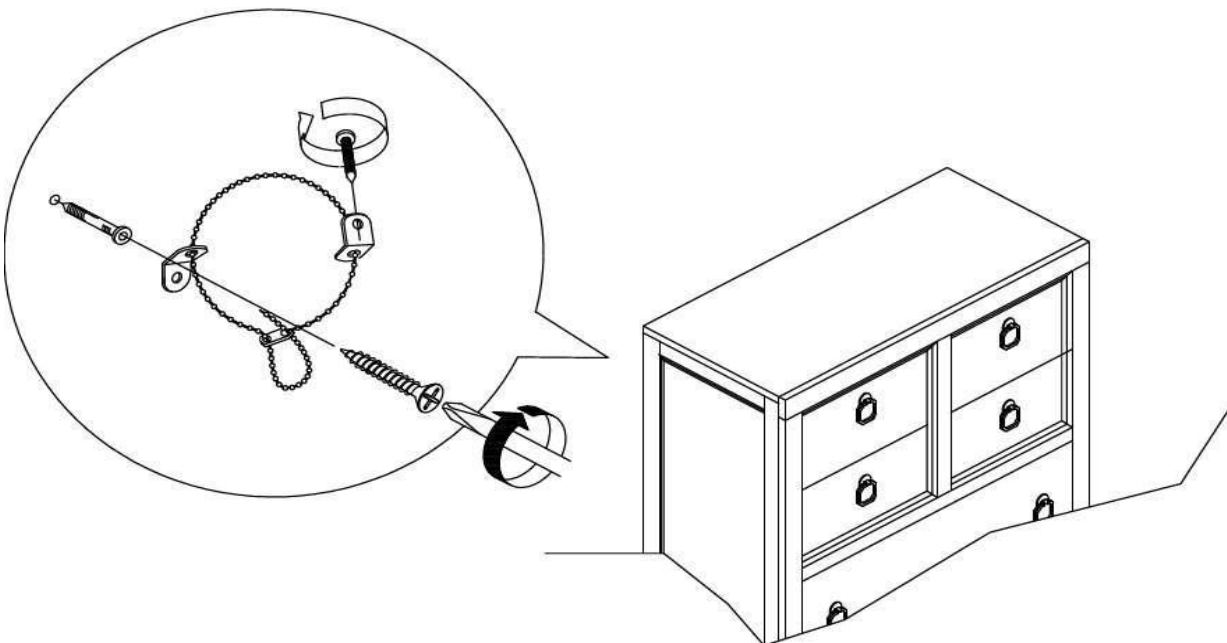

ITEM:121235



 Inner Size of Drawer A : 12.50"W X 12.50"D X 4.00"H X 0.50"T
Inner Size of Drawer B : 17.75"W X 12.50"D X 4.00"H X 0.50"T

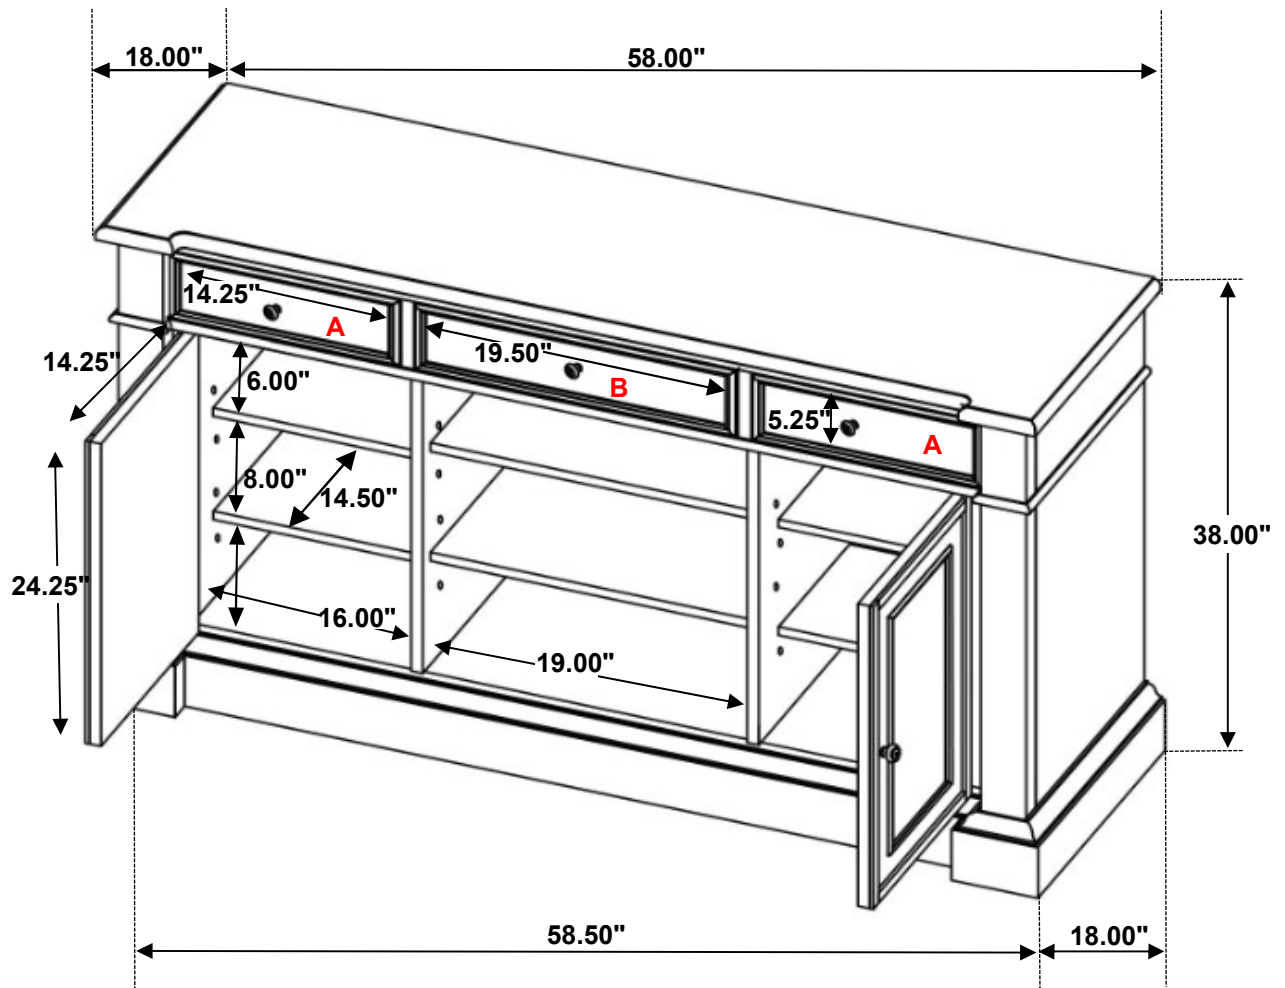

Note: Dimension tolerance $\pm 5\%$