

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

150350 5Pc Dining Set

### **ASSEMBLY INSTRUCTIONS**

## COASTER

#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

35 MINUTES

### PARTS IDENTIFICATION

A	TABLE TOP	1PC	E LEFT FRONT LEG	4PCS
В	TABLE LEG	4PCS	F RIGHT FRONT LEG	4PCS
С	BACK FRAME	4PCS	G LEFT SIDE STRETCHER	4PCS
D	SEAT CUSHION WITH FRAME	4PCS	H RIGHT SIDE STRETCHER	4PCS

### HARDWARE IDENTIFICATION

1	BOLT 1 (Ø5/16" x 75mm - RBW)	<b></b>	8PCS	5	LOCK WASHER (Ø5/16" x 13mm - RBW)		44PCS
2	BOLT 2 (Ø1/4" x 75mm - RBW)	<b>@</b>	16PCS	6	FLAT WASHER (Ø5/16" x 19mm - RBW)		44PCS
3	BOLT 3 (Ø1/4" x 60mm - RBW)	<u> </u>	16PCS	7	FLAT HEAD SCREW (Ø4 x 40mm - RBW)	•	16PCS
4	BOLT 4 (Ø1/4" x 35mm - RBW)	<b>©</b>	4PCS	8	ALLEN WRENCH (M4 x 59mm - RBW)		1PC


#### NOTE:

Phillips head screw driver is required in the assembly process. However, manufacturer does not provide this item.

### **ASSEMBLY INSTRUCTIONS**

# COASTER

### STEP 1

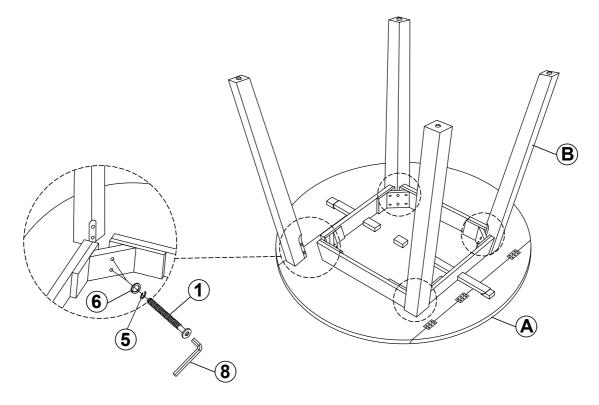


### STEP 2




### **ASSEMBLY INSTRUCTIONS**

## COASTER


### STEP 3

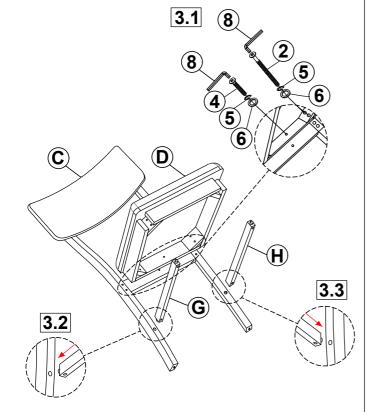


### STEP 4

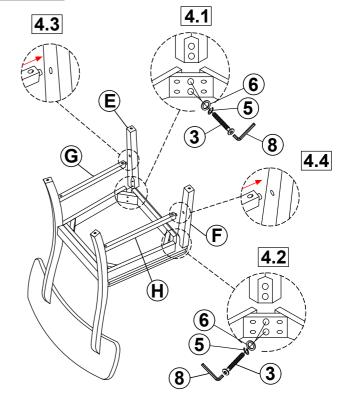

### STEP 5

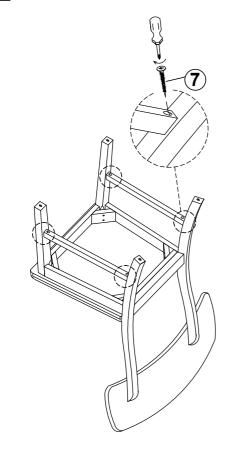


## STEP 6 COMPLETE

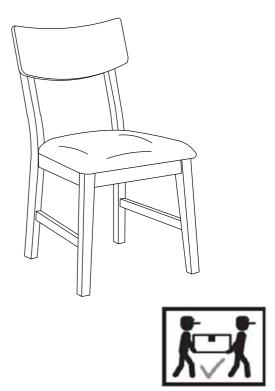

PAGE 4 OF 4


**COASTERFURNITURE.COM** 



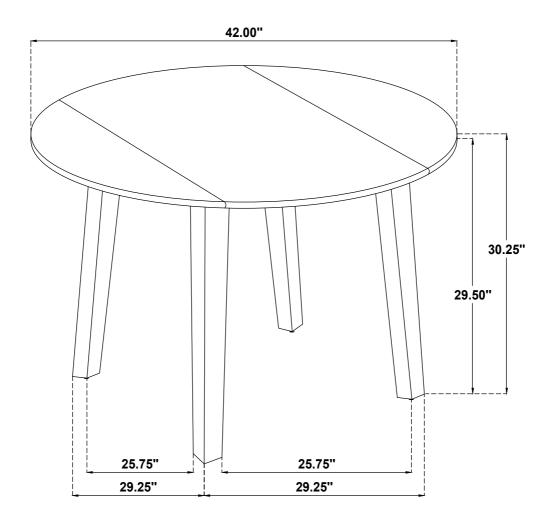

Note: Dimension tolerance ±5%



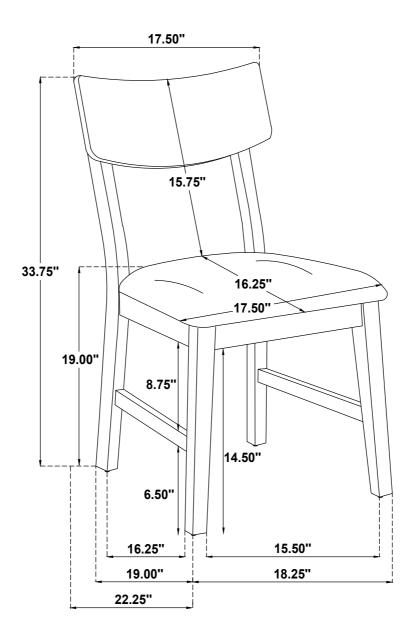

Note: Dimension tolerance ±5%