

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**192520**  
**Dining Table**

ITEM: **192520**

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

## PARTS IDENTIFICATION

|   |                  |  |      |
|---|------------------|--|------|
| A | TOP              |  | 1PC  |
| B | LEG              |  | 4PCS |
| C | CROSSBAR         |  | 1PC  |
| D | CONNECTING BLOCK |  | 2PCS |


## HARDWARE IDENTIFICATION

|   |                                   |  |       |
|---|-----------------------------------|--|-------|
| 1 | ALLEN WRENCH<br>(M5 X 60MM - BLK) |  | 1PC   |
| 2 | LONG BOLT<br>(M8 X 80MM - RBW)    |  | 4PCS  |
| 3 | SHORT BOLT<br>(M8 X 50MM - RBW)   |  | 12PCS |
| 4 | LOCK WASHER<br>(M8 X 14MM - RBW)  |  | 16PCS |
| 5 | FLAT WASHER<br>(M8 X 16MM - RBW)  |  | 16PCS |
| 6 | WOOD BUTTON<br>(18.5MM)           |  | 4PCS  |


ITEM: **192520**

## ASSEMBLY INSTRUCTIONS


### STEP 1

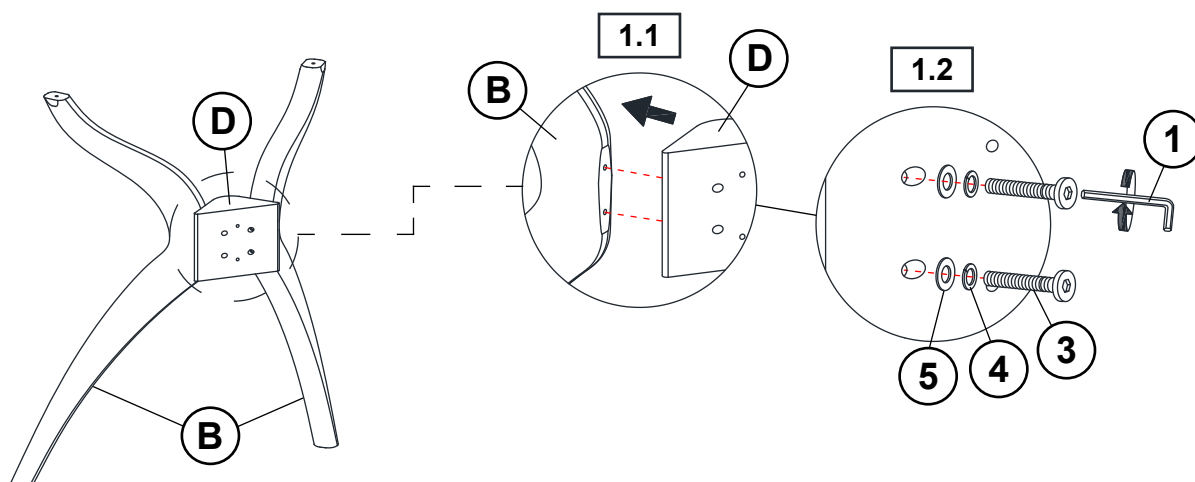

### STEP 2

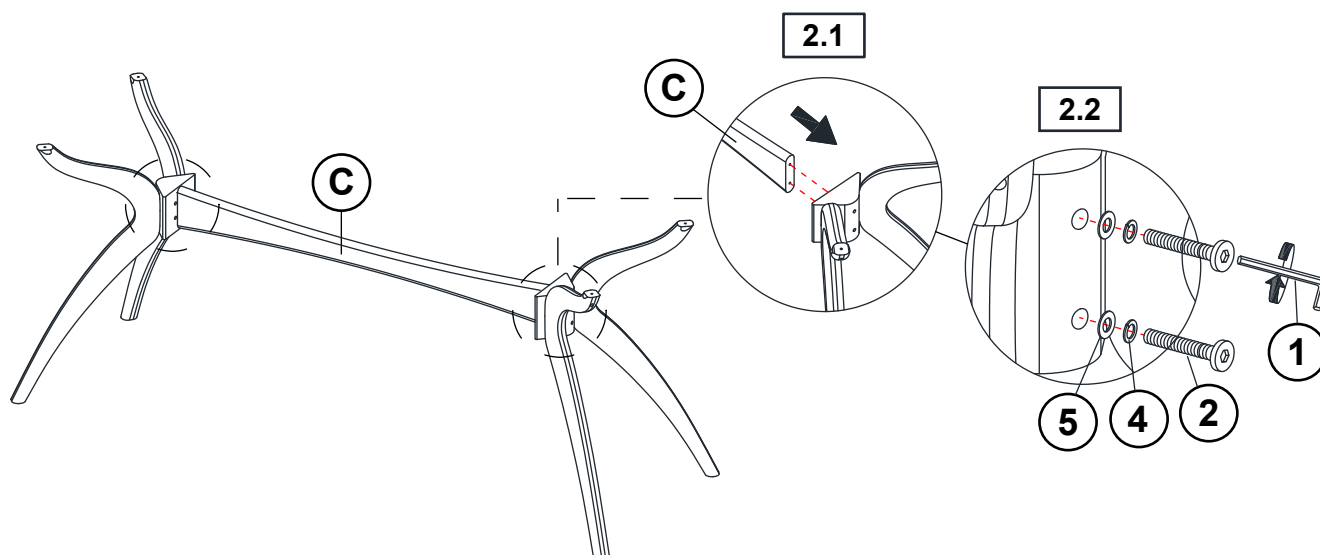

### STEP 3

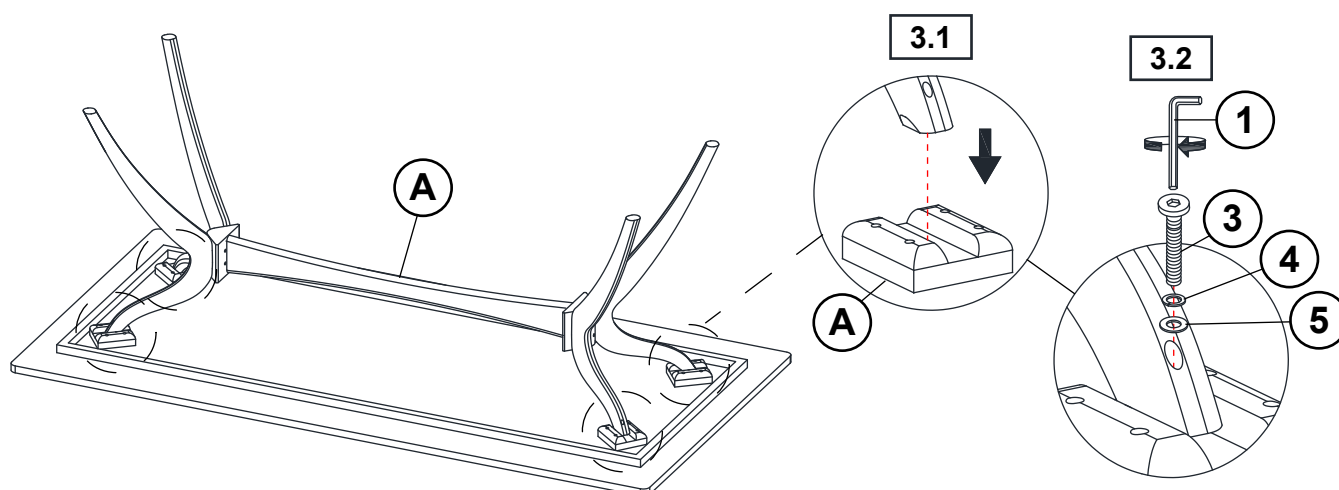


\*BOTTOM VIEW

ITEM: **192520**


## ASSEMBLY INSTRUCTIONS

### STEP 4

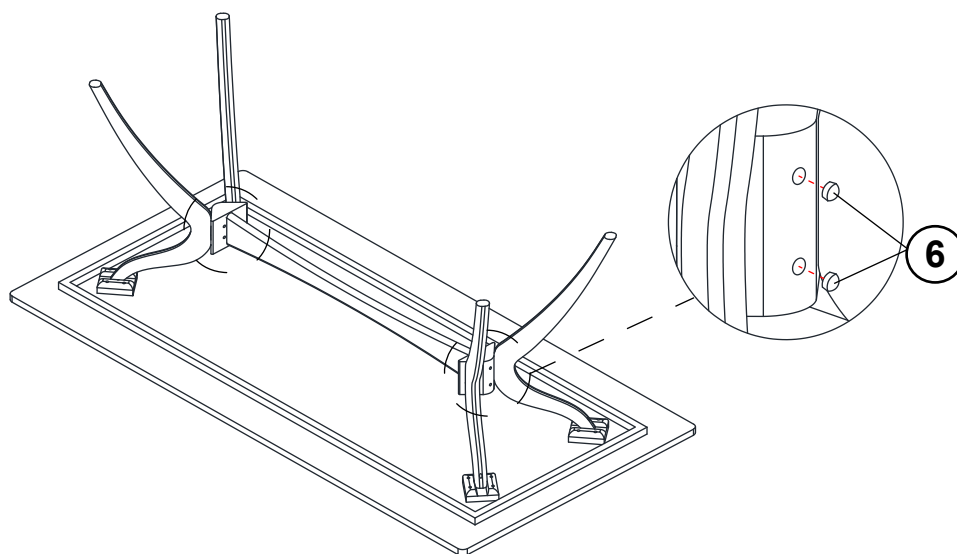


\*BOTTOM VIEW

### STEP 5 COMPLETE

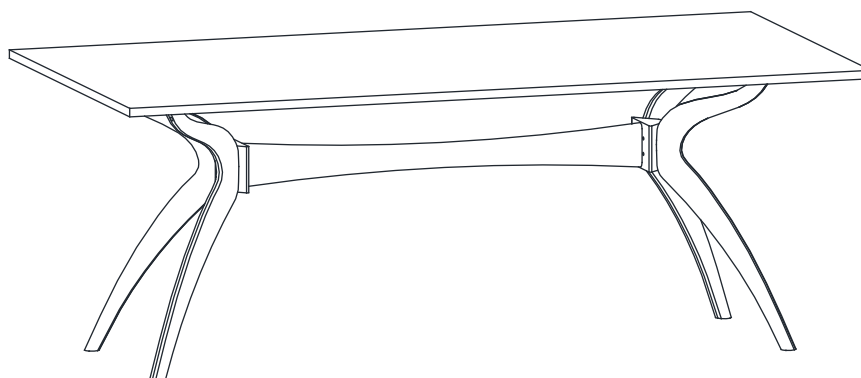

ITEM: **192520**

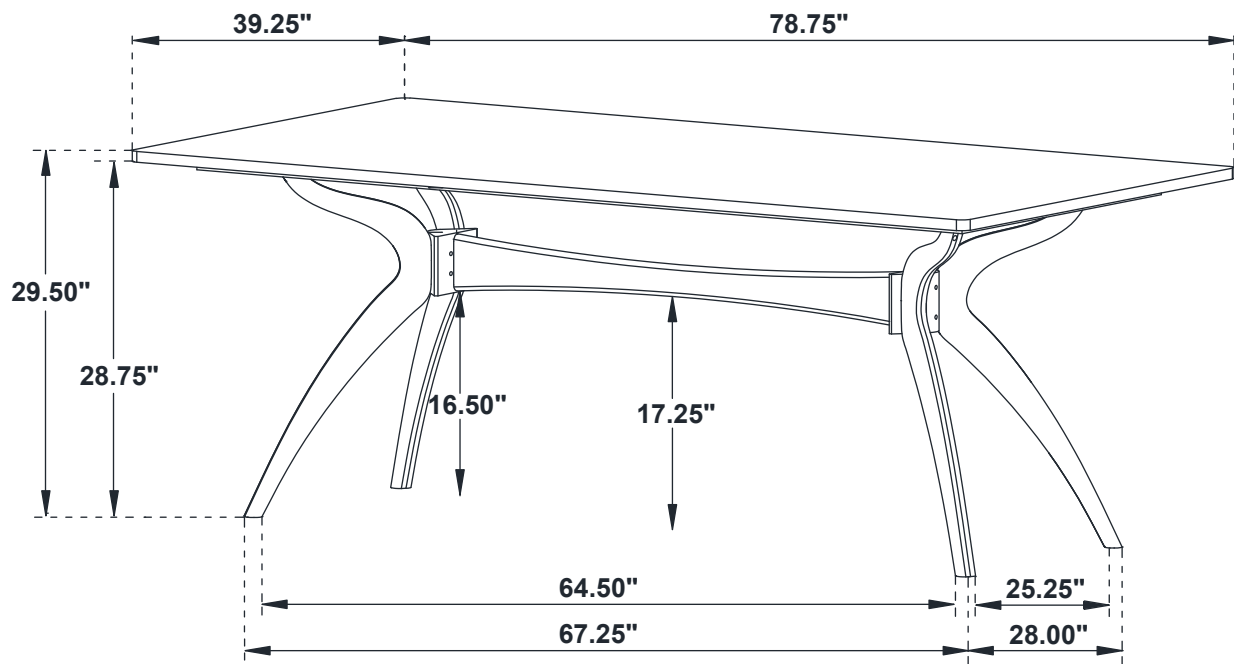

**Note: Dimension tolerance  $\pm 5\%$**