



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

193580

Dining Table

ITEM: **193580**

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

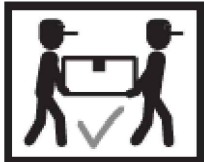

ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A	TOP		1PC
B	LEG		4PCS
C	LEG SUPPORT FRAME		1PC
D	LOWER MOUNTING BOARD WITH LABEL "D"		1PC
E	UPPER MOUNTING BOARD WITH LABEL "E"		1PC


HARDWARE IDENTIFICATION

1	SHORT BOLT (M6 x 30MM - RBW)		13PCS
2	LONG BOLT (M6 x 60MM - RBW)		8PCS
3	LOCK WASHER (M8 x 13MM - RBW)		21PCS
4	FLAT WASHER (M8 x 22MM - RBW)		21PCS
5	ALLEN WRENCH (M4 x 100MM - BLK)		1PC


ITEM: **193580**

ASSEMBLY INSTRUCTIONS

STEP 1

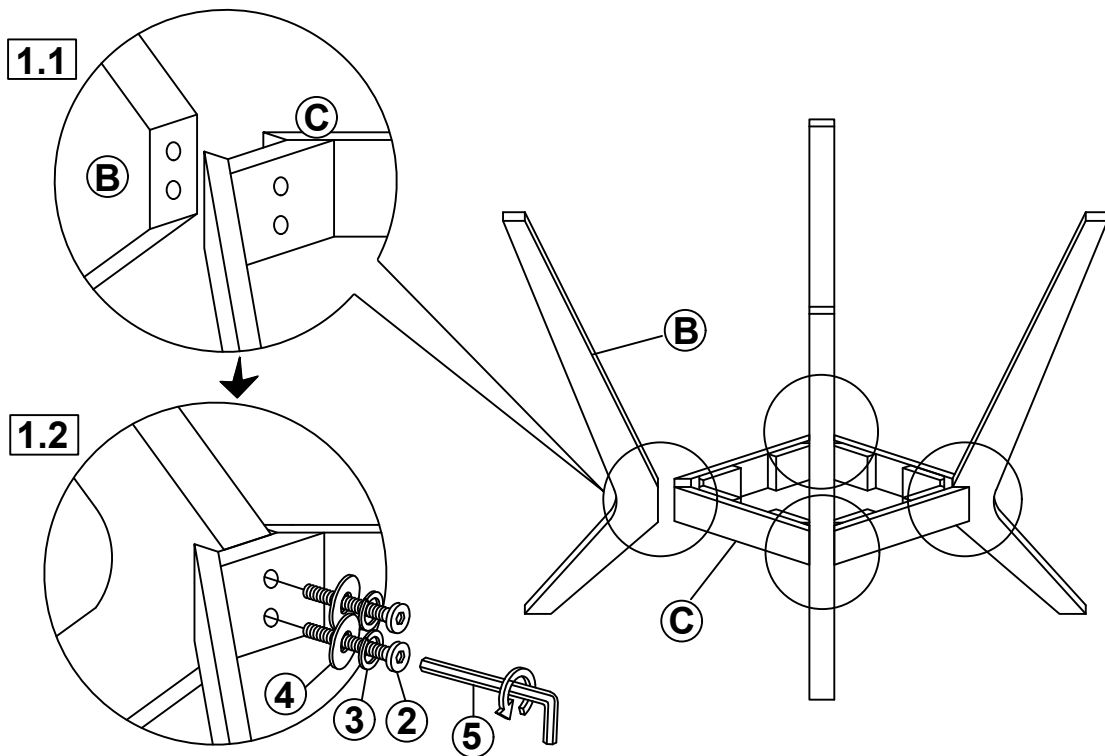

STEP 2

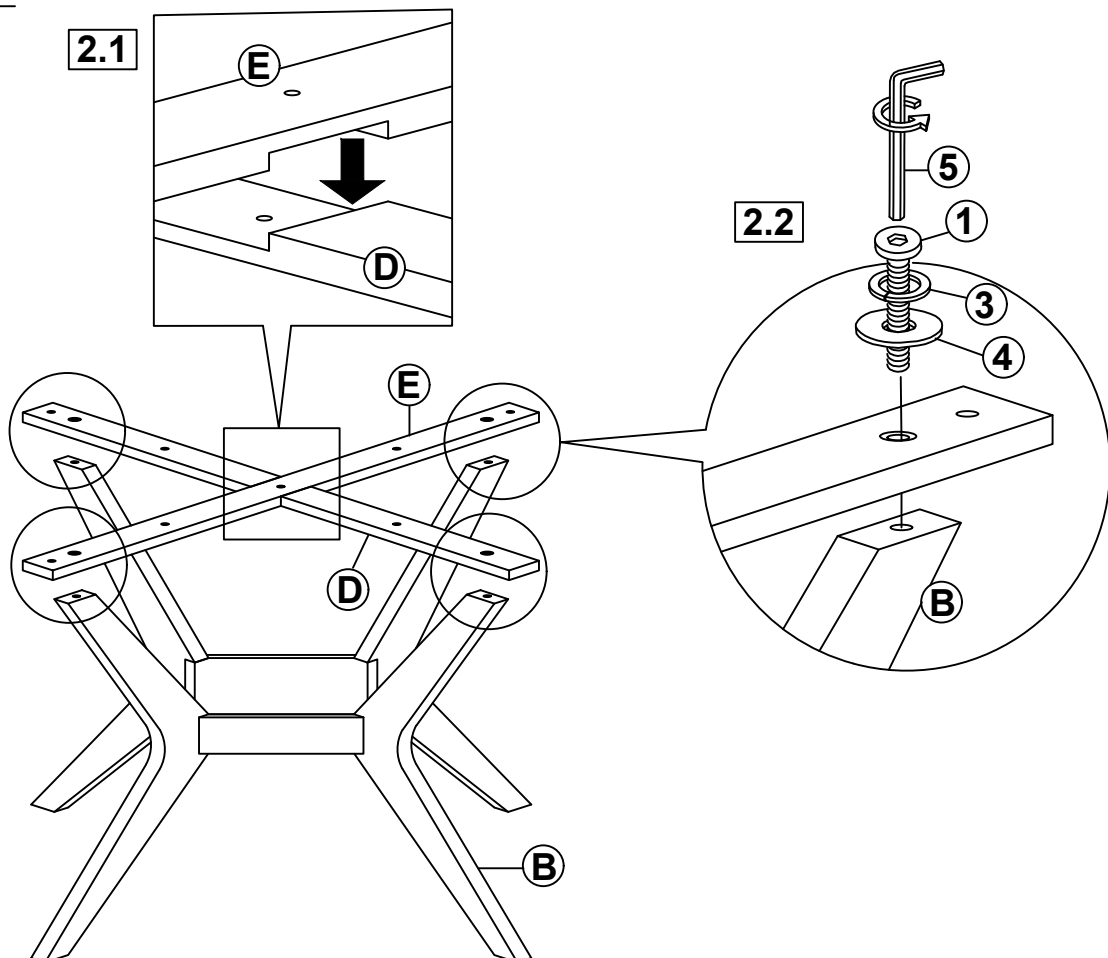


ITEM: **193580**

ASSEMBLY INSTRUCTIONS





STEP 3

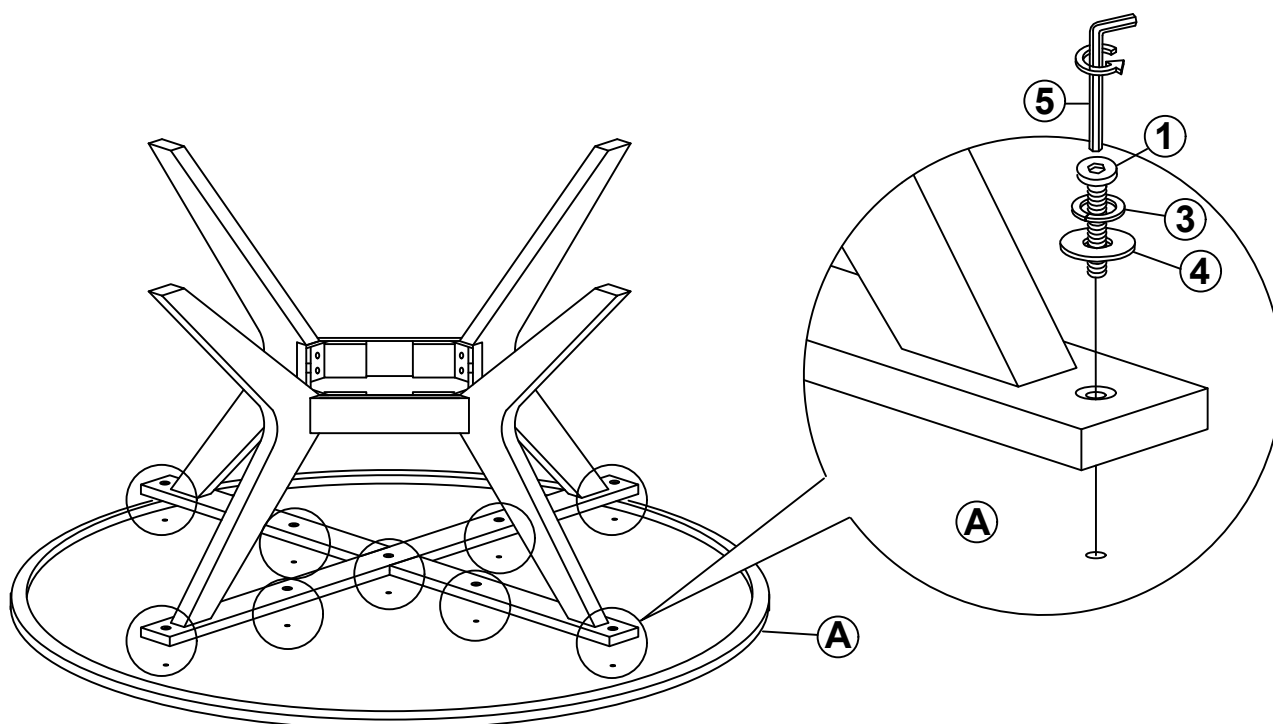


STEP 4

COMPLETE

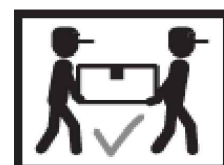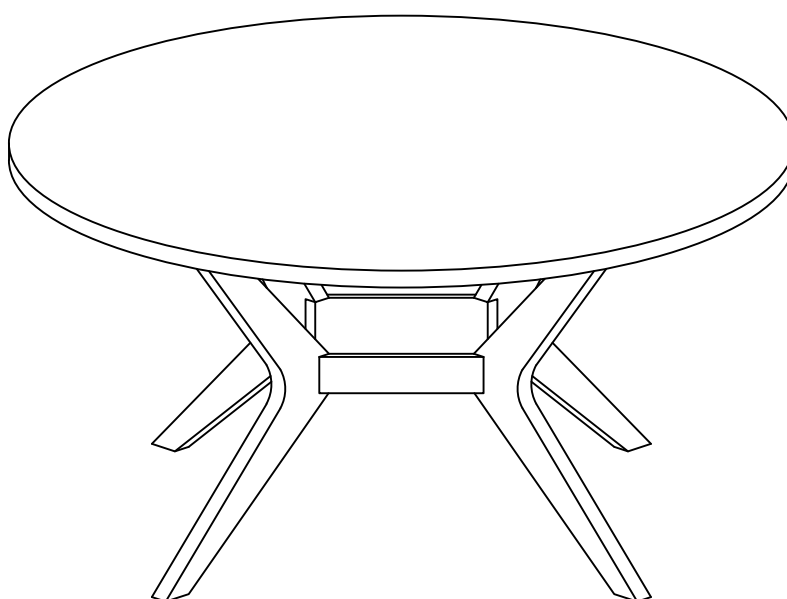

ITEM: **193580**

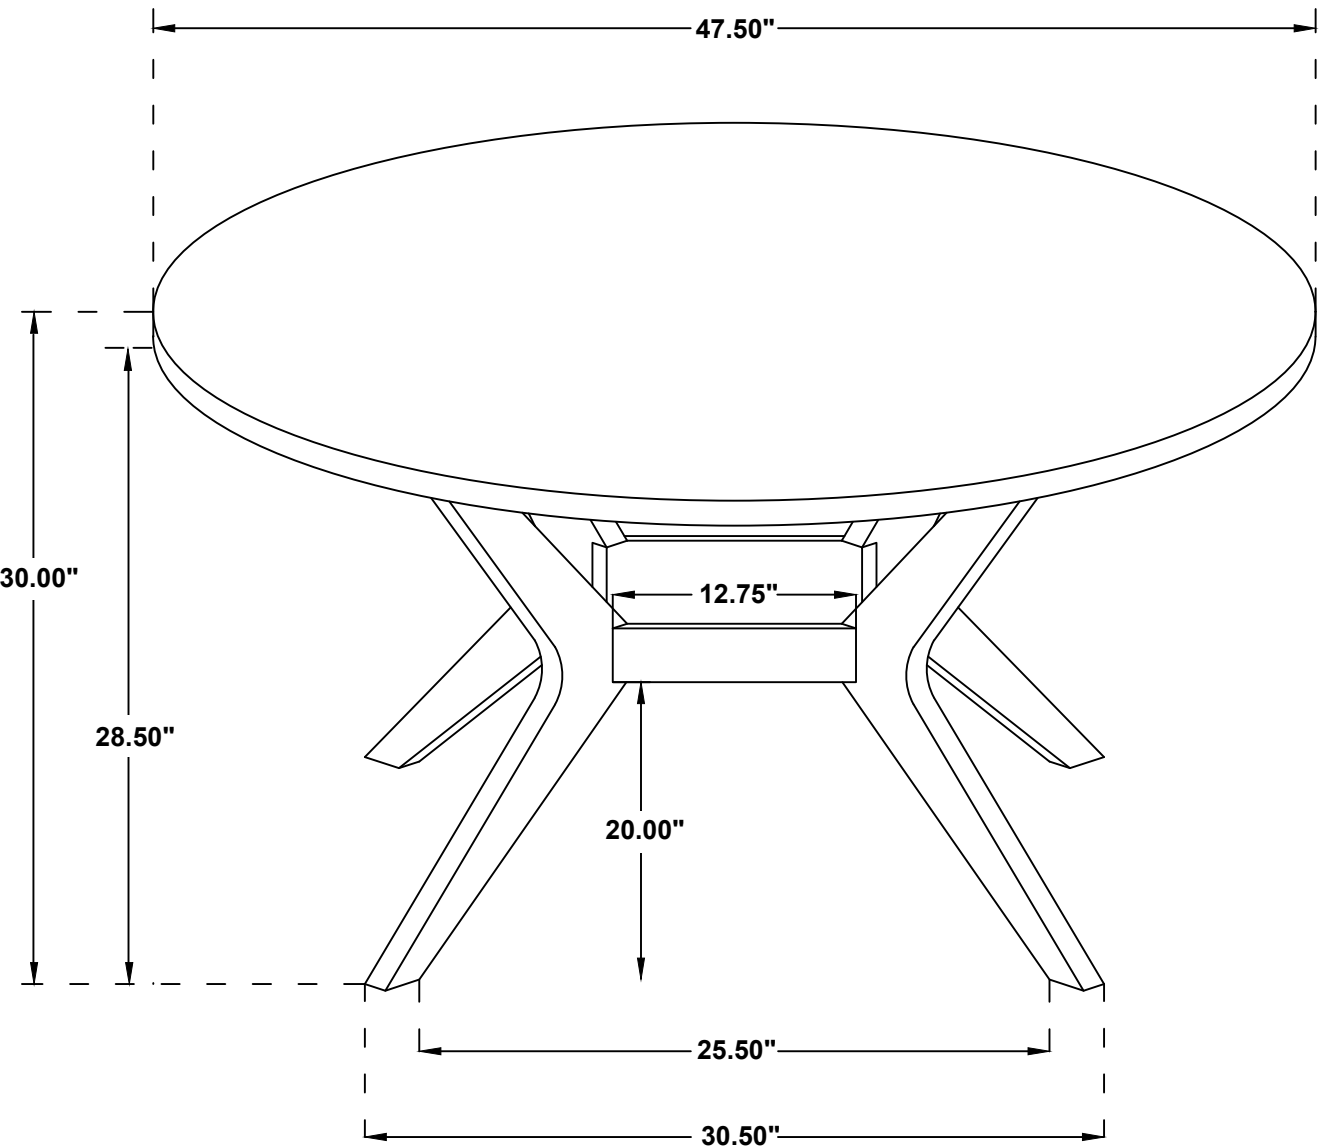

Note: Dimension tolerance $\pm 5\%$