

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

193611(B1&B2) *Dining Table*

ITEM: 193611(B1&B2)

COASTER

ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A TOP WITH LEAF

1PC

B2 (BOX 2)

B LEG PANEL SUPPORT

C MOUNTING BOARD

2PCS

D LEG PANEL

2PCS

HARDWARE IDENTIFICATION

Z-B1(BOX 1) - HARDWARE PACK IS LOCATED IN 193611 (B1)

1	BOLT WITH SMALL WASHER (M6 x 40mm - BLK)	4PCS
2	BOLT WITH BIG WASHER (M6 x 40mm - BLK)	12PCS
3	ALLEN WRENCH (M4 x 55mm - GD)	1PC


ITEM: 193611(B1&B2)

COASTER


ASSEMBLY INSTRUCTIONS

STEP 1

IMPORTANT NOTE: Take out the Extension Leaf.

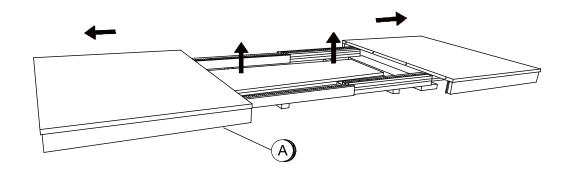

STEP 2

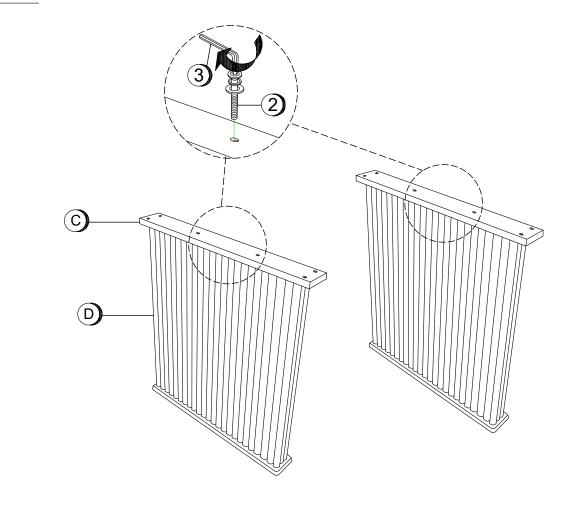


COASTERFURNITURE.COM

ITEM: 193611(B1&B2) ASSEMBLY INSTRUCTIONS




STEP 3

Do not fully tighten until all bolts are attached.

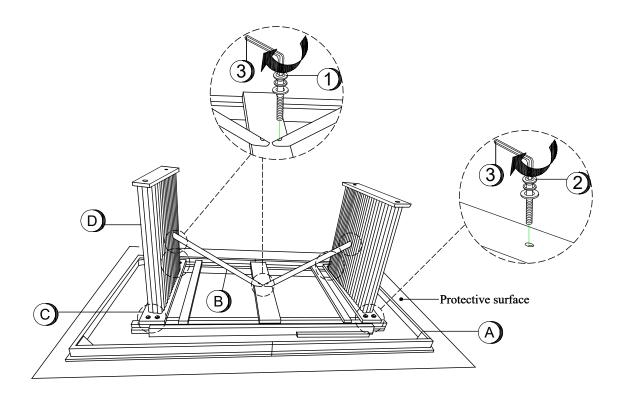

STEP 4

Fully tighten all bolts on this step.

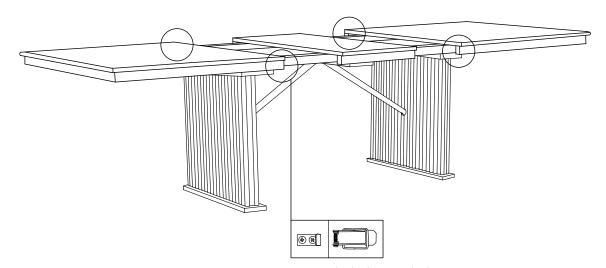


Turn counter-clockwise to unlock


ITEM: 193611(B1&B2) ASSEMBLY INSTRUCTIONS



STEP 5

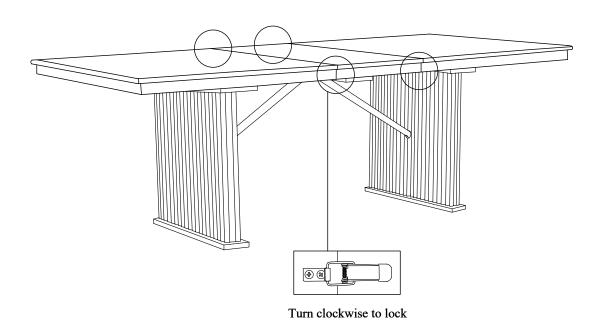


STEP 6 COMPLETE

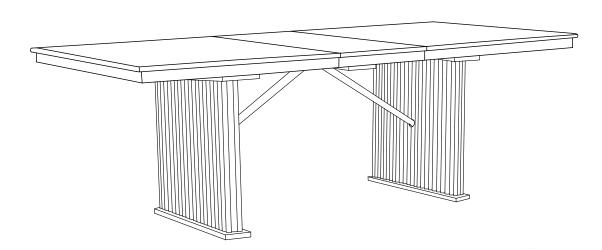



ITEM: 193611(B1&B2)



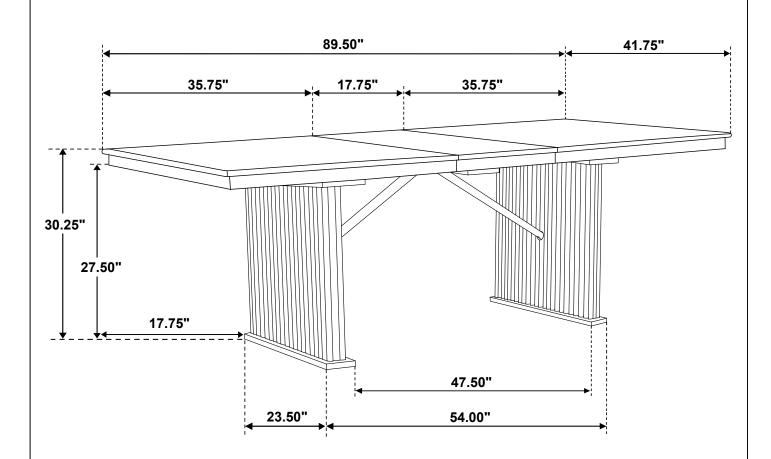

Note: Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

193612 Side Chair

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A	BACK FRAME		1PC
В	SEAT CUSHION WITH FRAME		1PC
С	LEFT FRONT LEG	6 1 0	1PC
D	RIGHT FRONT LEG	To R 0	1PC
E	SIDE STRETCHER	(D	2PCS

HARDWARE IDENTIFICATION

1	LONG BOLT WITH WASHER (M6 x 90mm - BLK)		4PCS
2	MEDIUM BOLT WITH WASHER (M6 x 60mm - BLK)		4PCS
3	SHORT BOLT WITH WASHER (M6 x 50mm - BLK)		3PCS
4	PAN HEAD SCREW (M5 x 38mm - BLK)	()	4PCS
5	ALLEN WRENCH (M4 x 55mm - GD)		1PC

NOTE:


Quantities shown are for one chair.

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ASSEMBLY INSTRUCTIONS

STEP 1



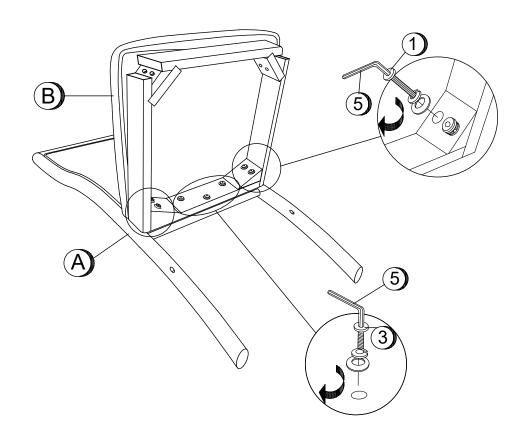


STEP 2

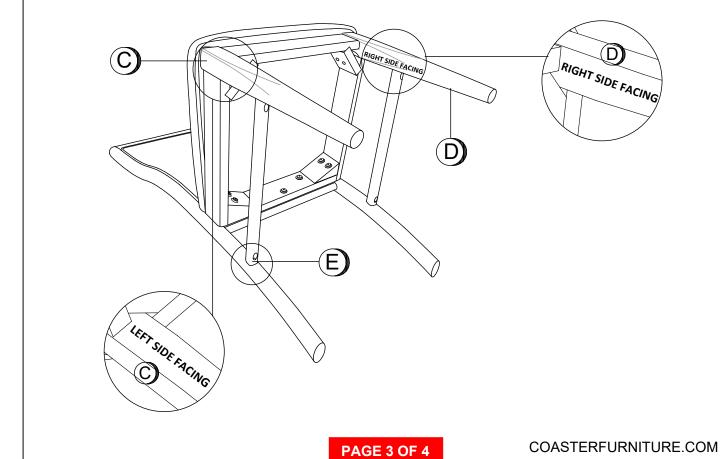


ASSEMBLY INSTRUCTIONS

COASTER

STEP 3

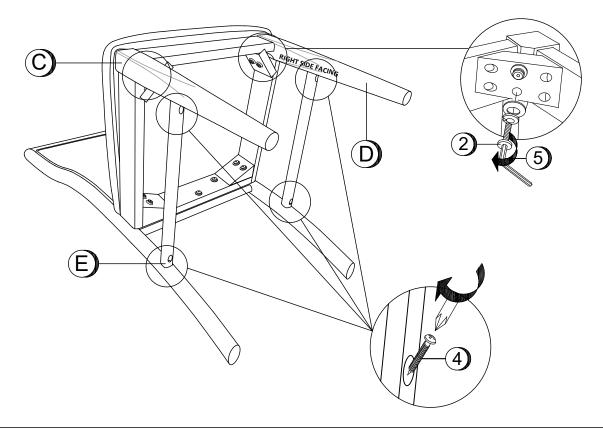


STEP 4 COMPLETE

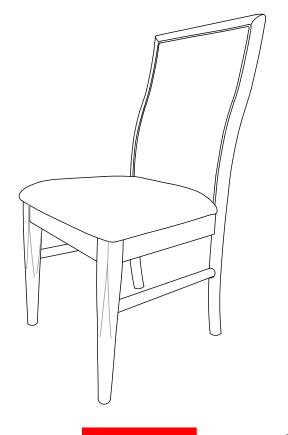





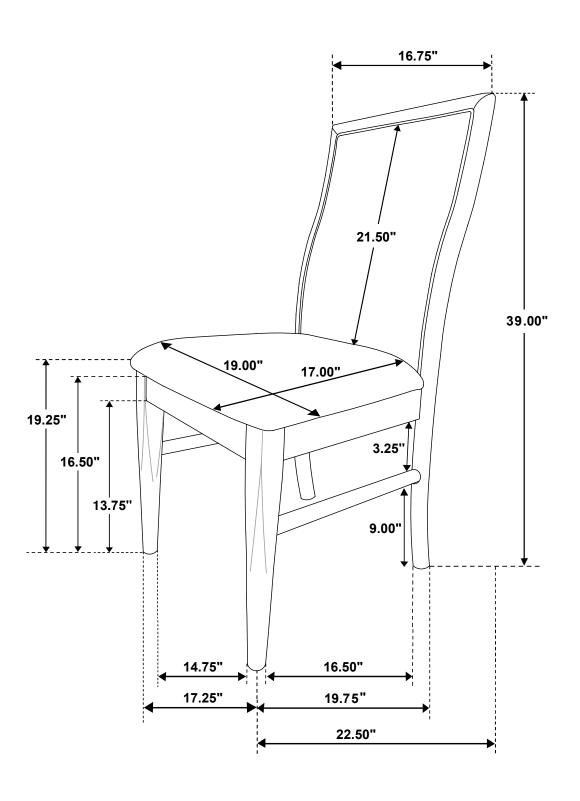

Note: Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

193615 Sideboard

REVISION 0: 01/10/2025

PAGE 1 OF 4

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A SHELF



3PCS

B SIDEBOARD



1PC

HARDWARE IDENTIFICATION

1 SHELF SUPPORT




12PCS


ASSEMBLY INSTRUCTIONS



STEP 1

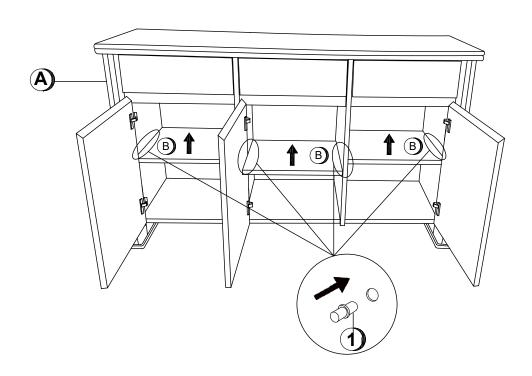

STEP 2 COMPLETE

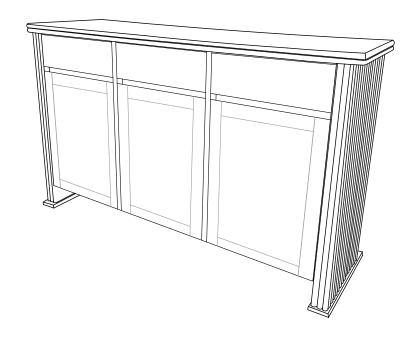





ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

This tip restraint must be attached to a wall stud using long screw enclosed.


STEP 1

Attach a bracket securely to the back top rail of the furniture using short screw provided, through the smaller hole.

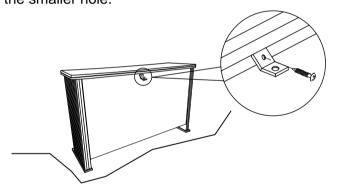


STEP 2

Locate the other bracket on the wall over a wall stud and two inches below the mounting bracket secured to the back of the furniture. Attach the wall stud using the long screw provided, through the smaller hole.

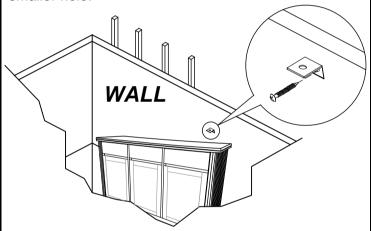

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed. Confirm that the strap is securely laced and locked.

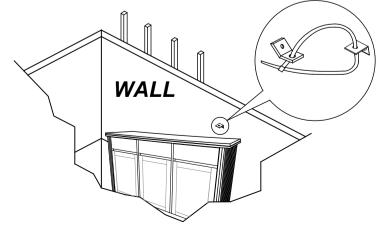




COASTERFURNITURE.COM



Inner Size of Drawer: 15.25"W X 12.75"D X 3.50"H X 0.50"T

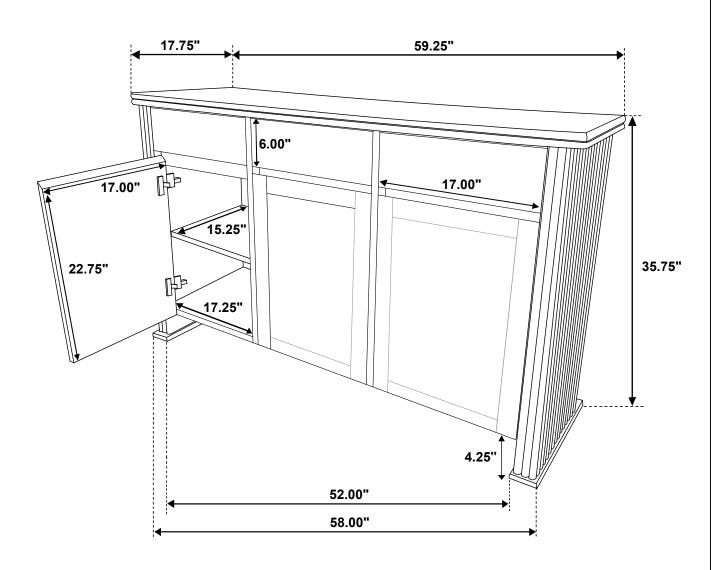

Note: Dimension tolerance ±5%