



# ASSEMBLY INSTRUCTIONS

## COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**193671**  
**Dining Table**

ITEM: 193671



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 


ASSEMBLY TIME

15 MINUTES

## PARTS IDENTIFICATION

A TOP



1PC

B LEG



4PCS

C LEAF



1PC

## HARDWARE IDENTIFICATION

1 ALLEN WRENCH  
(M5 x 65mm - BLK)



1PC

2 BOLT  
(M8 x 60mm - RBW)



8PCS

3 LOCK WASHER  
(M8 - RBW)



8PCS

4 FLAT WASHER  
(M8 - RBW)




8PCS

ITEM: **193671**




## ASSEMBLY INSTRUCTIONS

### STEP 1

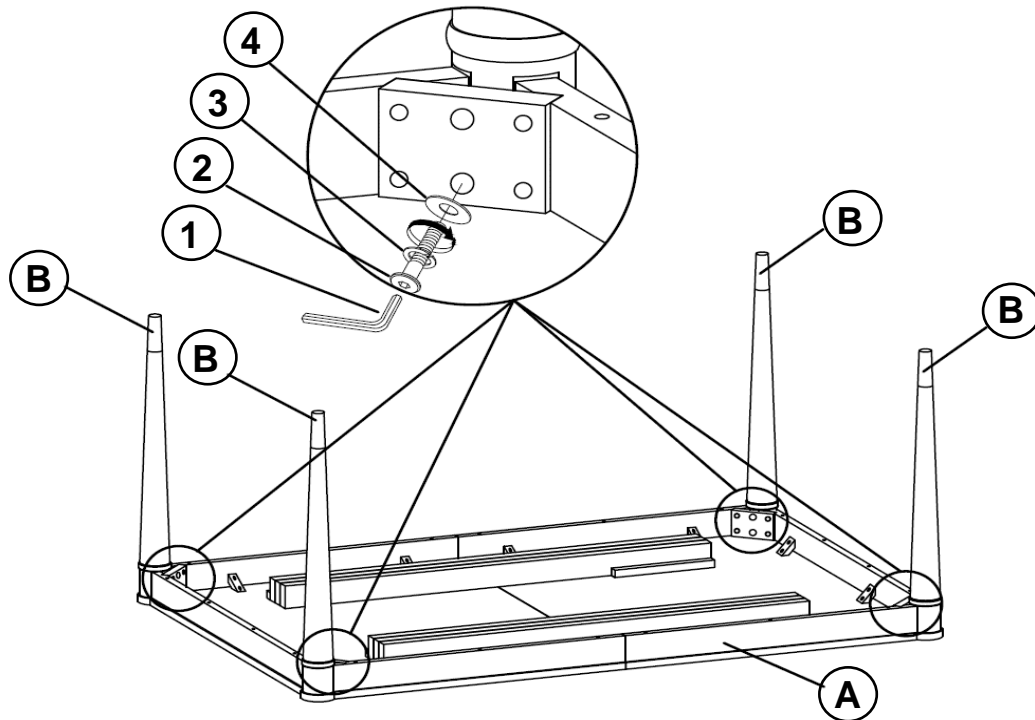

**\*Bottom View**
 
### STEP 2

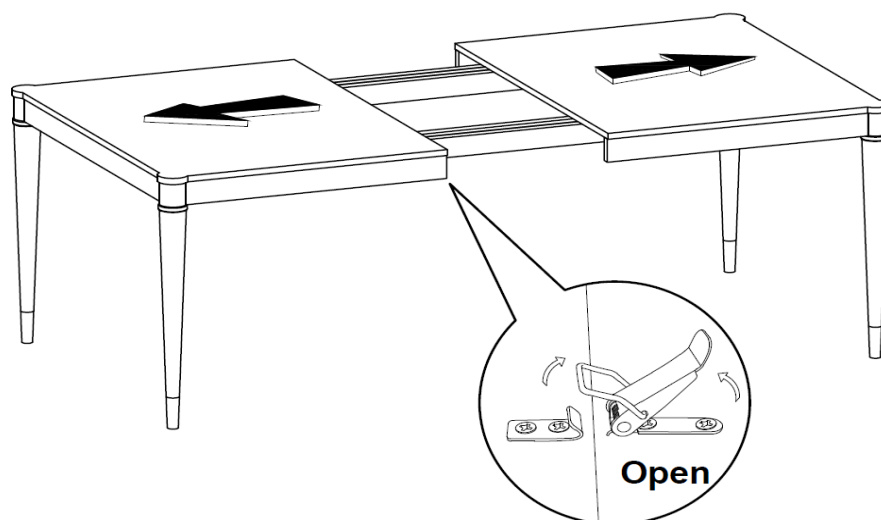


ITEM: **193671**




## ASSEMBLY INSTRUCTIONS
 
### **STEP 3**

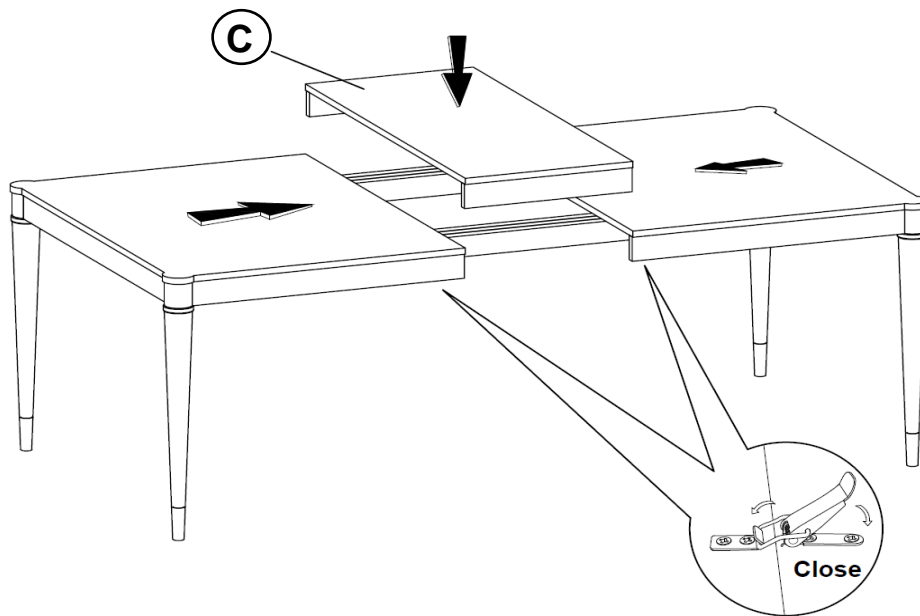


### **STEP 4**
 
## **COMPLETE**

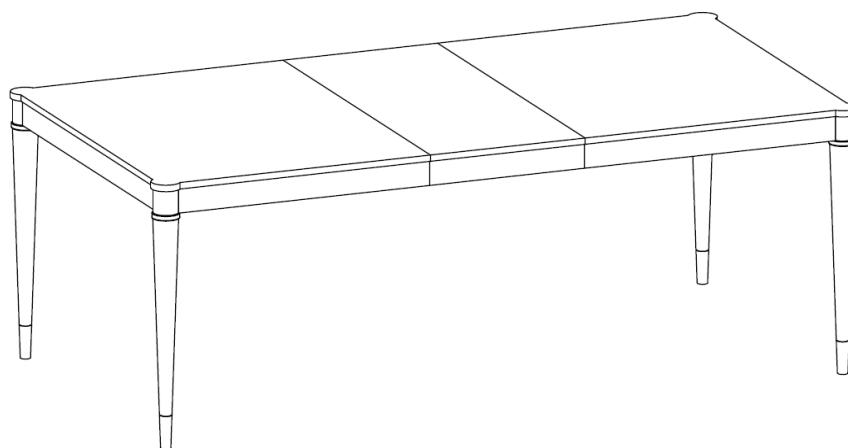

ITEM:193671

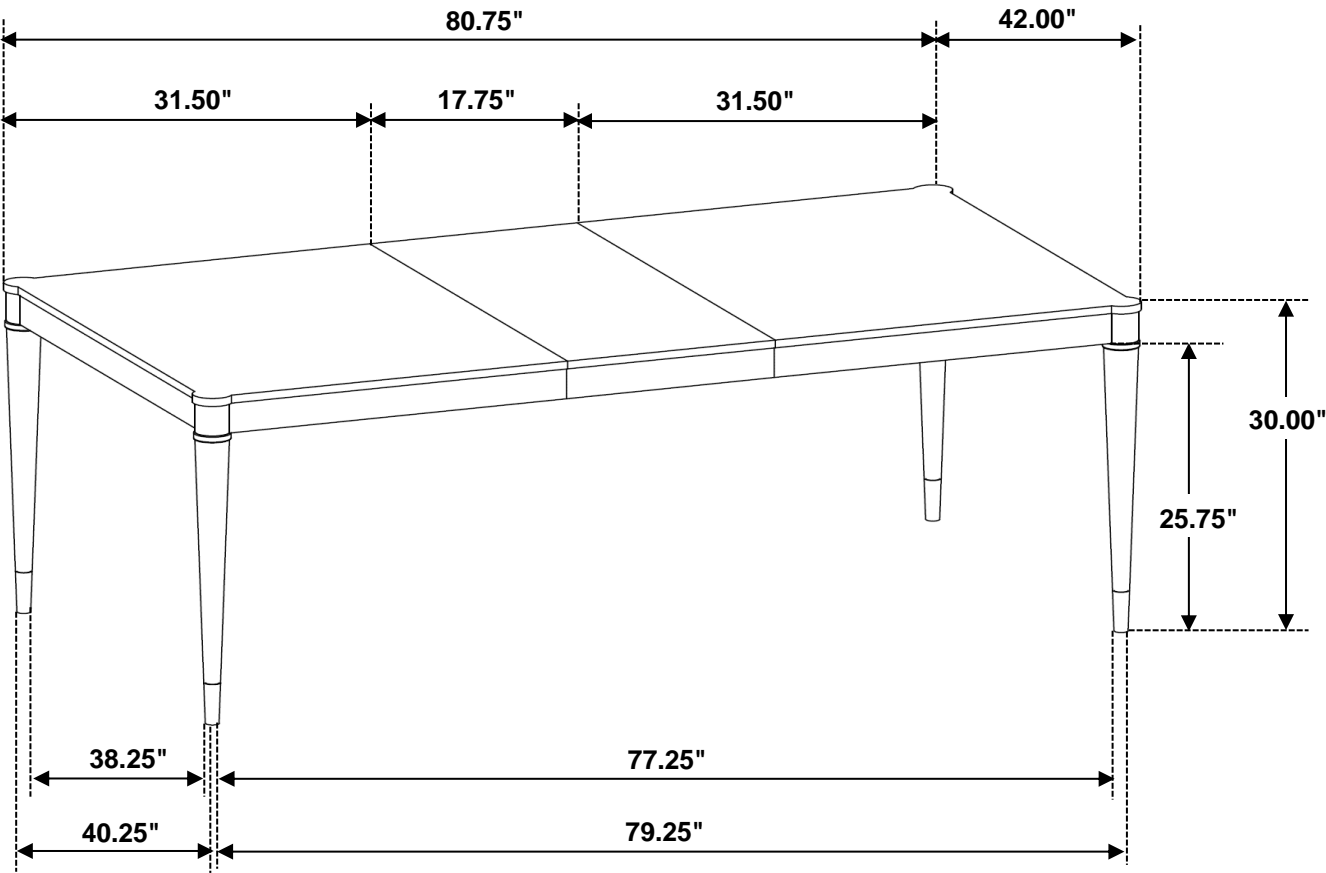

Note: Dimension tolerance  $\pm 5\%$



# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**193672**  
**Side Chair**

ITEM: **193672**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 


ASSEMBLY TIME

10 MINUTES


## PARTS IDENTIFICATION

A SEAT AND BACK

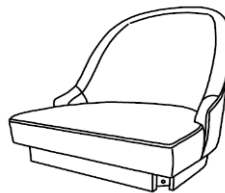


1PC

 B FRONT LEG



2PCS

 C BACK LEG



2PCS

## HARDWARE IDENTIFICATION

1 ALLEN WRENCH  
(M4 x 100mm - BLK)



1PC

2 SHORT BOLT  
(M6 x 40mm - RBW)



4PCS

3 LONG BOLT  
(M6 x 60mm - RBW)



4PCS

4 LOCK WASHER  
(M6 - RBW)



8PCS

5 FLAT WASHER  
(M6 - RBW)



8PCS

### NOTE:

 
Quantities shown are for one chair.

ITEM: **193672**




## ASSEMBLY INSTRUCTIONS

### STEP 1

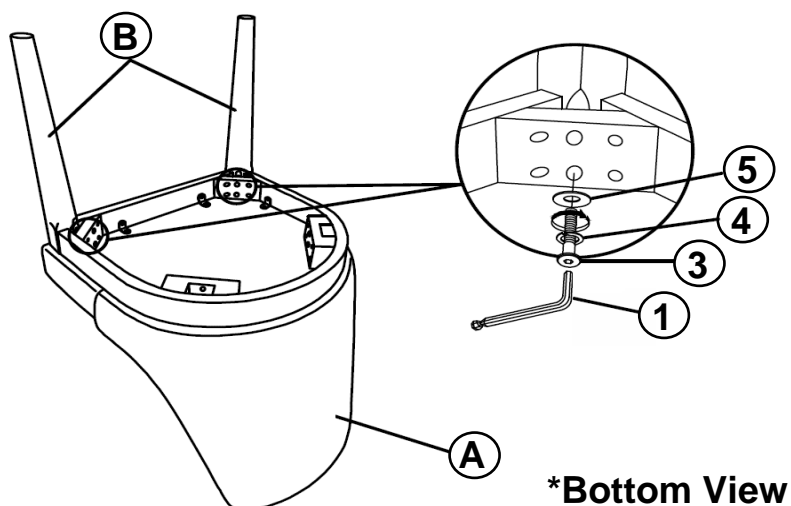


**\*Bottom View**
 
### STEP 2

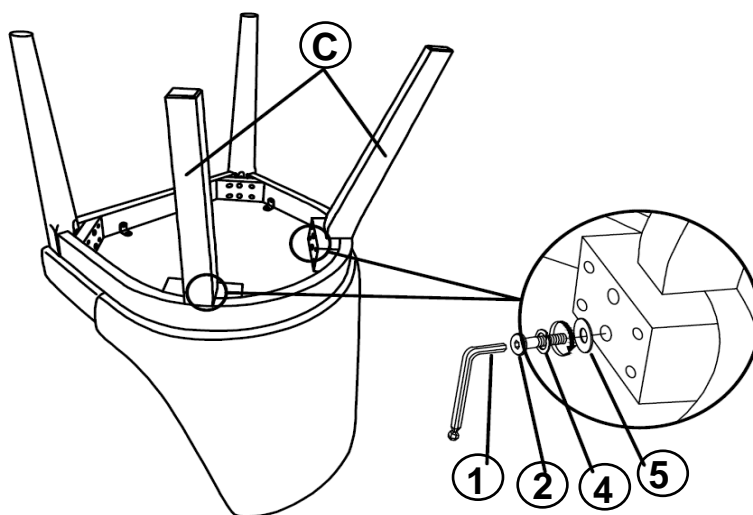


### STEP 3 **COMPLETE**

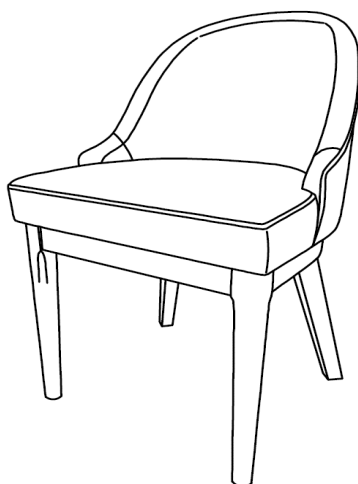 



ITEM: **193672**

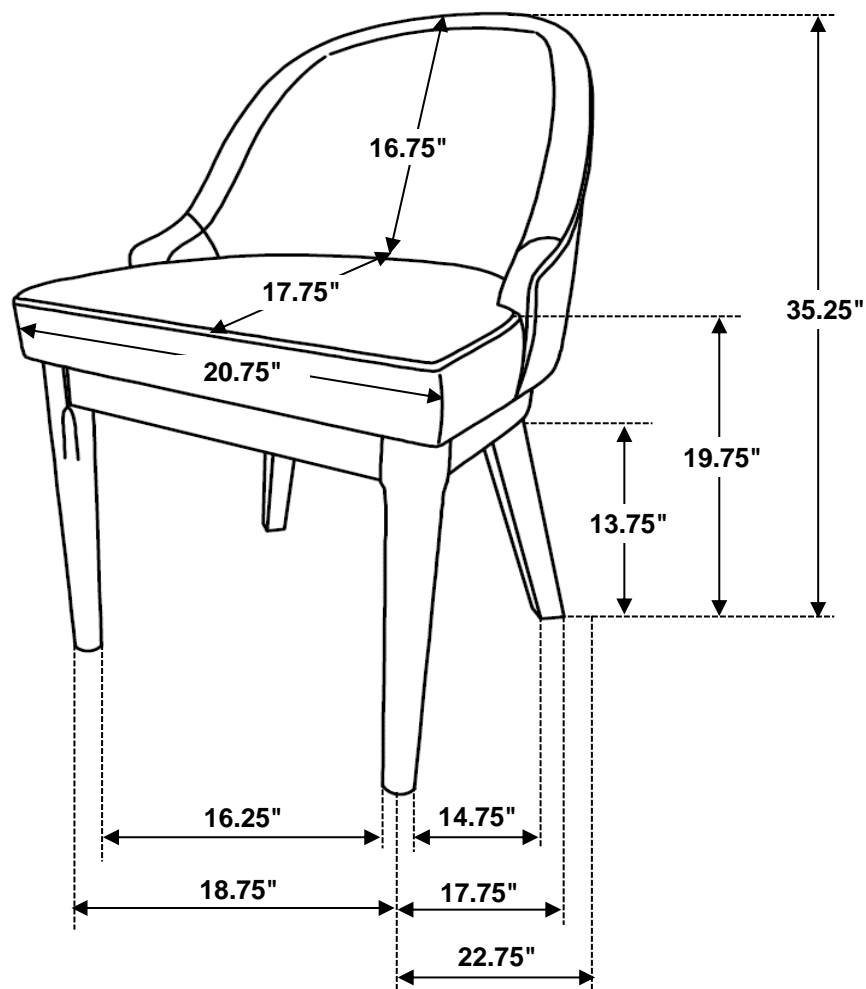 

**Note: Dimension tolerance  $\pm 5\%$**

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**193675**  
**Sideboard**

ITEM: 193675

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 


ASSEMBLY TIME

15 MINUTES


## PARTS IDENTIFICATION

A SIDEBORD

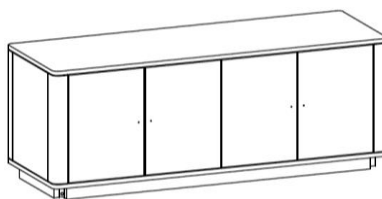

1PC

 B LEG



4PCS

X KNOB WITH SCREW



4SETS


## HARDWARE IDENTIFICATION

 1 ALLEN WRENCH  
(M4 x 100mm - BLK)



1PC

2 BOLT  
(M6 x 50mm - RBW)



8PCS

3 LOCK WASHER  
(M6 - RBW)



8PCS

4 FLAT WASHER  
(M6 - RBW)



8PCS

### NOTE:

 
Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **193675**




## ASSEMBLY INSTRUCTIONS

### STEP 1

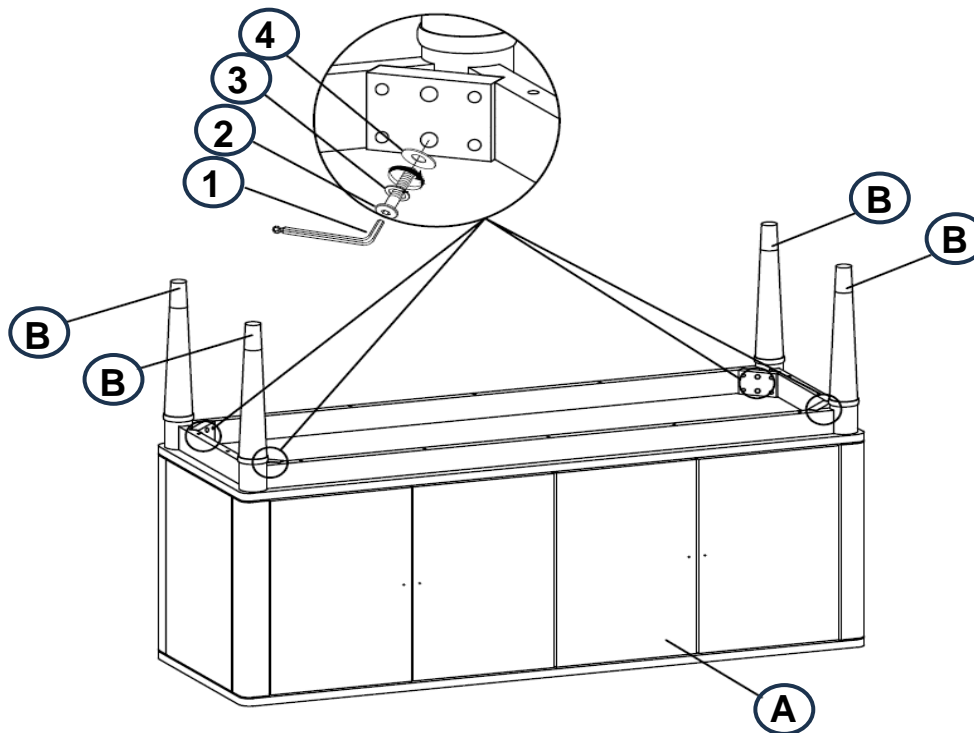

**\*Bottom View**
 
### STEP 2

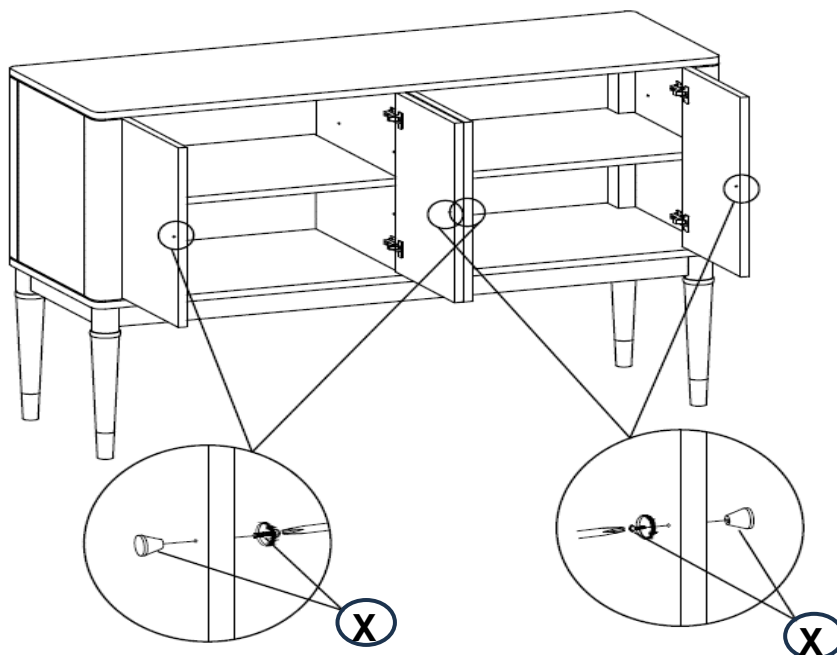


ITEM: **193675**




## ASSEMBLY INSTRUCTIONS
 
### STEP 3


#### OPTIONAL ADJUSTABLE SHELF

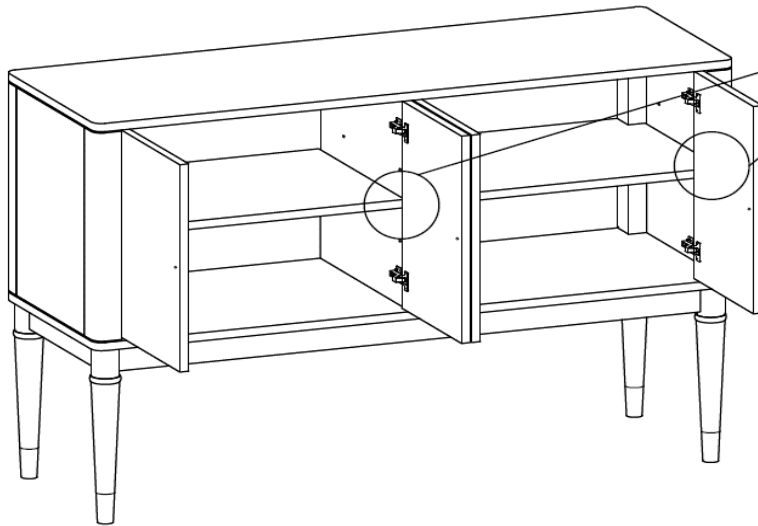


**STEP 3.1**

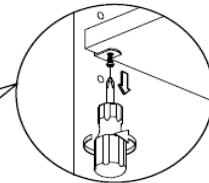 


**STEP 3.2**

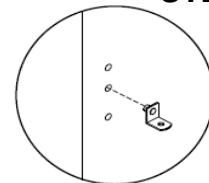 

**STEP 3.3**

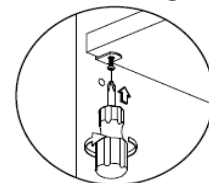 

### STEP 4 **COMPLETE**

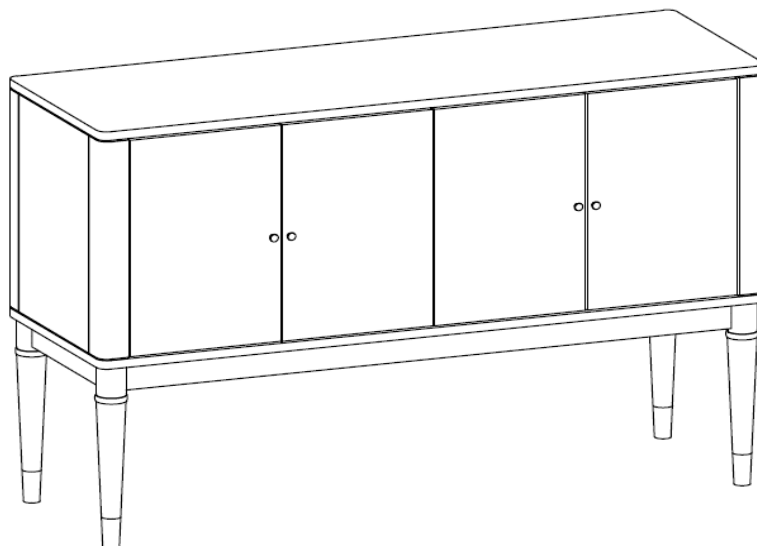 

ITEM: **193675**



## ANTI-TIPPING INSTALLATION INSTRUCTIONS FURNITURE TIPPING RESTRAINT

 
### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


### STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

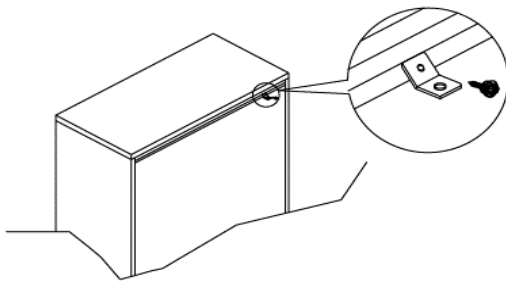


### STEP 2

 Locate the wood stud on the wall and secure the other bracket 2 inches below the back of the unit, using the long screw.

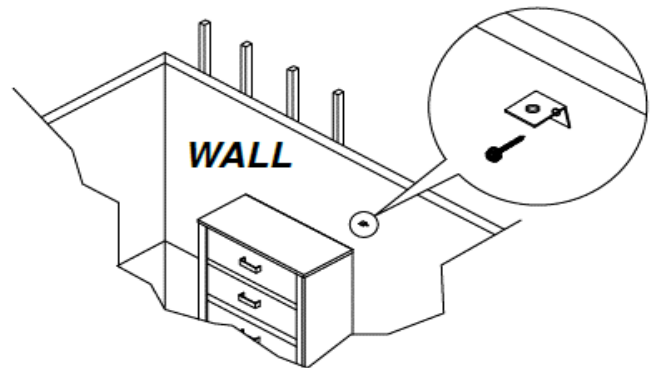


### STEP 3

 Place the furniture into position so both mounting brackets are vertically in line. Lace the threaded end of the restraint strap through the hole in each mounting bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight. Ensure that the restraint strap is securely laced and locked.

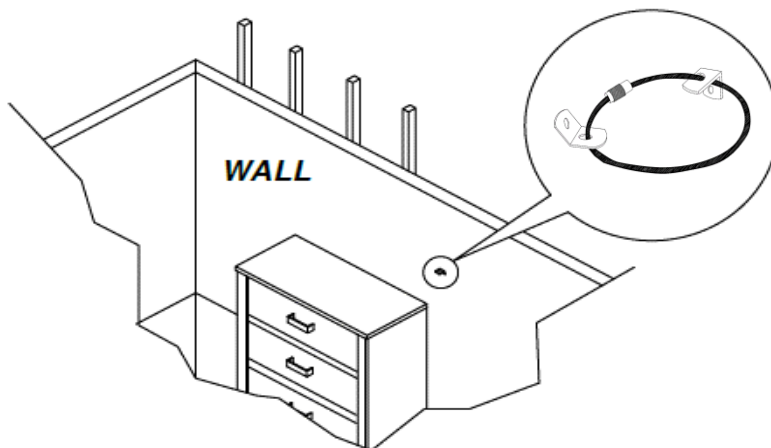

ITEM: **193675**

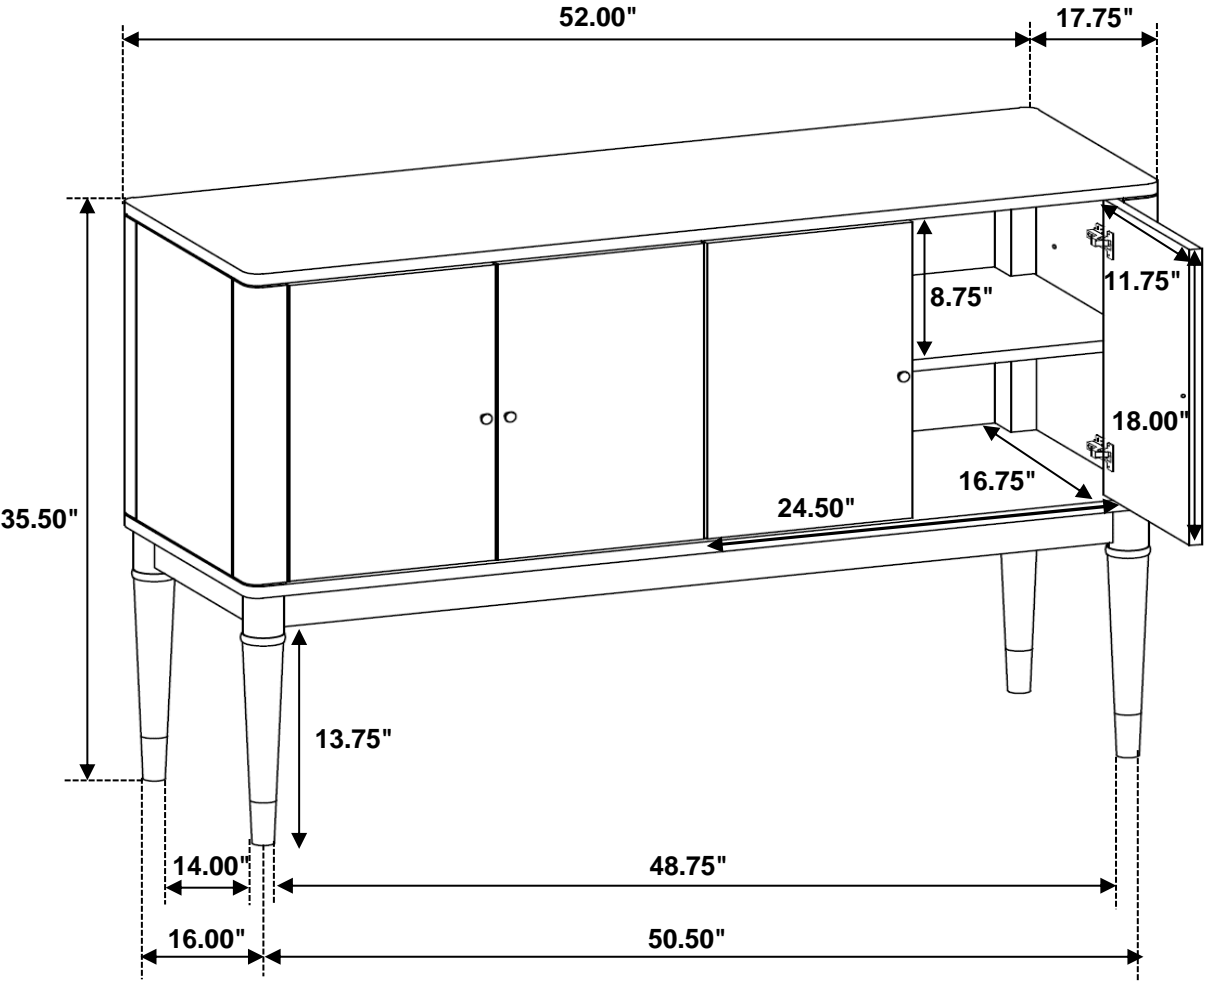 

Note: Dimension tolerance  $\pm 5\%$