

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**193781**  
***DINING TABLE***

REVISION 0 : 01/21/2022  
REVISION 1 : 06/27/2022

ITEM:193781



# ASSEMBLY INSTRUCTIONS


## ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

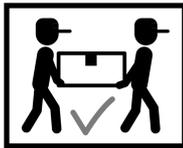


ASSEMBLY TIME 25 MINUTES

## PARTS IDENTIFICATION

### B1: DINING TABLE TOP

AN


TOP PANEL

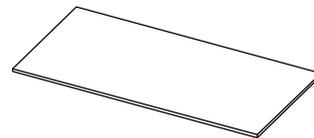

1PC

D

SUPPORT CROSSBAR

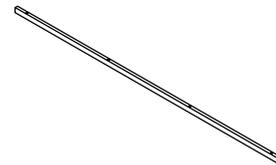


2PCS

### B2: DINING TABLE BASE

B


LARGE FRAME

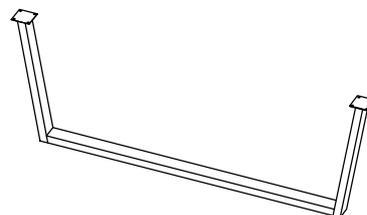

1PC

C

LEG

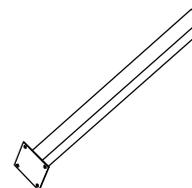

2PCS

ITEM:193781



# ASSEMBLY INSTRUCTIONS

## HARDWARE IDENTIFICATION

ZN


- 1 BOLT (1/4" x 15mm BLK)  16PCS
- 2 LEVELER (5/16" x 15mm BLK)  4PCS
- 3 SPRING WASHER (1/4")  16PCS
- 4 WASHER (1/4")  16PCS

- 5 SCREW 3.5 x 38mm  8PCS
- 6 CAP 13 x 26mm  4PCS
- 7 ALLEN WRENCH (4mm)  1PC


Hardware pack is located in 193781B2

### STEP 1

Do not tighten until each step is completed or instructed.

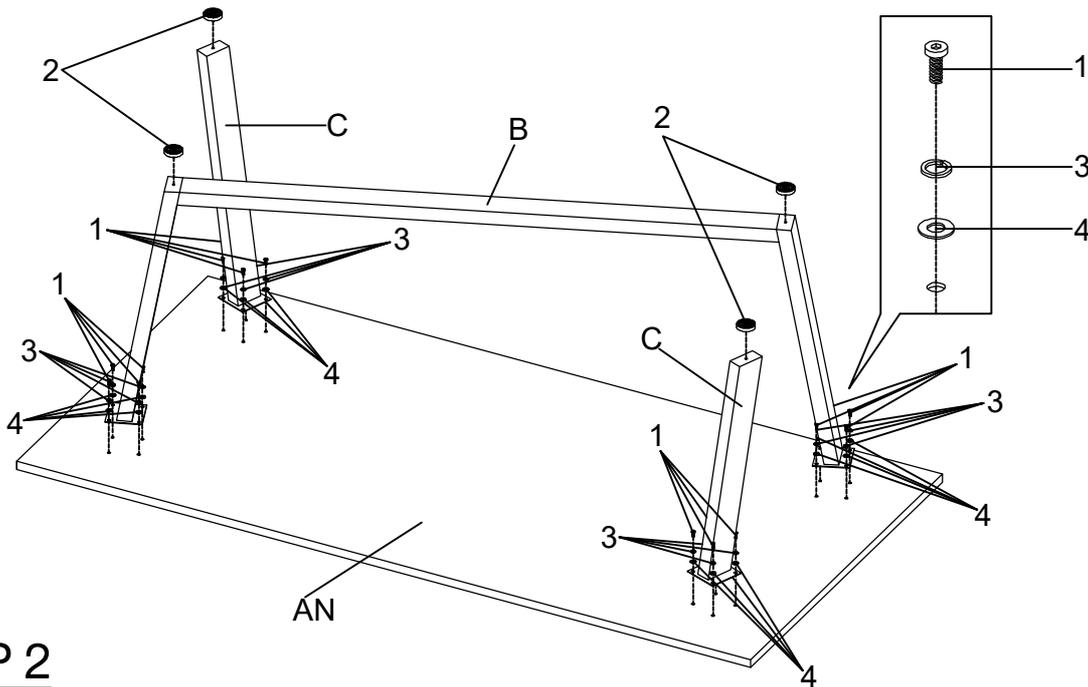


### STEP 2

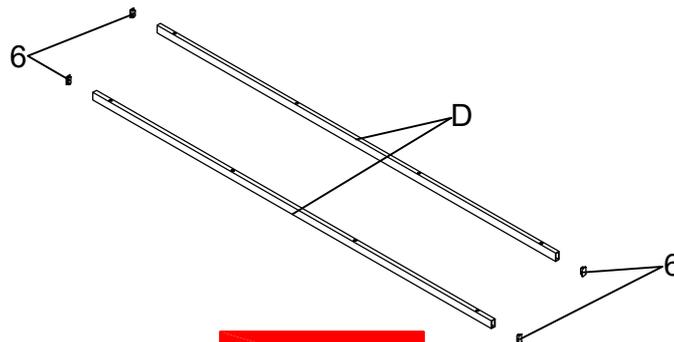



ITEM:193781

# ASSEMBLY INSTRUCTIONS

STEP 3

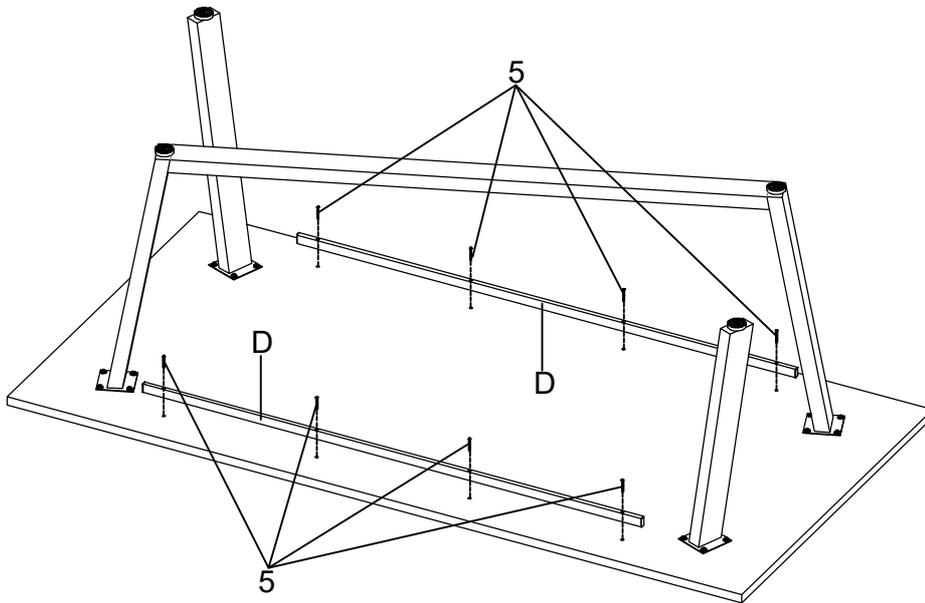

STEP 4  
COMPLETE

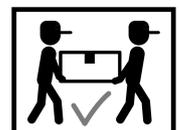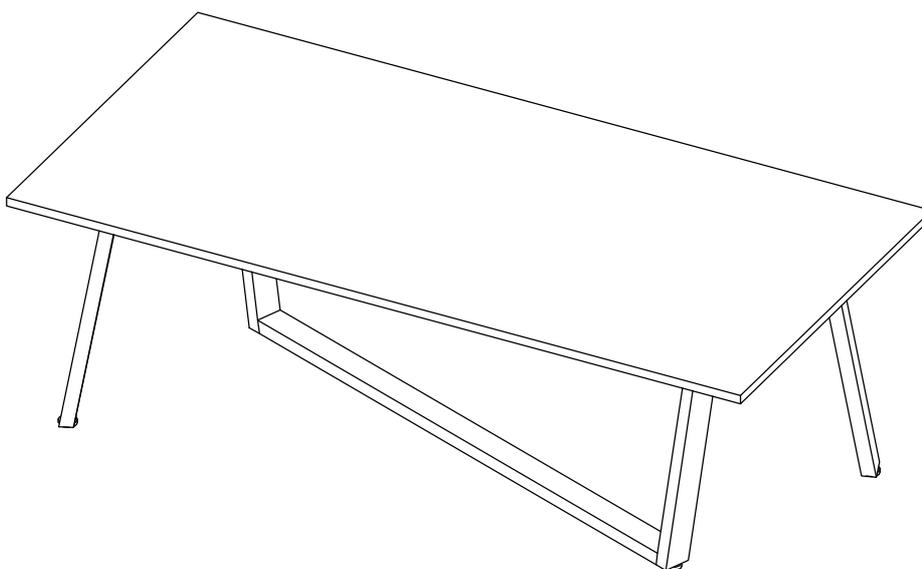


# ITEM:193781 ASSEMBLY INSTRUCTIONS



**Product Size : 2210 X 1092 X 762 H (MM)**

**Product Size : 87" X 43" X 30"**

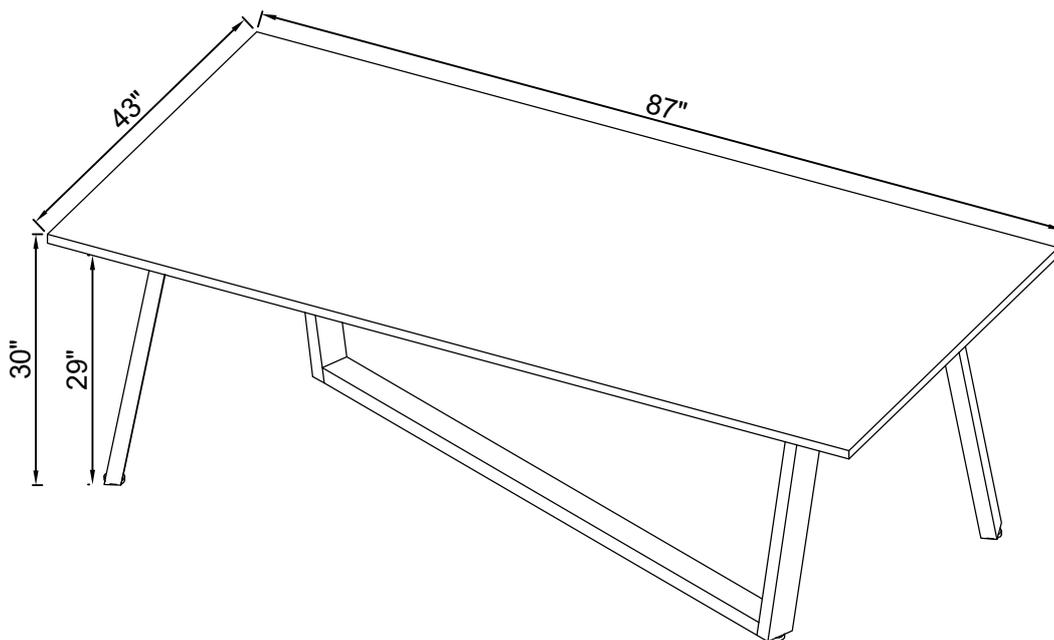

Note : Dimension tolerance  $\pm 5\%$