

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

193961(B1&B2)
Dining Table

ITEM: 193961(B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION


B1 (BOX 1)

A TOP

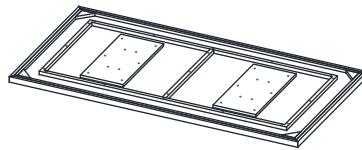

1PC

 
B MOUNTING PLATE
(PRE-ATTACHED TO TOP)



2PCS

B2 (BOX 2)

 C LEG



2PCS

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 193961(B1)

1 ALLEN WRENCH
(M4 x 60MM - BLK)



1PC

2 BOLT
(M6 x 35MM - RBW)



8PCS

3 LOCK WASHER
(M6 x 13MM - RBW)



8PCS

4 FLAT WASHER
(M6 x 13MM - RBW)



8PCS

5 LEVELER
(M6 x 23MM)



4PCS


ITEM: 193961(B1&B2)




ASSEMBLY INSTRUCTIONS

STEP 1

Attention! Please remove part B and all hardware from TOP (A), using ALLEN WRENCH (1) and keep for STEP 2 and STEP 3.

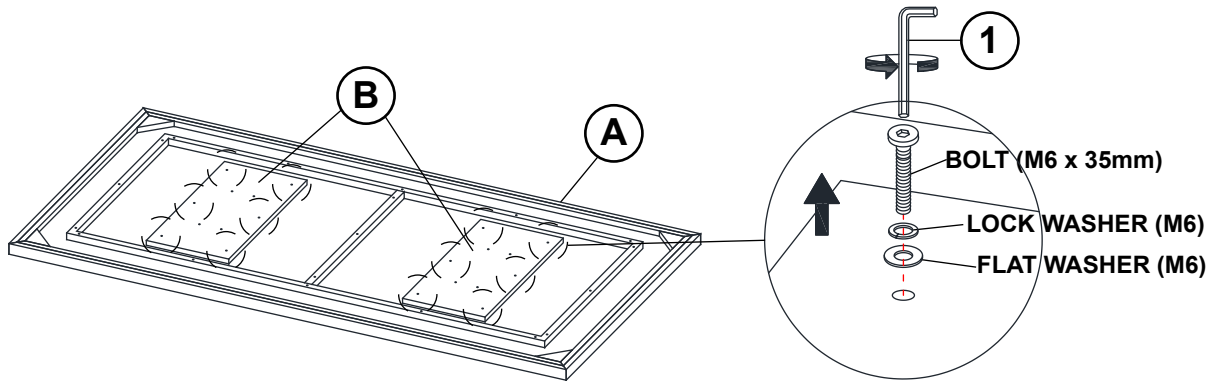


STEP 2

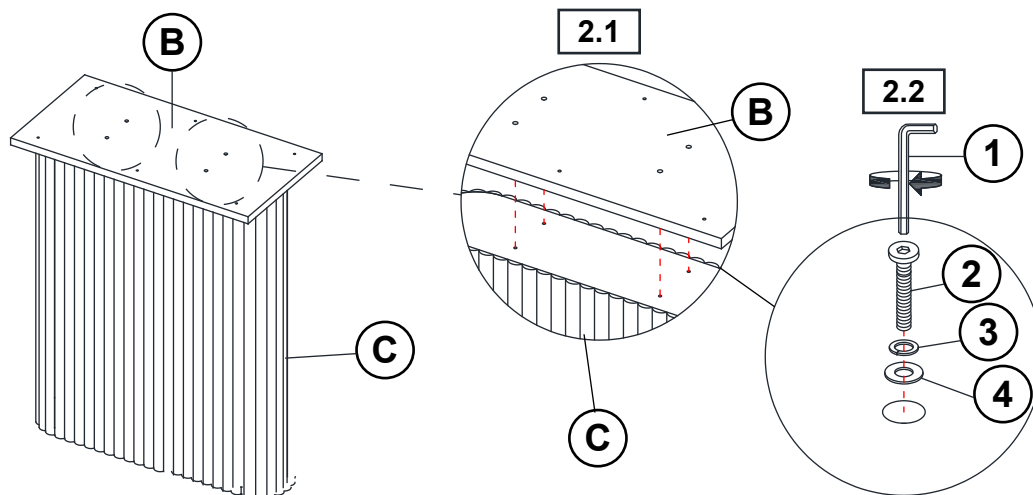

STEP 3

Attention! Use hardware from STEP 1 for this STEP.

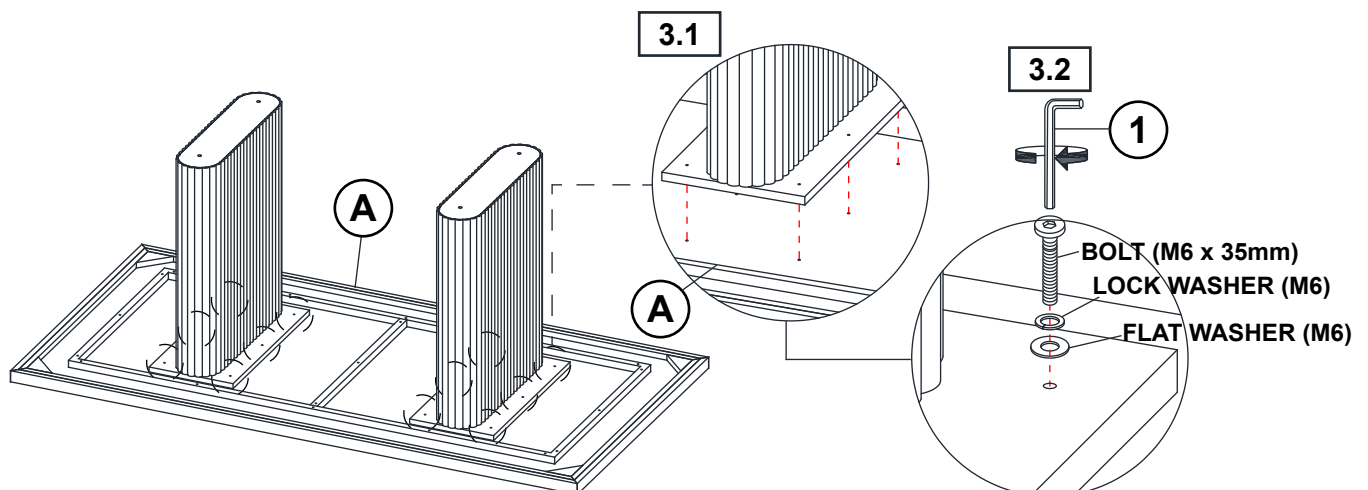


*BOTTOM VIEW

ITEM: **193961(B1&B2)**


ASSEMBLY INSTRUCTIONS

STEP 4

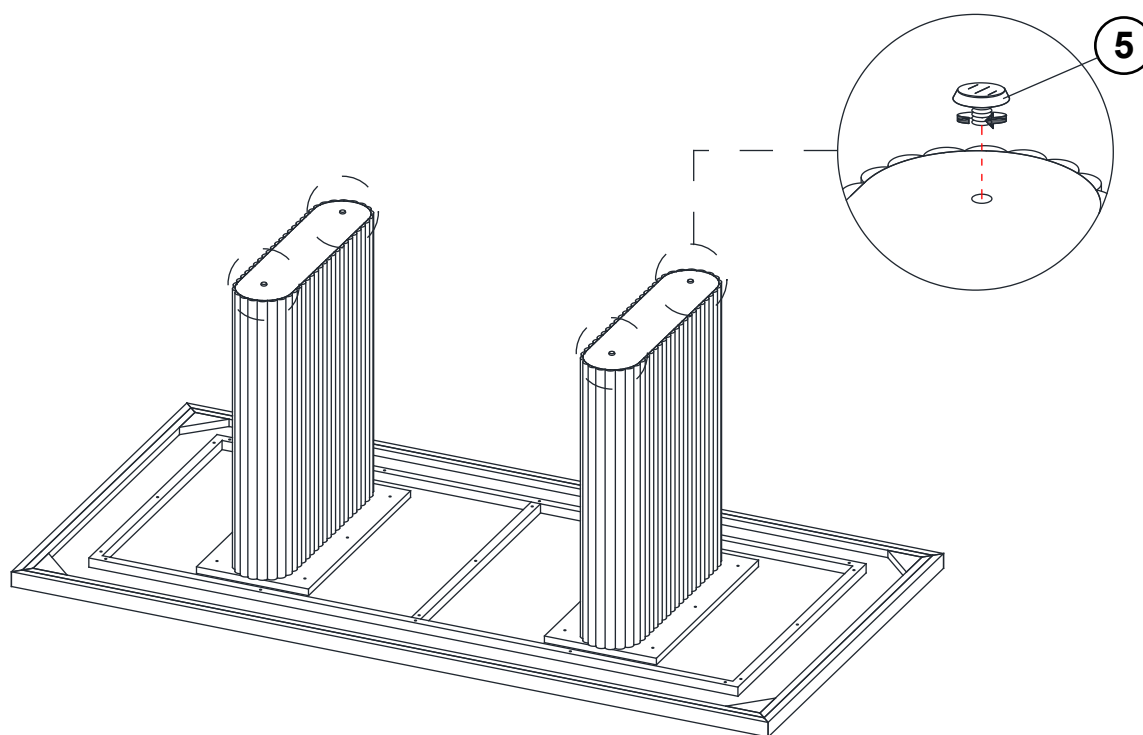


***BOTTOM VIEW**

STEP 5 **COMPLETE**

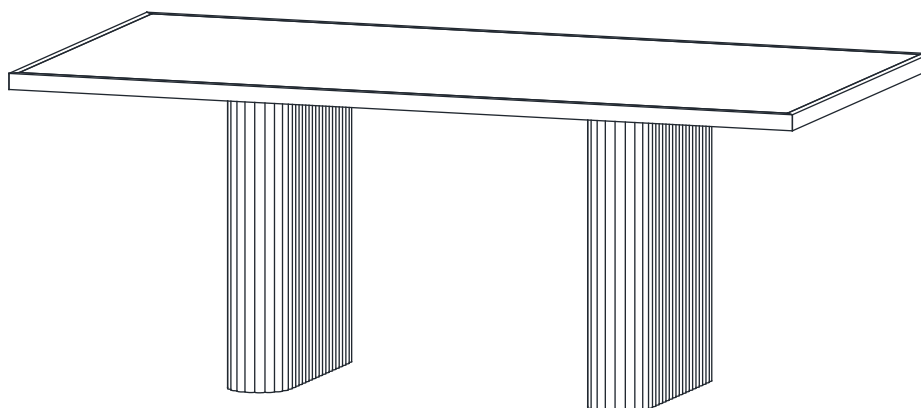

ITEM: **193961(B1&B2)**

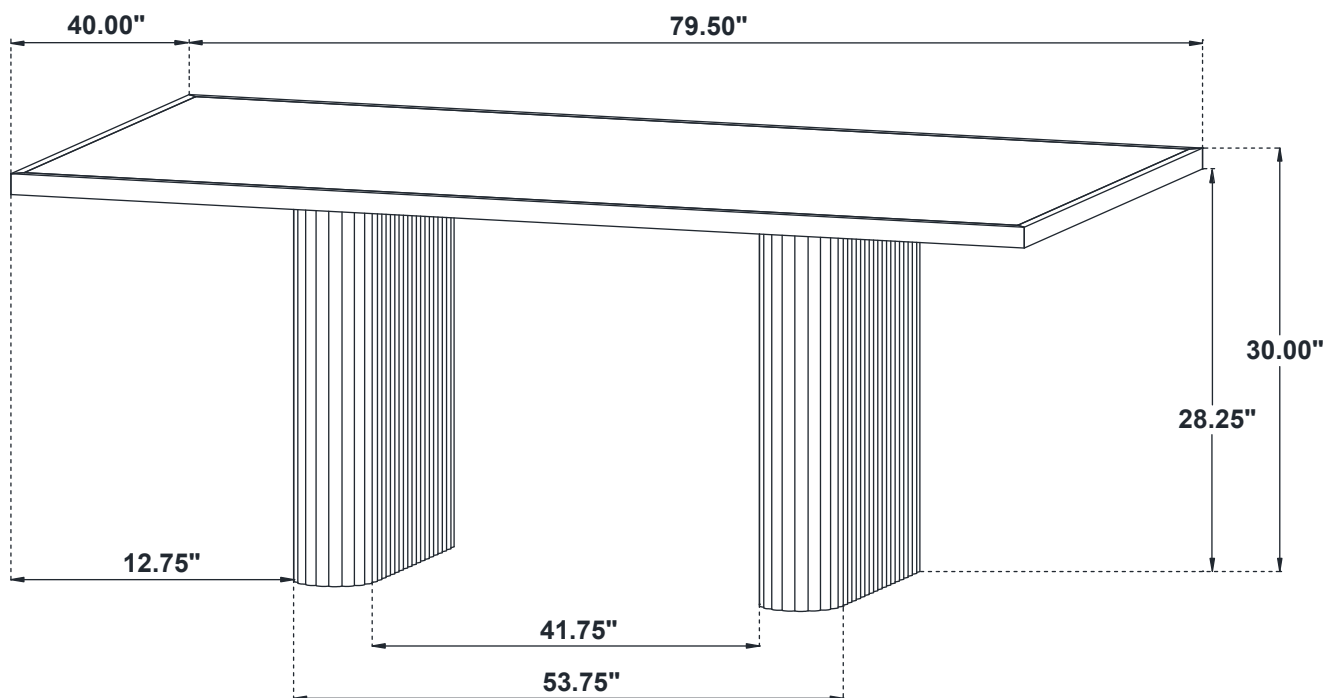

Note: Dimension tolerance $\pm 5\%$