

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life



REVISION 0 : 04/13/2016 REVISION 1 : 08/15/2019

PAGE 1 OF 4

ITEM:200891KW (B1&B2)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:


- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.

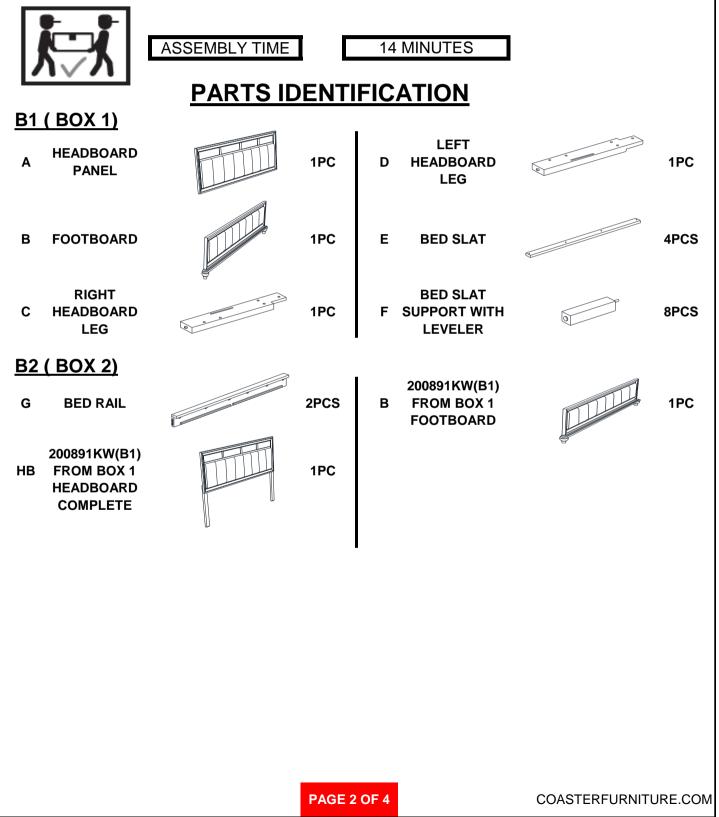

ITEM:200891KW (B1&B2)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 200891KW (B1)

1	BOLT (M6 x 30mm - BLK)	<u>()) — лининини</u>	6PCS
2	LOCK WASHER (1/4" - BLK)	\bigcirc	6PCS
3	FLAT WASHER (1/4"ID x 13mm - BLK)	\bigcirc	6PCS
4	ALLEN WRENCH (M4 x 60mm - BLK)		1PC
5	FLAT HEAD SCREW (M4 x 32mm - RBW)		8PCS


NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

PAGE 3 OF 4

ITEM:200891KW (B1&B2)

ASSEMBLY INSTRUCTIONS

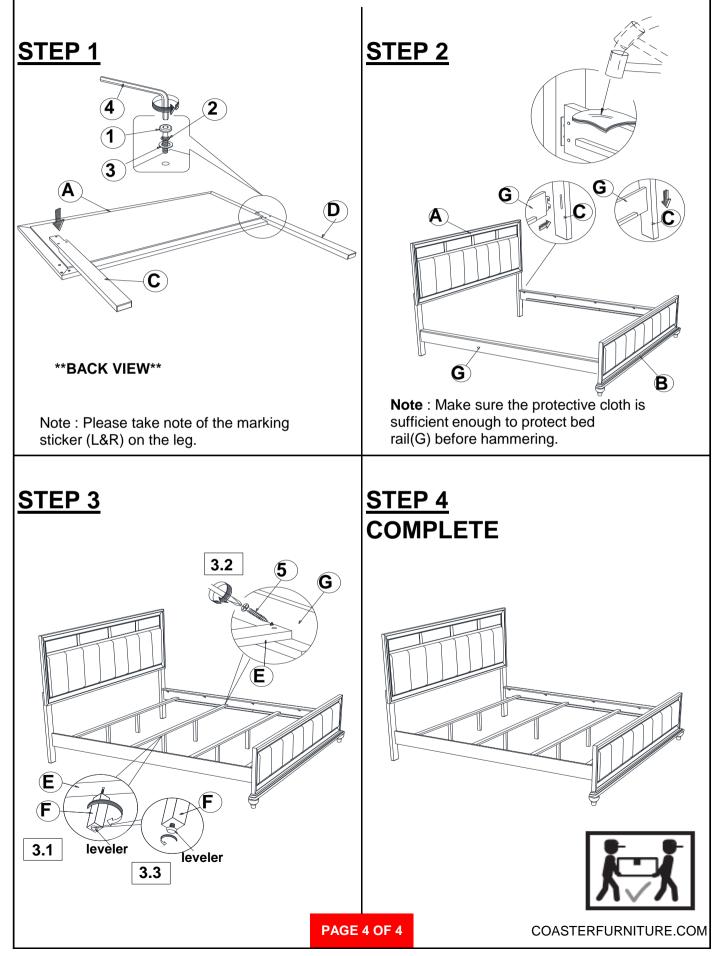

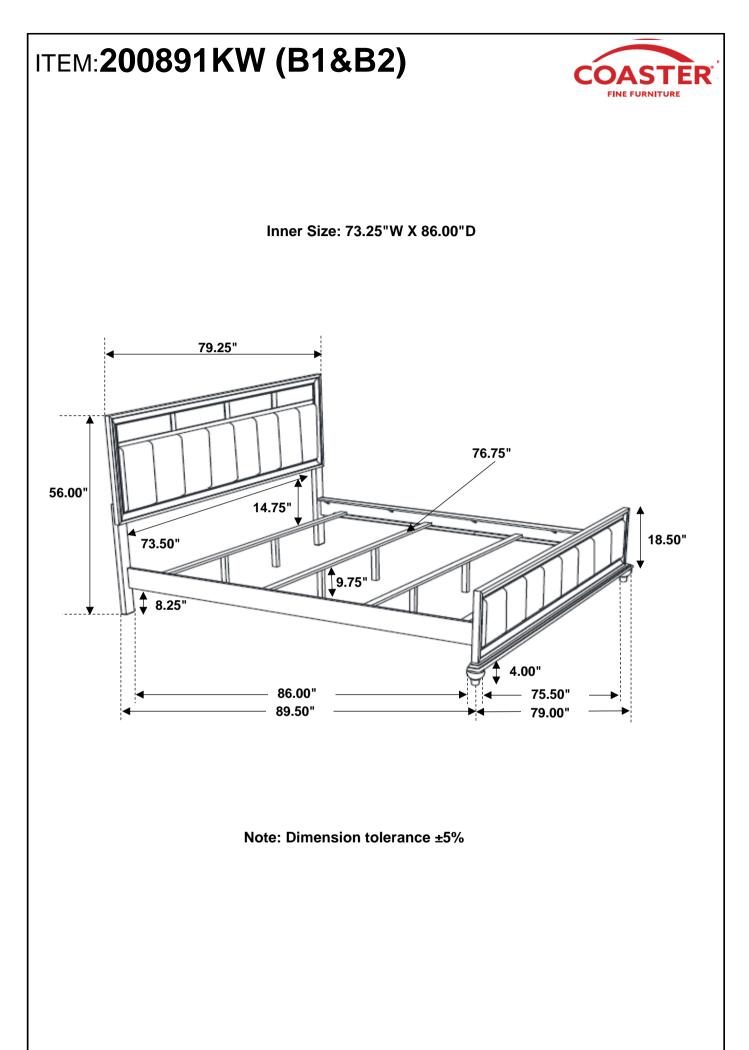




ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life



 REVISION 0 : 04/13/2016 REVISION 1 : 08/15/2019



ITEM: 200892 ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND



1PC

B BUN FOOT


4PCS

PAGE 2 OF 3


ITEM:200892 ASSEMBLY INSTRUCTIONS



<u>STEP 1</u>

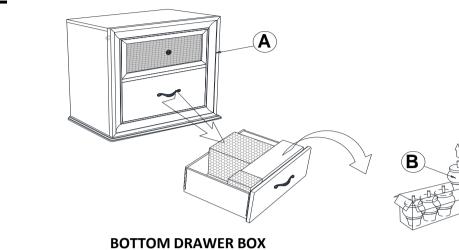

STEP 2

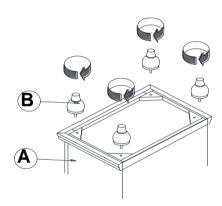


STEP 3 COMPLETE



PAGE 3 OF 3



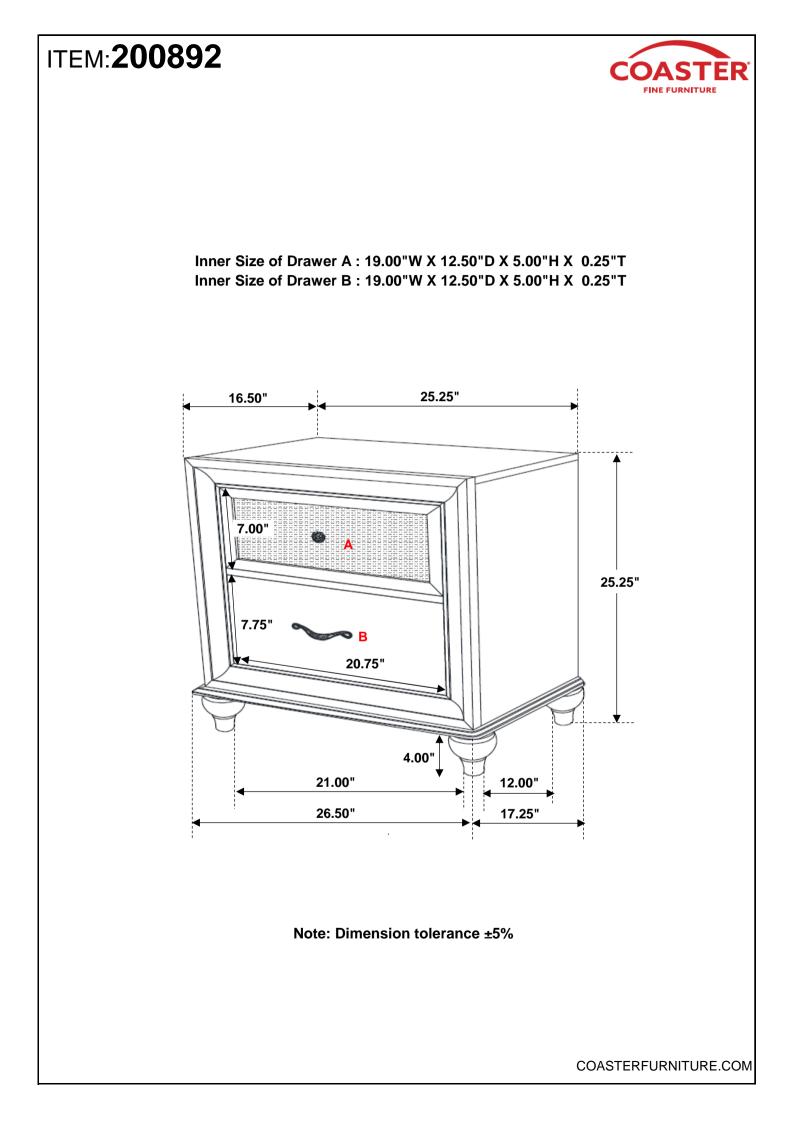



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life



REVISION 0 : 04/13/2016 REVISION 1 : 06/15/2017 REVISION 2 : 08/15/2019

PAGE 1 OF 3

ITEM: 200893 ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME



PARTS IDENTIFICATION

A DRESSER



1PC

B BUN FOOT




4PCS

ITEM:200893 ASSEMBLY INSTRUCTIONS




<u>STEP 1</u>

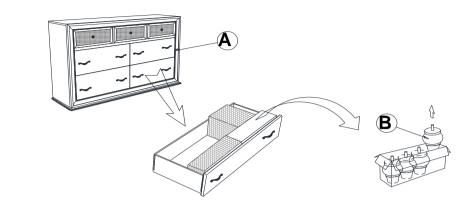

BOTTOM DRAWER BOX

STEP 2

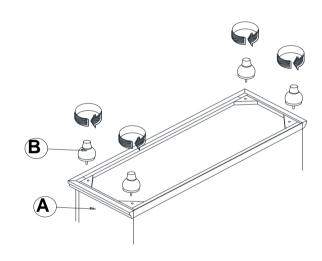

STEP 3 COMPLETE



PAGE 3 OF 3



