

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

204392 Nightstand

REVISION 0 : 10/30/2015 REVISION 1 : 01/21/2020 REVISION 2 : 11/17/2025

COASTERFURNITURE.COM

ITEM: 204392

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2 . Please check to see that all hardware and parts are present prior to start of assembly.
- 3 . Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

\mathbf{M}

WARNING!

- 1 . Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND

1PC
D RIGHT BACK LEG (WITH BR LABEL)

1PC
E LEFT BACK LEG (WITH BL LABEL)

1PC
C LEFT FRONT LEG (WITH FL LABEL)

1PC

HARDWARE IDENTIFICATION

1 BOLT (M6 x 35mm - BLK) 8PCS 3 FLAT WASHER (1/4" x 20mm - BLK) 8PCS
2 LOCK WASHER (1/4" - BLK) 8PCS 4 ALLEN WRENCH (M4 x 100mm - BLK) 1PC

NOTE:


Philips head screw driver in the assembly process; however, manufacturer does not provide the item


ITEM: **204392**

ASSEMBLY INSTRUCTIONS






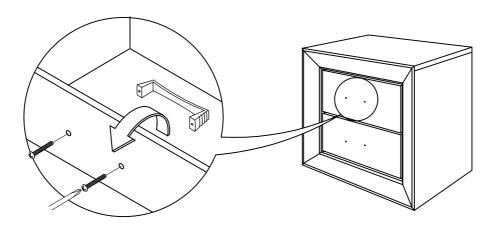

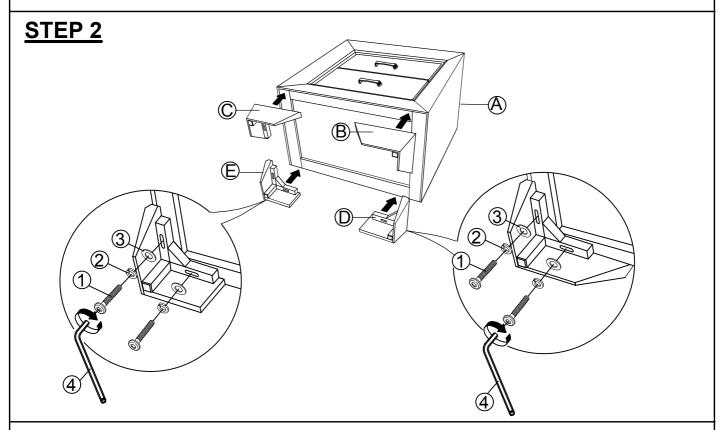

STEP 3 COMPLETE

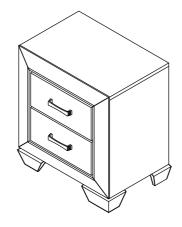

PAGE 3 OF 3




COASTERFURNITURE.COM

ITEM: **204392**



Inner Size Of Drawer: 12.75"W X 12.75"D X 5.00"H X 0.25"T

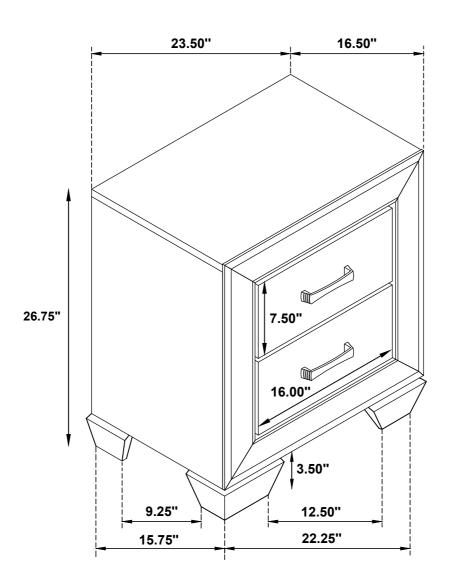

Note: Dimension tolerance ±5%