

ASSEMBLY INSTRUCTIONS **COASTER FINE FURNITURE**



Fine Furniture for every stage of life

REVISION 0: 11/28/2016 REVISION 1 : 10/17/2017 REVISION 2 : 06/05/2018 REVISION 3: 09/04/2019



COASTERFURNITURE.COM

205101Q (B1-B3) Queen Bed

ITEM: 205101Q (B1-B3)

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING! 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.

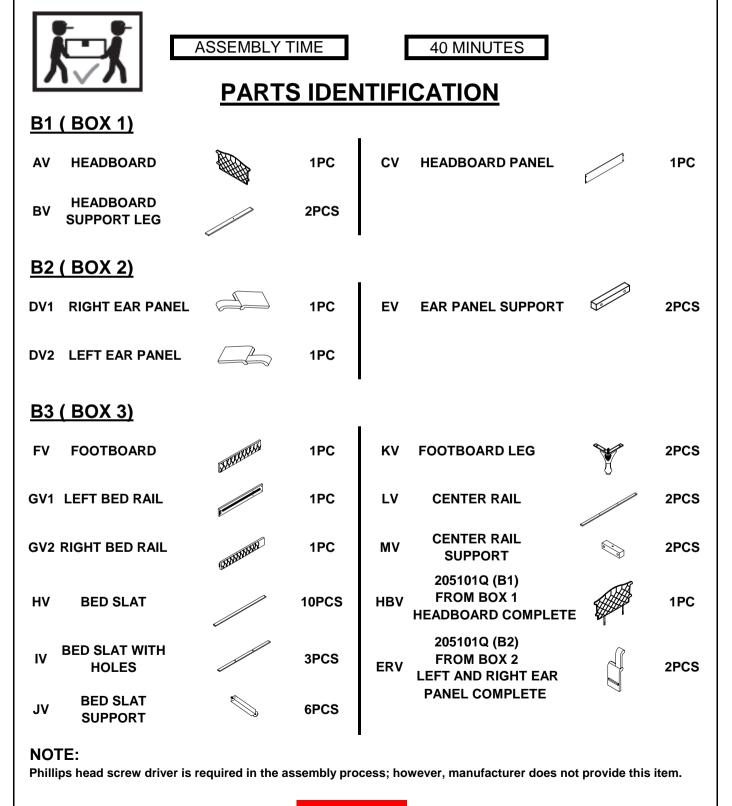

PAGE 2 OF 8

ITEM: 205101Q (B1-B3)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.

WARNING!

- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION


Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 205101Q (B3)


1	ALLEN WRENCH (4MM - RBW)		1PC	MEDIUM PAN 7 HEAD SCREW (#4 x 25mm - RBW)	Gummun	4PCS
2	BOLT 1 (Ø1/4" x 30mm - RBW))	4PCS	LONG PAN HEAD 8 SCREW (#4 x 38mm - RBW)	Gemmunum>	32PCS
3	BOLT 2 (Ø1/4" x 38mm - RBW)	() 	10PCS	BIG FLAT 9 WASHER (Ø1/4" X 25 X 1.5mm - RBW)	0	22PCS
4	BOLT 3 (Ø1/4" x 60mm - RBW))	10PCS	SMALL FLAT 10 WASHER (Ø1/4" X 19 X 1.5mm - RBW)	Ô	22PCS
5	BOLT 4 (Ø1/4" x 90mm - RBW)	0	8PCS	11 LOCK WASHER (Ø1/4" - RBW)	0	22PCS
6	SHORT PAN HEAD SCREW (#4 x 20mm - RBW)	Gammannes	4PCS	12 LEVELER (Ø1/4" X 25mm - BLK)		6PCS


NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

PAGE 3 OF 8

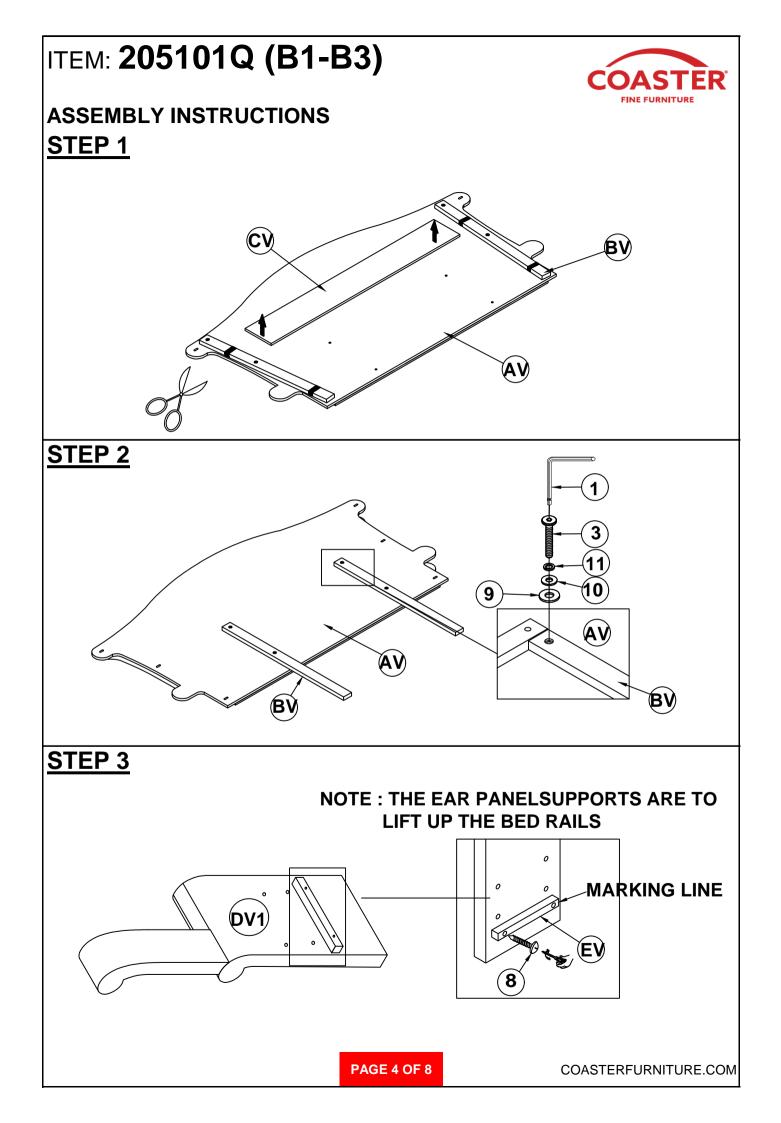

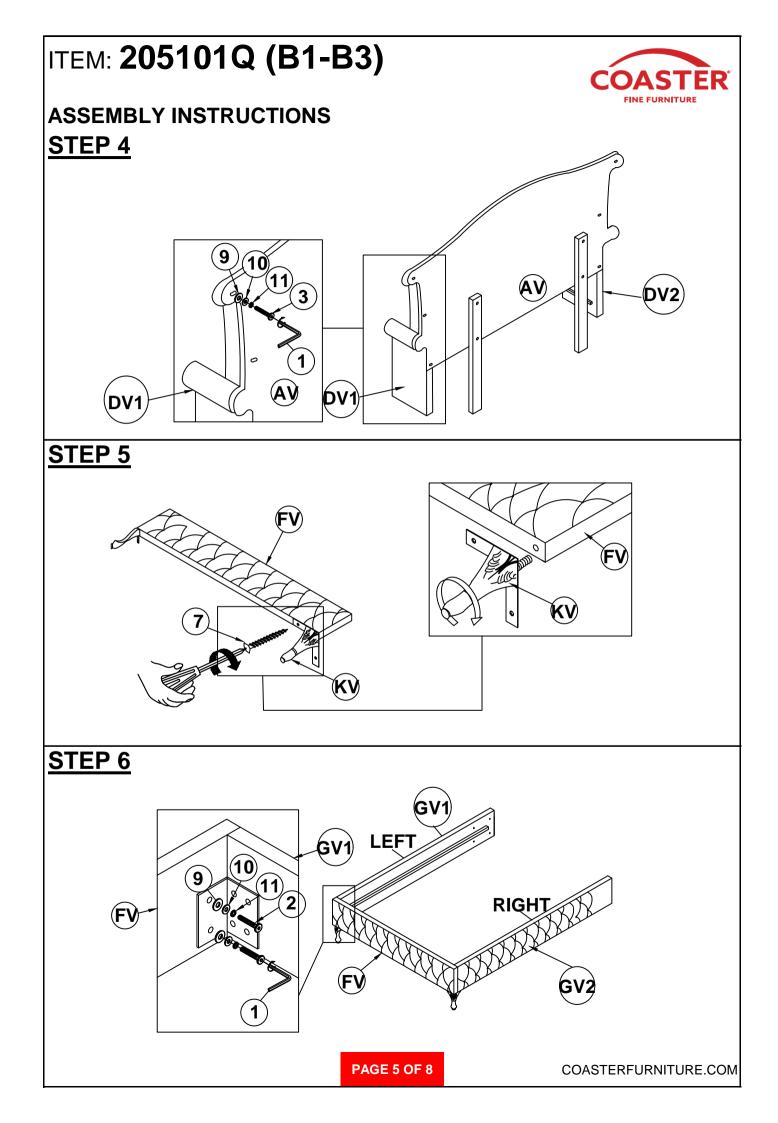

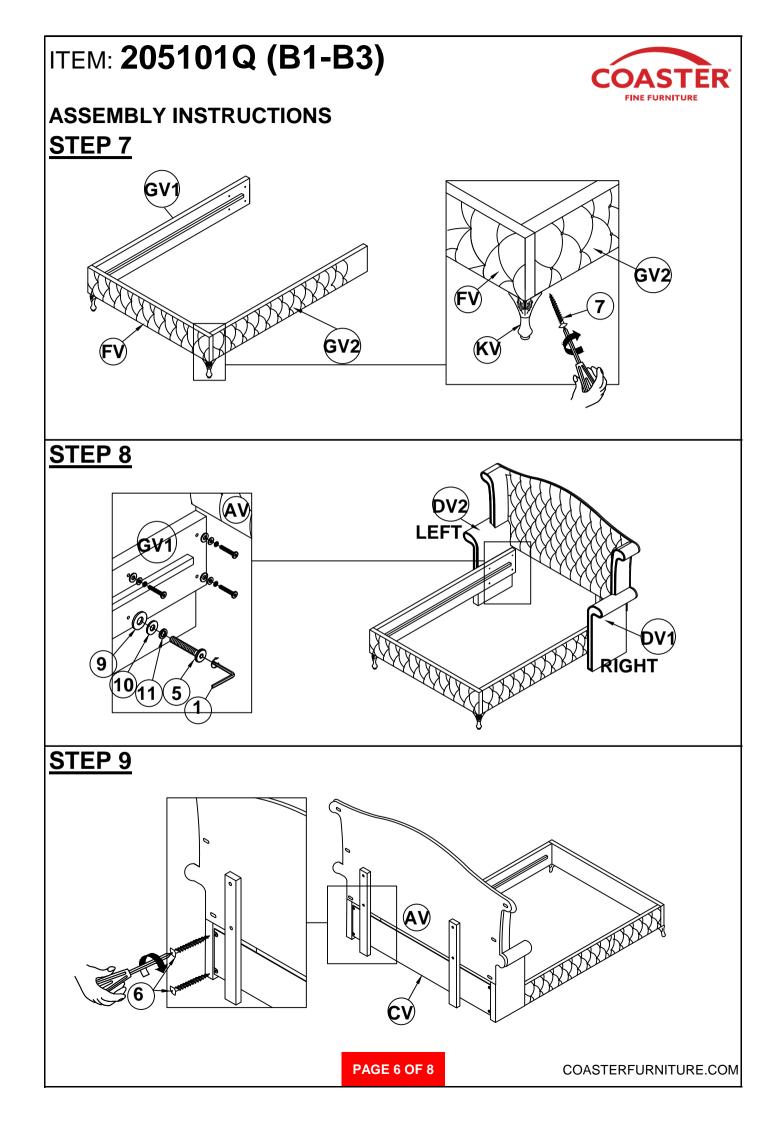


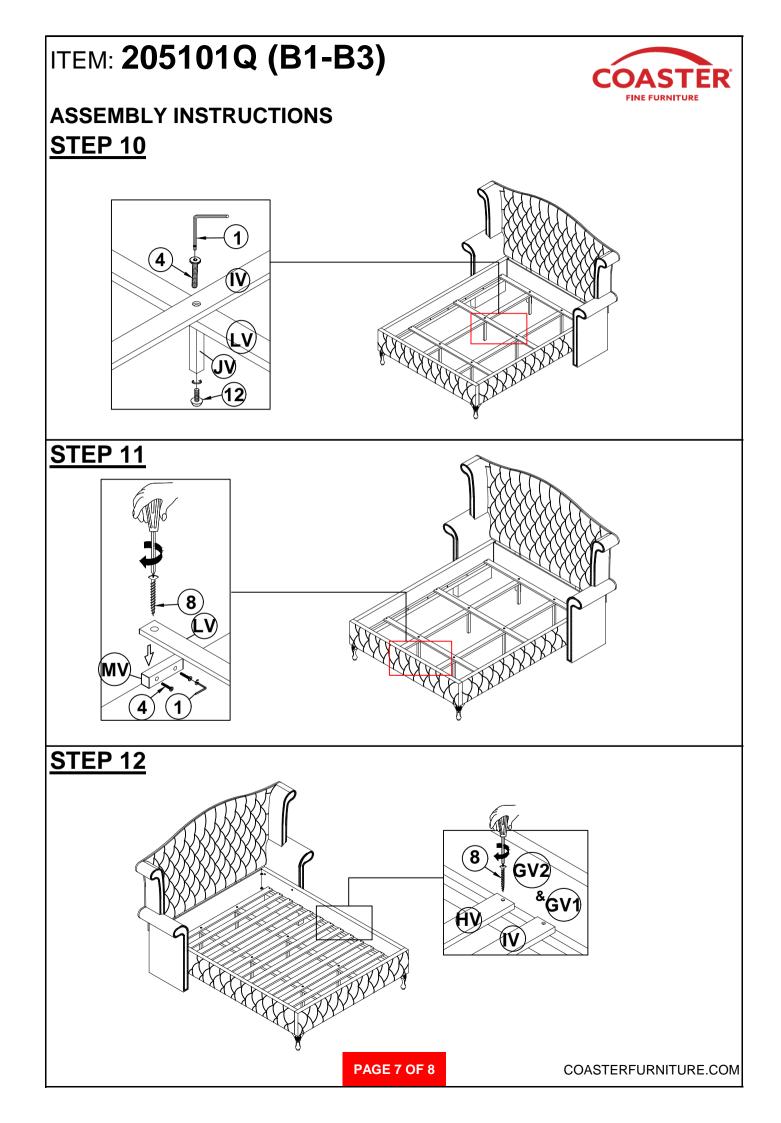

ITEM: 205101Q (B1-B3)

ASSEMBLY INSTRUCTIONS STEP 13 COMPLETE




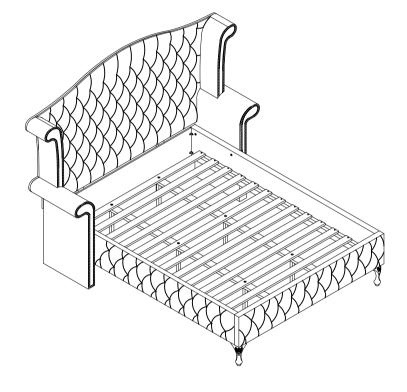



COASTERFURNITURE.COM

PAGE 8 OF 8

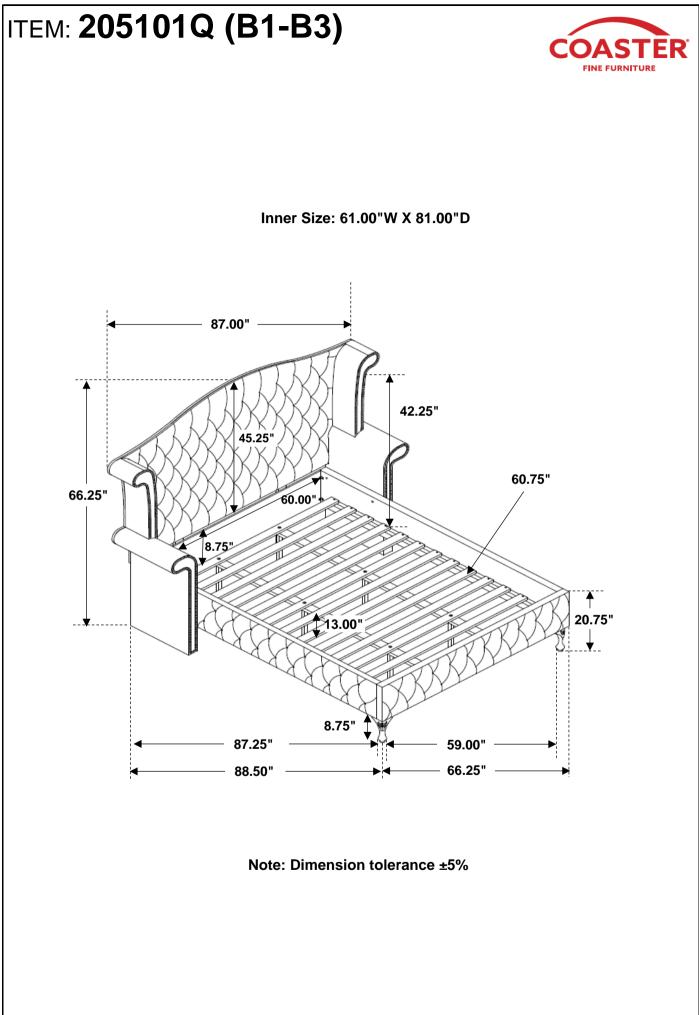



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life



REVISION 0 : 11/28/2016 REVISION 1 : 10/17/2017 REVISION 2 : 06/05/2018 REVISION 3 : 09/04/2019

PAGE 1 OF 5

COASTERFURNITURE.COM

ITEM: 205102 ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:


- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.


2. This product is for home use only and not intended for commercial establishments.

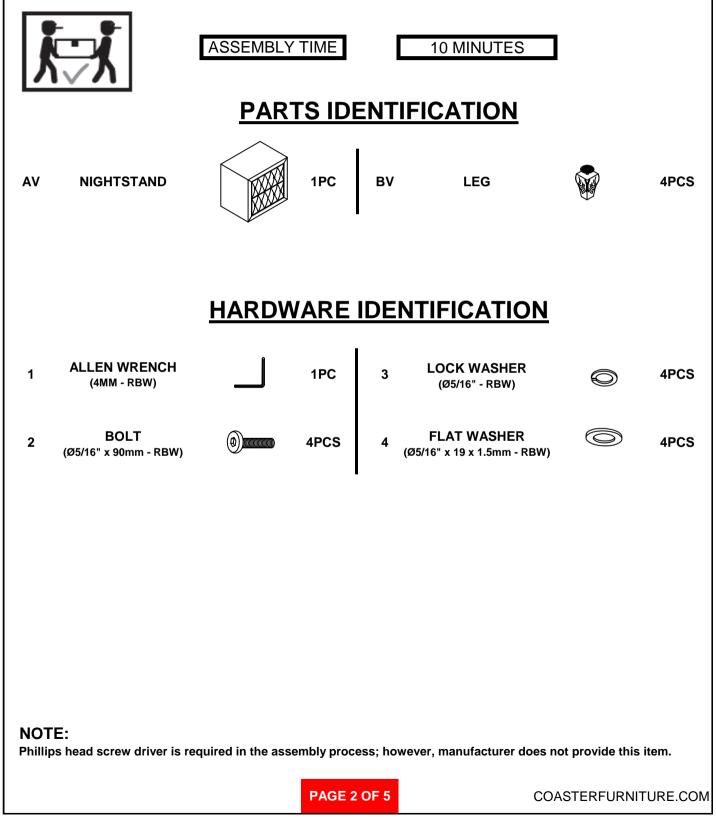




ASSEMBLY INSTRUCTIONS

<u>STEP 1</u>

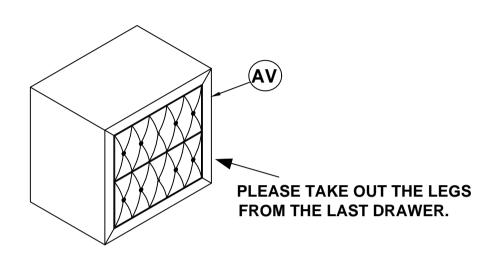

<u>STEP 2</u>

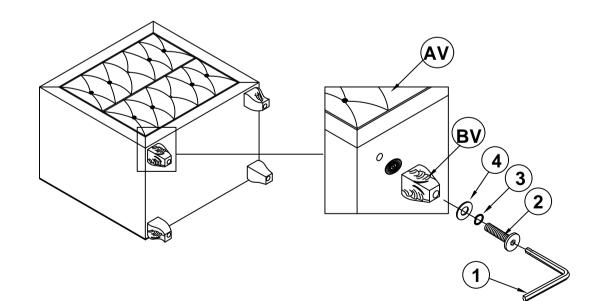


PAGE 3 OF 5

ASSEMBLY INSTRUCTIONS



STEP 3

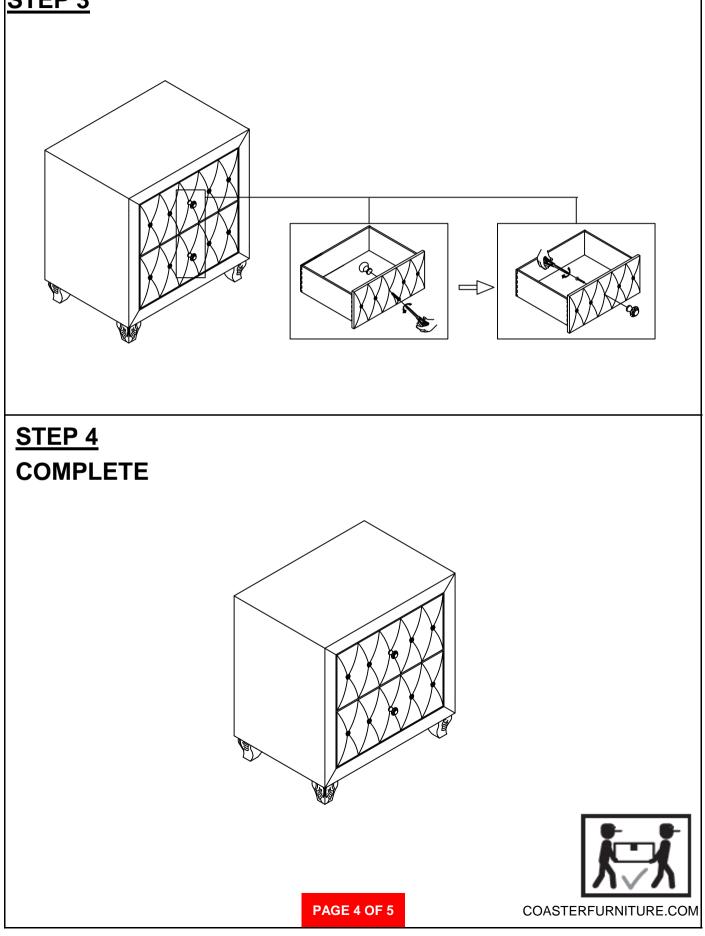



ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING


Injury may result from tipping furniture. This restraint may protect against tipping furniture.


Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
- 2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
- 3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
- 4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
- 5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
- 6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
- 7. To double lock return the beaded end back through the keyhole as shown.
- 8. Check to make sure the cable tie is securely laced and locked to the brackets.

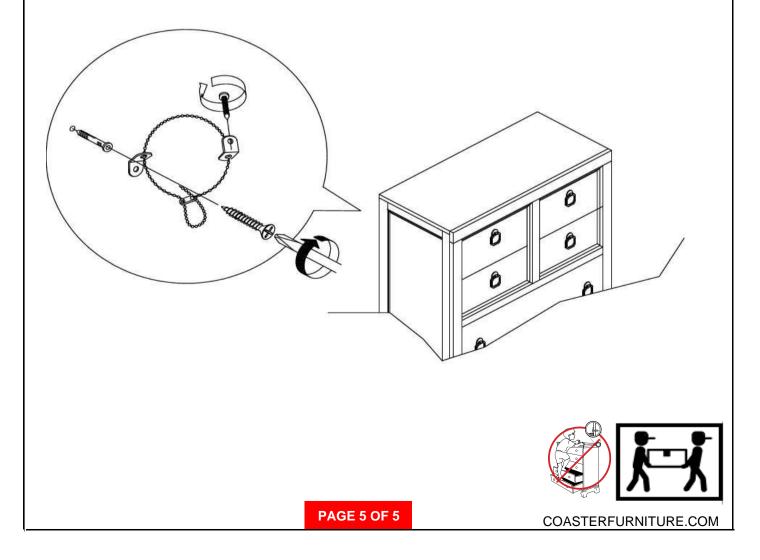

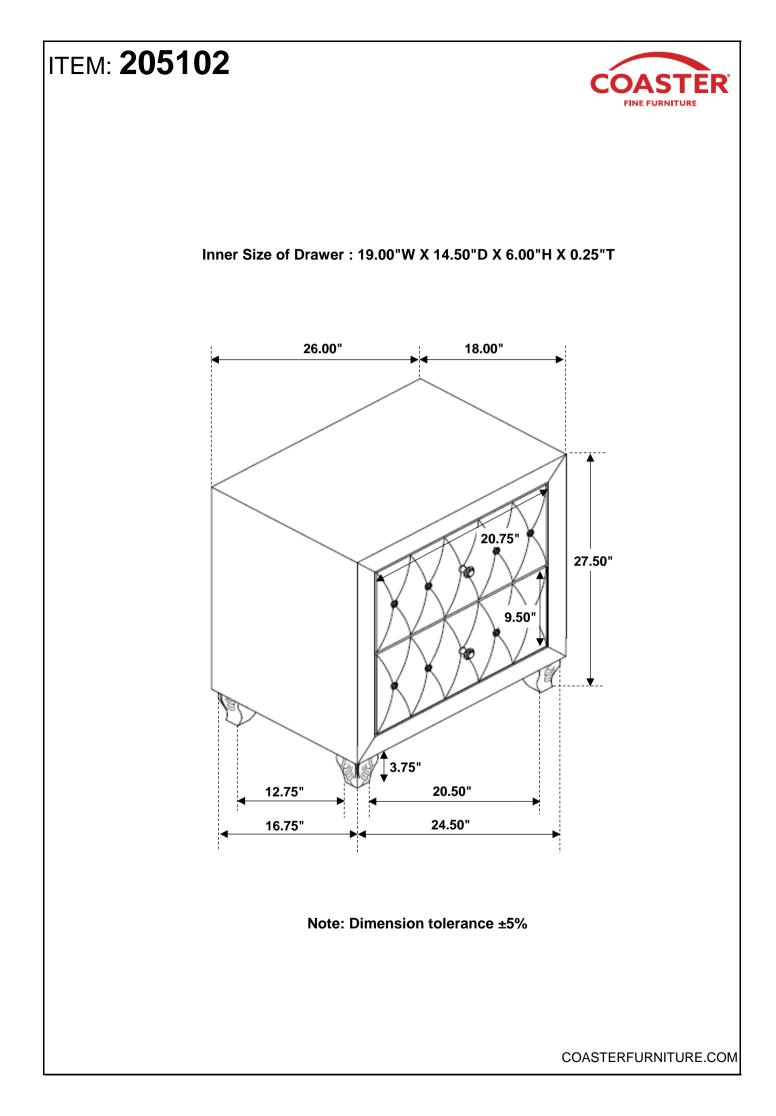



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

REVISION 0 : 11/28/2016 REVISION 1 : 10/17/2017 REVISION 2 : 06/05/2018 REVISION 3 : 09/04/2019 205103 <u>Dresser</u>

PAGE 1 OF 5

COASTERFURNITURE.COM

ITEM: 205103 ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.


WARNING!

- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.

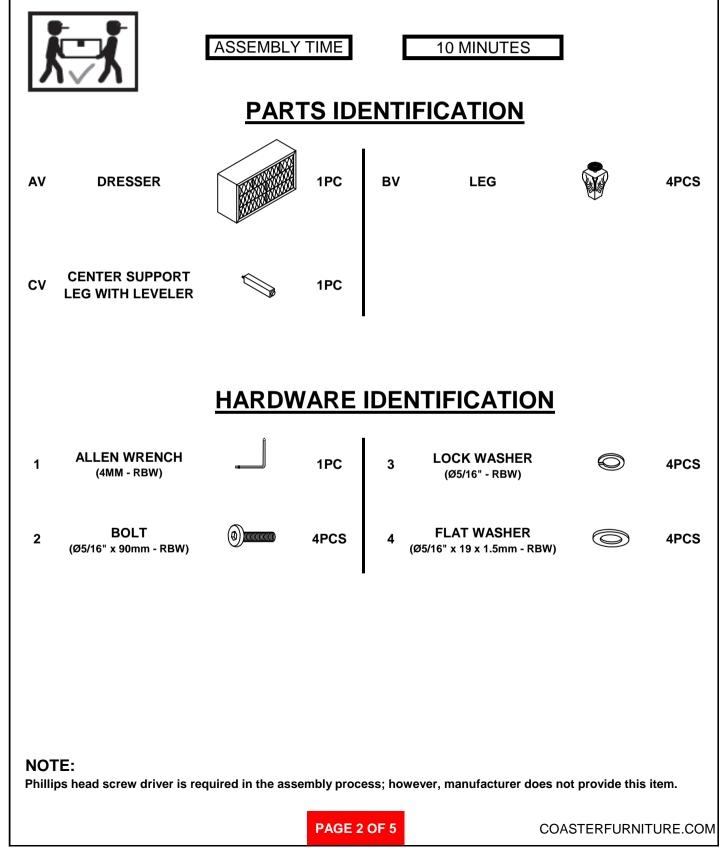




ASSEMBLY INSTRUCTIONS STEP 1

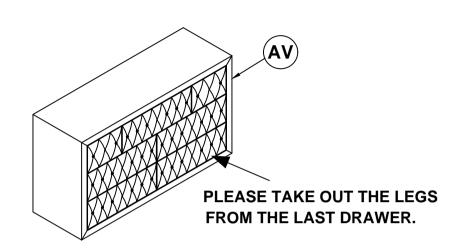


STEP 2

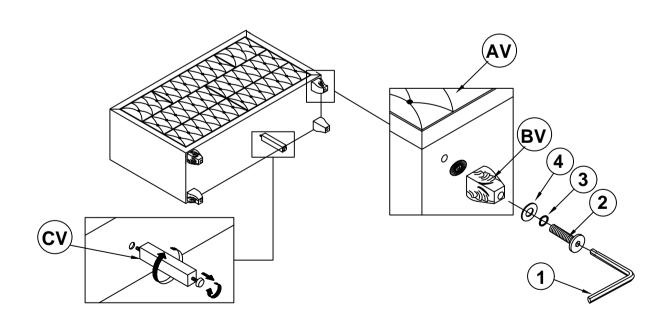




ASSEMBLY INSTRUCTIONS

STEP 3

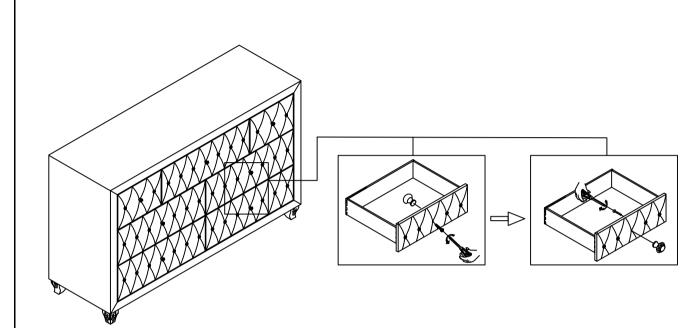

<u>STEP 4</u> COMPLETE

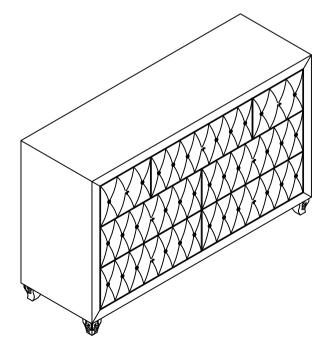







ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING


Injury may result from tipping furniture. This restraint may protect against tipping furniture.


Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
- 2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
- 3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
- 4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
- 5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
- 6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
- 7. To double lock return the beaded end back through the keyhole as shown.
- 8. Check to make sure the cable tie is securely laced and locked to the brackets.

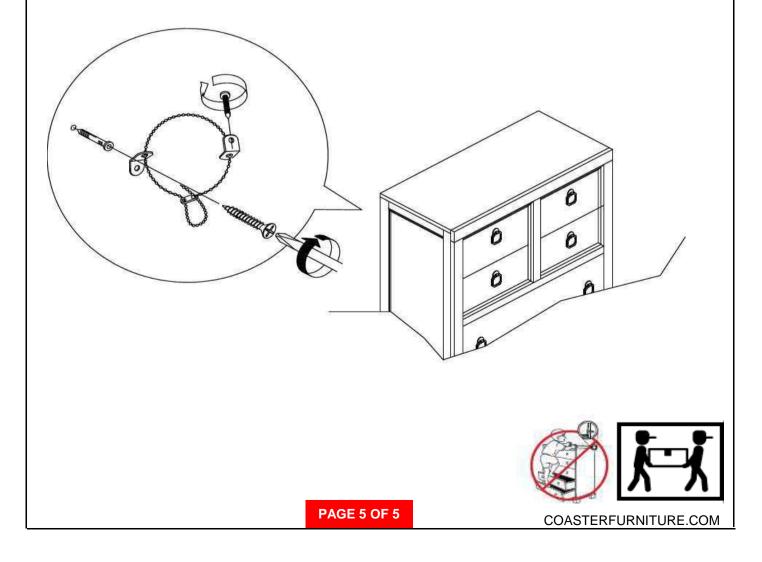

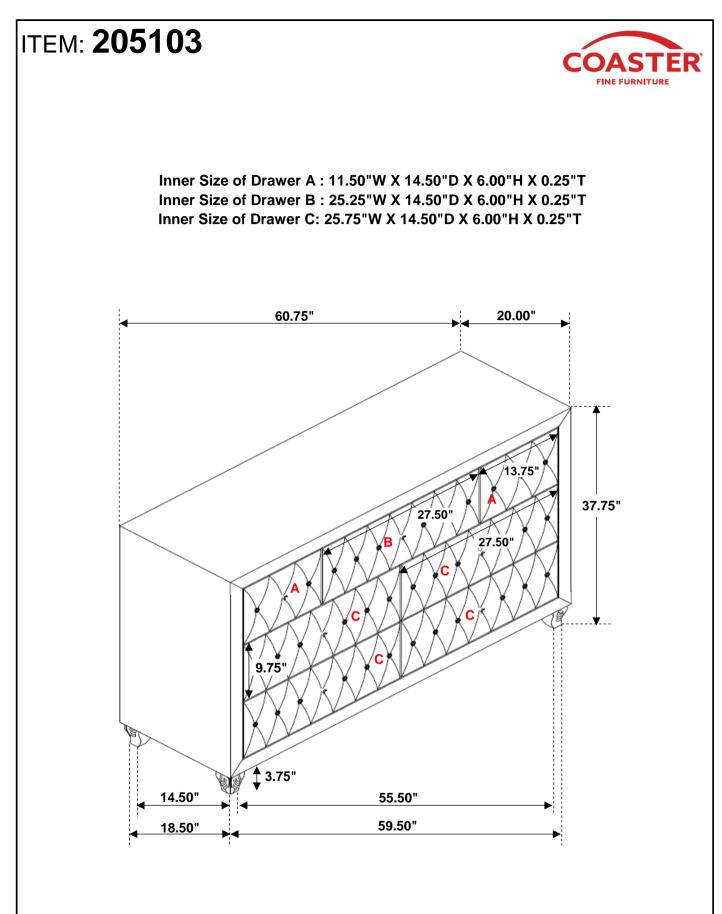

Note: Dimension tolerance ±5%

COASTERFURNITURE.COM