

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

215653
Dresser

ITEM: 215653



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


 


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

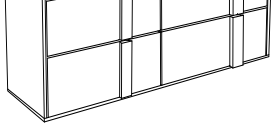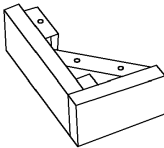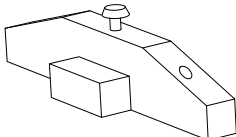A	DRESSER		1PC
B	LEFT LEG		2PCS
C	RIGHT LEG		2PCS
D	CENTER SUPPORT LEG WITH LEVELER		1PC

HARDWARE IDENTIFICATION

1	FLAT HEAD SCREW (M4 x 28mm - RBW)		16PCS
2	WOOD DOWEL (M6 x 30mm)		2PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **215653**




ASSEMBLY INSTRUCTIONS

STEP 1

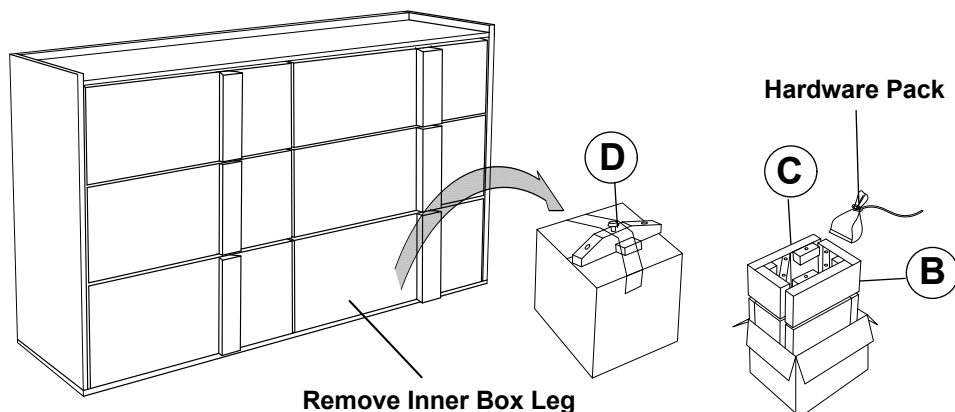

Remove Inner Box Leg

STEP 2

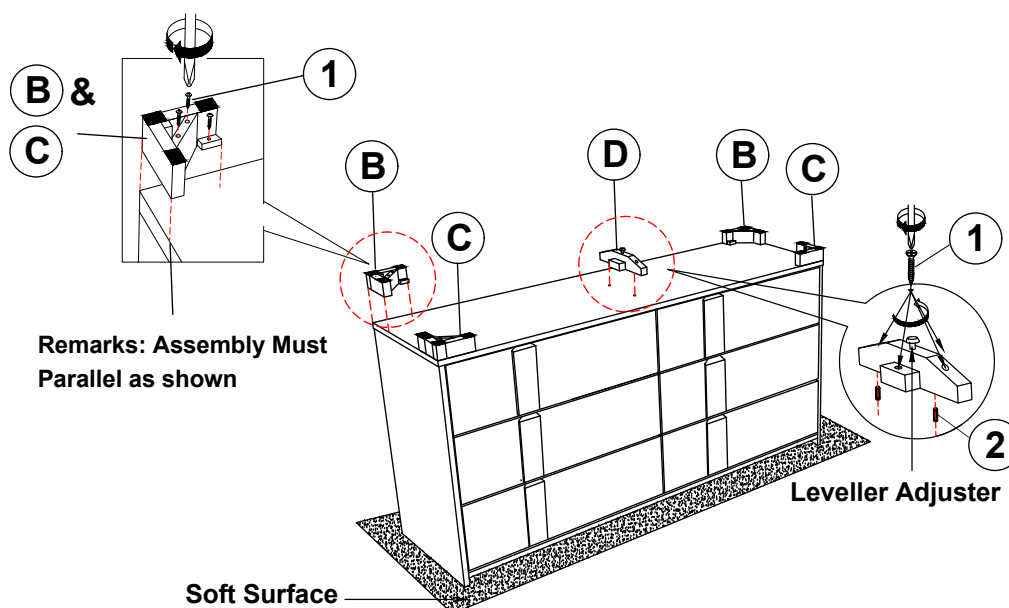


Remarks: Assembly Must Parallel as shown

Soft Surface

Leveller Adjuster


STEP 3 COMPLETE

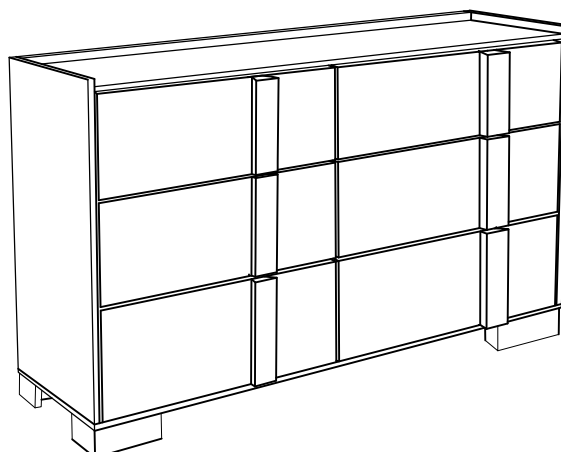

ITEM: **215653**



Inner Size of Drawer : 28.50"W x 11.00"D x 5.00"H x 0.25"T

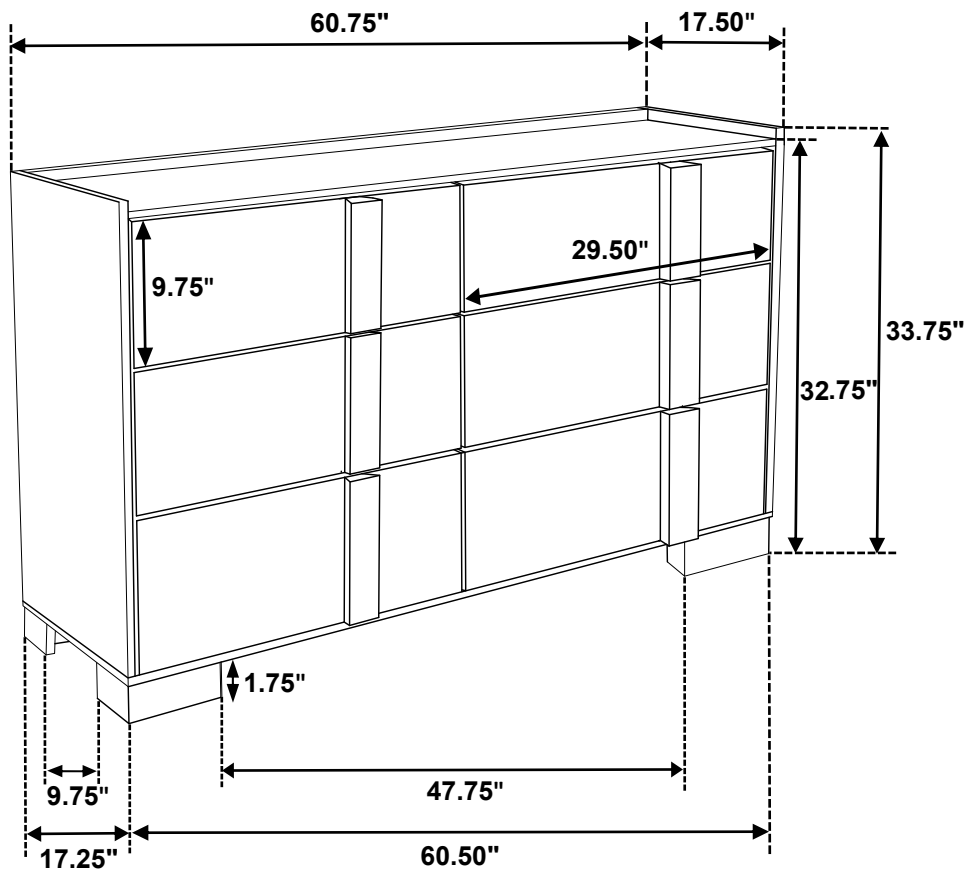

Note : Dimension tolerance $\pm 5\%$