

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

222520KE(B1-B3) Eastern King Bed

ASSEMBLY INSTRUCTIONS



COASTERFURNITURE.COM

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediatelly.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

<u>B1 (E</u>	<u>30X 1)</u>			
Α	HEADBOARD PANEL		1PC	
В	HEADBOARD BOTTOM RAIL		1PC	
С	FOOTBOARD		1PC	
D	CONCEAL PANEL		4PCS	
B2 (E	3OX 2)			
E	BED RAIL	SHE!	2PCS	
F	ROLL SLAT (10 PCS)		1SET	
G	CENTER RAIL		1PC	
Н	CENTER RAIL SUPPORT WITH LEVELER		4PCS	
B3 (BOX 3)				
I	LEFT HEADBOARD POST WITH LABEL "I"		1PC	
J	RIGHT HEADBOARD POST WITH LABEL "J"		1PC	
K	LEFT FOOTBOARD POST WITH LABEL "K"		1PC	
L	RIGHT FOOTBOARD POST WITH LABEL "L"		1PC	
M	CANOPY SHORT RAIL WITH LABEL "M"		2PCS	
N	CANOPY LONG RAIL WITH LABEL "N"		2PCS	

PAGE 2 OF 8

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediatelly.
- 2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 222520KE(B1)

1	LONG BOLT (5/16" x 50mm - BLK)	12PCS
2	LOCK WASHER (1.6 x 14mm - BLK)	12PCS
3	FLAT WASHER (2 x 19mm - BLK)	8PCS
4	CURVE WASHER (2 x 27mm - BLK)	4PCS
5	ALLEN WRENCH (M5 x 65mm - BLK)	1PC
6	WOOD DOWEL (10 x 40mm - BRW)	12PCS

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 222520KE(B2)


	(DOX Z) TIMILDITARE I A	TOTA TO LOCATED IN ELL	DEUTIL (DE)
2	LOCK WASHER (1.6 x 14mm - BLK)		4PCS
3	FLAT WASHER (2 x 19mm - BLK)		4PCS
7	SHORT BOLT (5/16" x 19mm - BLK)		4PCS
8	SHORT THREADED BOLT (5/16" x 80mm - WHT)		8PCS
9	HEX NUT (5/16" x 13mm - WHT)		8PCS
10	HALF ROUND NUT (22 x 17 x 10mm - WHT)	6	8PCS
11	WRENCH (13mm - WHT)		1PC
12	FLAT HEAD SCREW (8 x 32mm - BLK)	40000000 (£)	8PCS

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 222520KE(B3)

9	HEX NUT (5/16" x 13mm - WHT)	8PCS
10	HALF ROUND NUT (22 x 17 x 10mm - WHT)	8PCS
13	LONG THREADED BOLT	8PCS


NOTE:


Philips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

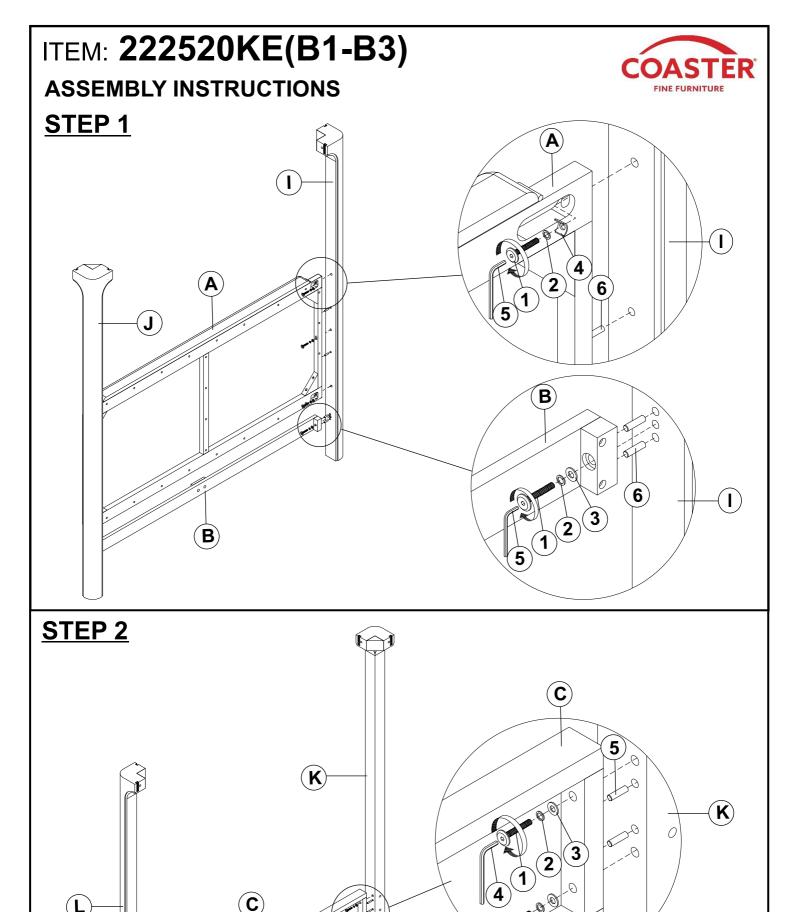


PAGE 4 OF 8


COASTERFURNITURE.COM

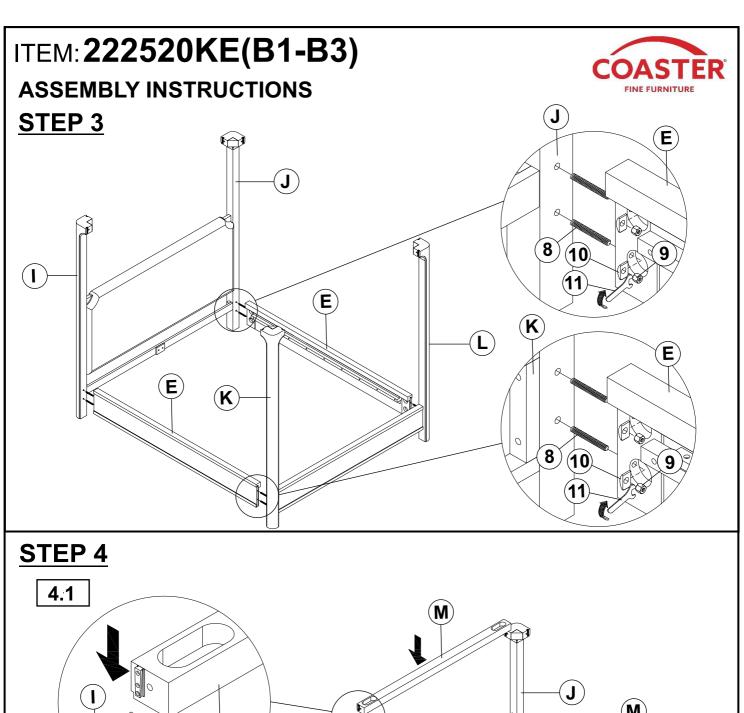

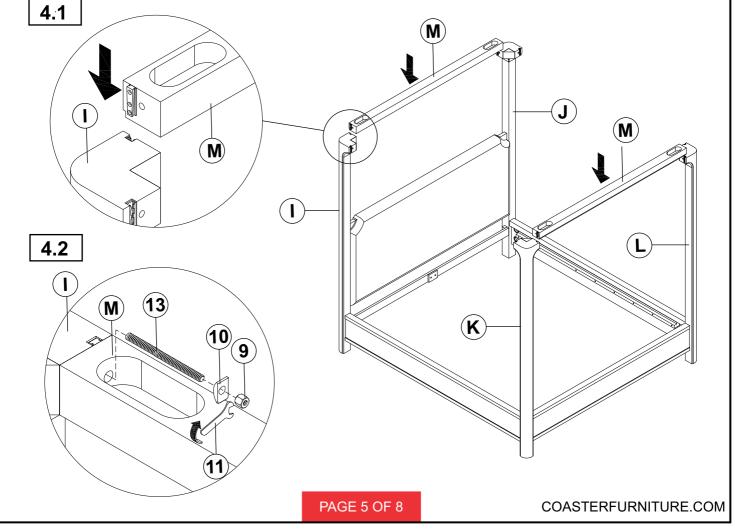

ITEM: **222520KE(B1-B3) ASSEMBLY INSTRUCTIONS** STEP 5 5.1 5.2 **13** K 10 9

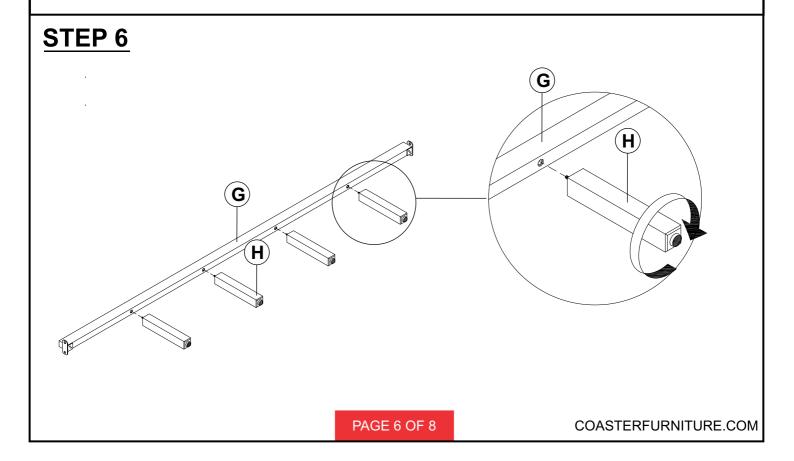

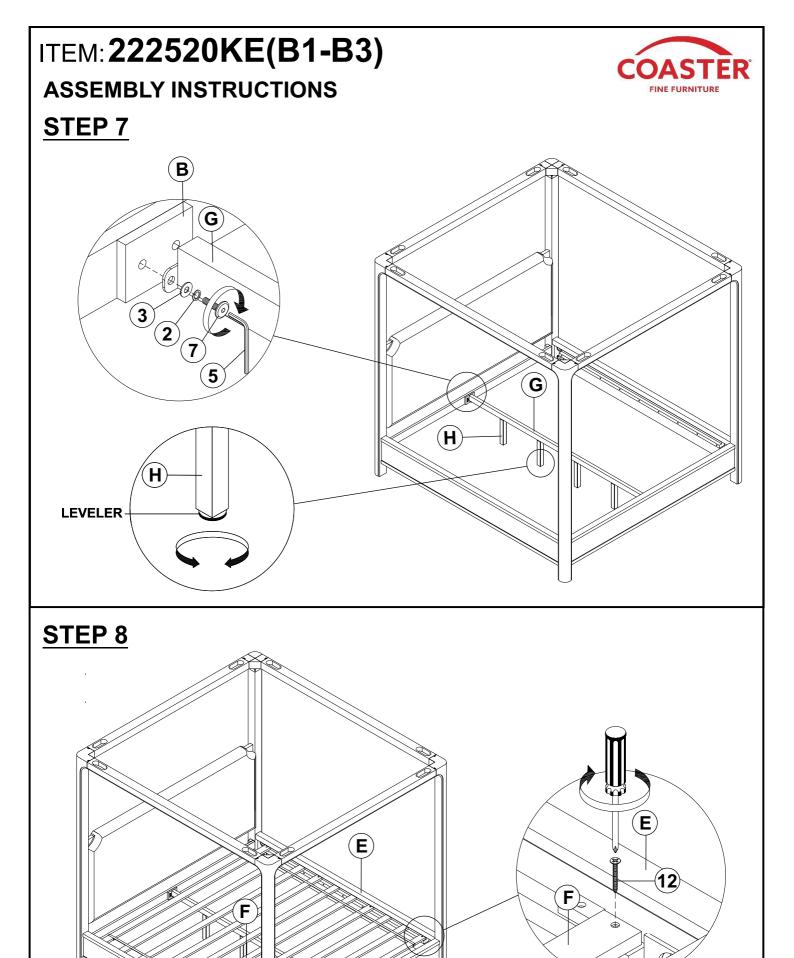


PAGE 7 OF 8 COASTERFURNITURE.COM


ASSEMBLY INSTRUCTIONS

STEP 9



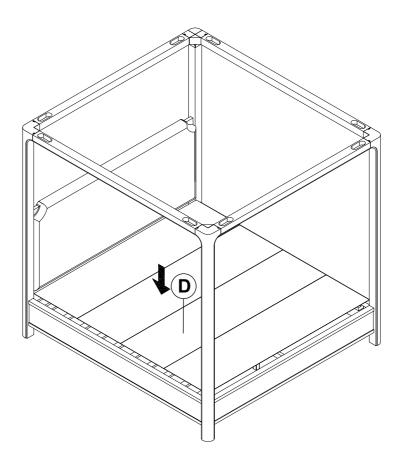


STEP 10 COMPLETE

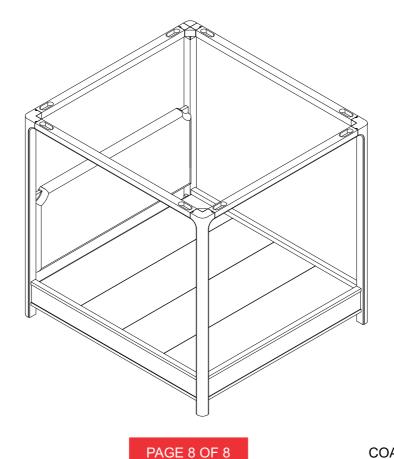





Inner Size: 77.00"W x 82.00"D

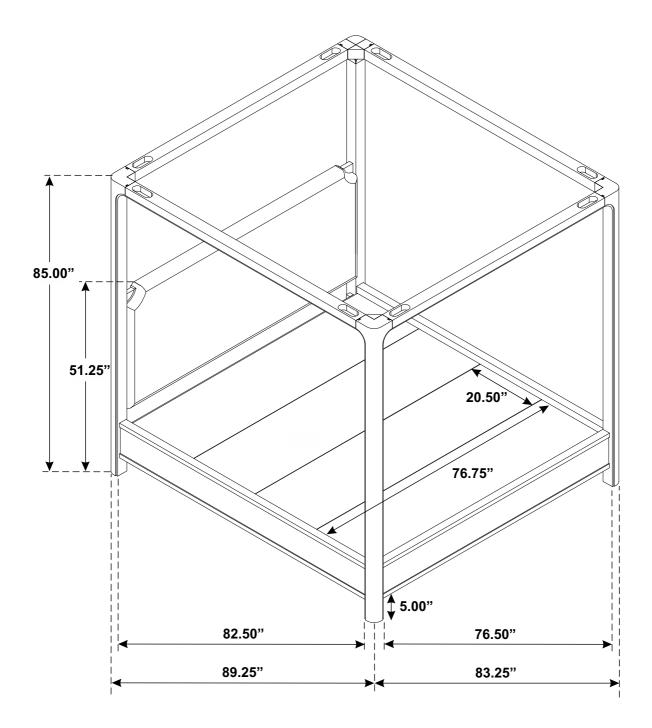



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

222522 Nightstand

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediatelly.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PART IDENTIFICATION


A NIGHTSTAND



1 PC

ASSEMBLY INSTRUCTIONS

STEP 1 COMPLETE

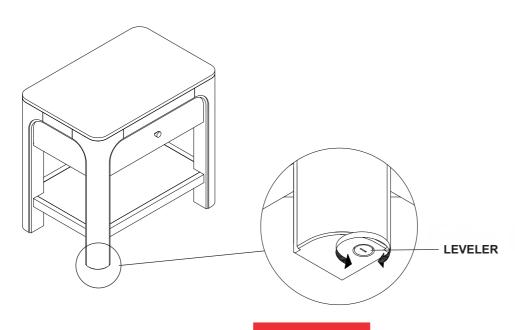




COASTERFURNITURE.COM

PAGE 2 OF 2



Inner Size of Drawer: 19.25"W x 12.75"D x 2.75"H x 0.50"T

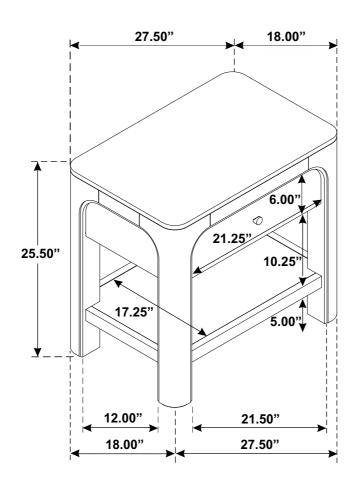



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

222523 <u>Dresser</u>

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediatelly.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PART IDENTIFICATION


A DRESSER



1 PC

ASSEMBLY INSTRUCTIONS

STEP 1 COMPLETE

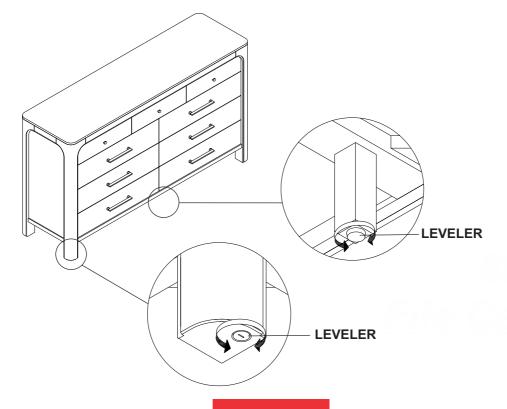



COASTERFURNITURE.COM

PAGE 2 OF 3



ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.


Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
- 2. Determine where the furniture is to be to placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
- 3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
- 4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
- 5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
- 6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end untill snug. Pull down on the beaded end until it snap locks into the keyhole slot.
- 7. To double lock return the beaded end back through the keyhole as shown.
- 8. Check to make sure the cable tie is securely laced and locked to the brackets.

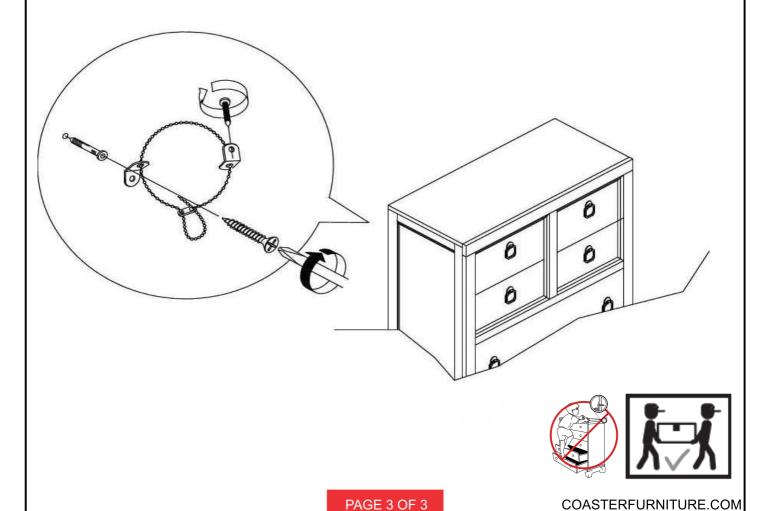



Inner Size of Drawer A: $18.50\text{"W} \times 12.75\text{"D} \times 3.25\text{"H} \times 0.50\text{"T}$ Inner Size of Drawer B: $18.00\text{"W} \times 12.75\text{"D} \times 3.25\text{"H} \times 0.50\text{"T}$ Inner Size of Drawer C: $29.25\text{"W} \times 12.75\text{"D} \times 5.50\text{"H} \times 0.50\text{"T}$

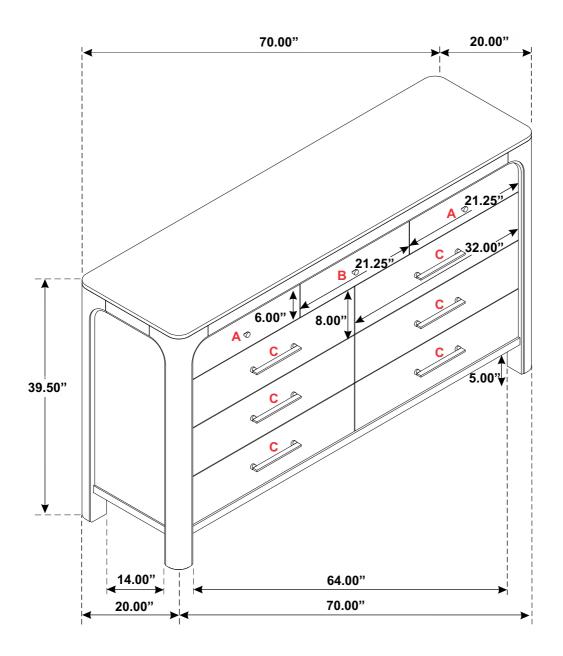



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

222524 *Mirror*

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediatelly.
- 2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

PART IDENTIFICATION

A DRESSER *FROM BOX ITEM 222523*

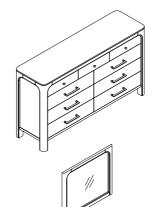

1PC

B MIRROR

1PC

C MIRROR SUPPORT (PACKED WITH MIRROR)

ALLEN WRENCH (M5 x 65mm - BLK)



2PCS

HARDWARE IDENTIFICATION

1 BOLT (5/16" x 35mm - BLK) 8PCS
2 LOCK WASHER (1.6 x 14mm - BLK) 8PCS
3 FLAT WASHER (2 x 19mm - BLK) 8PCS

