

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

223324
Mirror

ITEM: **223324**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!



- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

A **DRESSER
FROM BOX
ITEM 223323**

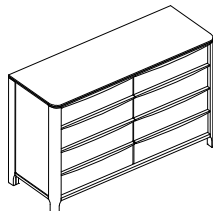


1PC

C **MIRROR SUPPORT
(PACKED WITH
DRESSER)**



2PCS

B **MIRROR**

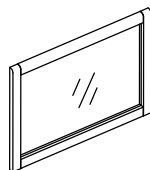

1PC

HARDWARE IDENTIFICATION

1 **BOLT**
(1/4" x 32mm - RBW)



6PCS

3 **FLAT WASHER**
(1/4" x 19 x 1.5mm - RBW)



6PCS

2 **LOCK WASHER**
(1/4" - RBW)



6PCS

4 **ALLEN WRENCH**
(74*30*4mm - RBW)




1PC

ITEM: **223324**



ASSEMBLY INSTRUCTIONS

STEP 1

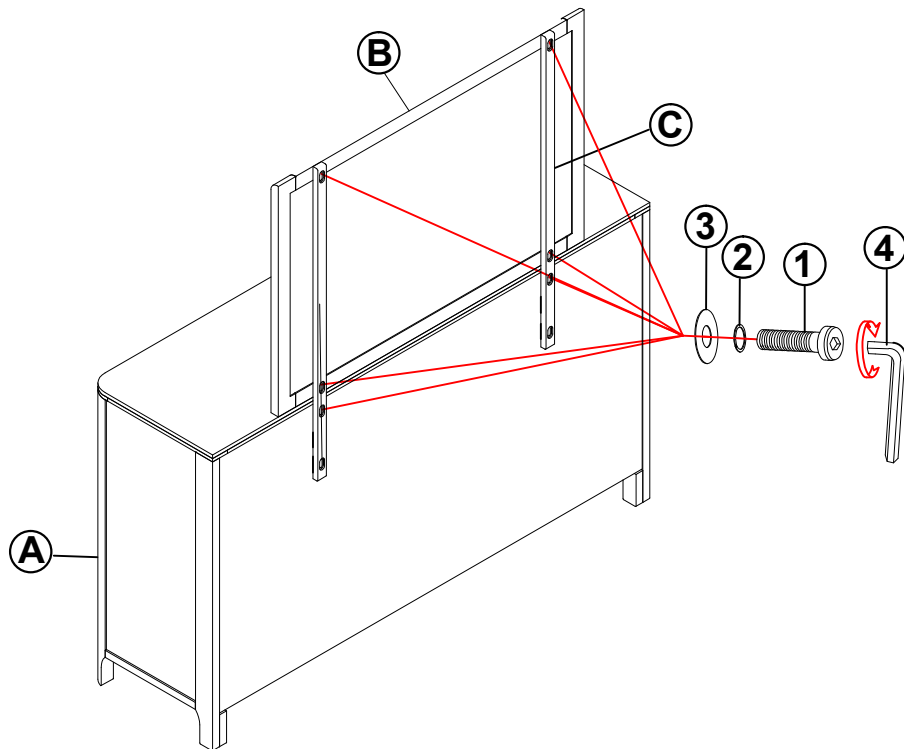


BACK VIEW

STEP 2 **COMPLETE**

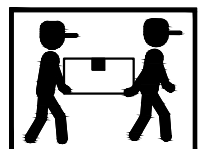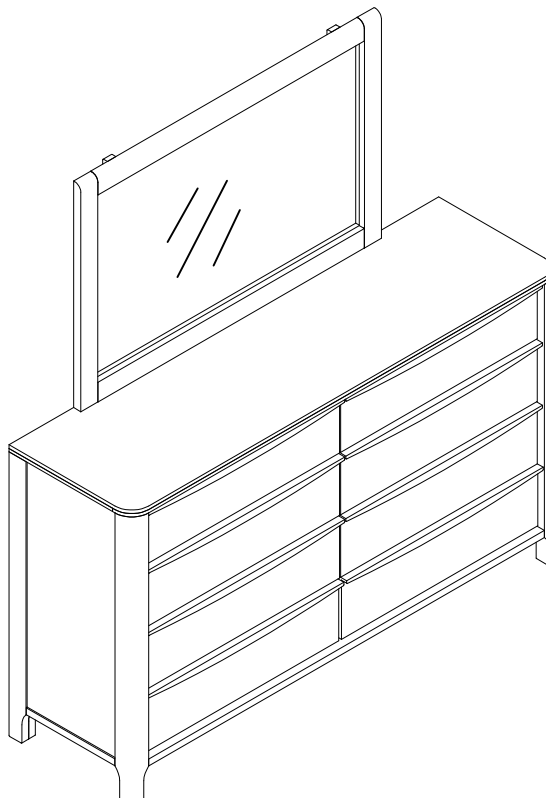

ITEM: **223324**

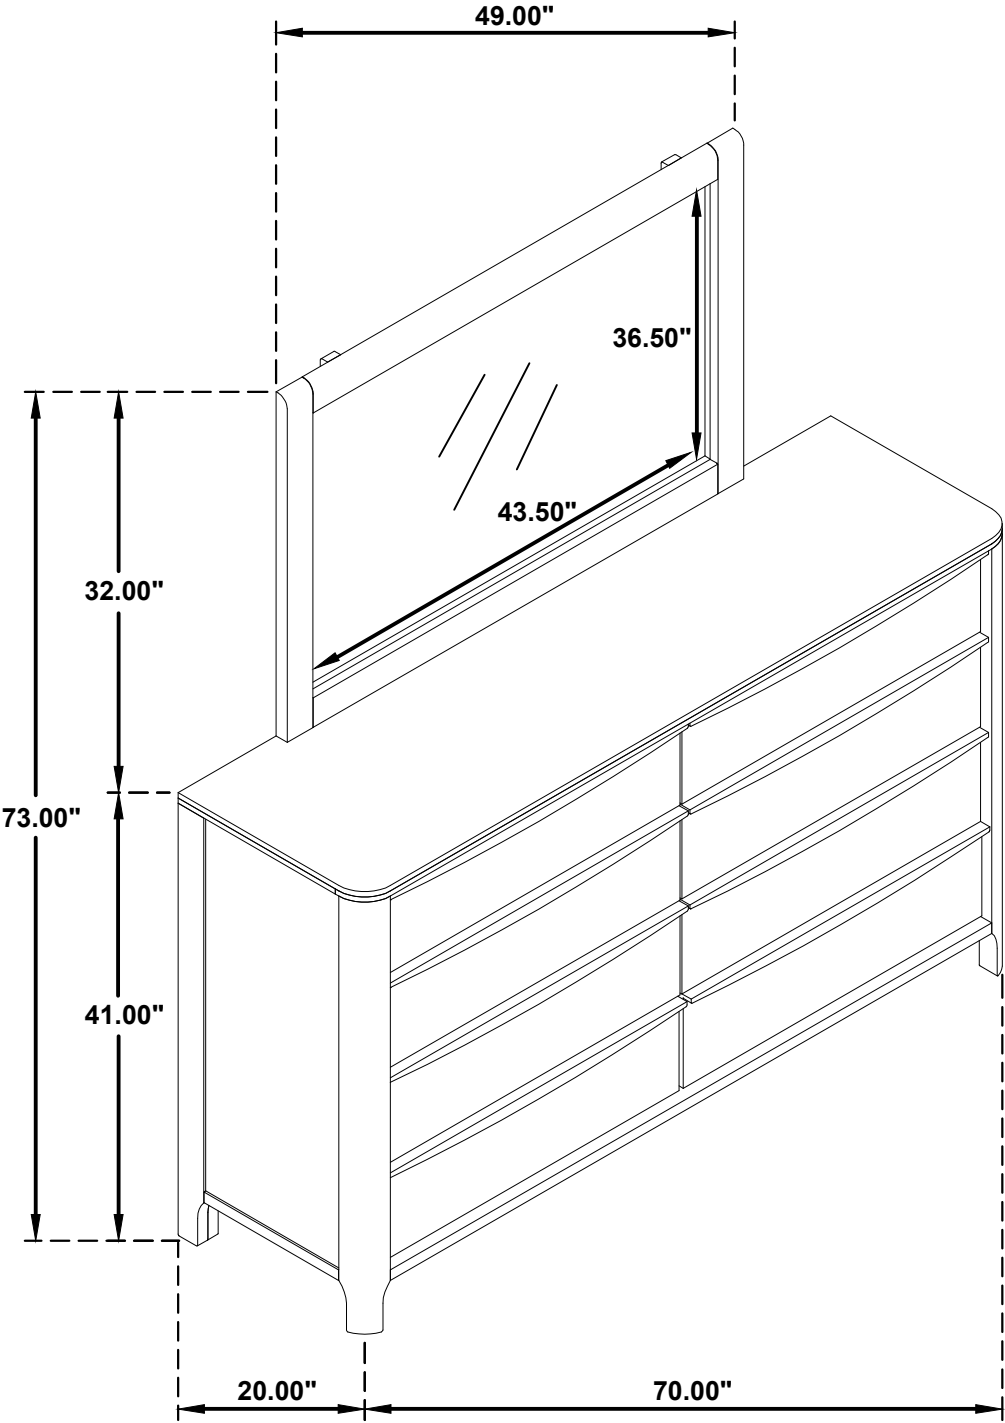

Note : Dimension tolerance $\pm 5\%$