

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

223391Q (B1-B3) Queen Bed

REVISION 0 : 05/30/2022 REVISION 1 : 10/10/2022 REVISION 2 : 09/21/2023

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A HEADBOARD PANEL



1PC

B HEADBOARD BOTTOM RAIL



1PC

C RIGHT HEADBOARD LEG



1PC

LEFT D HEADBOARD LEG



1PC

B2 (BOX 2)

E FOOTBOARD



1PC

F RIGHT FOOTBOARD LEG



1PC

G FOOTBOARD LEG



1PC

B3 (BOX 3)

H BED RAIL



2PCS

I CENTER RAIL SUPPORT WITH LEVELER



3PCS

J ROLL SLAT (11PCS)



1SET

K CENTER RAIL



1PC

223391Q (B1)
FROM BOX 1
HB HEADBOARD
COMPLETE



1PC

223391Q (B2) FB FROM BOX 2 FOOTBOARD



1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS



- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

\triangle

WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 223391 Q (B1)

1	BOLT (Ø5/16" x 45MM- RBW)	10PCS	2	LOCK WASHER (Ø5/16" - RBW)	10PCS
3	FLAT WASHER (ø5/16" - RBW)	10PCS	4	ALLEN WRENCH (4MM - RBW)	1PC

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 223391Q(B2)

5	BOLT (Ø5/16" x 55MM- RBW)	4PCS	6	LOCK WASHER (Ø5/16" - RBW)	4PCS
7	FLAT WASHER (Ø5/16" - RBW)	4PCS	8	ALLEN WRENCH (4MM - RBW)	1PC

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 223391Q (B3)

9	THREADED BOLT (Ø 5/16" x 90MM - RBW)	8PCS	10	HALF ROUND NU (Ø5/16" - RBW)	T (EOE)	8PCS
11	HEX NUT (Ø5/16" x 14MM - RBW)	8PCS	12	WRENCH (14MM - RBW)		1PC
13	FLAT HEAD SCREW (Ø4 x 30MM - RBW)	12PCS				


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ASSEMBLY INSTRUCTIONS

STEP 1



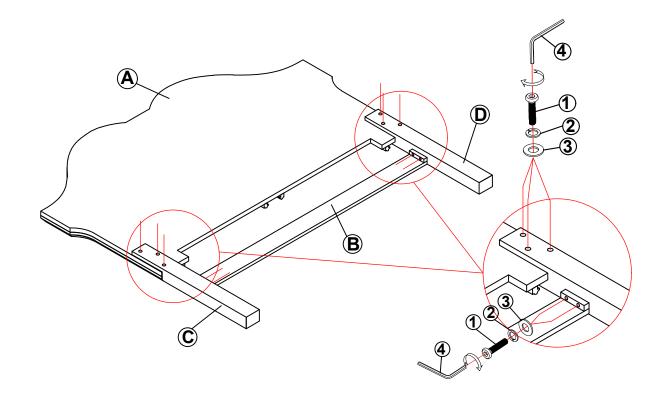

STEP 2

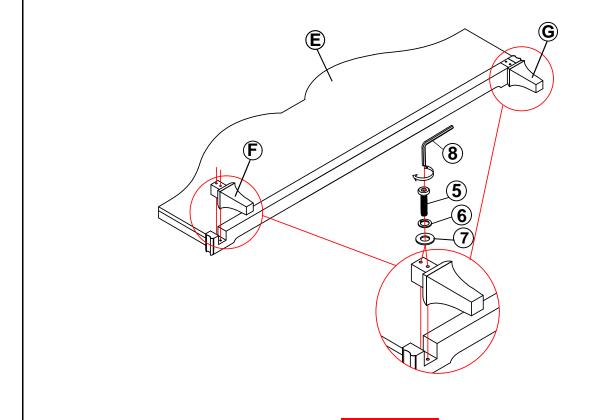


PAGE 4 OF 6


ITEM: **223391Q(B1-B3)**ASSEMBLY INSTRUCTIONS





STEP 3

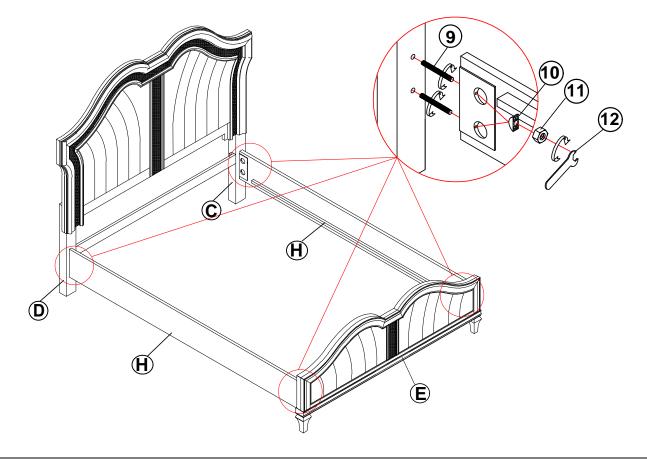

STEP 4

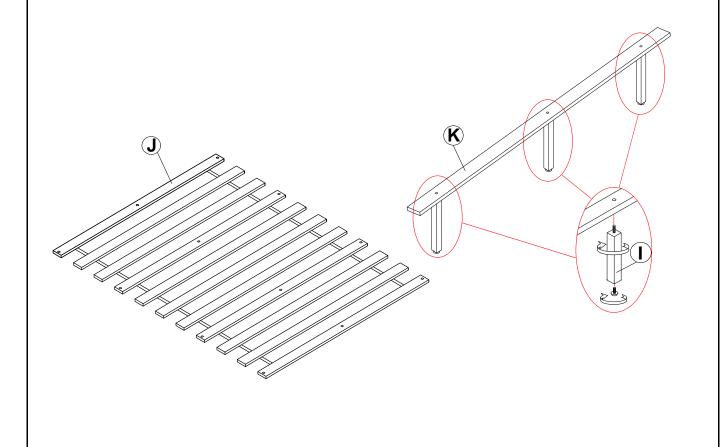


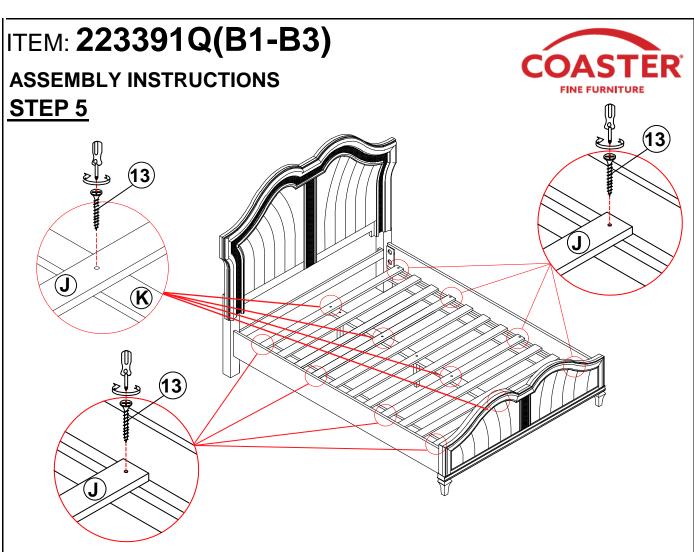

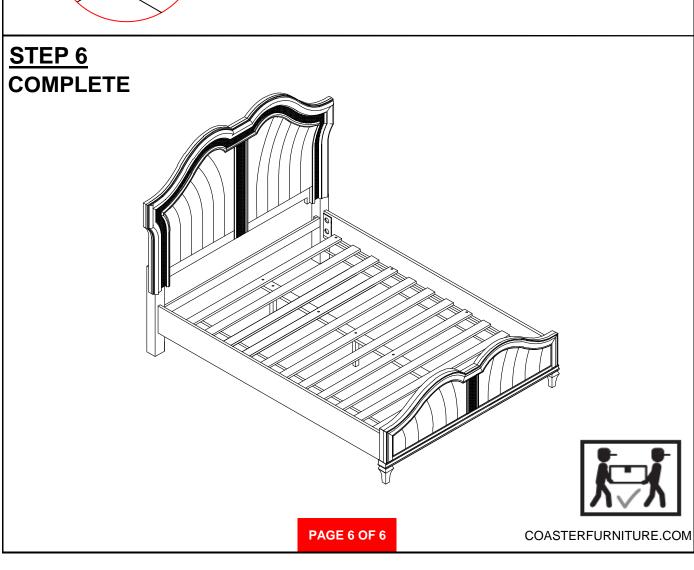




Inner Size: 81.50"W X 61.00"D

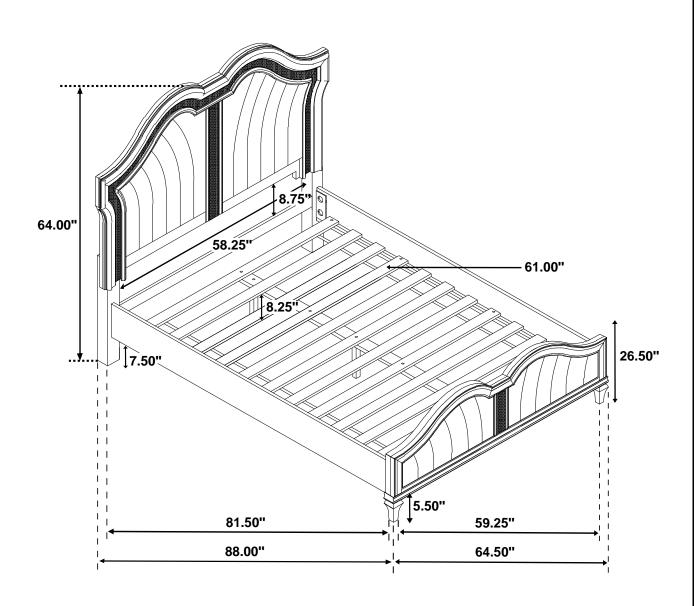



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

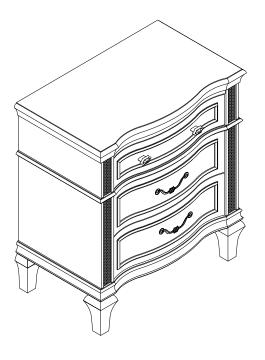

Fine Furniture for every stage of life

223392 Nightstand

REVISION 0 : 05/30/2022 REVISION 1 : 10/10/2022

PAGE 1 OF 4

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND



1PC

FRONT LEG



2PCS

C RIGHT BACK LEG



1PC

D LEFT BACK LEG



1PC

HARDWARE IDENTIFICATION

1 BOLT (Φ5/16" x 60mm - RBW)



8PCS

2 LOCK WASHER (Φ5/16" - RBW)



8PCS

3 FLAT WASHER (Φ5/16" - RBW)



8PCS


4 ALLEN WRENCH (4MM - RBW)




1PC

ITEM: 223392 ASSEMBLY INSTRUCTIONS STEP 1



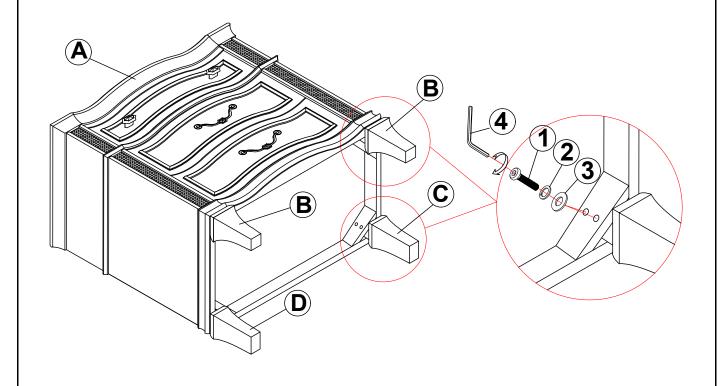

STEP 2 COMPLETE

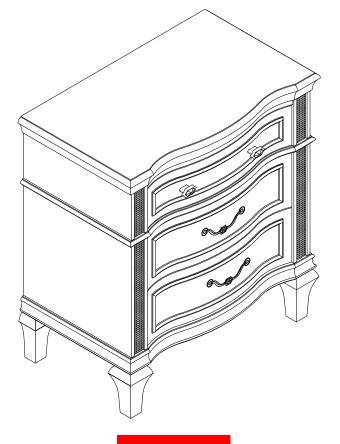





ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
- 2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
- 3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
- 4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
- 5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
- 6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
- 7. To double lock return the beaded end back through the keyhole as shown.
- 8. Check to make sure the cable tie is securely laced and locked to the brackets.

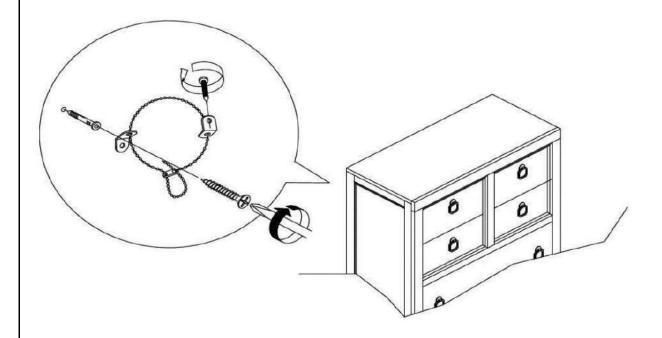








Inner Size of Drawer A: 20.50"W X 13.25"D X 3.25"H X 0.50"T Inner Size of Drawer B: 20.50"W X 13.25"D X 4.75"H X 0.50"T

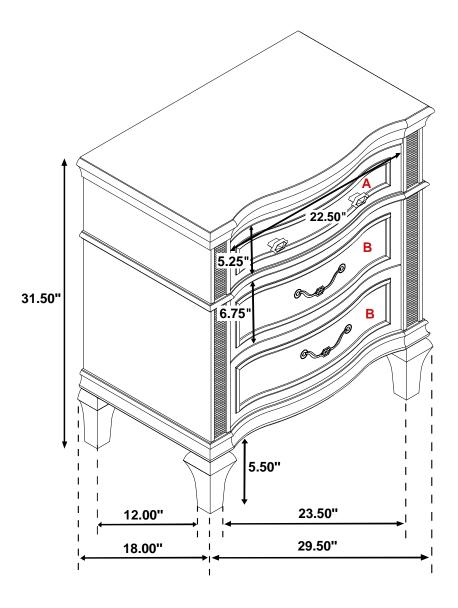



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

223393Dresser

REVISION 0: 05/30/2022 REVISION 1: 10/10/2022

PAGE 1 OF 4

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A DRESSER



1PC

B FRONT LEG



2PCS

C RIGHT BACK LEG



1PC

D LEFT BACK LEG



1PC

E CENTER SUPPORT LEG
WITH LEVELER



1PC

HARDWARE IDENTIFICATION

1 BOLT (Φ5/16" x 60mm - RBW)



8PCS

LOCK 2 WASHER (Φ5/16" - RBW)



8PCS

3 FLAT WASHER (Φ5/16" - RBW)



8PCS


ALLEN 4 WRENCH (4MM - RBW)

1PC

ITEM: 223393 ASSEMBLY INSTRUCTIONS

COASTER

STEP 1

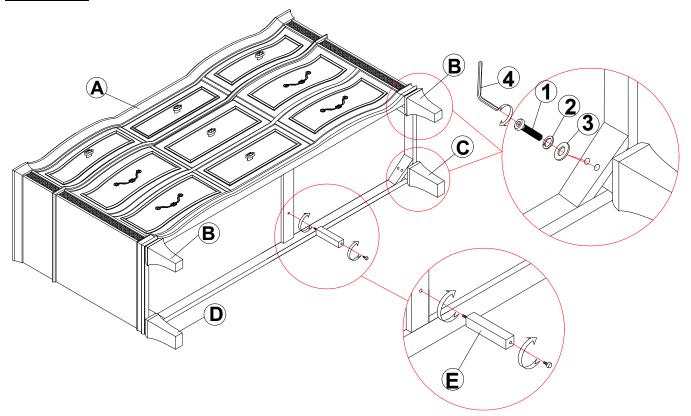

STEP 2 COMPLETE



K



ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
- 2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
- 3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
- 4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
- 5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
- 6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
- 7. To double lock return the beaded end back through the keyhole as shown.
- 8. Check to make sure the cable tie is securely laced and locked to the brackets.

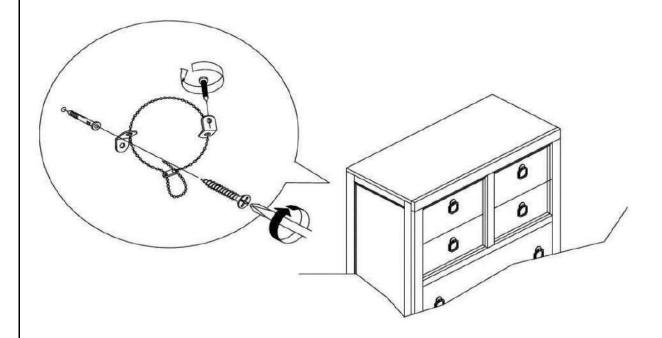









Inner Size of Drawer A: 20.50"W X 14.25"D X 4.75"H X 0.50"T Inner Size of Drawer B: 15.00"W X 13.00"D X 4.75"H X 0.50"T Inner Size of Drawer C: 20.50"W X 14.25"D X 7.00"H X 0.50"T Inner Size of Drawer D: 15.00"W X 13.00"D X 7.00"H X 0.50"T

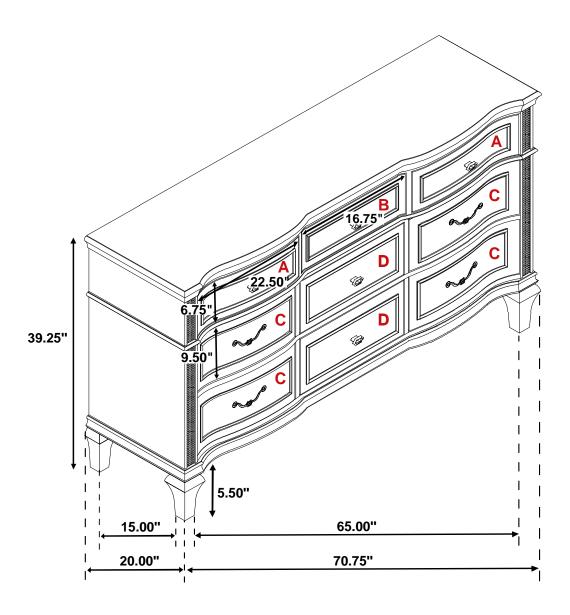



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

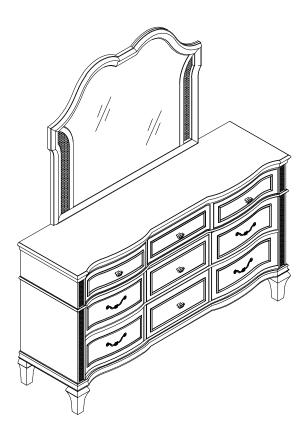

Fine Furniture for every stage of life

223394 *Mirror*

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

DRESSER
A FROM BOX
ITEM #223393



1PC

8 MIRROR



1PC

MIRROR SUPPORT C (PACKED WITH DRESSER)



2PCS

HARDWARE IDENTIFICATION

1 BOLT (Φ1/4" x 38mm - RBW)



6PCS

LOCK WASHER (Φ1/4" - RBW)



6PCS

3 FLAT WASHER (Φ1/4" - RBW)




6PCS


4 ALLEN WRENCH (4MM - RBW)



1PC

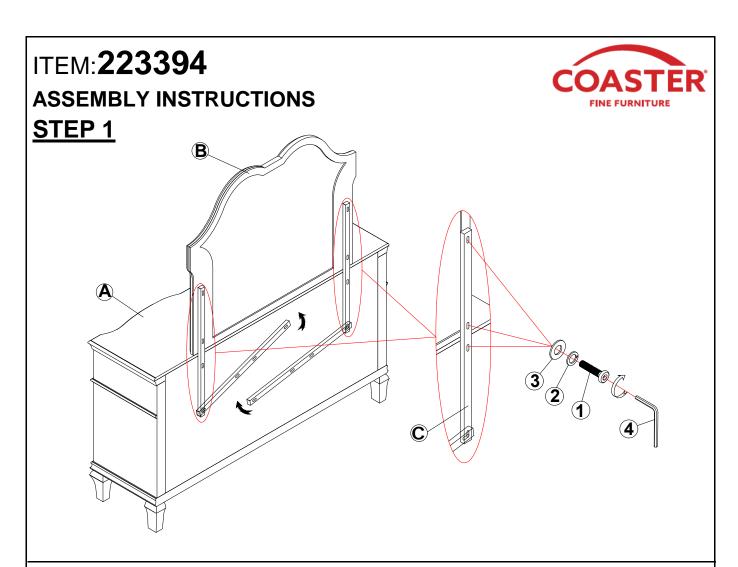



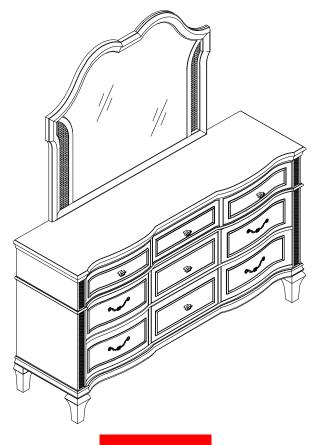

ELIPNITURE COL

PAGE 3 OF 3



