


ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

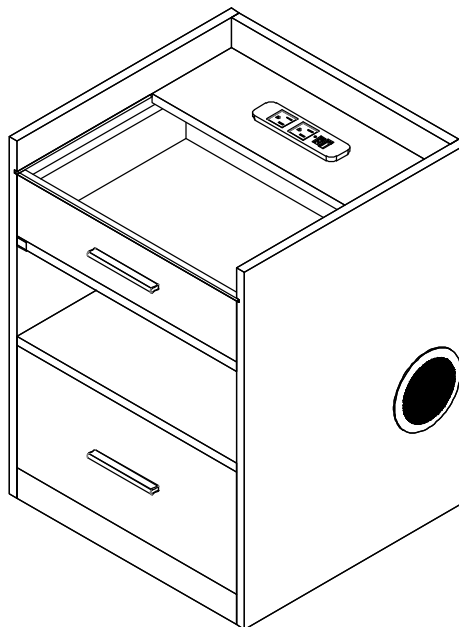

BLUETOOTH NAME: AW100

306132BLK
NIGHTSTAND

ITEM:306132BLK



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME 15 MINUTES

PARTS IDENTIFICATION

A


NIGHTSTAND

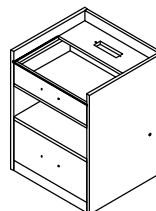

1PC

B

 
HANDLE



2PCS

C


POWER OUTLET

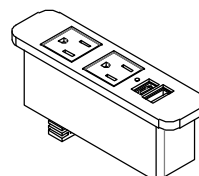

1PC

D


LED POWER ADAPTER

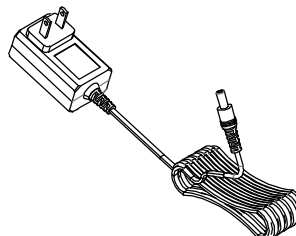

1PC

E

POWER ADAPTER

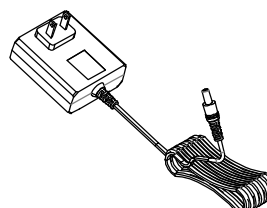

1PC

ITEM:306132BLK

ASSEMBLY INSTRUCTIONS




Z

HARDWARE IDENTIFICATION

1	BOLT (5/32" x 22mm)		4PCS	3	ALLEN WRENCH (4mm)		1PC
2	SCREW		2PCS				

STEP 1

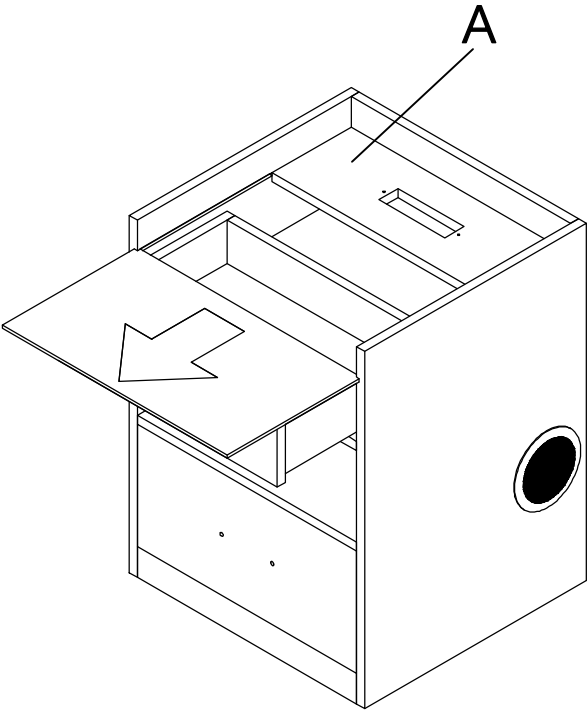


ITEM:306132BLK




ASSEMBLY INSTRUCTIONS


STEP 2

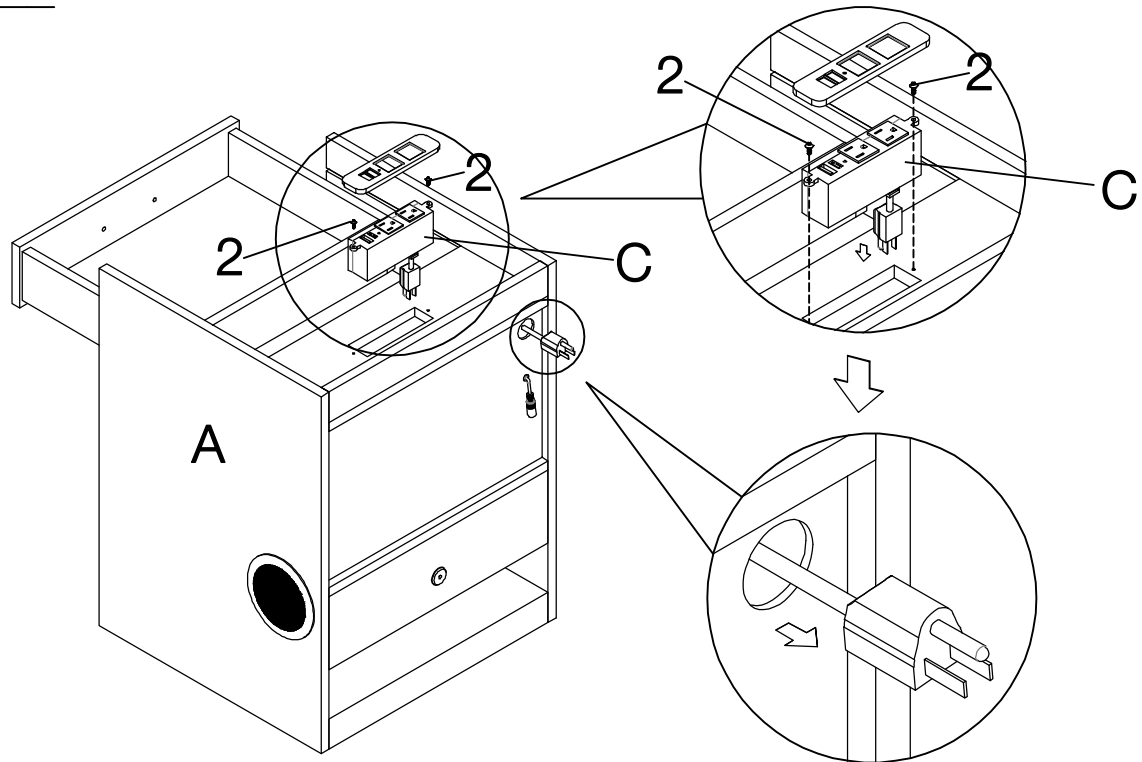


STEP 3

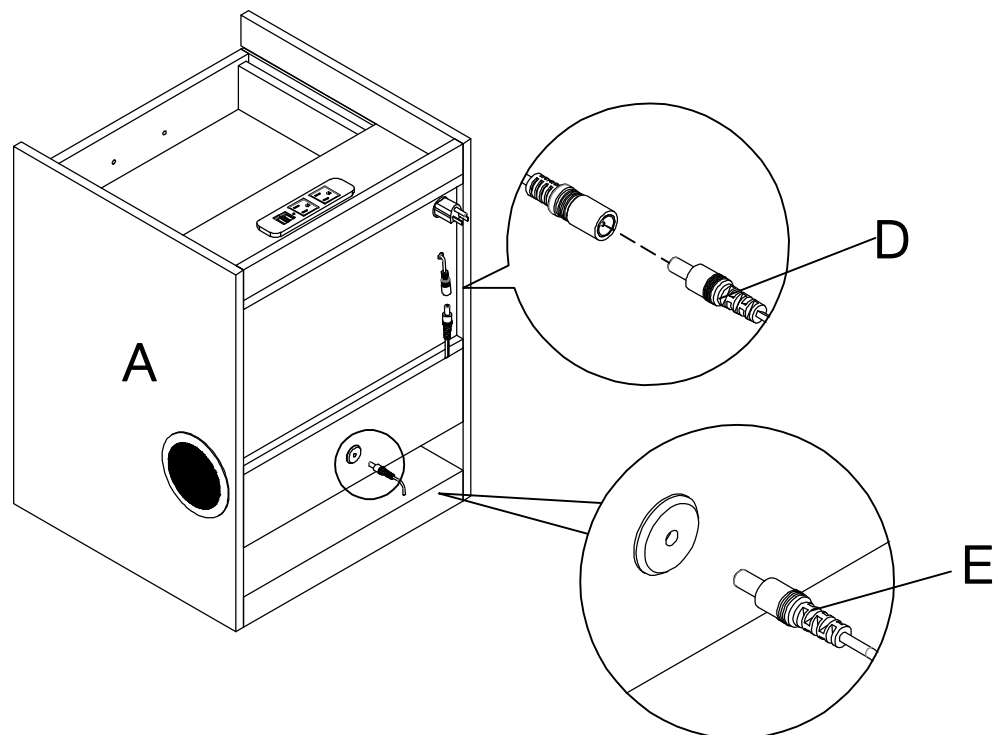

ITEM: 306132BLK
ASSEMBLY INSTRUCTIONS
STEP 4

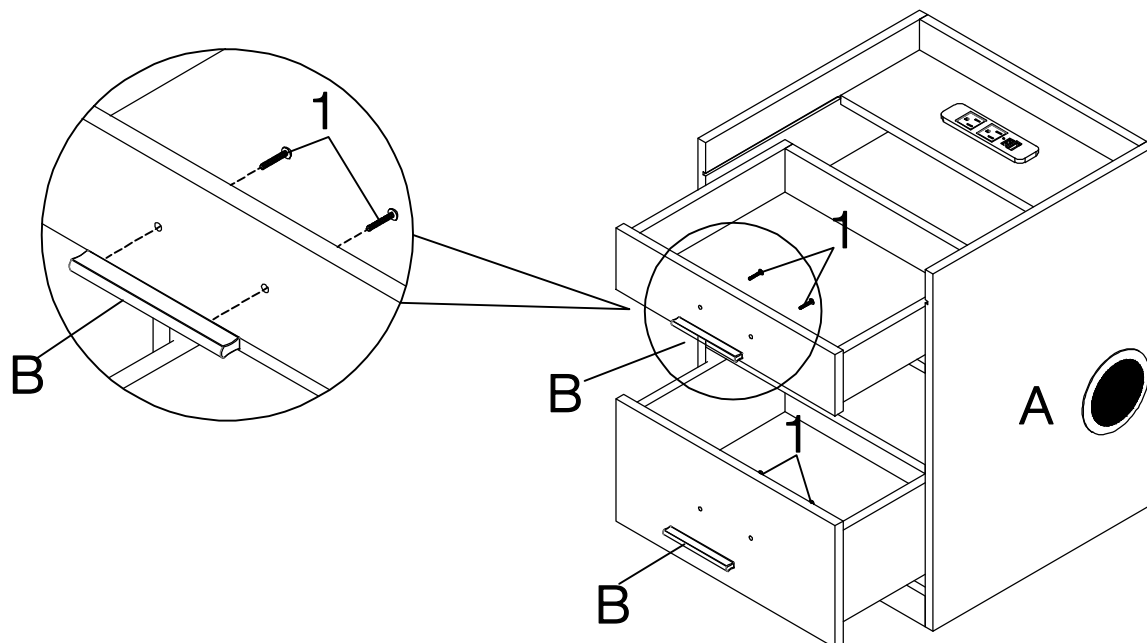

STEP 5
COMPLETE

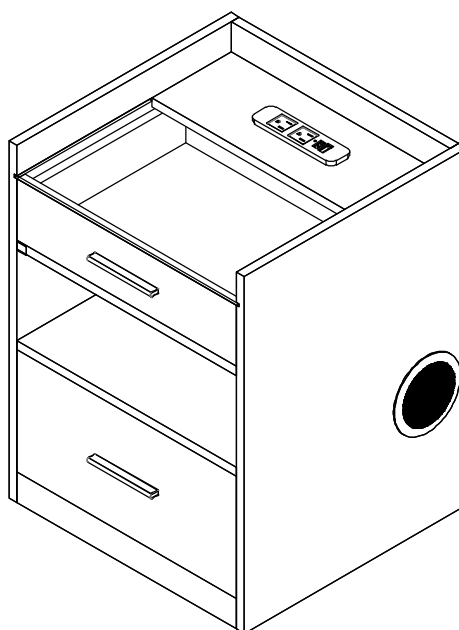

ITEM:306132BLK ASSEMBLY INSTRUCTIONS

