


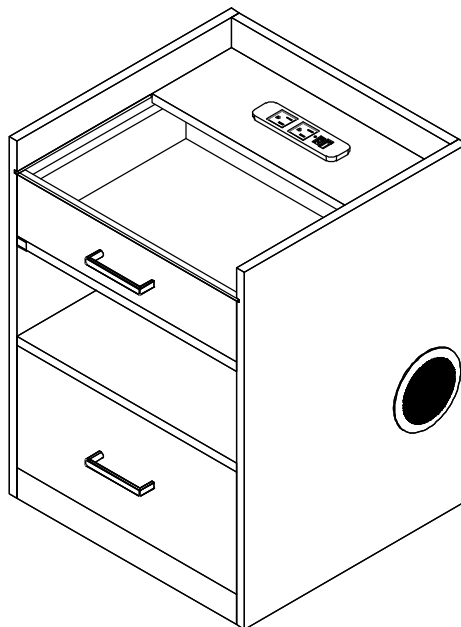

ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life



BLUETOOTH NAME: AW100

306132WHT
NIGHTSTAND

REVISION 0 : 08/19/2026

PAGE 1 OF 6

COASTERFURNITURE.COM

ITEM:306132WHT

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME 15 MINUTES


PARTS IDENTIFICATION

A NIGHTSTAND

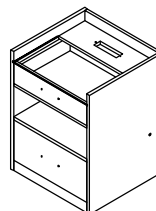


1PC

B HANDLE

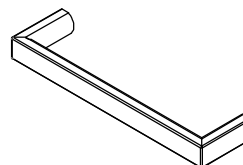


2PCS

C POWER OUTLET

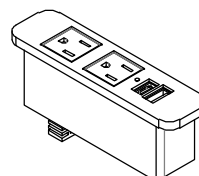


1PC

D LED POWER ADAPTER

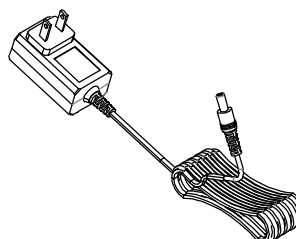

1PC

E POWER ADAPTER

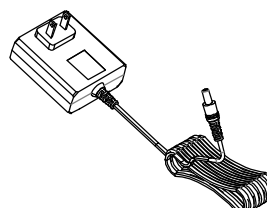

1PC

ITEM:306132WHT

ASSEMBLY INSTRUCTIONS



Z

HARDWARE IDENTIFICATION

1 BOLT
(5/32" x 22mm) 4PCS




3 ALLEN WRENCH
(4mm) 1PC




2 SCREW 2PCS




STEP 1

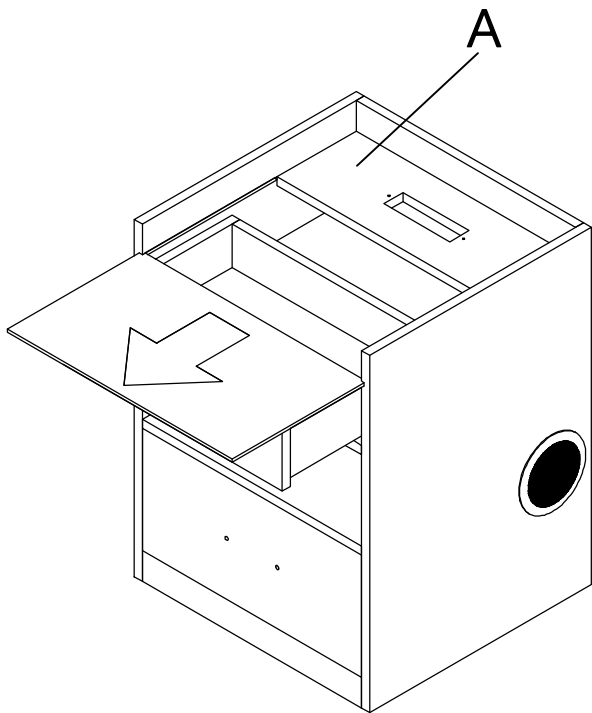


ITEM:306132WHT
ASSEMBLY INSTRUCTIONS
STEP 2

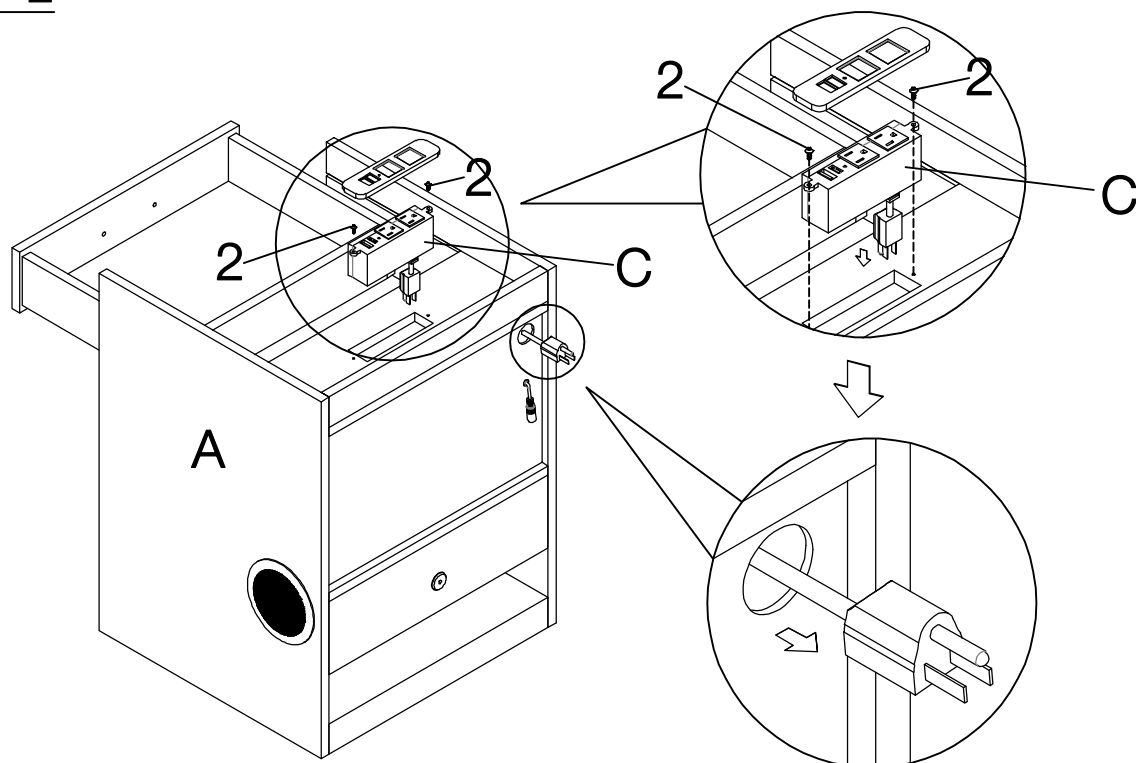


STEP 3

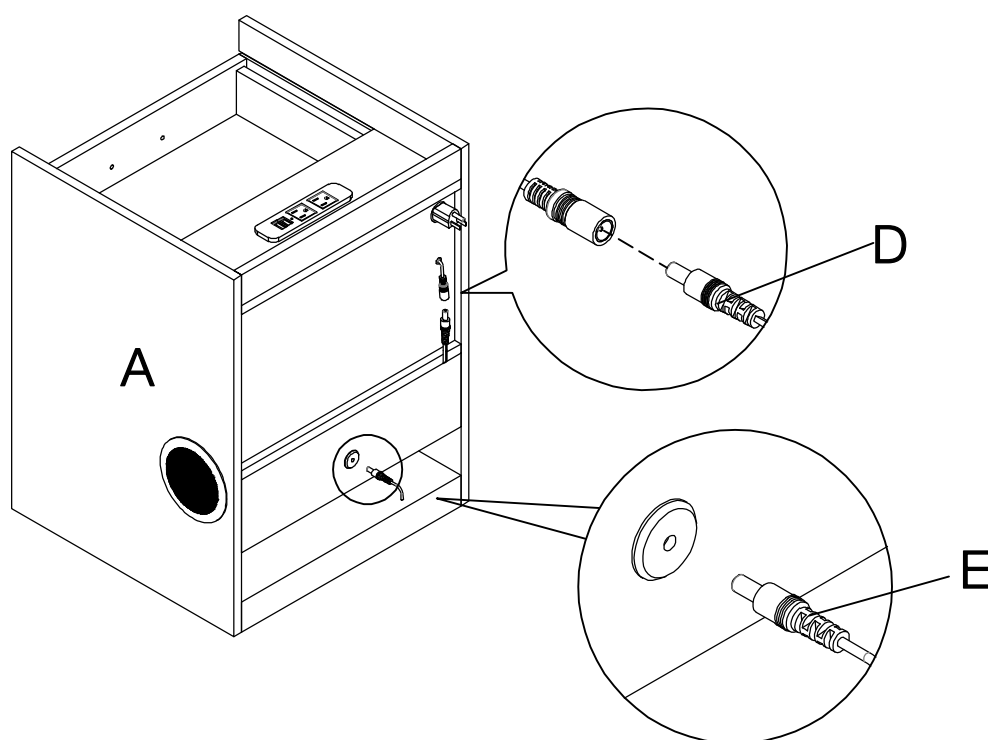

ITEM: 306132WHT
ASSEMBLY INSTRUCTIONS
STEP 4

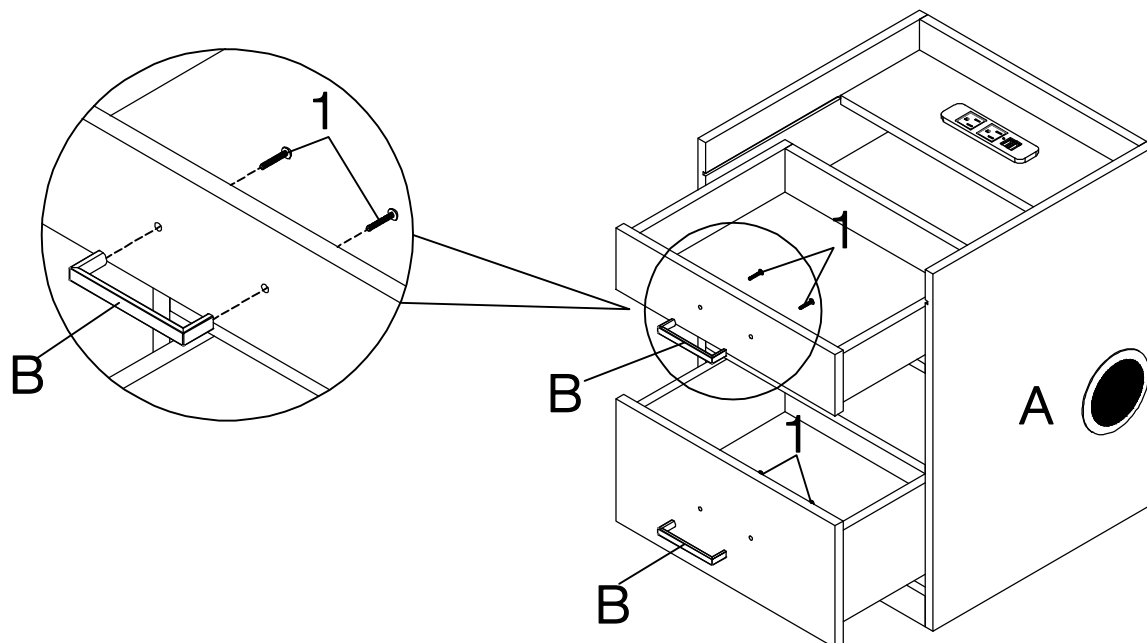

STEP 5
COMPLETE

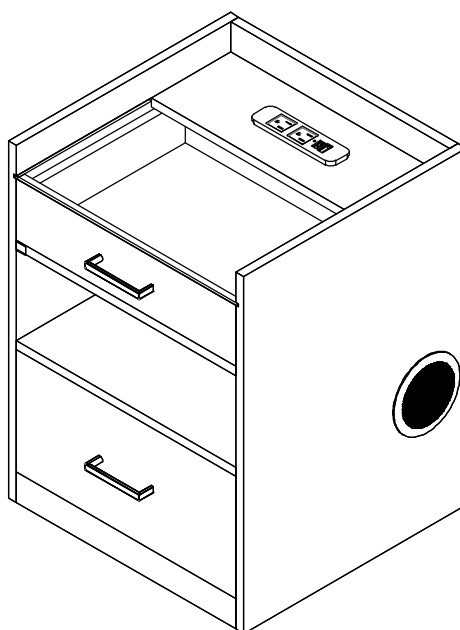

ITEM: 306132WHT

ASSEMBLY INSTRUCTIONS

