

*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

315901Q
QUEEN HEADBOARD

ITEM:315901Q

ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

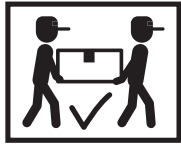

ASSEMBLY TIME

30 MINUTES

 PARTS IDENTIFICATION

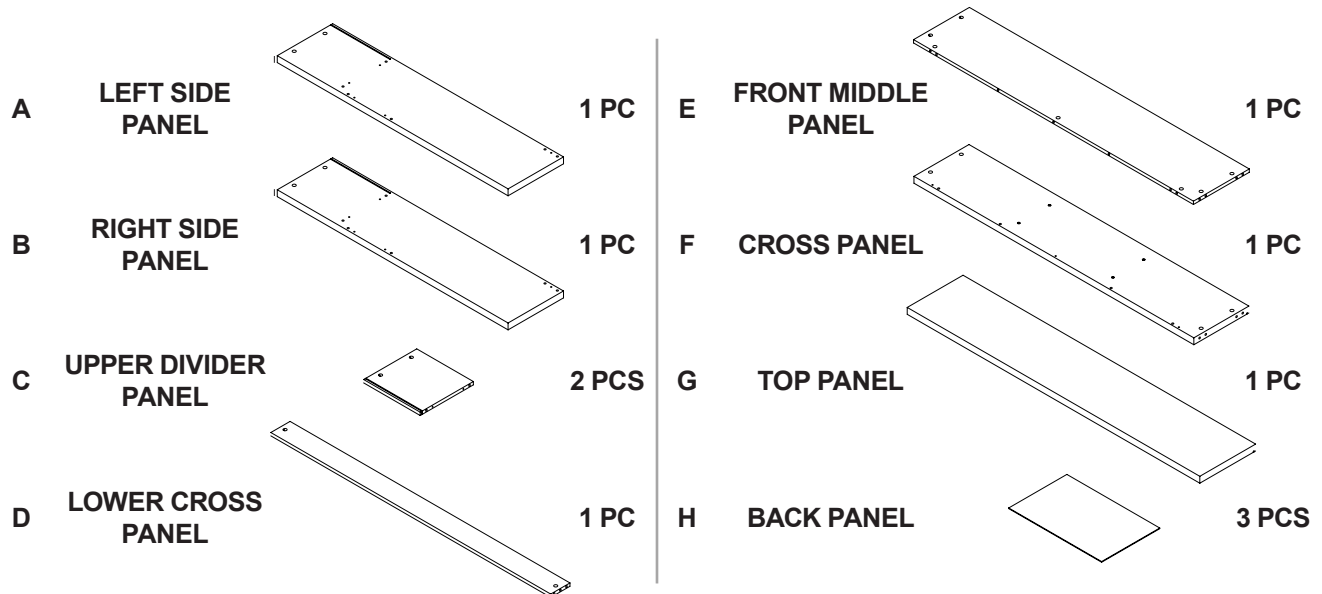

HARDWARE IDENTIFICATION

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	4	CAM LOCK Ø15x12mm SR		21 PCS
2	WOODEN DOWEL Ø8x30mm		28 PCS	5	BOLT Ø9.5x55mm SR		4 PCS
3	CAM BOLT Ø7x35.5mm SR		21 PCS	6	STICKER Ø20mm		4 PCS

 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **315901Q**

COASTER
FINE FURNITURE

STEP 1

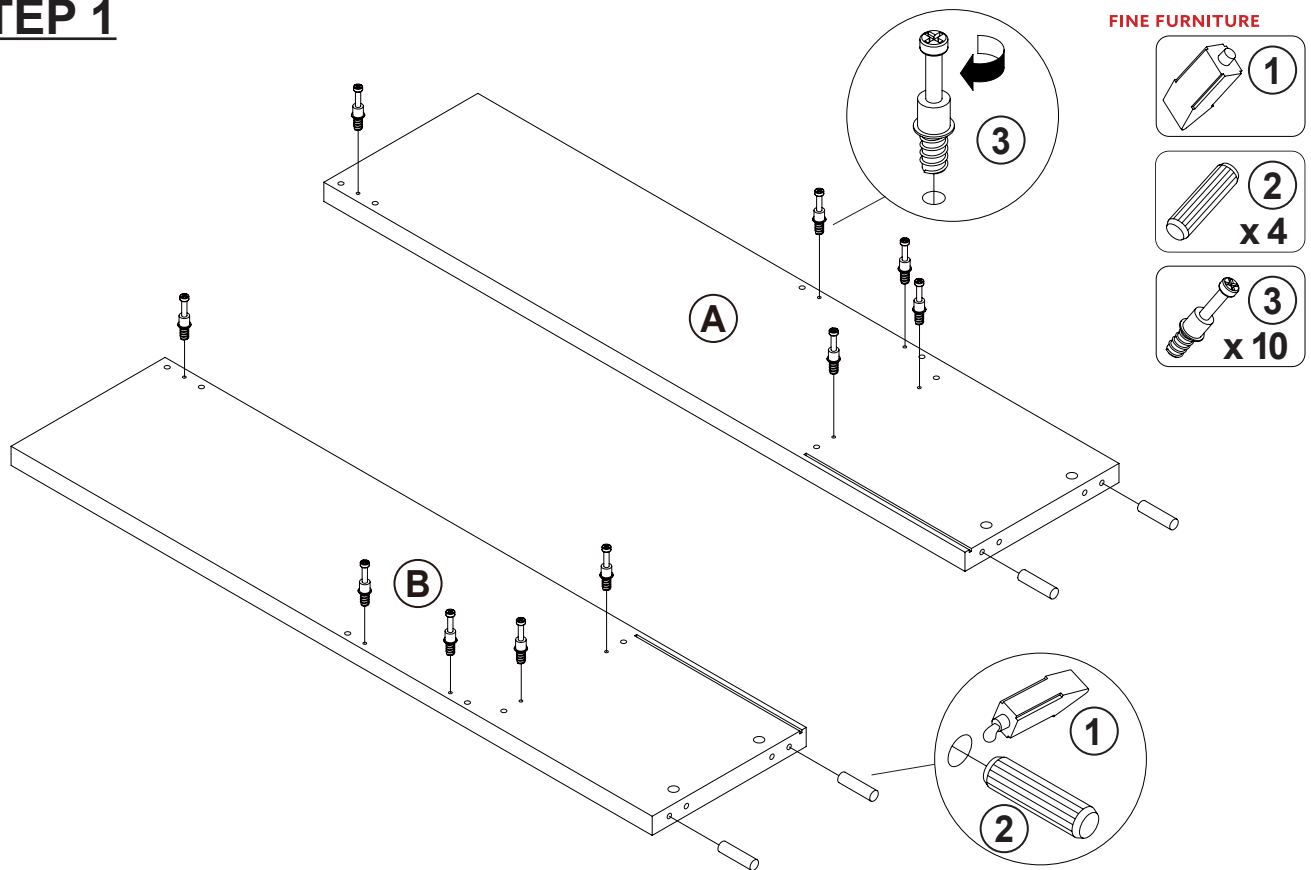

 
STEP 2

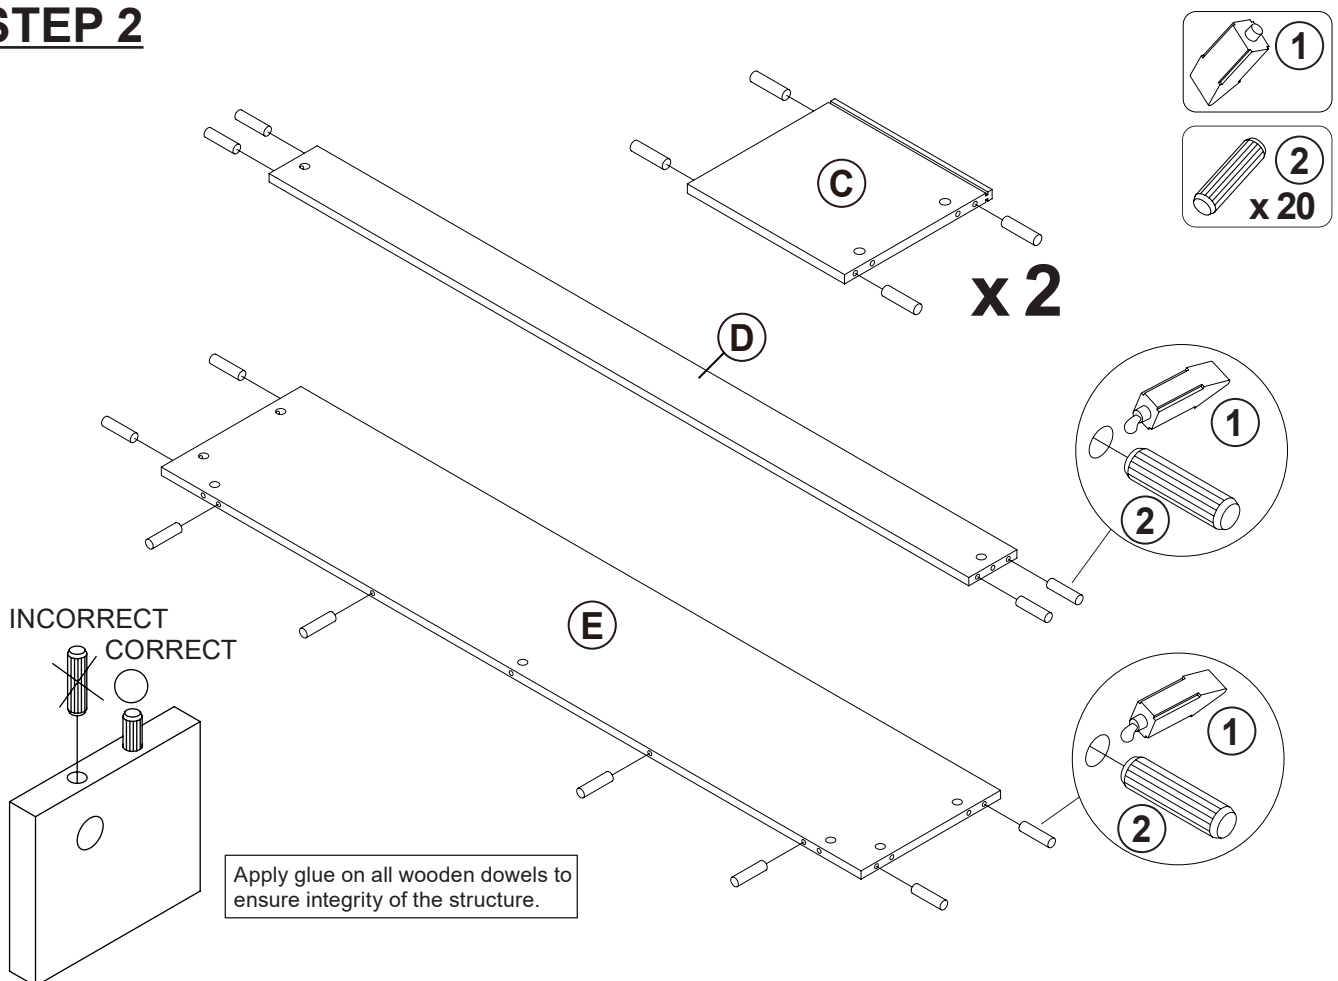


ITEM: **315901Q**

COASTER
FINE FURNITURE

 STEP 3

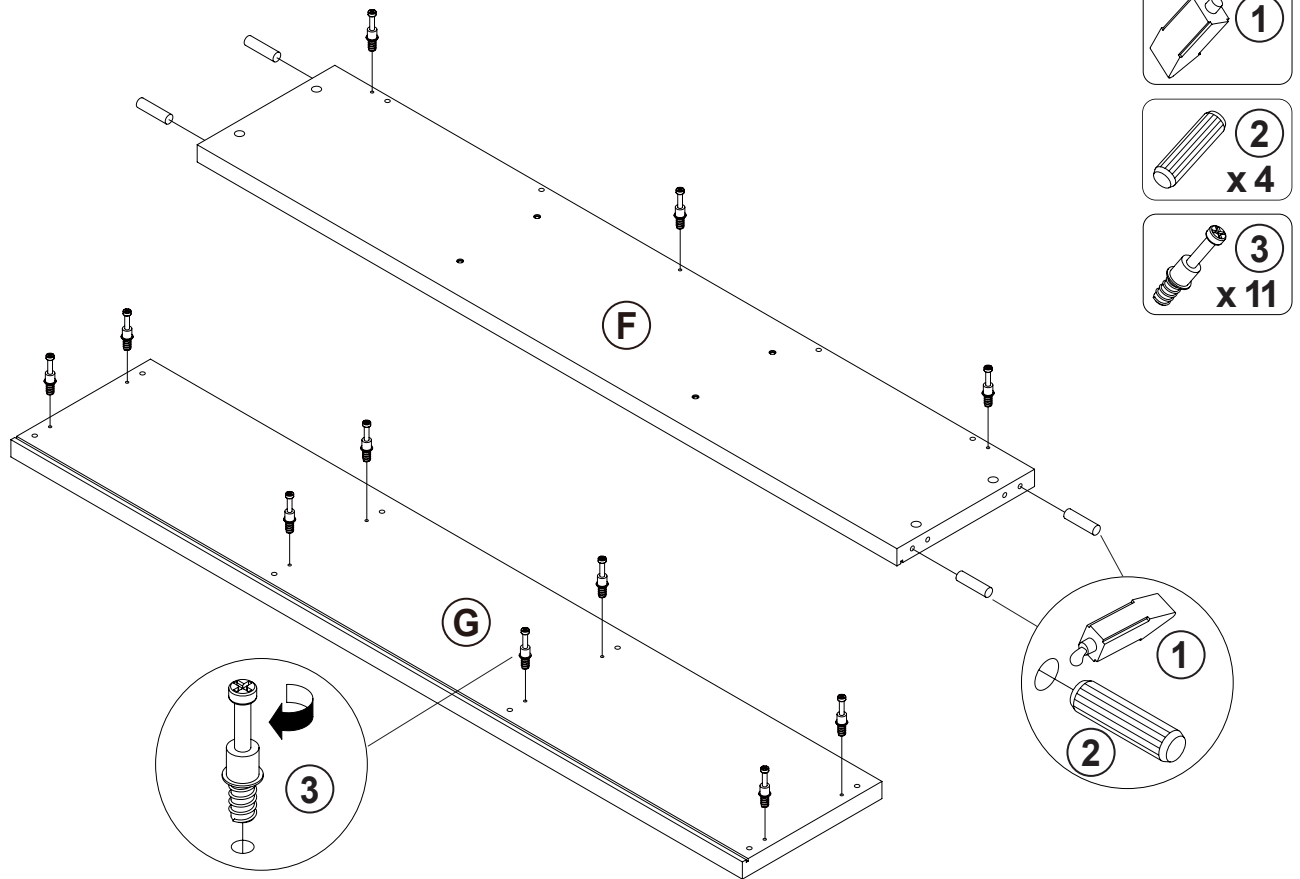


 
STEP 4

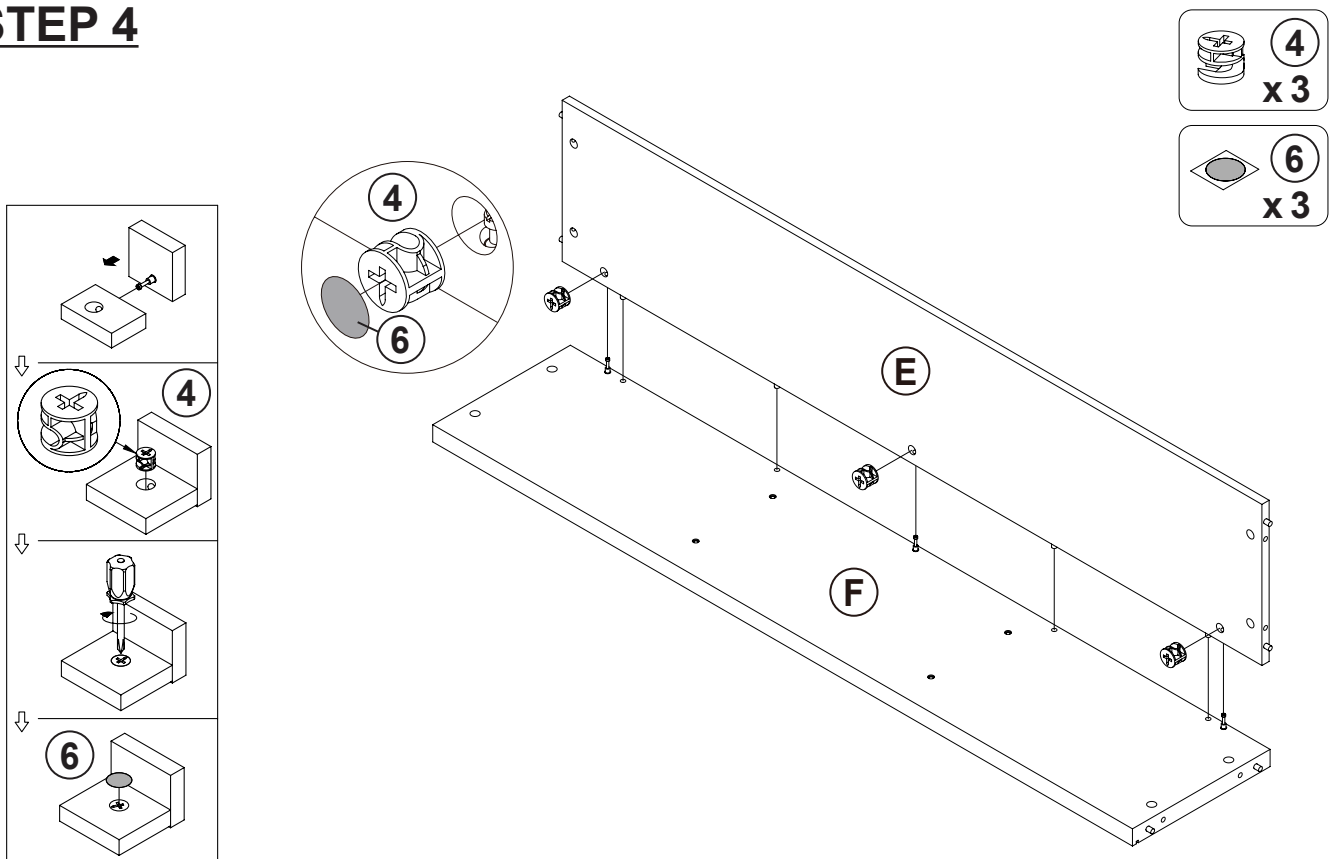



ITEM: **315901Q**

STEP 5

  COASTER
FINE FURNITURE

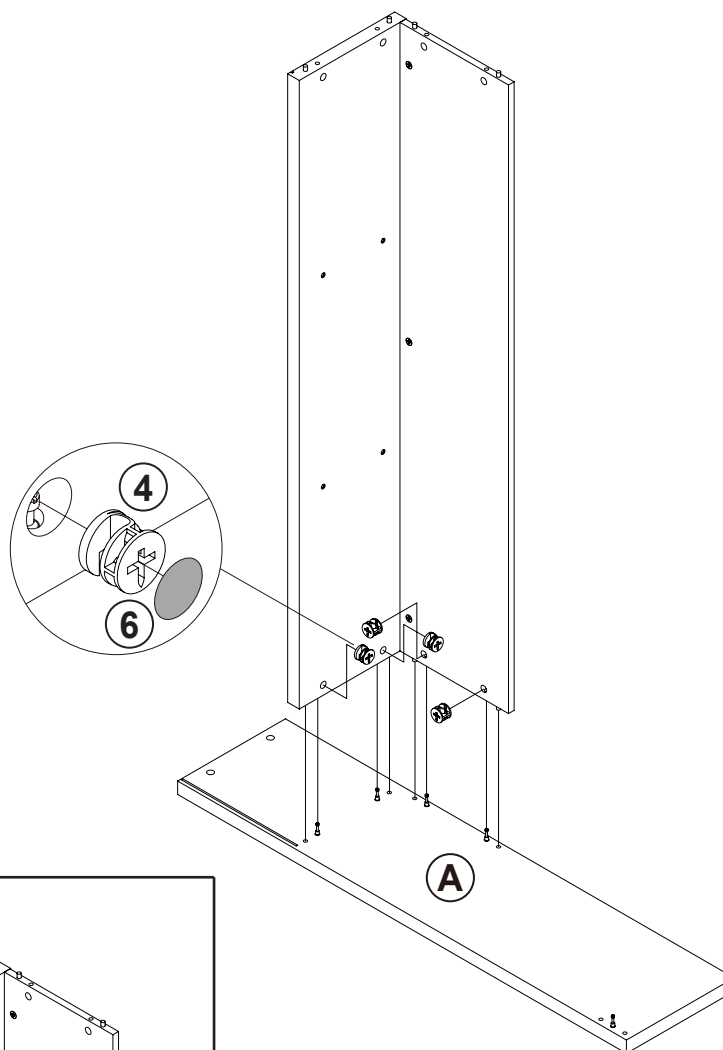

 
 
STEP 6

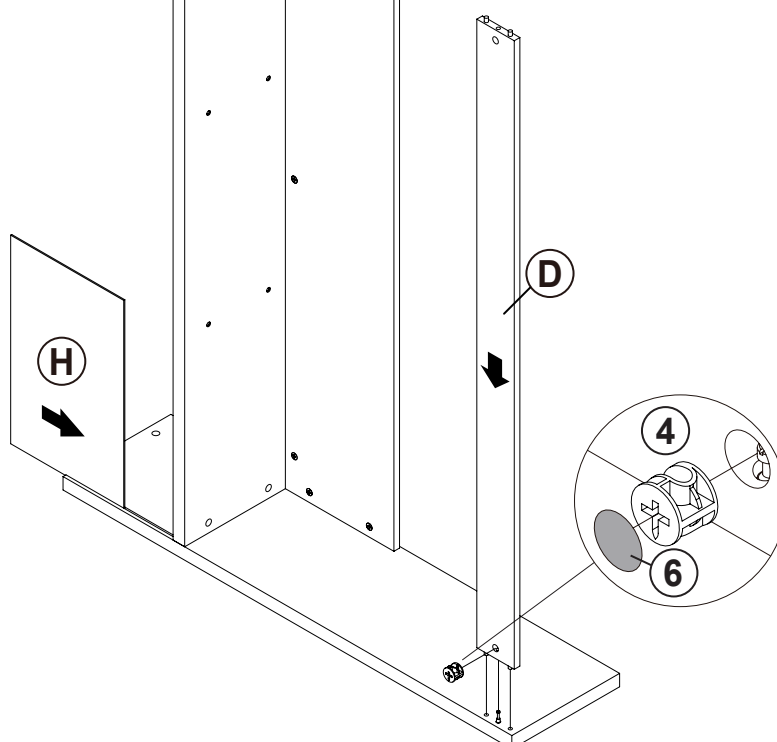


ITEM: **315901Q**

STEP 7

  COASTER
FINE FURNITURE

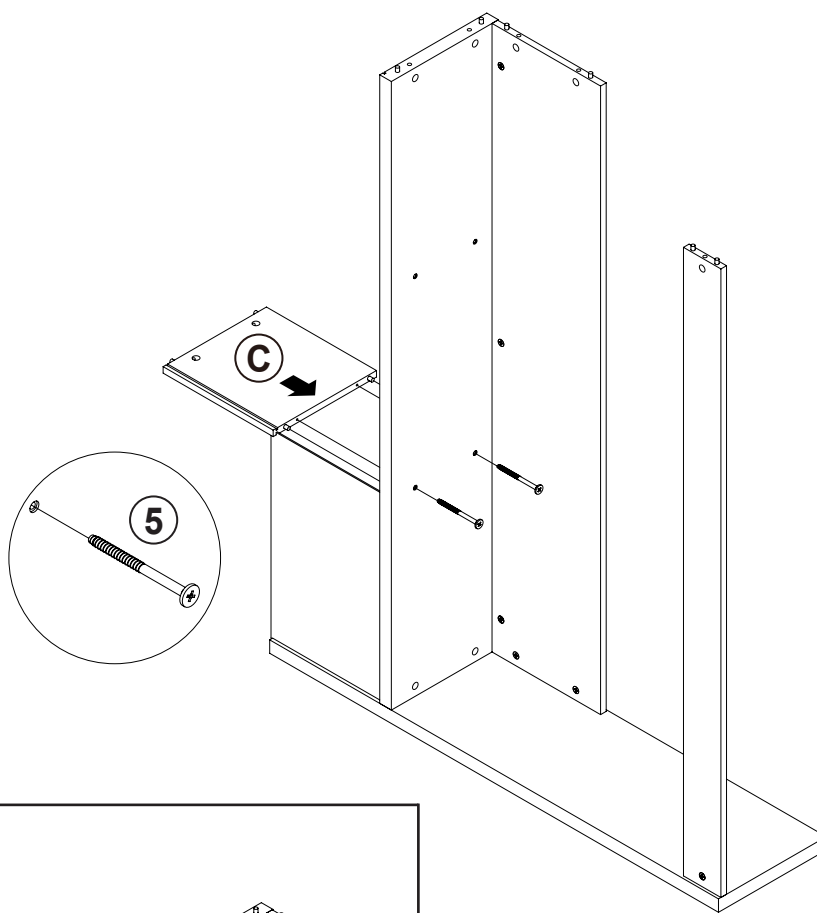


 
STEP 8

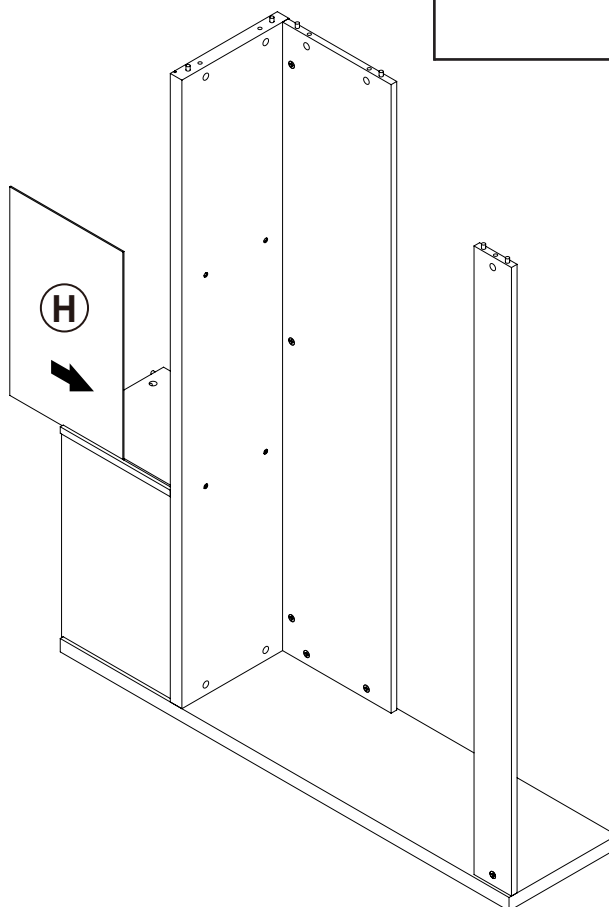




ITEM: **315901Q**

STEP 9

  COASTER
FINE FURNITURE

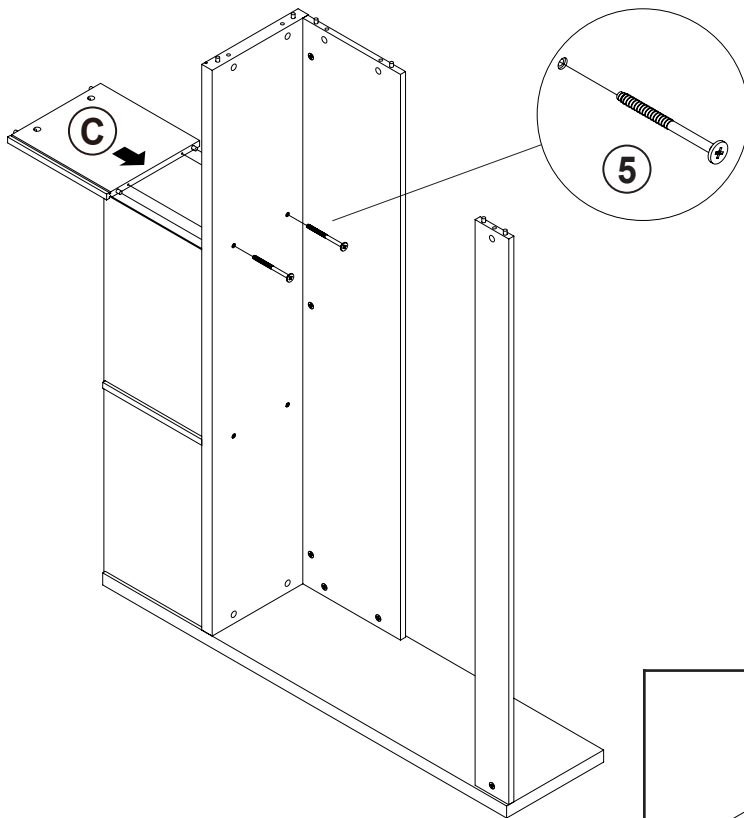

 
 
 
STEP 10

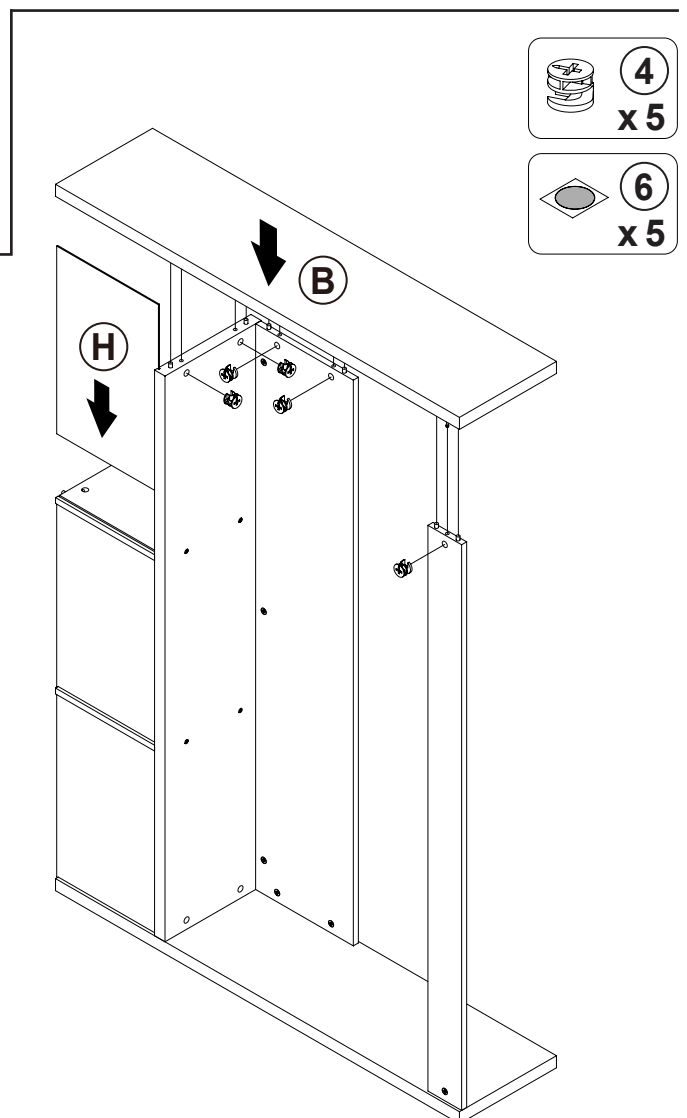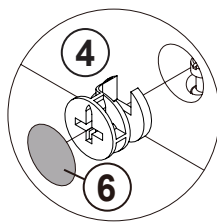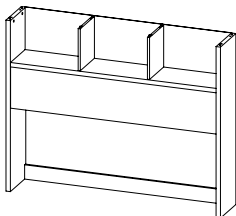

ITEM: **315901Q**




STEP 11

   
COASTER
FINE FURNITURE

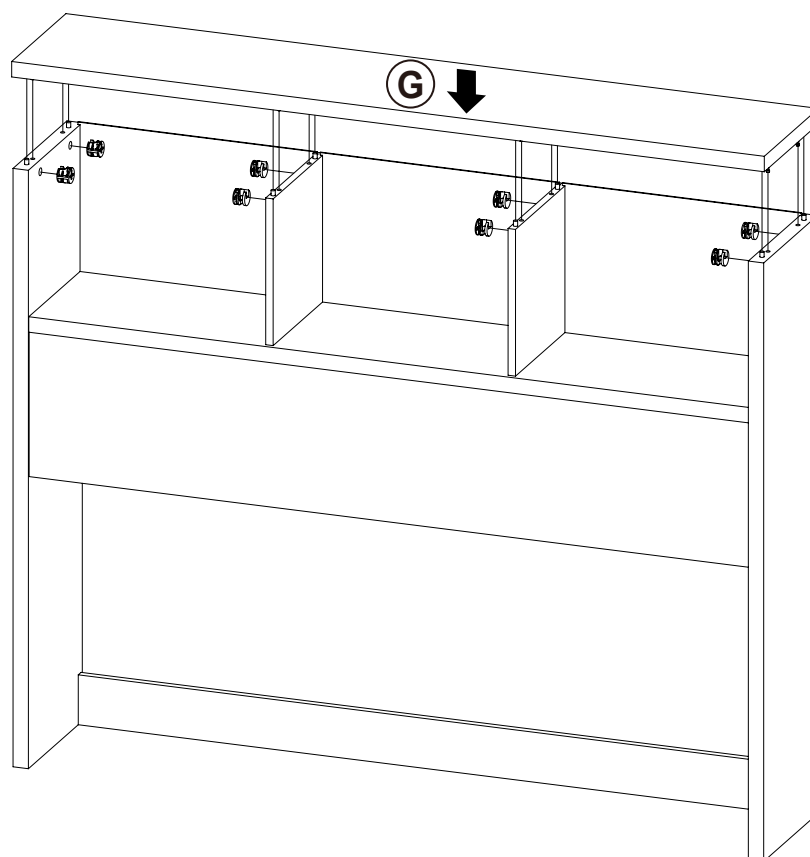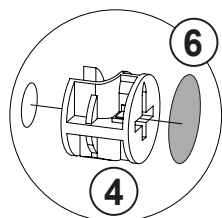

STEP 12

    COMPLETE

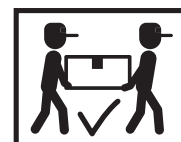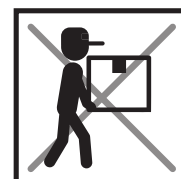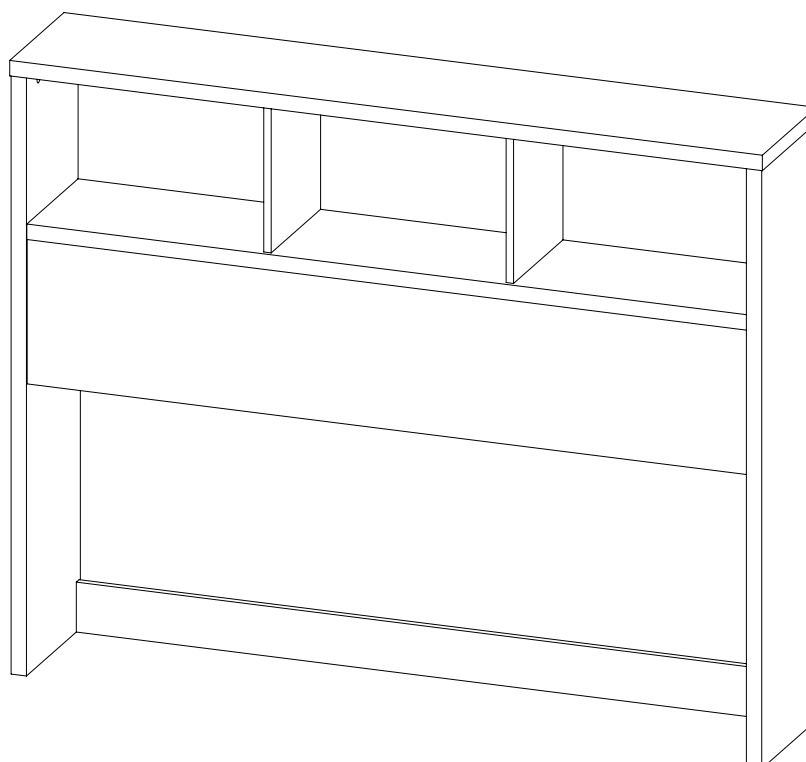

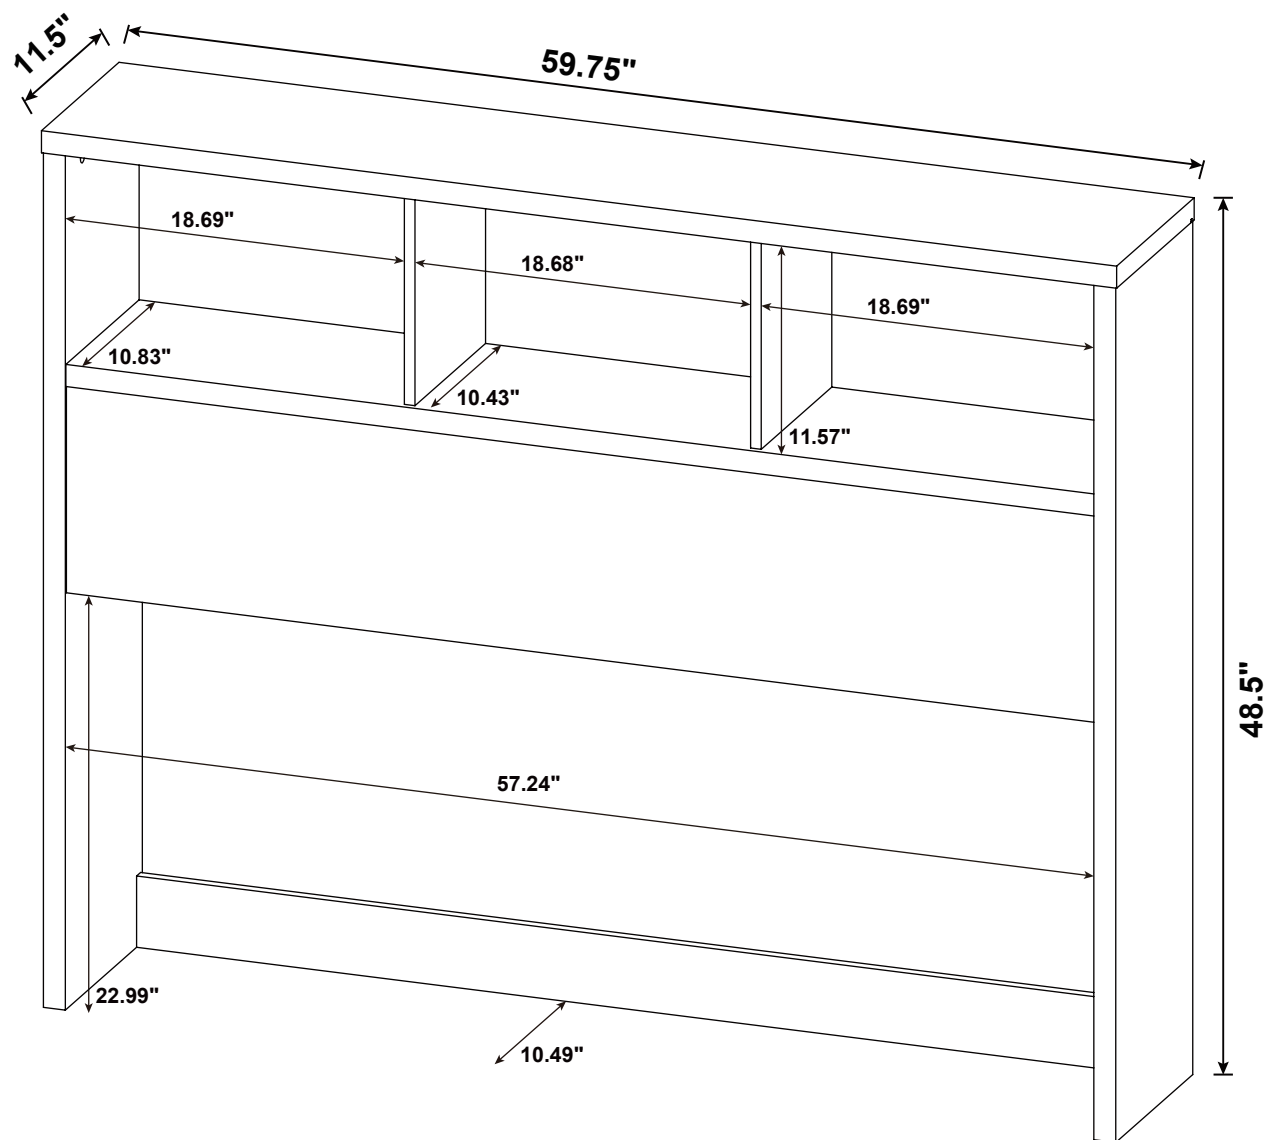

Note : Dimension tolerance $\pm 5\%$

 
ANTI-TIPPING INSTALLMENT INSTRUCTIONS
FURNITURE TIPPING RESTRAINT**WARNING**

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.


This restraint must be screwed to a wood stud on the wall, using the long screw provided.

STEP 1


Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

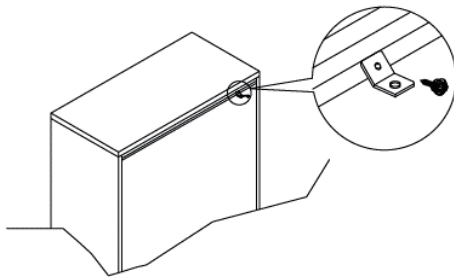**STEP 2**

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

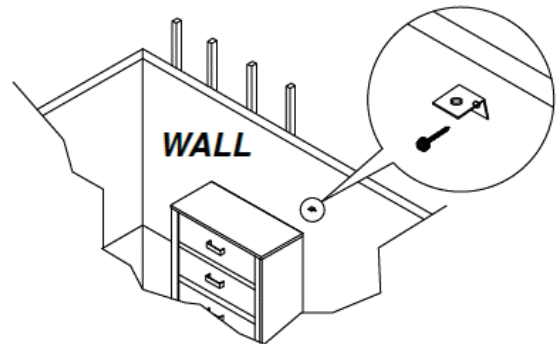**STEP 3**

 Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

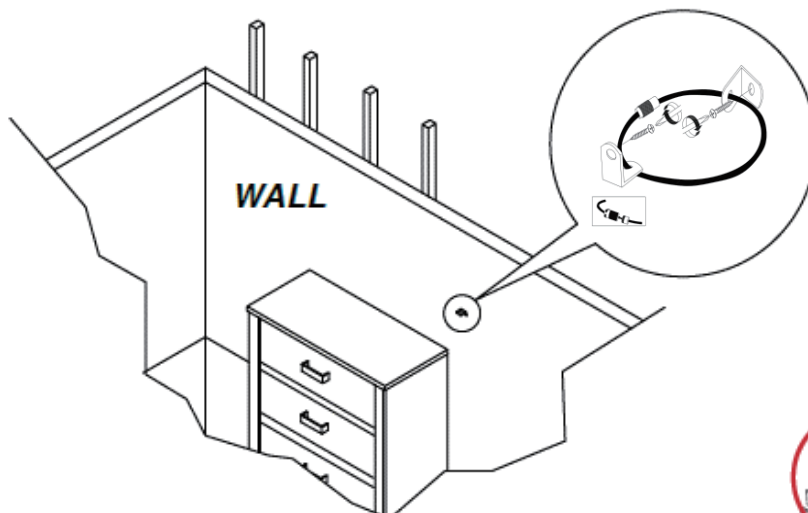

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

802693
BOOKCASE

ITEM: **802693**

ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

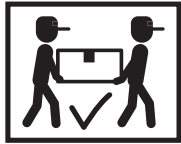


ASSEMBLY TIME

60 MINUTES

PARTS IDENTIFICATION

A

 
LEFT SIDE
PANEL

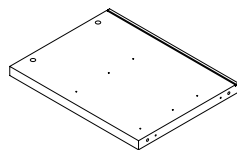

1 PC

B

 
RIGHT SIDE
PANEL

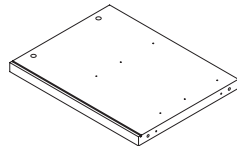

1 PC

C

 
BOTTOM PANEL

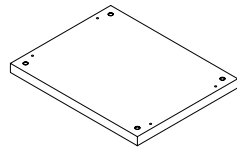

1 PC

D

 
MIDDLE CROSS
PANEL

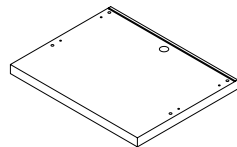

1 PC

E

 
BACK PANEL

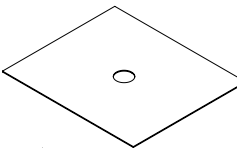

1 PC

F

 
UPPER SIDE
PANEL

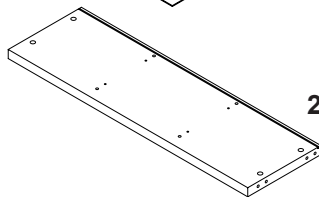

2 PCS

G

 
UPPER CROSS
PANEL



2 PCS

H

 
TOP PANEL

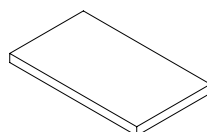

1 PC

I

 
UPPER BACK
PANEL



3 PCS

J

 
UPPER
DRAWER
FRONT PANEL



1 PC

K

 
DRAWER BACK
PANEL



2 PCS

L

 
DRAWER LEFT
SIDE PANEL



2 PCS

M

 
DRAWER RIGHT
SIDE PANEL



2 PCS

N

 
DRAWER
BOTTOM PANEL



2 PCS

O

 LOWER
DRAWER
FRONT PANEL










1 PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

       ITEM: **802693****HARDWARE IDENTIFICATION**


Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	10	HANDLE SCREW Ø3x15mm BLK		4 PCS
2	WOODEN DOWEL Ø8x30mm		32 PCS	11	LOCKER		1 PC
3	CAM BOLT Ø7x35.5mm SR		24 PCS	12	SCREW Ø3 x 18mm BLK		2 PCS
4	CAM LOCK Ø15x12mm SR		24 PCS	13	TYPEA+C ELECTRICAL SOCKET		1 PC
5	BOLT Ø9.5x55mm SR		4 PCS	14	PLASTIC COVER Ø 52mm		1 PC
6	SCREW Ø 4.3x35mm SR		8 PCS	15	FOOTHOLD		4 PCS
7	GLIDES L = 350mm BLK		2 PCS	16	BACK PANEL SUPPORT		6 PCS
8	GLIDES SCREW Ø 3x12mm BLK		24 PCS	17	BACK PANEL SUPPORT SCREW Ø3 x 19mm SR		6 PCS
9	HANDLE L=120mm BLK		2 PCS	18	STICKER Ø 20mm		4 PCS

Z7,Z9,Z11,Z13,Z14 not included in blister packaging.**NOTE:**


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **802693**

 STEP 1

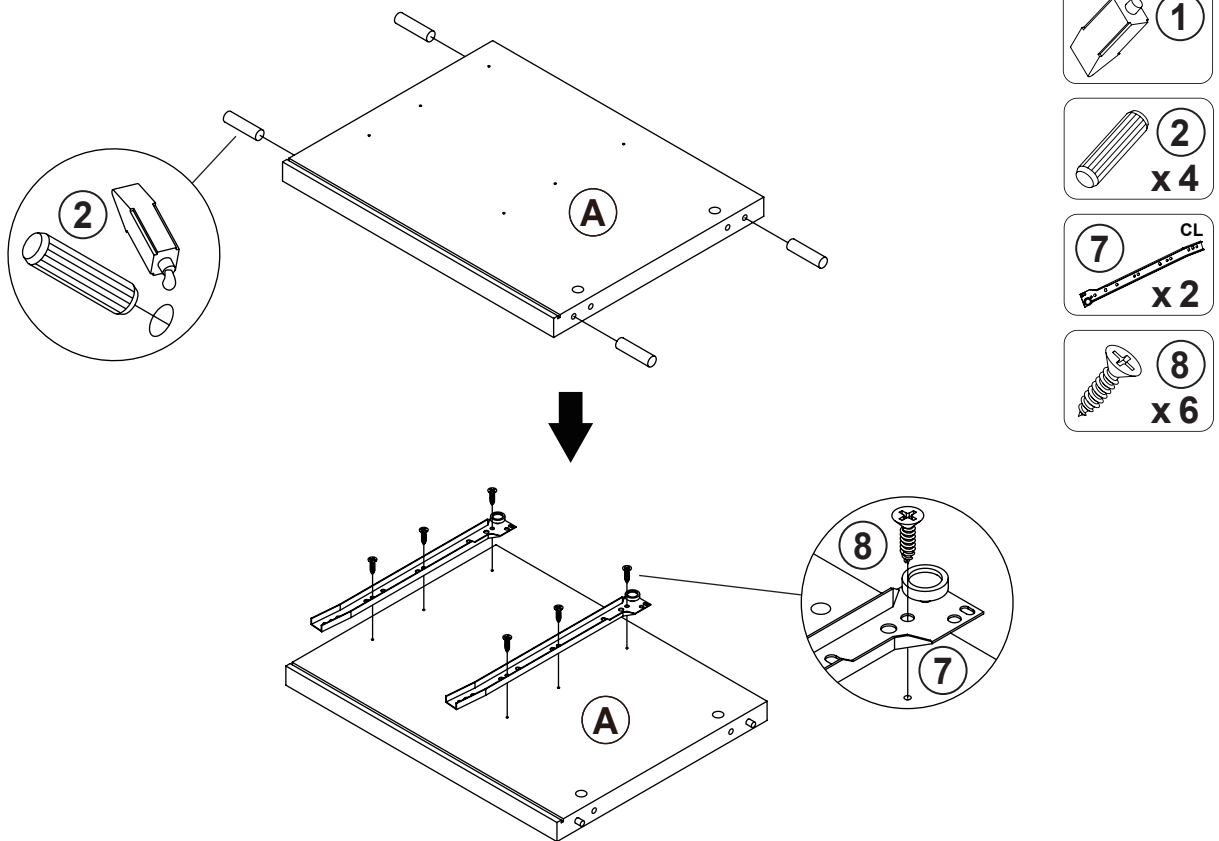


 STEP 2

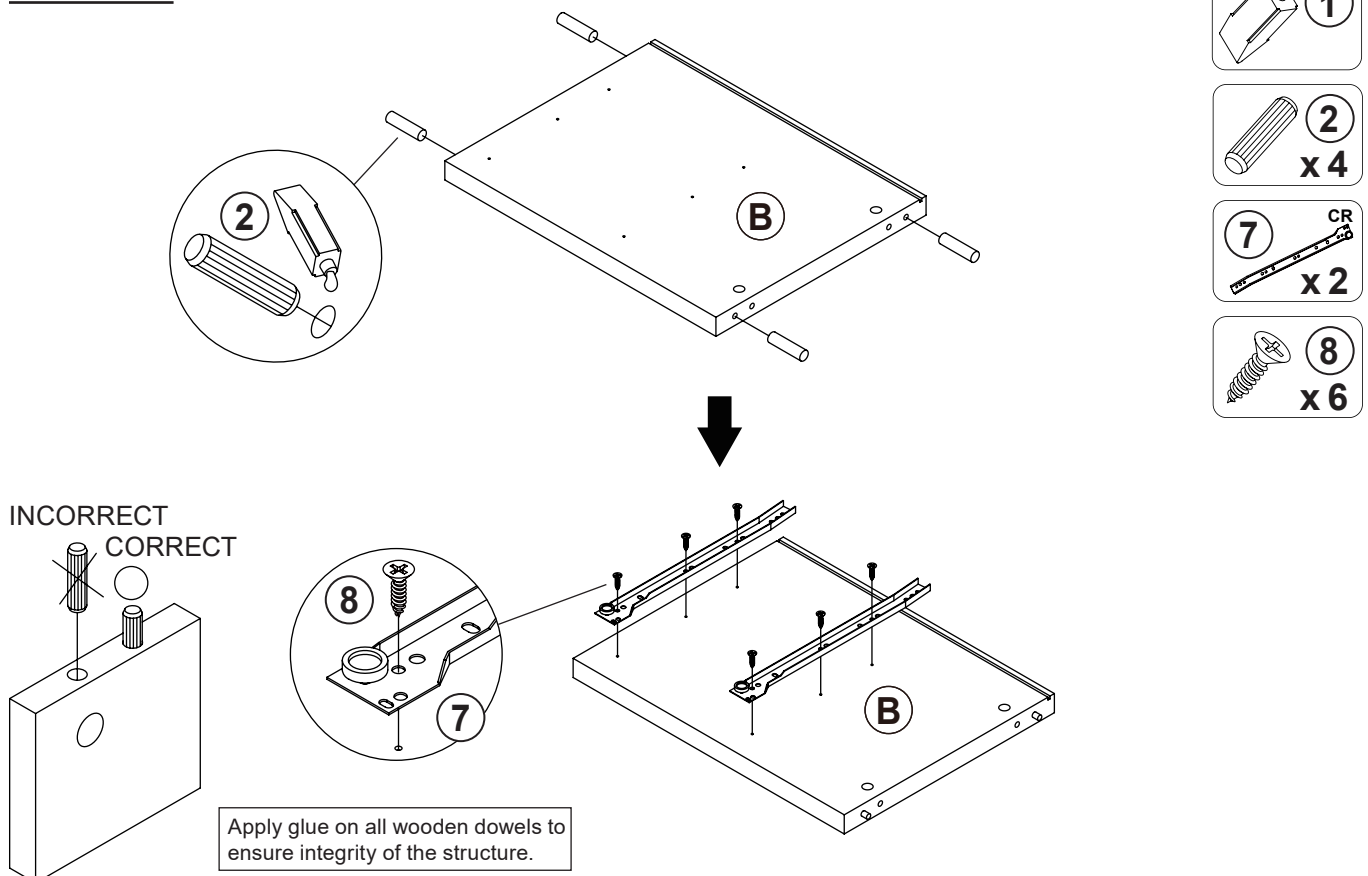


ITEM: **802693**

 STEP 3

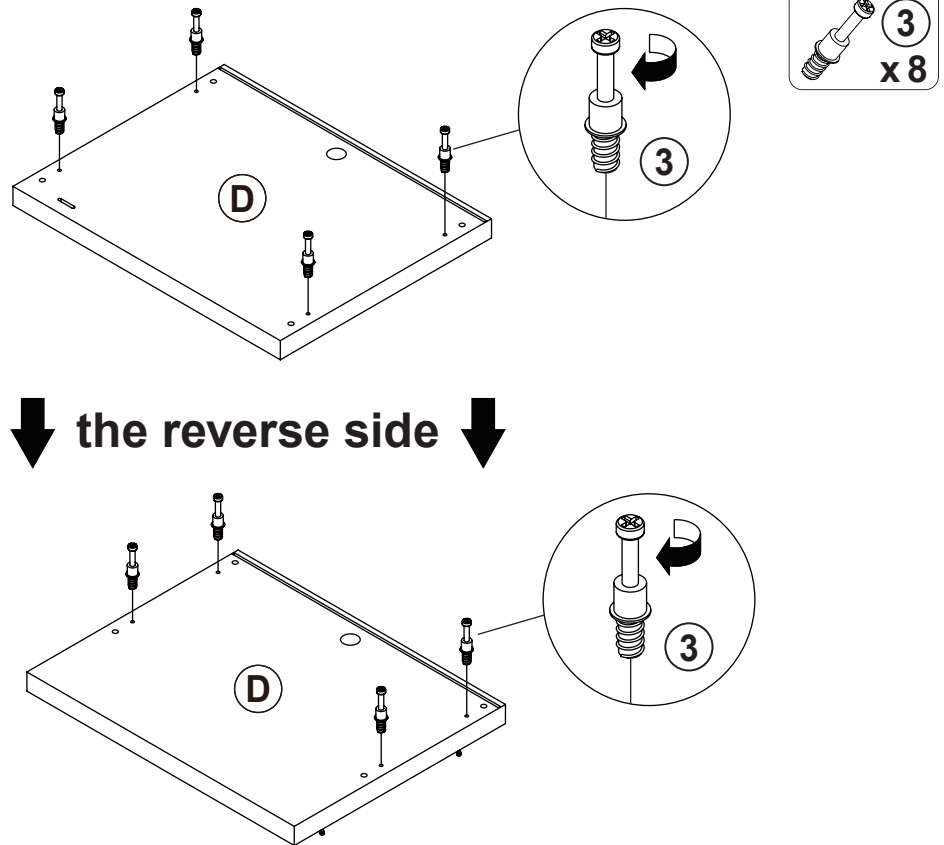


 STEP 4

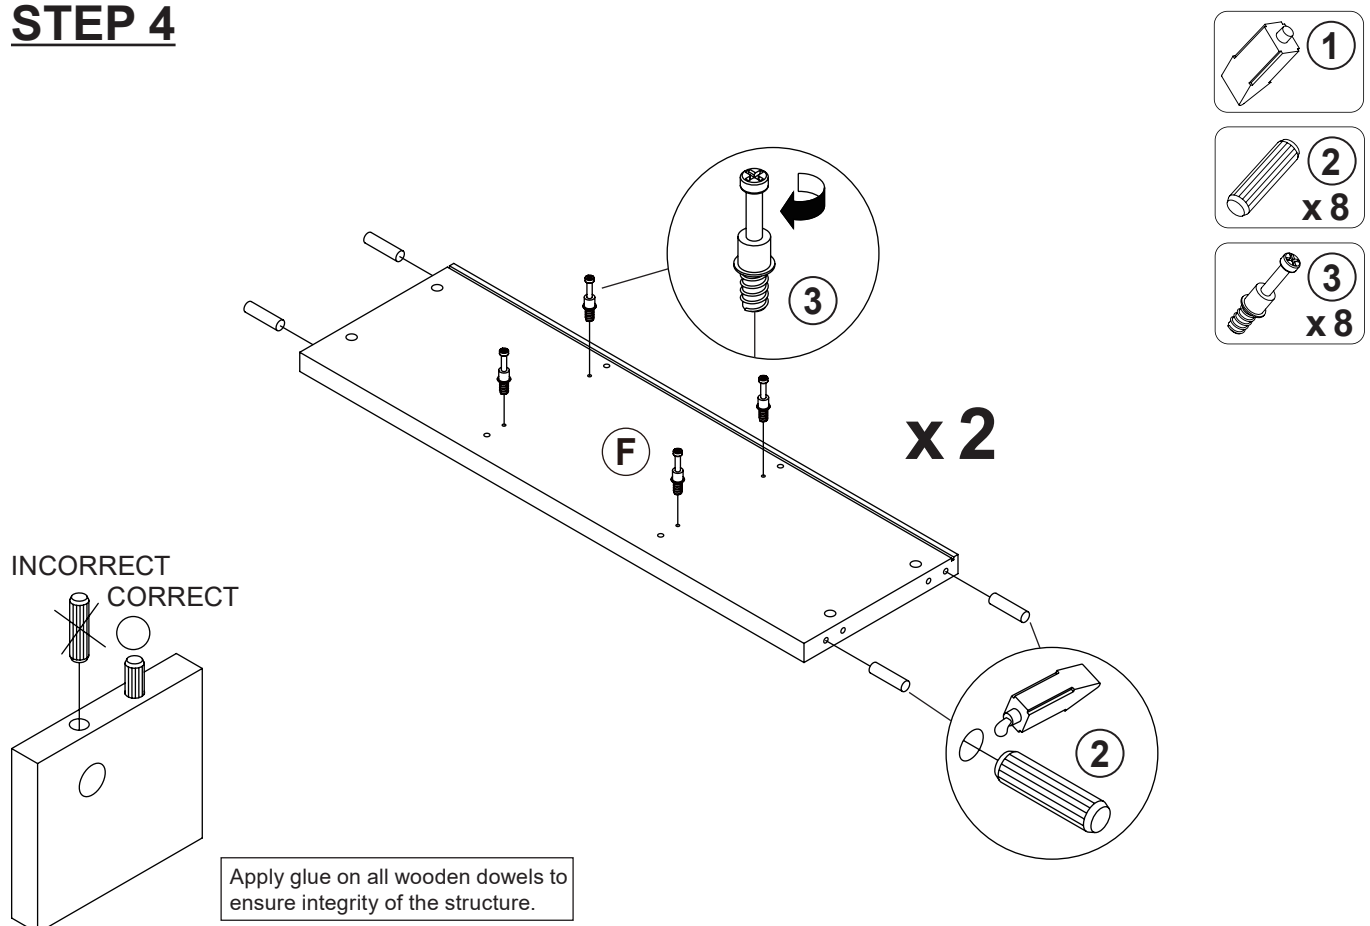


ITEM: **802693**

 STEP 5

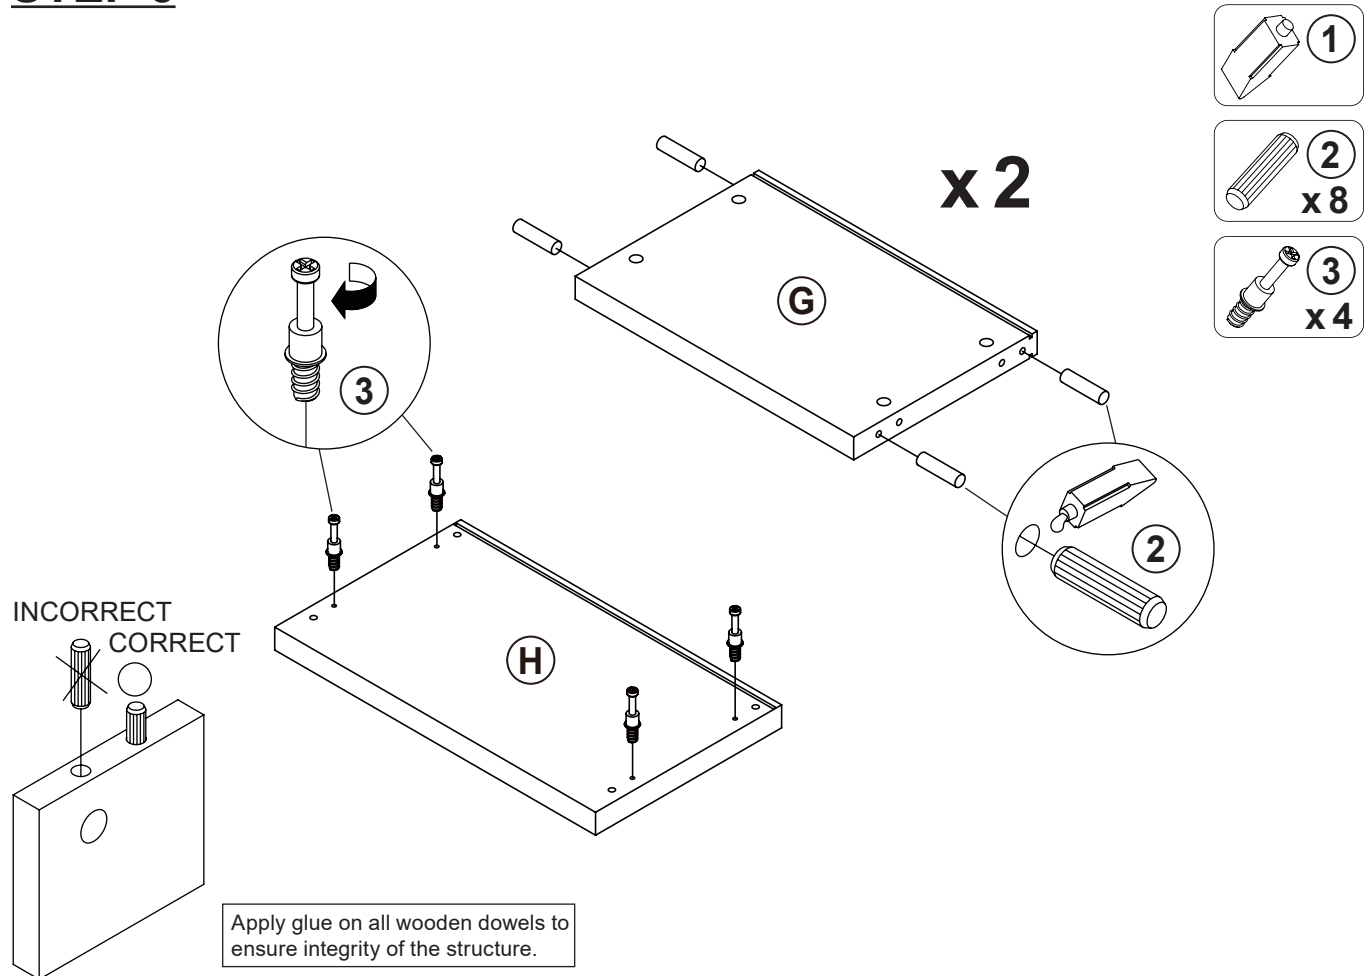


 
STEP 6

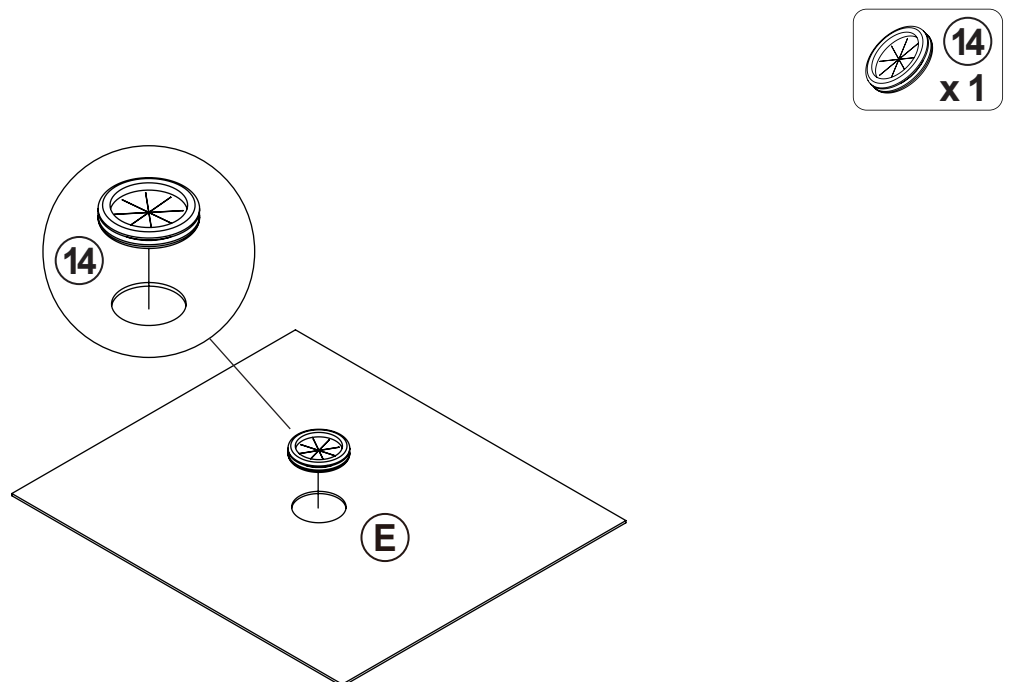




ITEM: **802693**

COASTER
FINE FURNITURE

  STEP 7

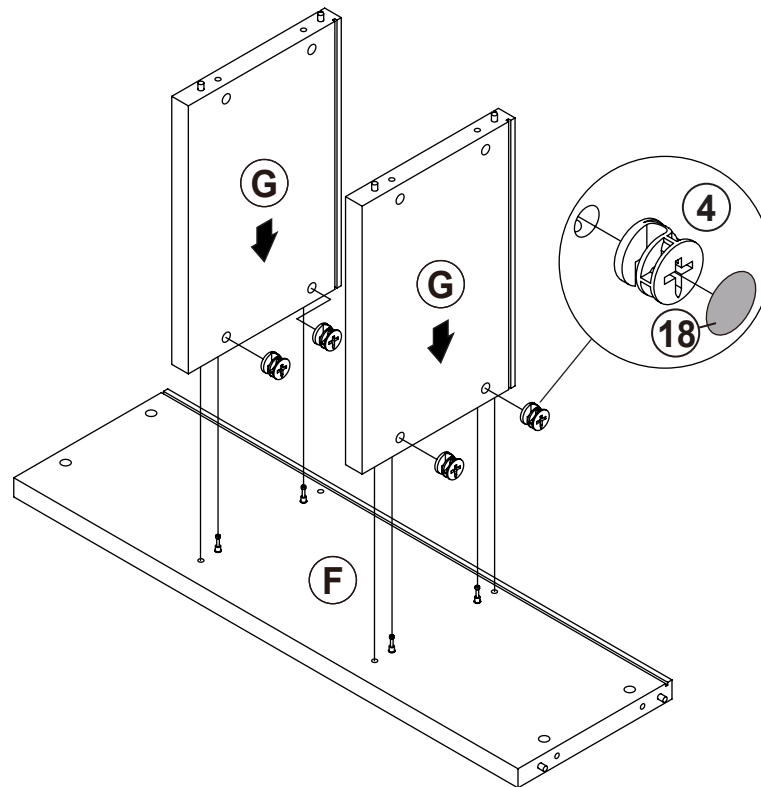


 
 
 
STEP 8

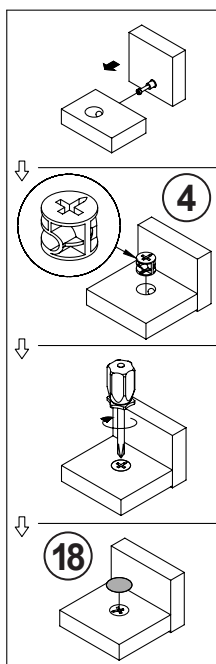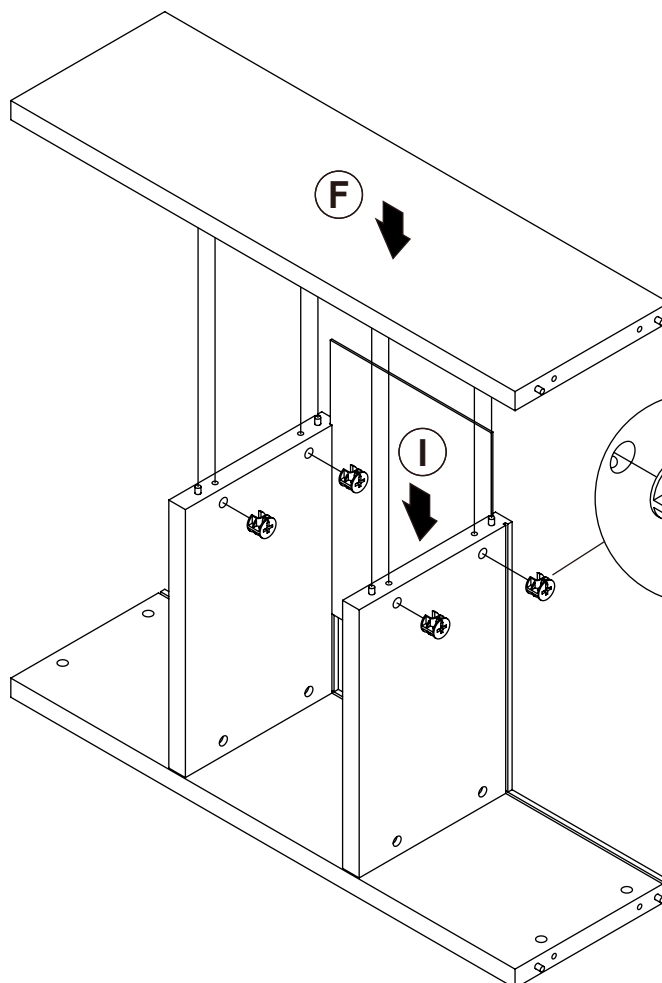



ITEM: **802693**

COASTER
FINE FURNITURE

    STEP 9

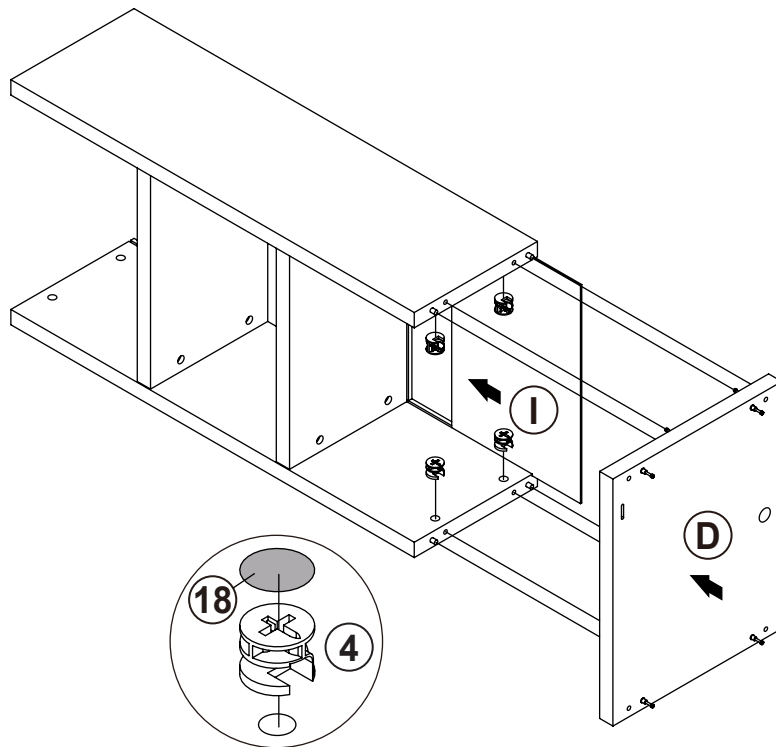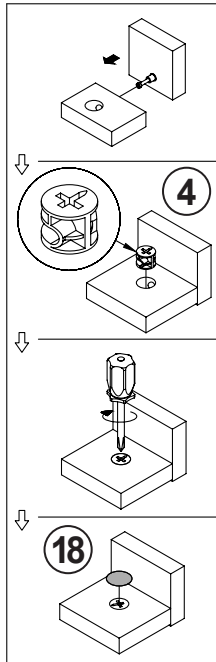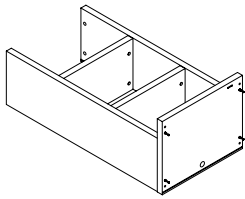

 
 
STEP 10

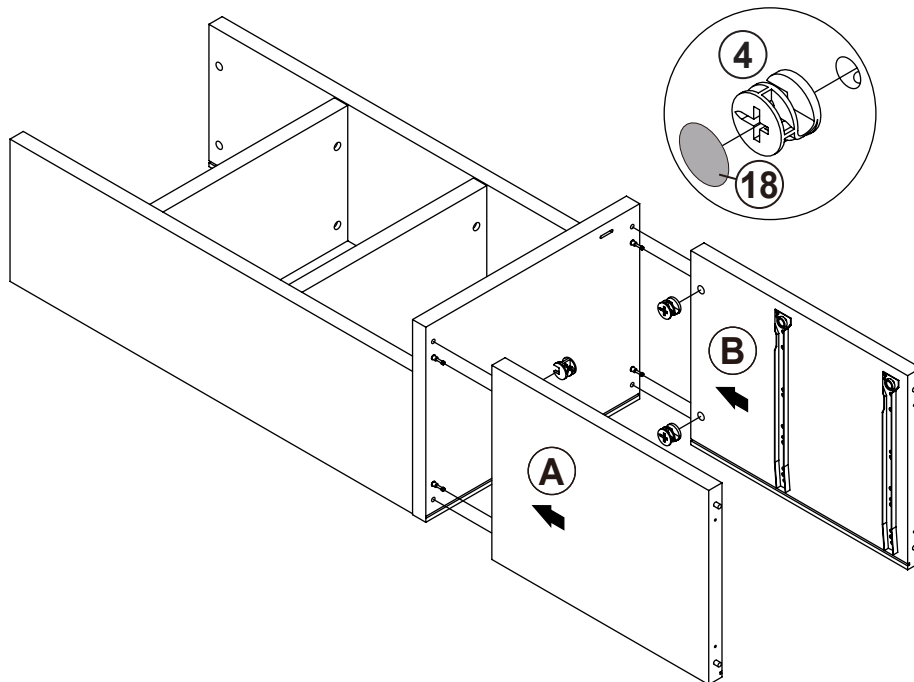




ITEM: **802693**

STEP 11

  COASTER
FINE FURNITURE

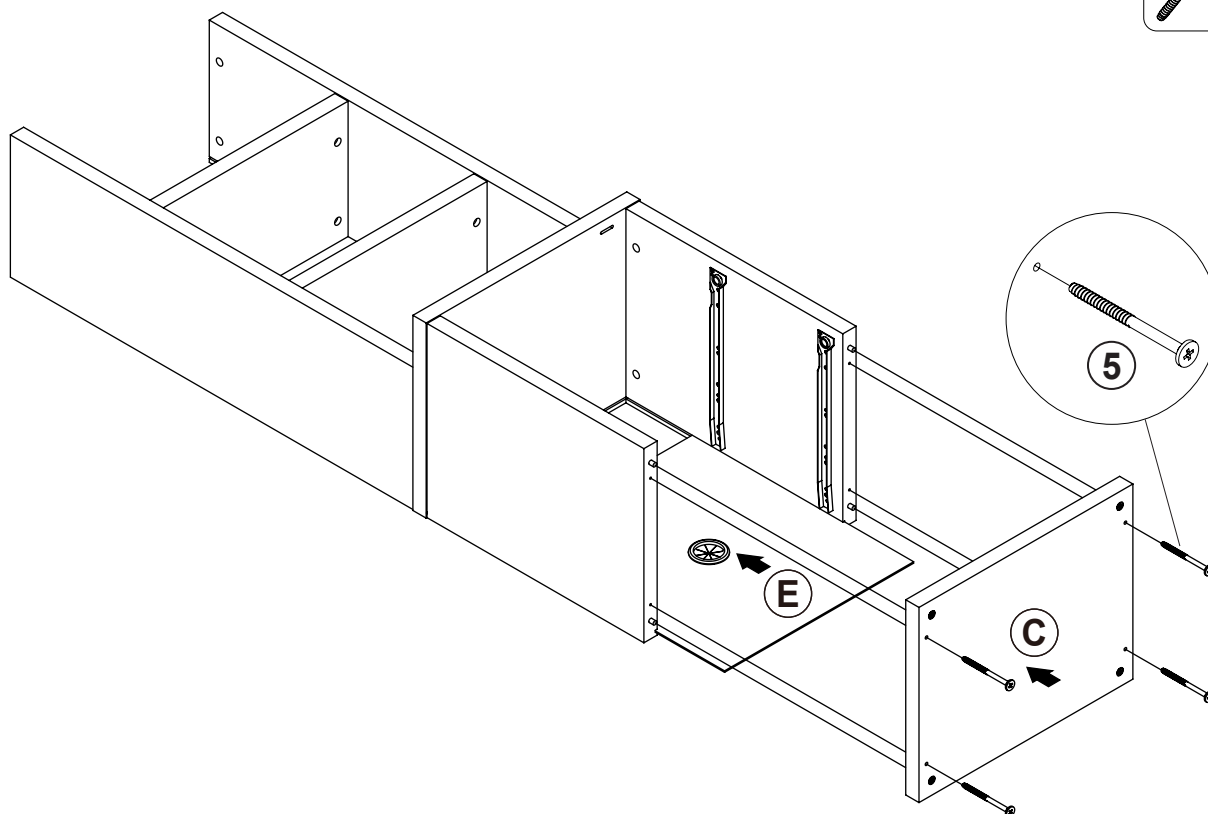

   
STEP 12

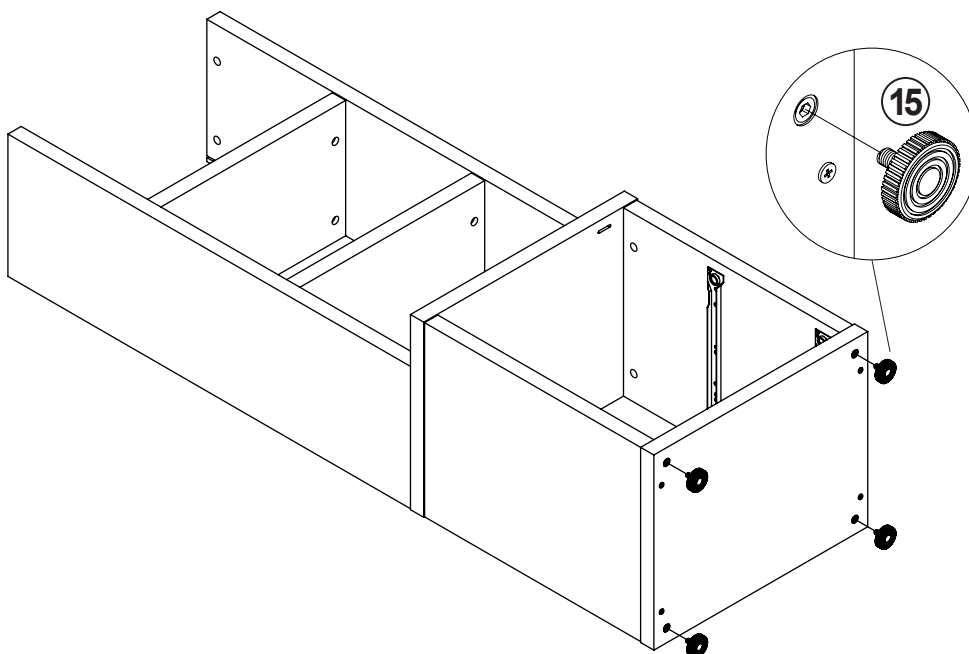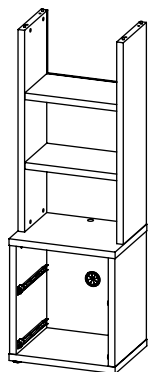

ITEM: **802693**


STEP 13

 COASTER
FINE FURNITURE

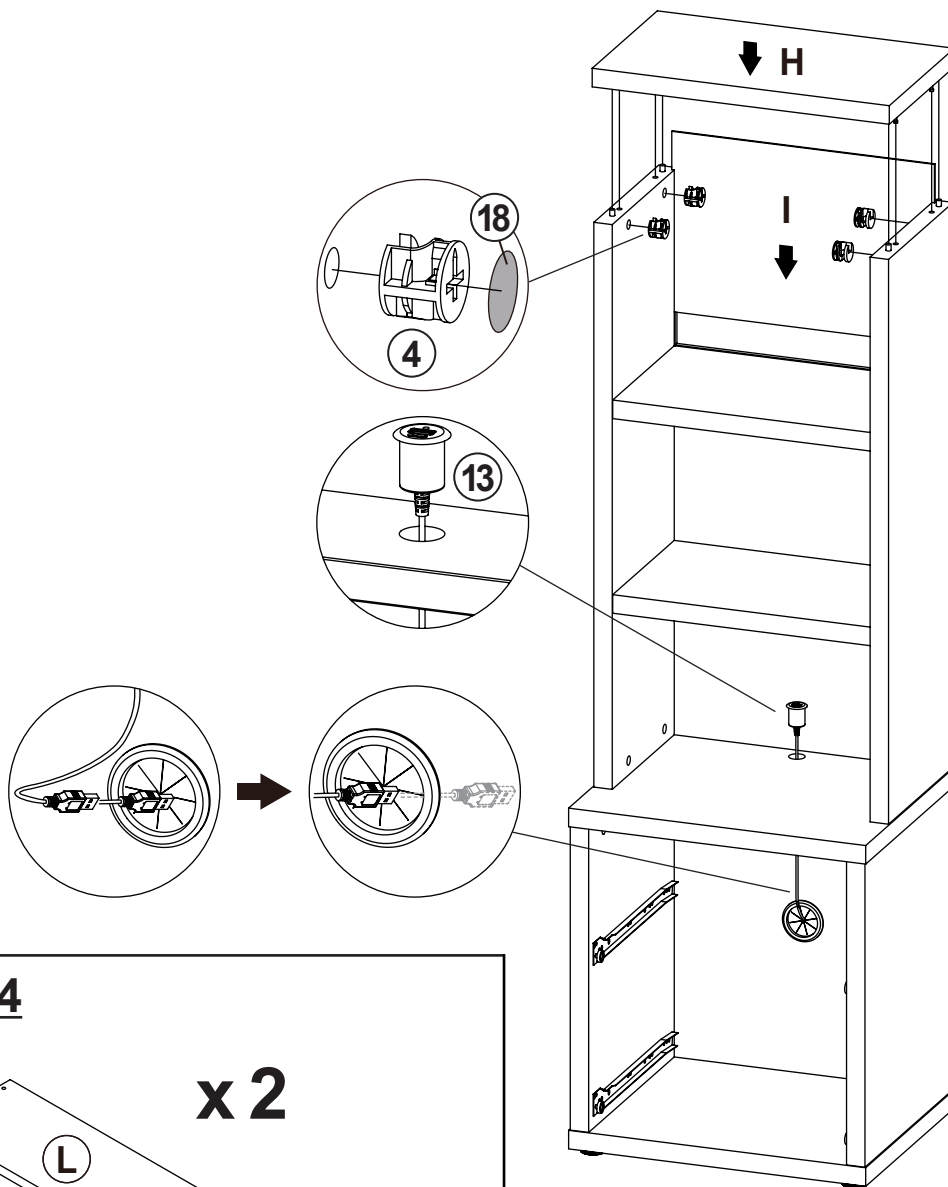

-  **4**
x 4
-  **18**
x 4
-  **13**
x 1



 
STEP 14

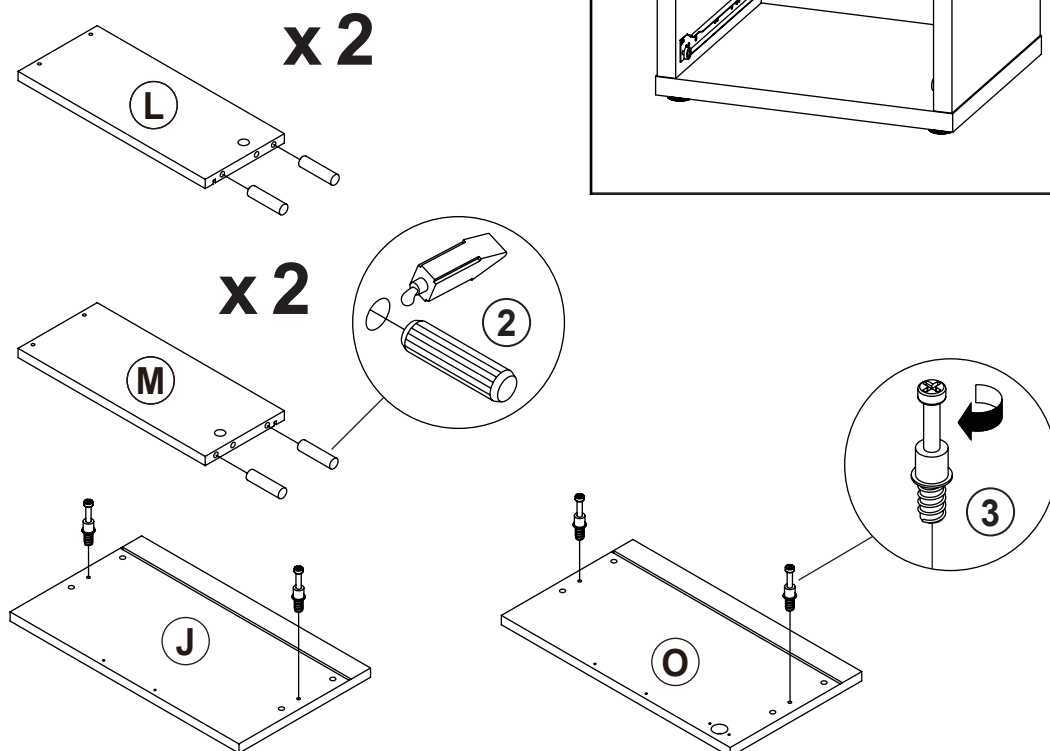


-  **1**
-  **2**
x 8
-  **3**
x 4

ITEM: **802693**

 
 
 
STEP 15-1

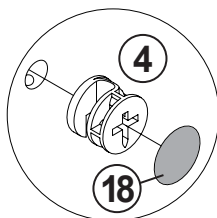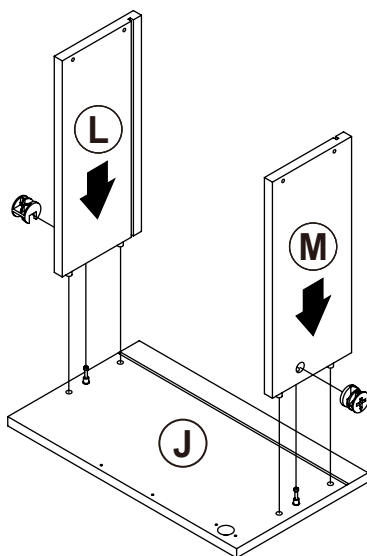




 
STEP 15-2

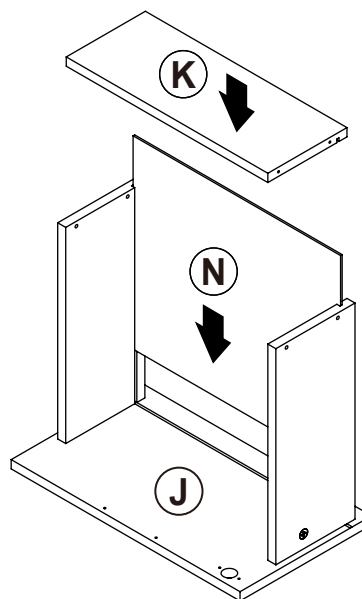



 
 
 
STEP 15-3

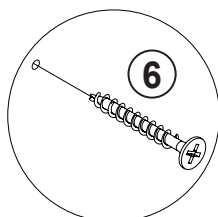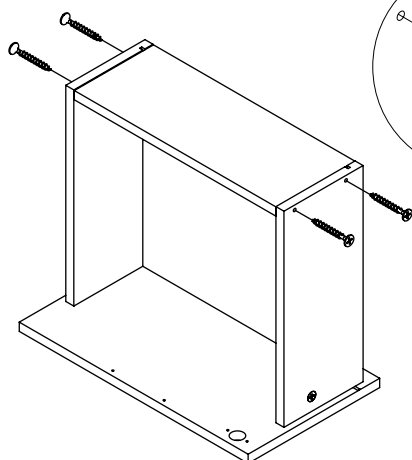

    STEP 15-4



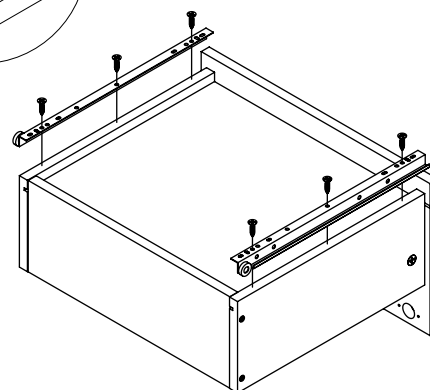
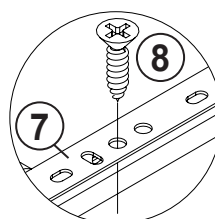


     STEP 15-5

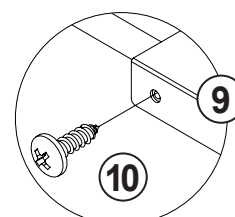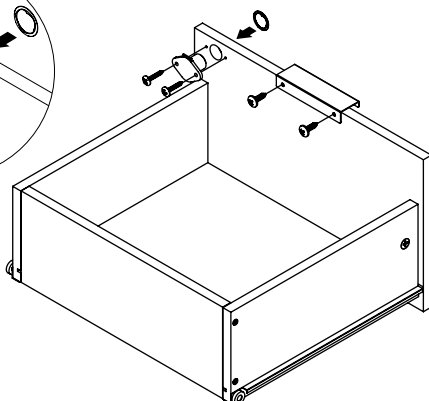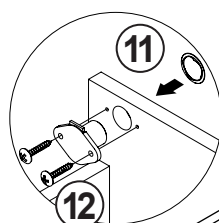


ITEM: **802693**

  
 
 
STEP 16-1

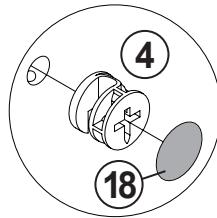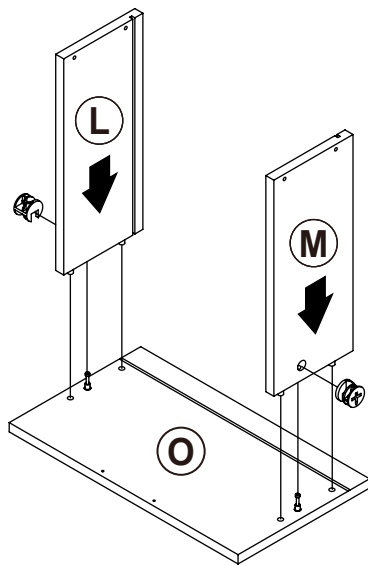




 
STEP 16-2

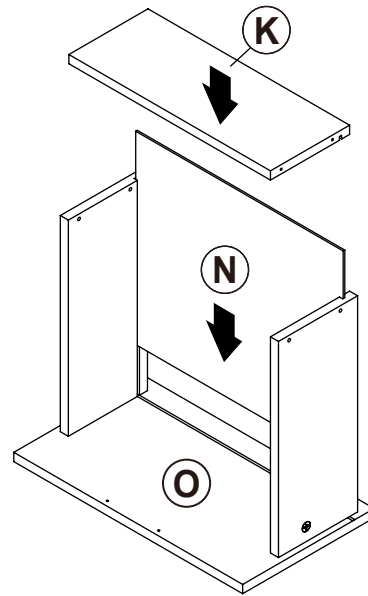

 
 
 
STEP 16-3

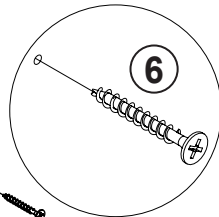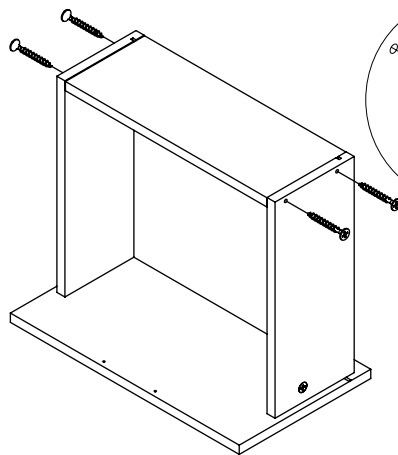

    STEP 16-4

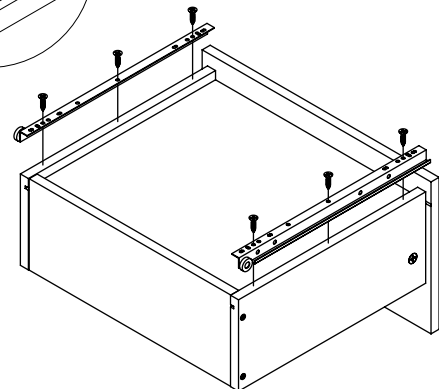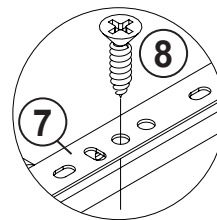

   
STEP 16-5

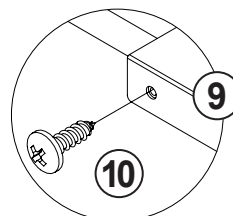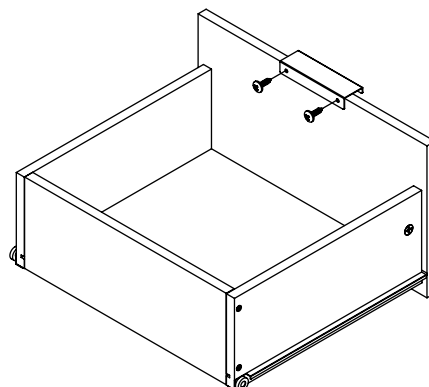



ITEM: **802693**

STEP 17

 COASTER
FINE FURNITURE

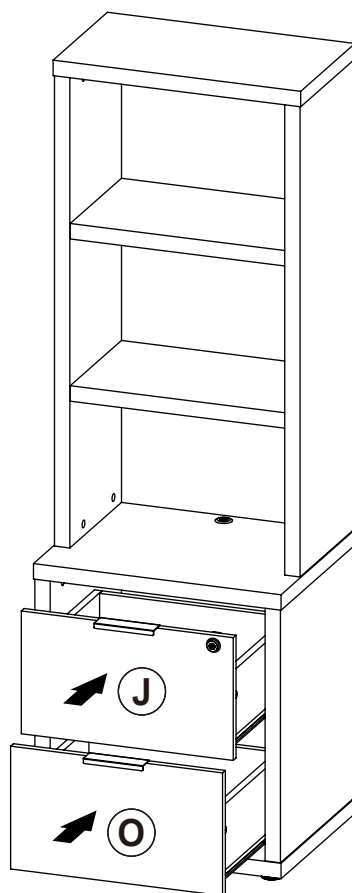


 
 
STEP 18


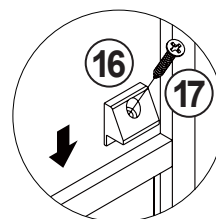
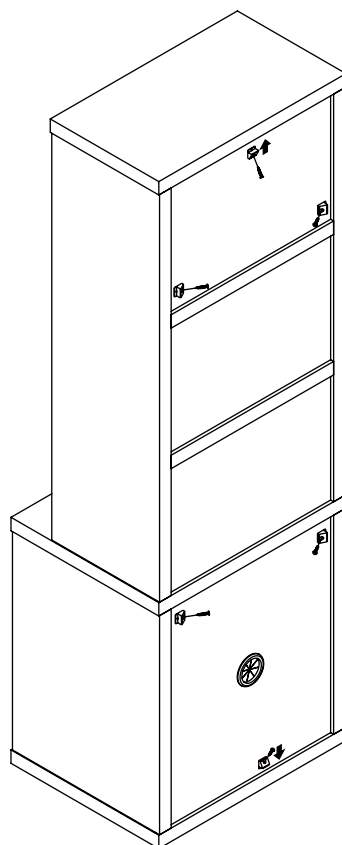


ITEM: **802693**

STEP 19

      COMPLETE

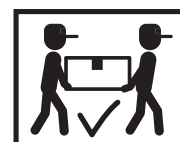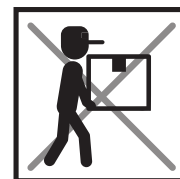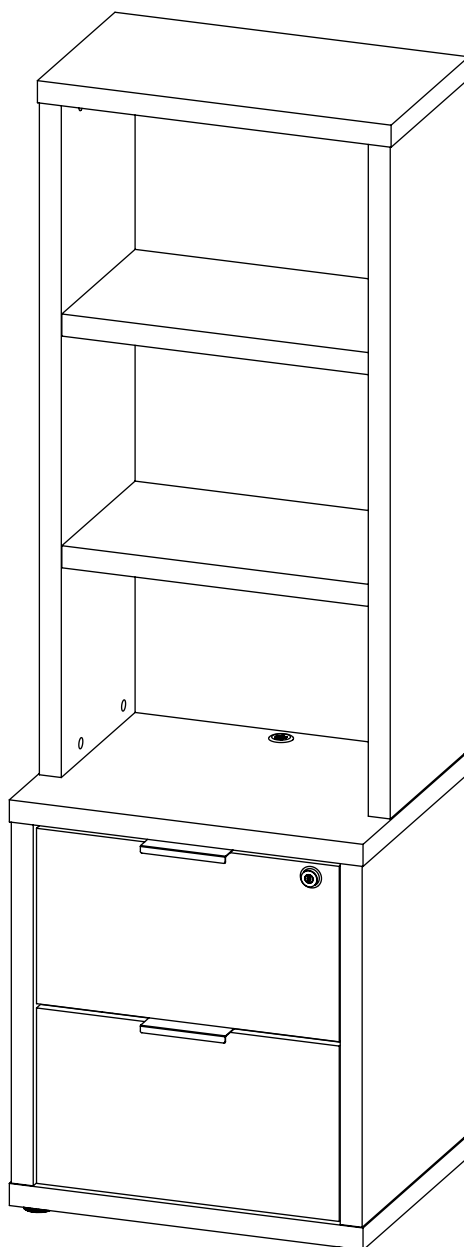

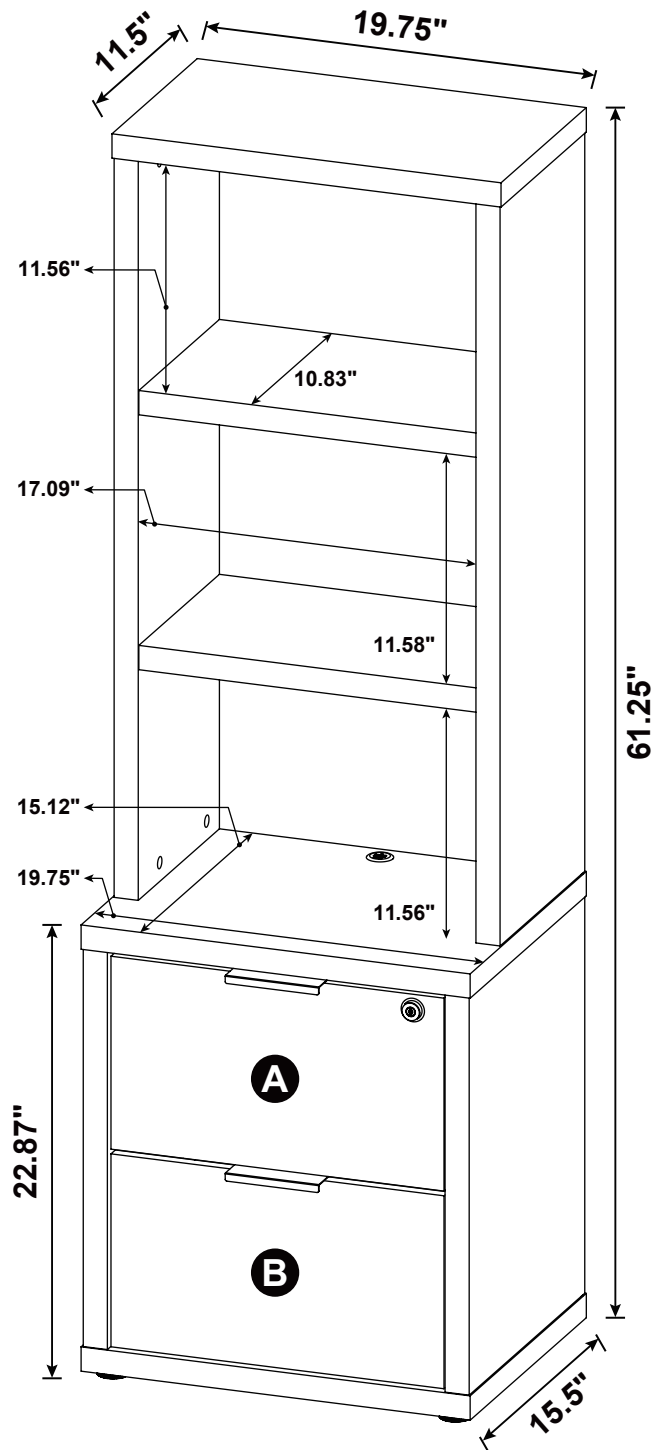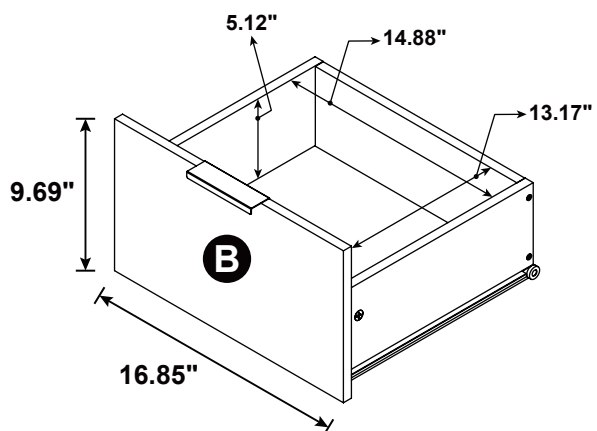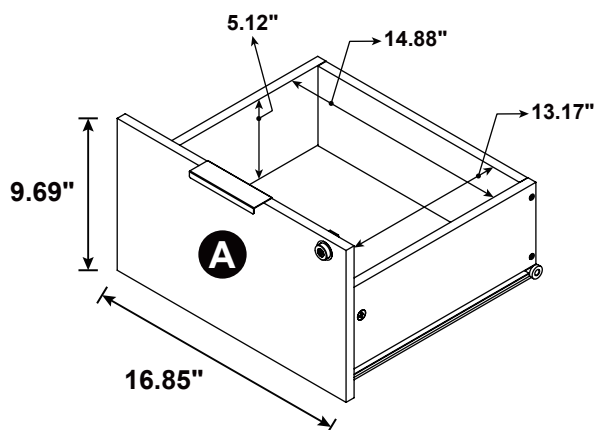

Note : Dimension tolerance $\pm 5\%$

 
ANTI-TIPPING INSTALLMENT INSTRUCTIONS
FURNITURE TIPPING RESTRAINT**WARNING**

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.


This restraint must be screwed to a wood stud on the wall, using the long screw provided.

STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

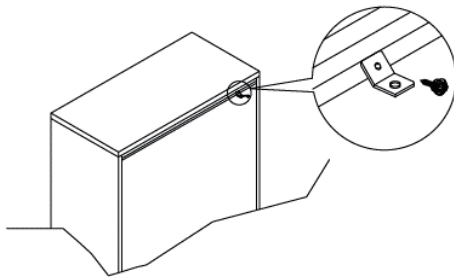**STEP 2**

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

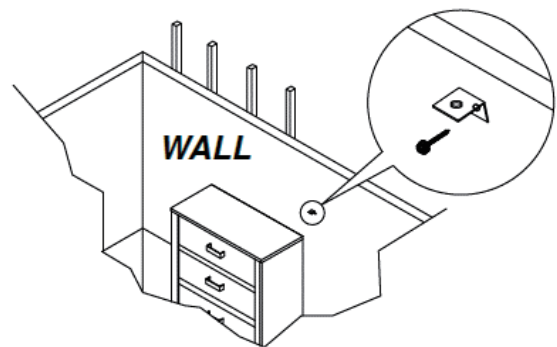**STEP 3**

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

