



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

506781
Sofa

ITEM: **506781**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A SEAT

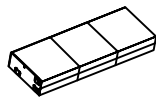


1PC

B LEFT ARM




1PC

C RIGHT ARM

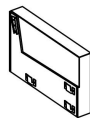


1PC

D BACK

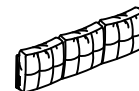

1PC

E CROSSBAR

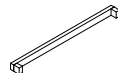

1PC

F LEG



4PCS

HARDWARE IDENTIFICATION

1 PAN HEAD SCREW
(4* 30mm - RBW)



2PCS

2 FLAT WASHER
(1/4"*16* 1.5mm - BLK)



2PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 506781

ASSEMBLY INSTRUCTIONS


STEP 1

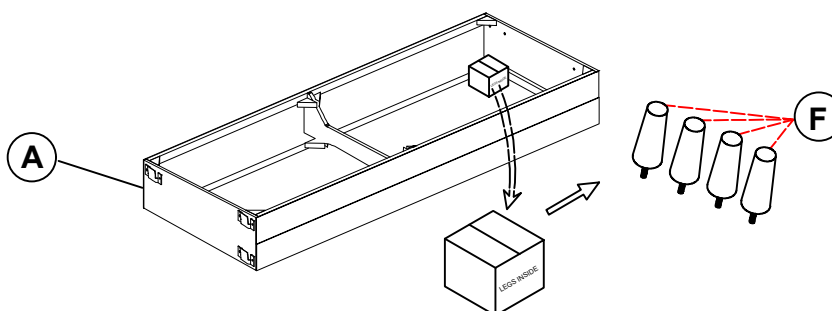



STEP 2

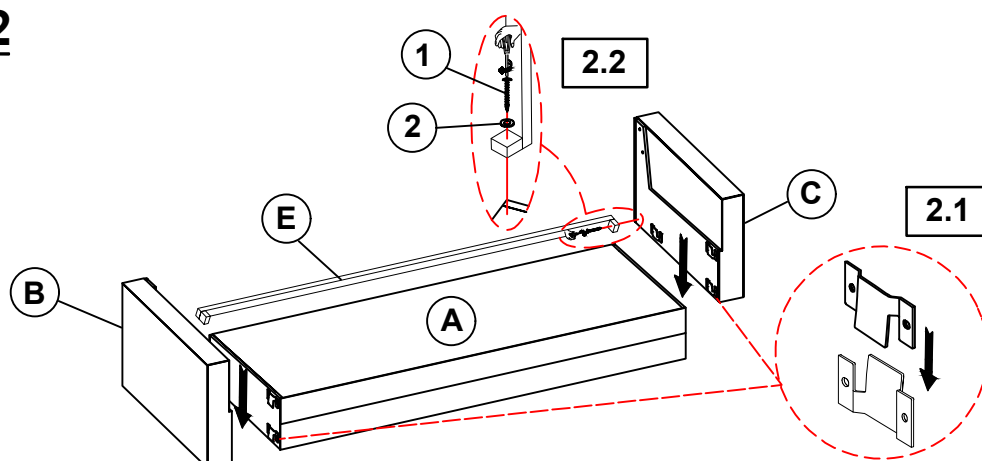


STEP 3

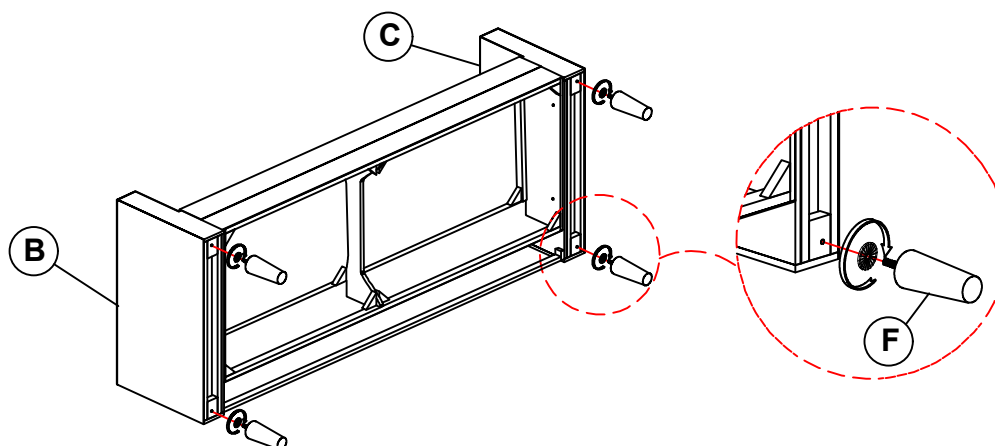

STEP 4 **COMPLETE**

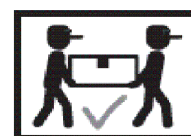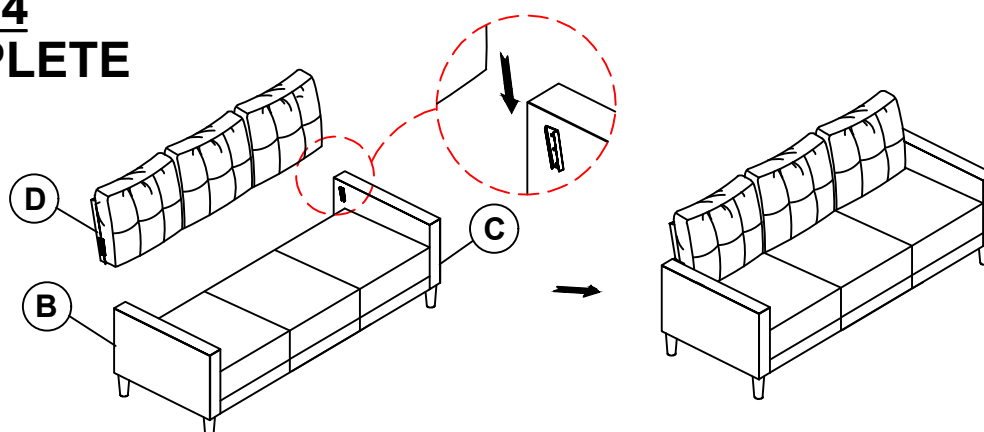

ITEM: **506781**

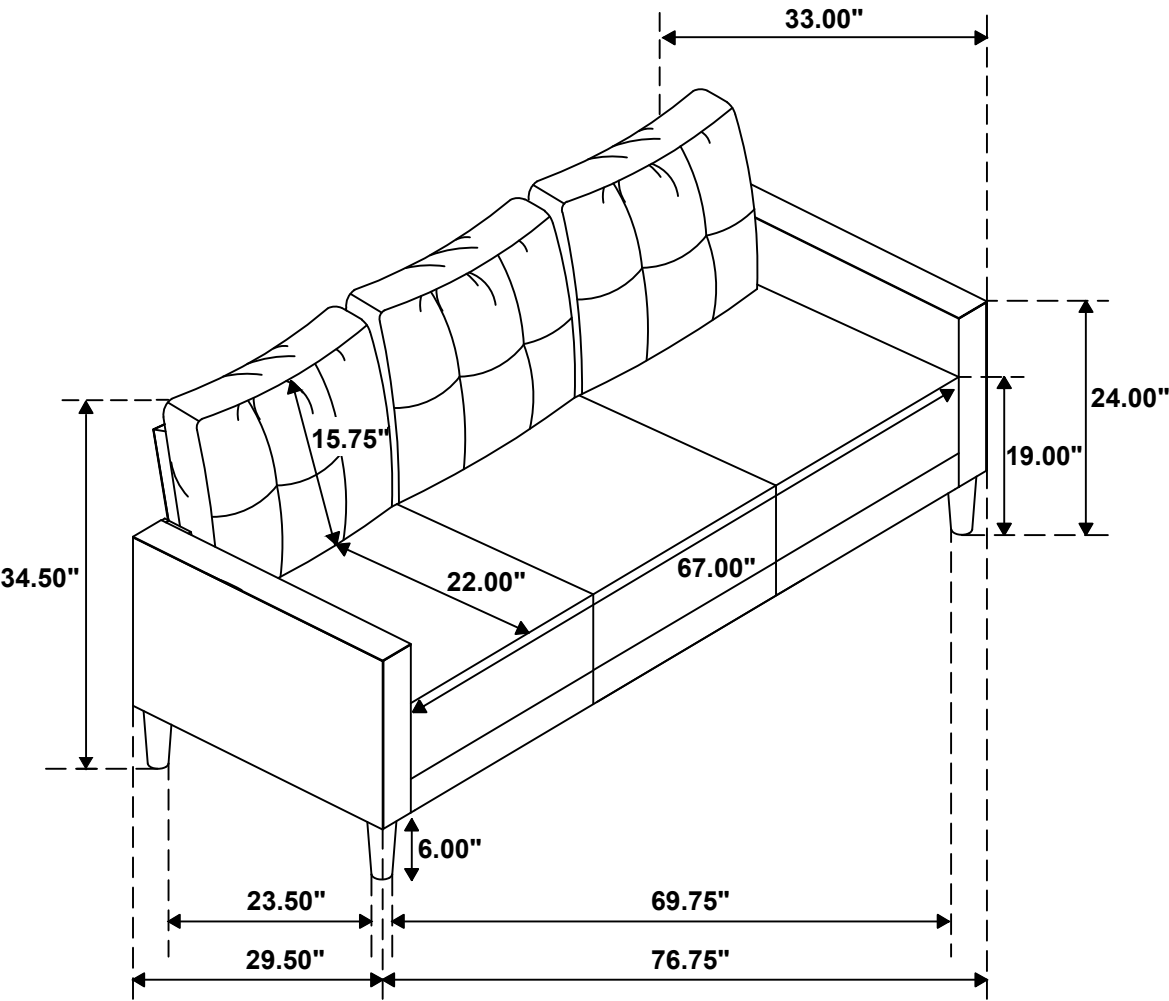

Note: Dimension tolerance $\pm 5\%$