

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

506785 *Sofa* 

REVISION 0: 04/20/2023

PAGE 1 OF 3

#### **ASSEMBLY INSTRUCTIONS**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

### **PARTS IDENTIFICATION**

A	SEAT		1PC	В	LEFT ARM	1PC
С	RIGHT ARM	a a	1PC	D	BACK	1PC
E	CROSSBAR		1PC	F	LEG	4PCS

## **HARDWARE IDENTIFICATION**

1 PAN HEAD SCREW (4\* 30mm - RBW)

Accessor

2PCS

2 FLAT WASHER (1/4"\*16\* 1.5mm - BLK)



2PCS


#### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


# ITEM: 506785 ASSEMBLY INSTRUCTIONS




## STEP 1

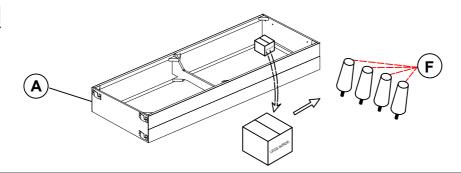


## STEP 2

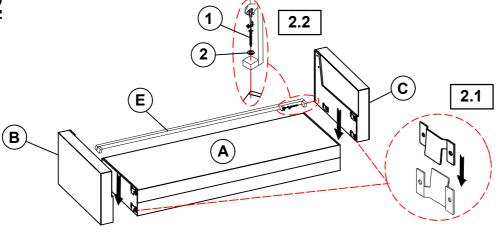

## STEP 3

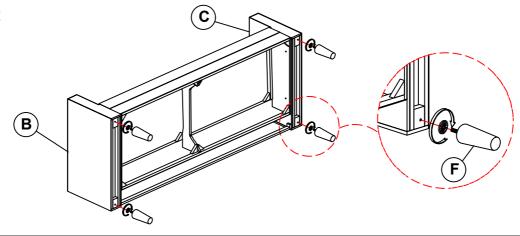



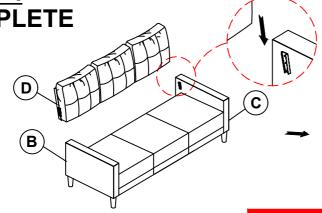






PAGE 3 OF 3



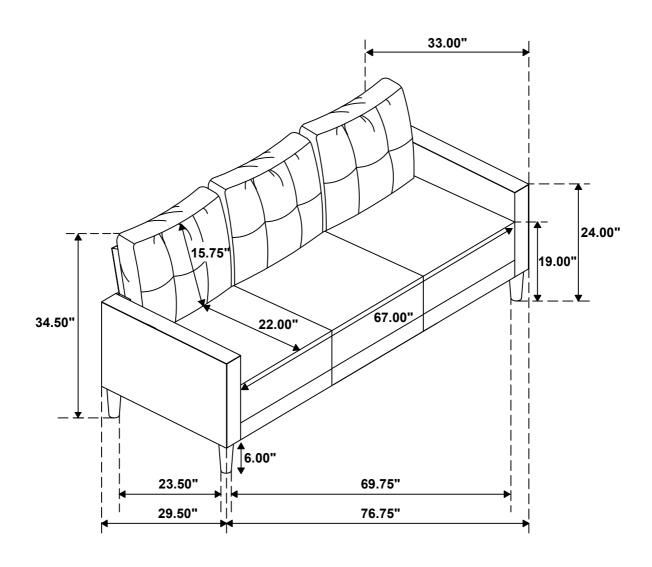

Note: Dimension tolerance ±5%



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

506786 Loveseat

REVISION 0: 04/20/2023

PAGE 1 OF 3

#### **ASSEMBLY INSTRUCTIONS**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

### **PARTS IDENTIFICATION**

A	SEAT		1PC	В	LEFT ARM	1PC
С	RIGHT ARM	000	1PC	D	BACK	1PC
E	CROSSBAR		1PC	F	LEG	4PCS

## **HARDWARE IDENTIFICATION**

1 PAN HEAD SCREW (4\* 30mm - RBW)

(mmm)

2PCS

2 FLAT WASHER (1/4"\*16\* 1.5mm - BLK



2PCS


#### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 506786 ASSEMBLY INSTRUCTIONS





## STEP 1

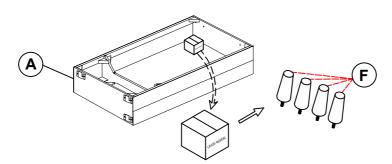

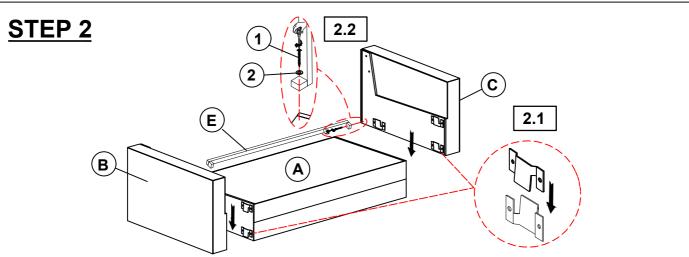


## STEP 3

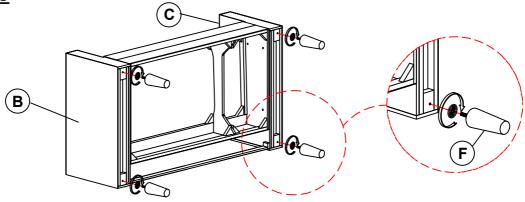

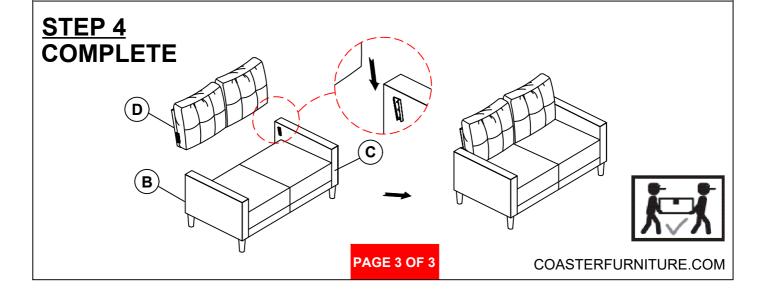



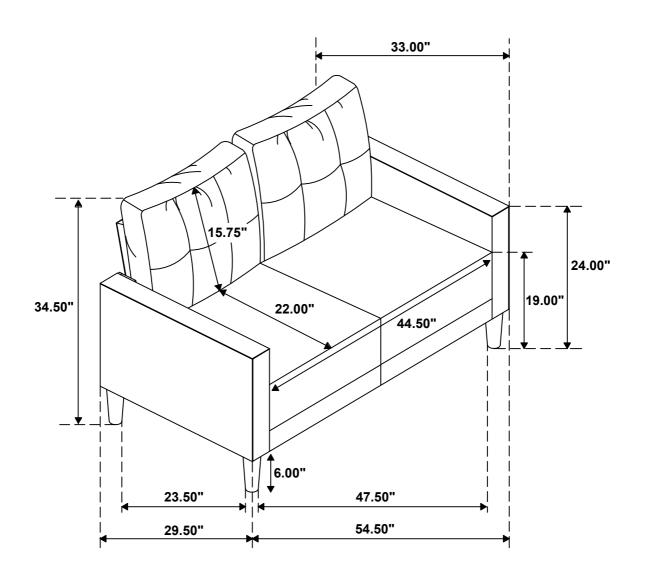

Note: Dimension tolerance ±5%



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

506787 *Chair* 

REVISION 0: 04/20/2023

PAGE 1 OF 3

#### **ASSEMBLY INSTRUCTIONS**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

### **PARTS IDENTIFICATION**

A	SEAT		1PC	В	LEFT ARM	1PC
С	RIGHT ARM	le d	1PC	D	BACK	1PC
E	CROSSBAR		1PC	F	LEG	4PCS

## **HARDWARE IDENTIFICATION**

1	PAN HEAD SCREW
	(4* 30mm - RBW)

(mmm

2PCS

2 FLAT WASHER (1/4"\*16\* 1.5mm - BLK)



2PCS


#### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


# ITEM: 506787 ASSEMBLY INSTRUCTIONS




## STEP 1

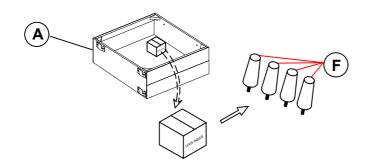


## STEP 2

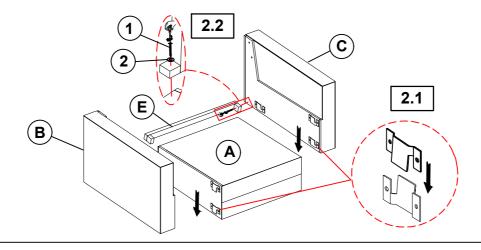


## STEP 3

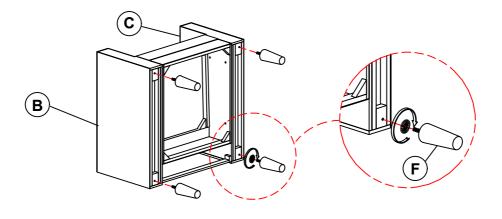

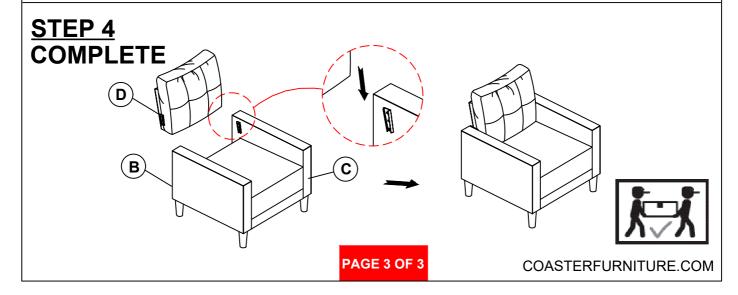



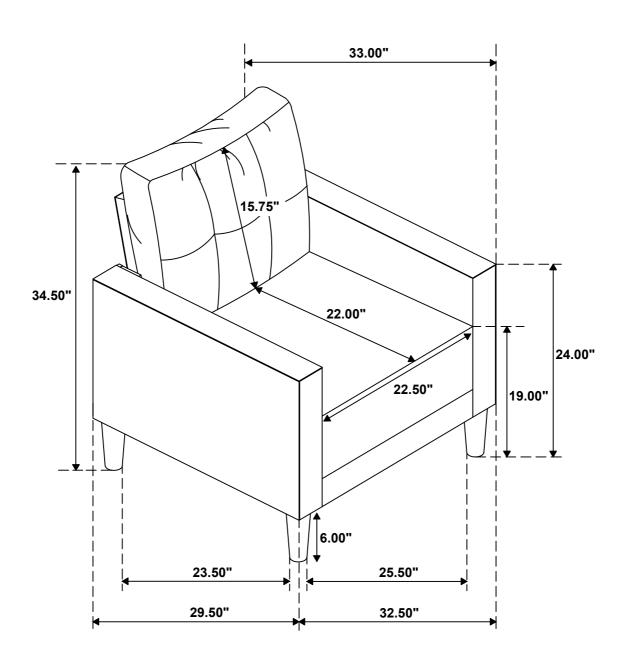

Note: Dimension tolerance ±5%