



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

508801
SOFA

REVISION 0: 07/29/2024

PAGE 1 OF 5

COASTERFURNITURE.COM

ITEM: 508801

ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

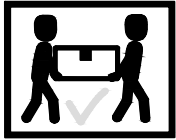


ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

 A SOFA BASE



1PC

B BACK CUSHION



2PCS

C LEG



4PCS

D MIDDLE LEG



1PC

Z HAREWARE IDENTIFICATION

1 WASHER
(M6-SR)



8 PCS

2 BOLT
(M6*30-GD)



8 PCS

 
3 ALLEN KEY
(M6-GD)




1 PC

ITEM: 508801

ASSEMBLY INSTRUCTIONS
STEP 1

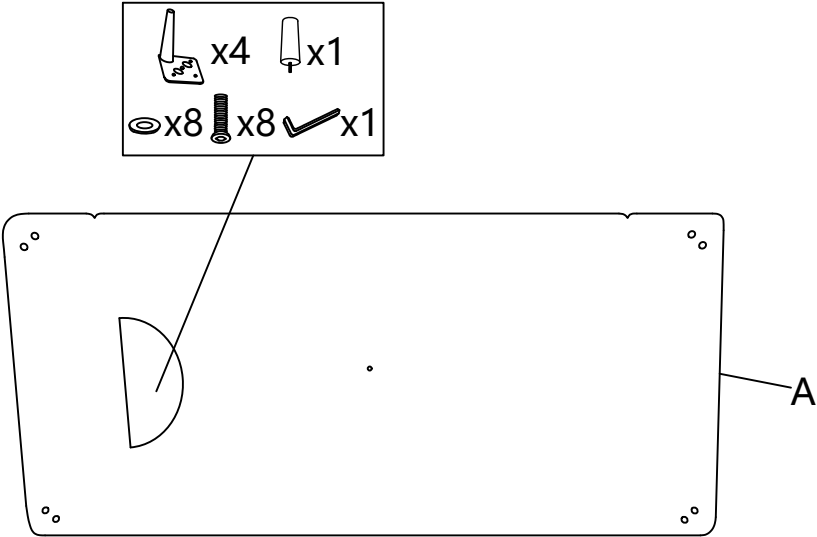


 STEP 2

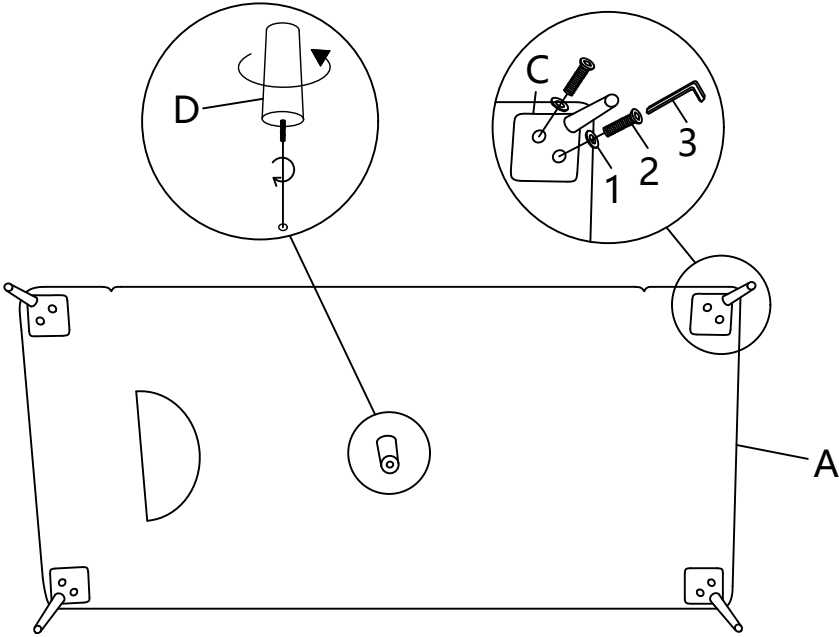


ITEM: 508801

 
ASSEMBLY INSTRUCTIONS
STEP 3

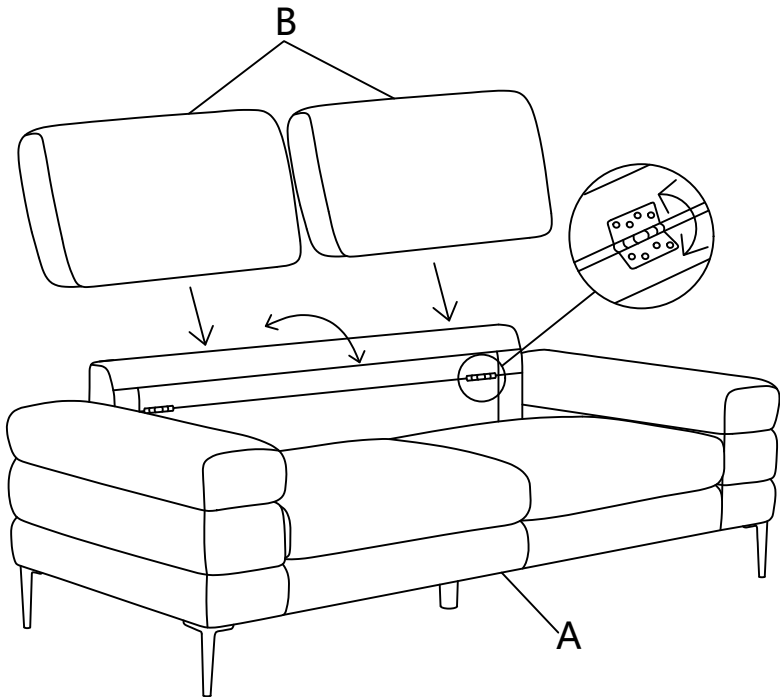

 STEP 4

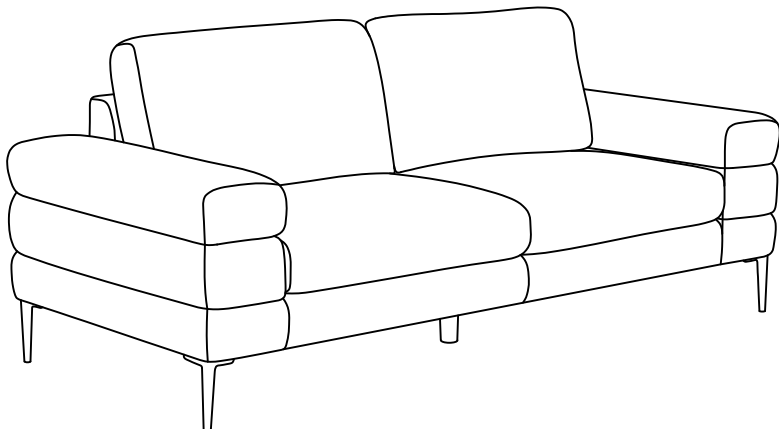

ITEM: 508801

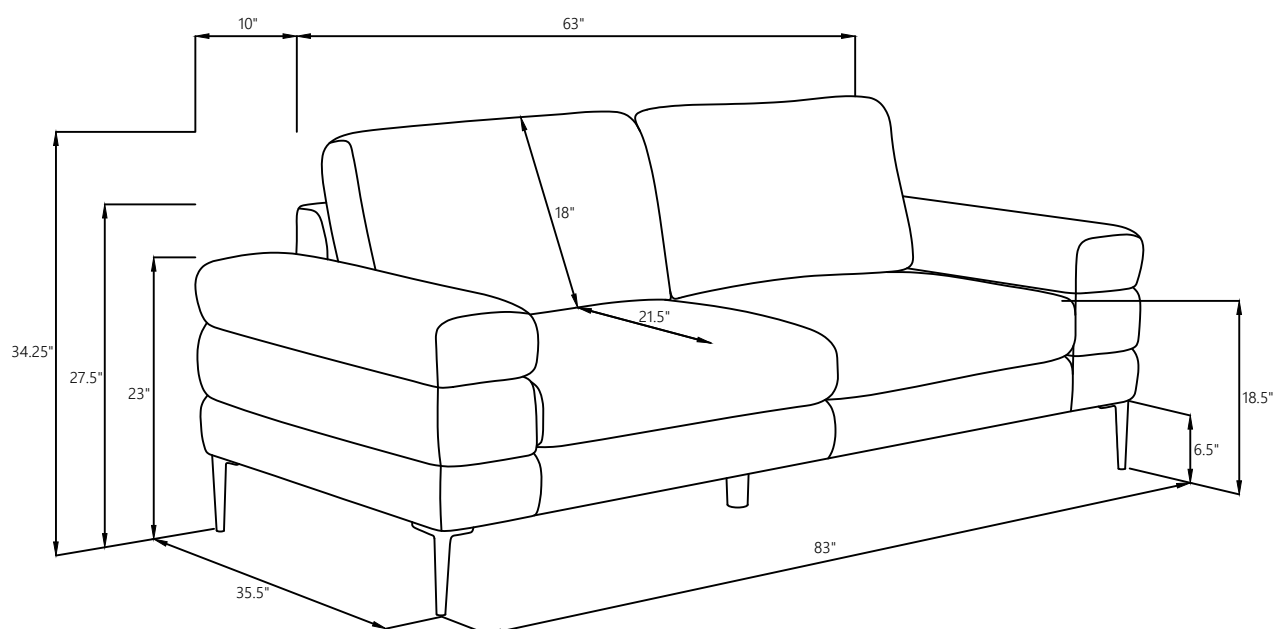 

Note:Dimension tolerance $\pm 5\%$





ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

REVISION 0: 07/29/2024

PAGE 1 OF 5

508802
LOVE SEAT

COASTERFURNITURE.COM

ITEM: 508802

ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

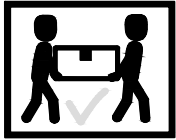

ASSEMBLY TIME

10 MINUTES



PARTS IDENTIFICATION

A LOVESEAT BASE



 
1PC

B BACK CUSHION



2PCS

C LEG



4PCS

Z HAREWARE IDENTIFICATION

1 WASHER
(M6-SR)



8 PCS

2 BOLT
(M6*30-GD)



8 PCS

 
3 ALLEN KEY
(M6-GD)




1 PC

ITEM: 508802

ASSEMBLY INSTRUCTIONS
STEP 1

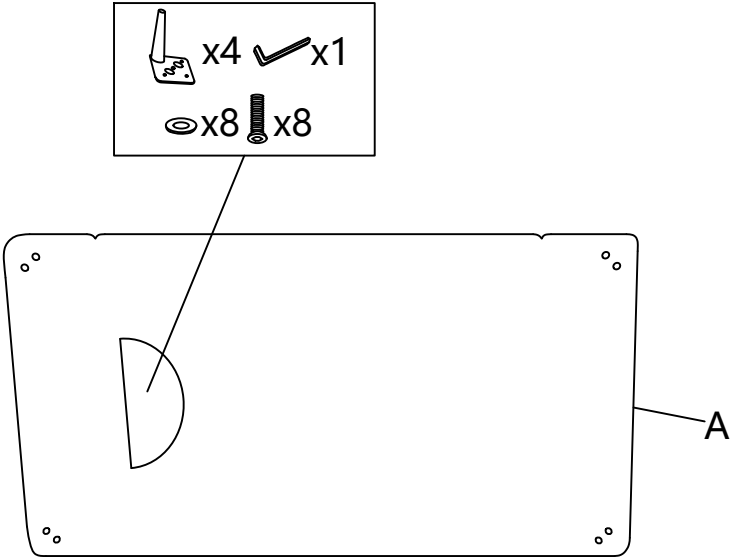


 STEP 2

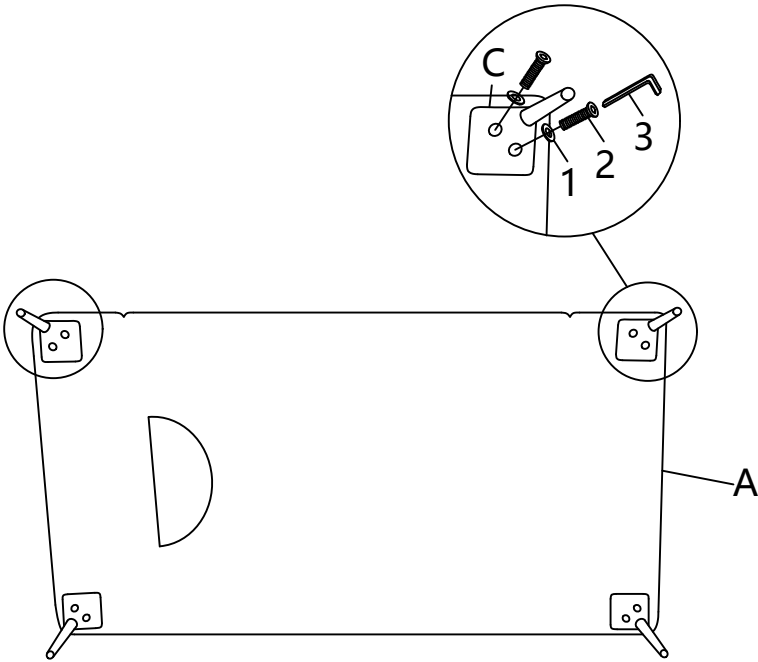


ITEM: 508802

 
ASSEMBLY INSTRUCTIONS
STEP 3

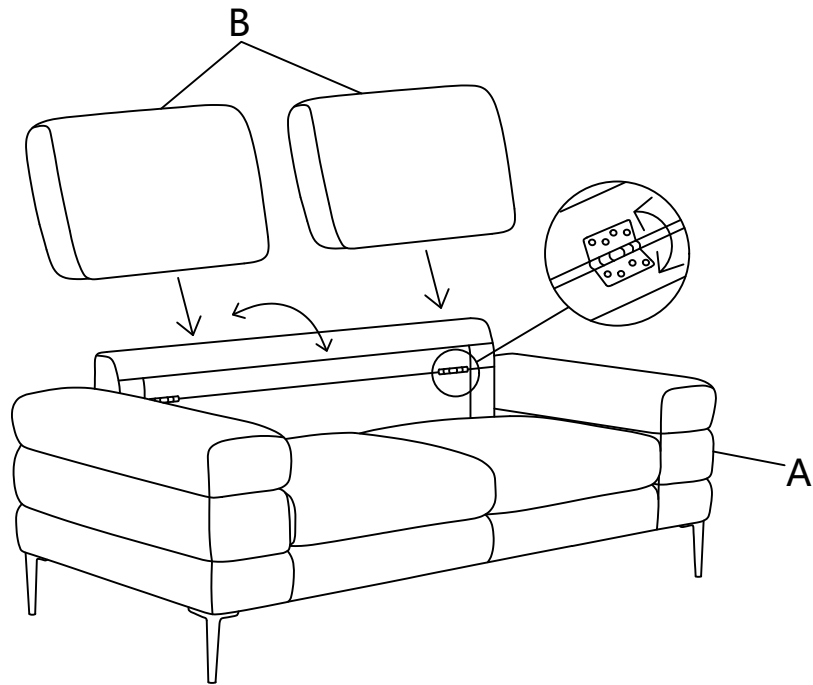

 STEP 4

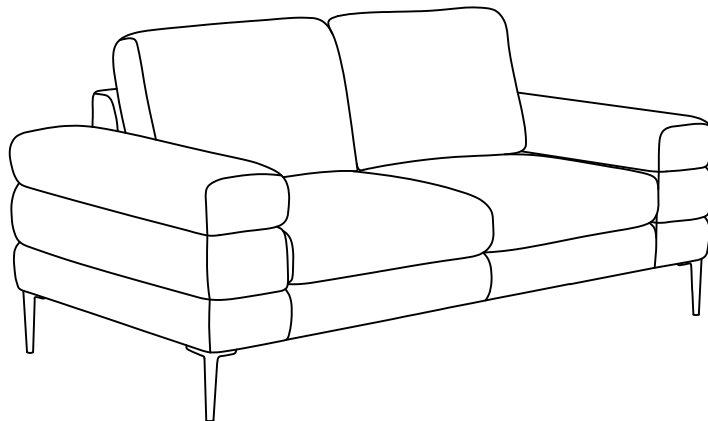

ITEM: 508802

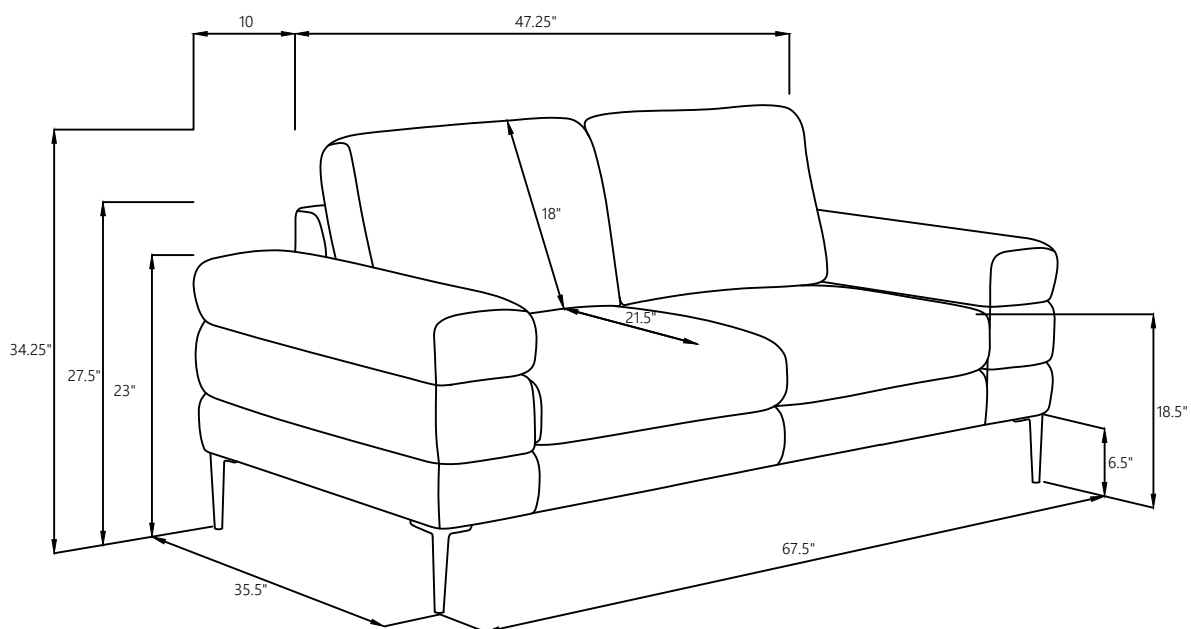 

Note:Dimension tolerance $\pm 5\%$





ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

ITEM: 508803

ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

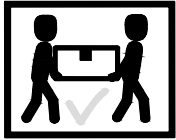

ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A CHAIR BASE



 
1PC

B BACK CUSHION



1PC

C LEG



4PCS

Z HAREWARE IDENTIFICATION

1 WASHER
(M6-SR)



8 PCS

2 BOLT
(M6*30-GD)



8 PCS

 
3 ALLEN KEY
(M6-GD)




1 PC

ITEM: 508803

ASSEMBLY INSTRUCTIONS
STEP 1

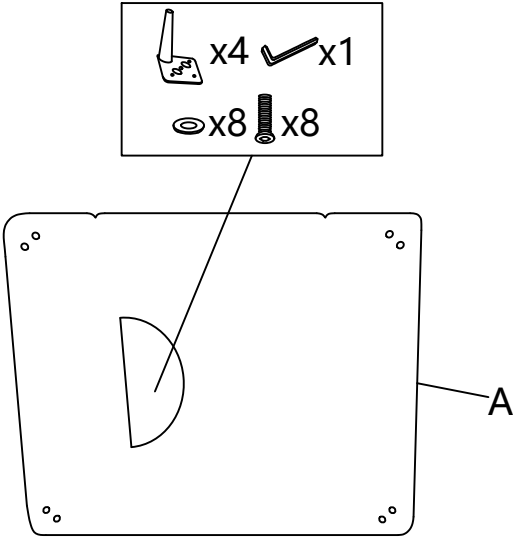


 STEP 2

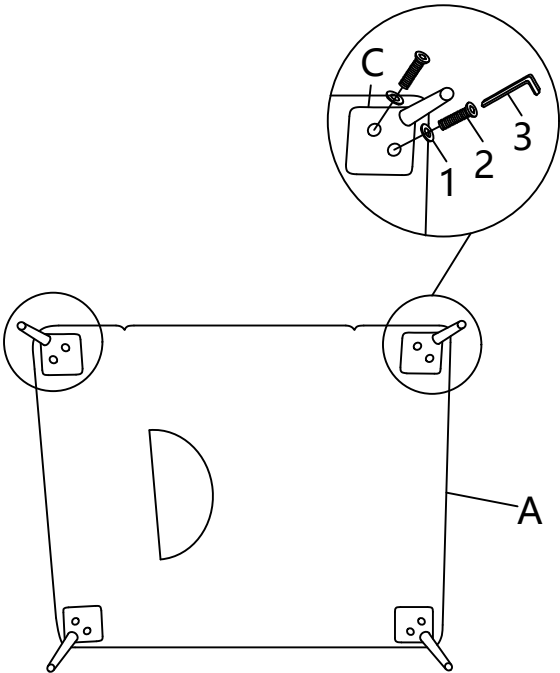


ITEM: 508803

 
ASSEMBLY INSTRUCTIONS
STEP 3

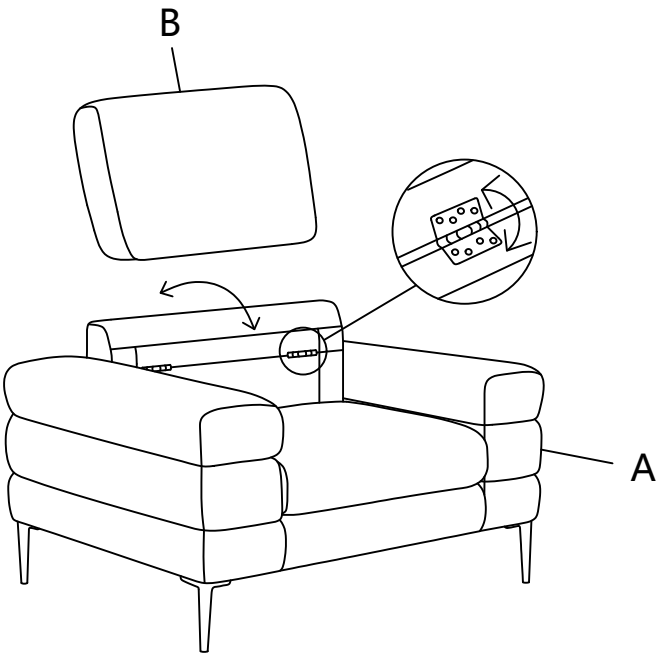

 STEP 4

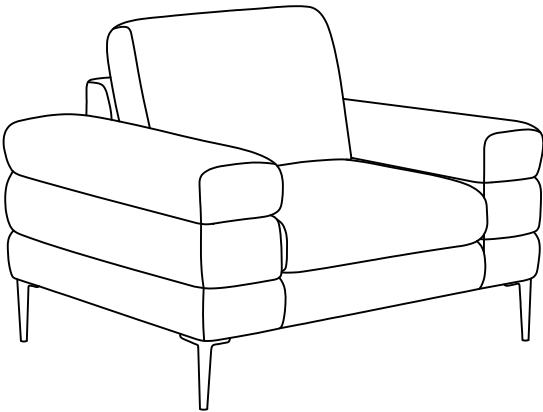

ITEM: 508803

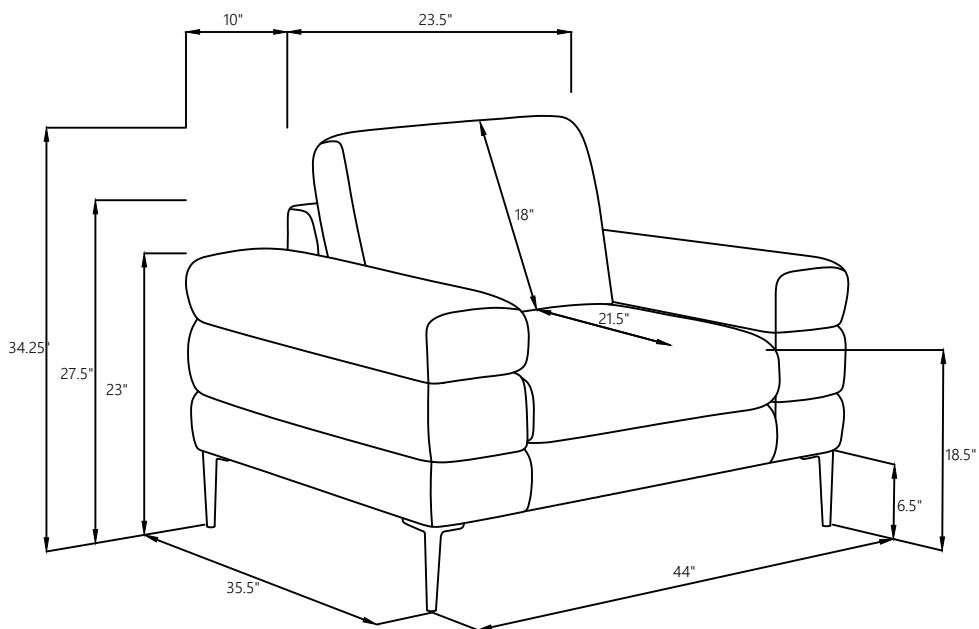 

Note:Dimension tolerance $\pm 5\%$

