



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

509481 SOFA

REVISION 0:04/12/2020
REVISION 1:10/22/2022

ITEM :509481



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING !

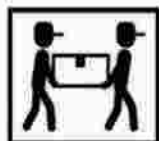


- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home uses only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

A		SOFA	1PC
B		LEG	4PCS
C		MIDDLE LEG	1PC

HARDWARE IDENTIFICATION


1	SCREW	 M8*20MM	12PCS
2	ALLEN KEY	 M6	1PC
3	WASHER		1PC

ITEM:509481


ASSEMBLY INSTRUCTIONS




STEP1

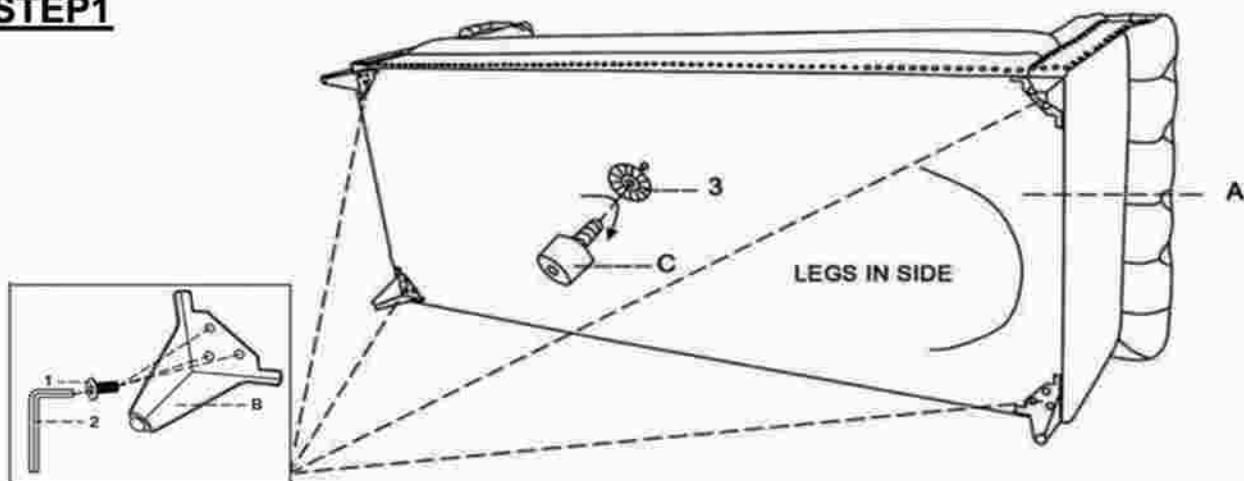

STEP2

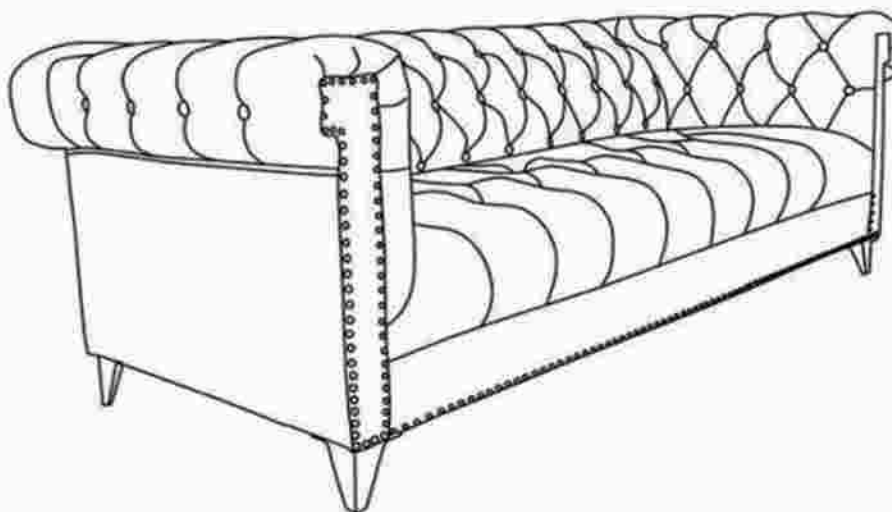

ITEM: 509481

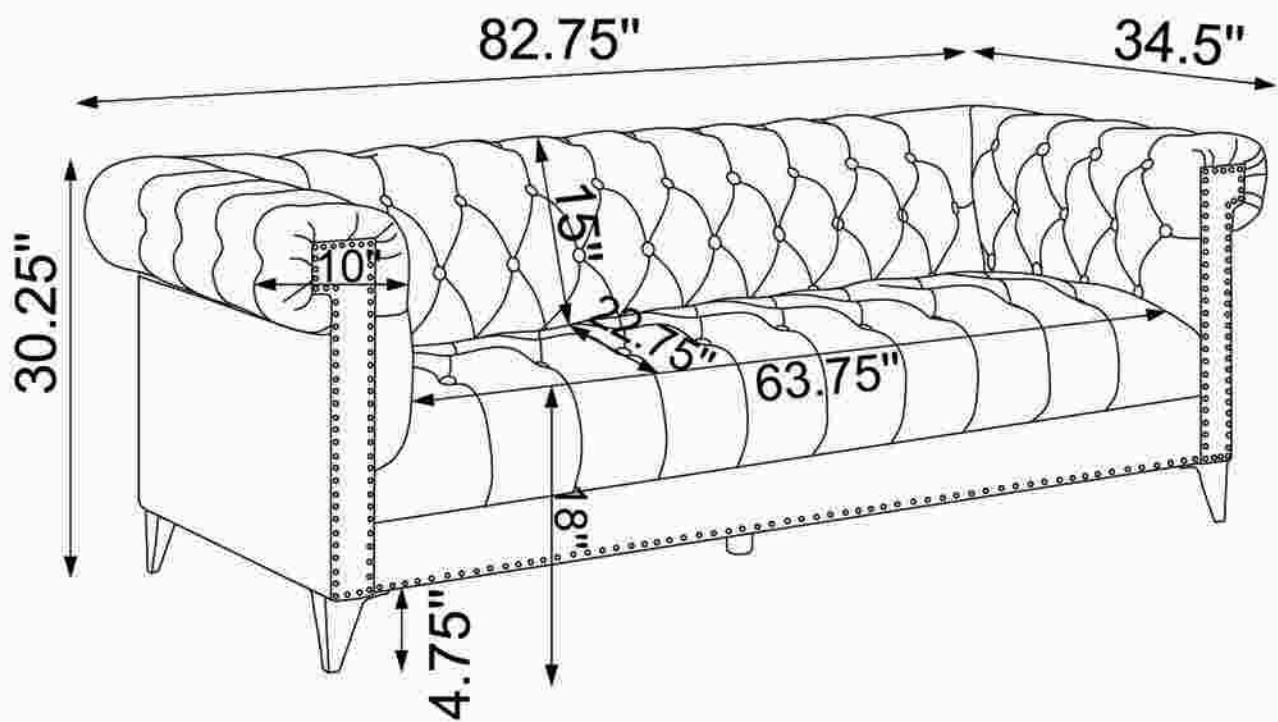

Note : Dimension tolerance $\pm 5\%$