



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

509897 ARMLESS CHAIR

ITEM: 509897

ASSEMBLY INSTRUCTIONS

 


- ASSEMBLY TIPS:**
- 1. Remove hardware from box and sort by size.
 - 2. Please check to see that all hardware and parts are present prior to start of assembly.
 - 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

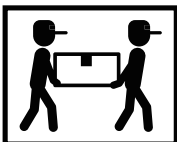

ASSEMBLY TIME **5 MINUTES**

PARTS IDENTIFICATION


	PART NAME	FIGURE	QUANTITY
A	ARMLESS CHAIR BASE		1PC
B	ARMLESS CHAIR SEAT CUSHION		1PC
C	ARMLESS CHAIR BACK CUSHION		1PC
D	LEG		4PCS
E	PILLOW		2PCS

ITEM: 509897




ASSEMBLY INSTRUCTIONS

 
STEP 1 Turn over the item and take out the legs from zippered pouch

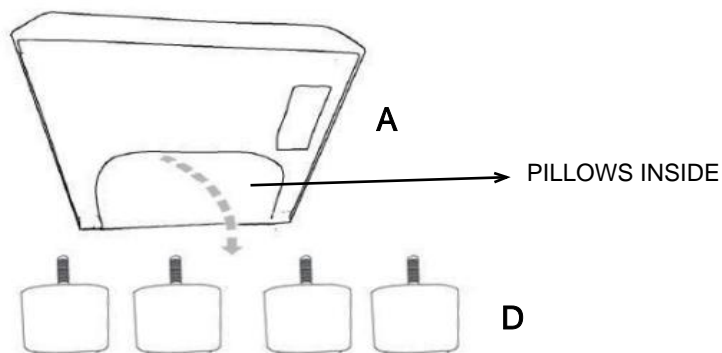

 STEP 2 Install the legs as pictures show

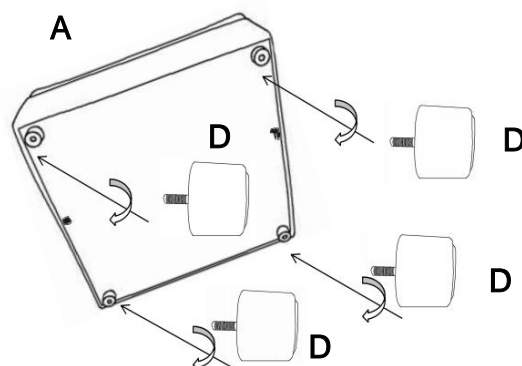


 STEP 3 Please remove the wood block with screwdriver,do not use a hammer

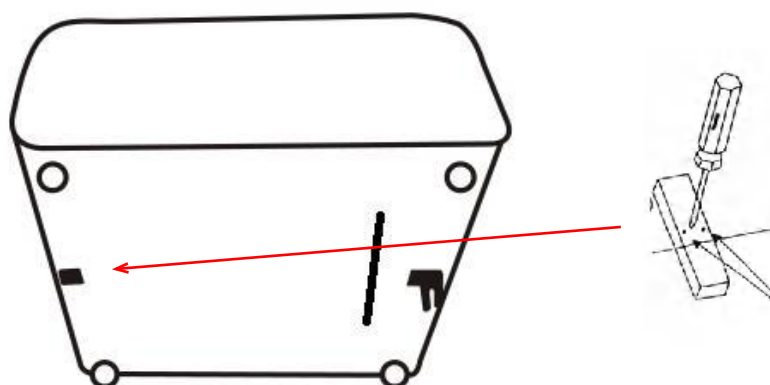

STEP 4

 COMPLETE

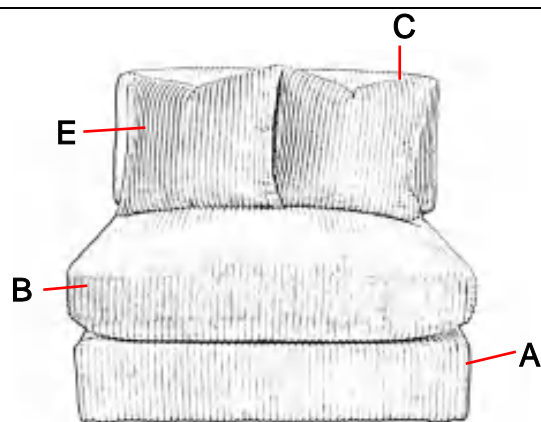


ITEM: 509897

ASSEMBLY INSTRUCTIONS




 
STEP 5 Rotate the metal clips

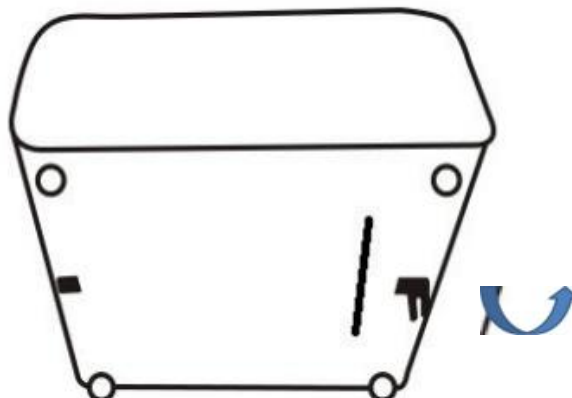



STEP 6 Put the chaise and loveseat closer
509899B1

509899B2

  509897

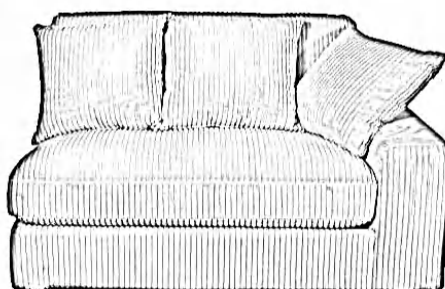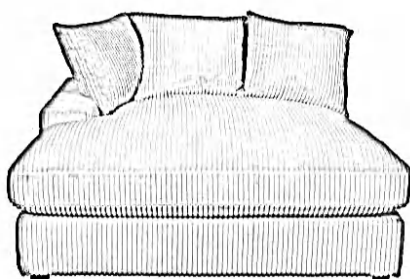

  STEP 7 Insert the metal clips to connect other units as pictures show


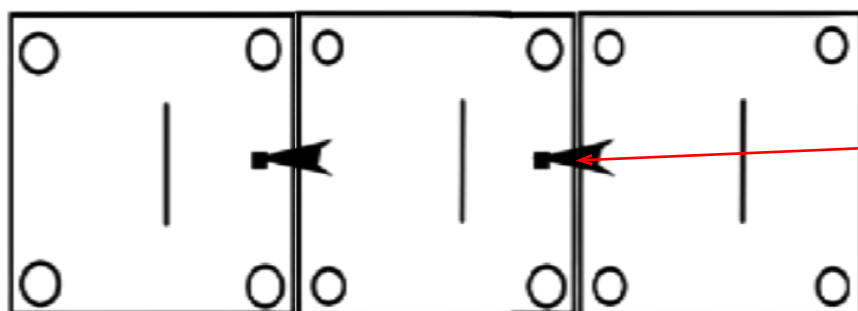


STEP 8



COMPLETE

OPTION1

  OPTION2

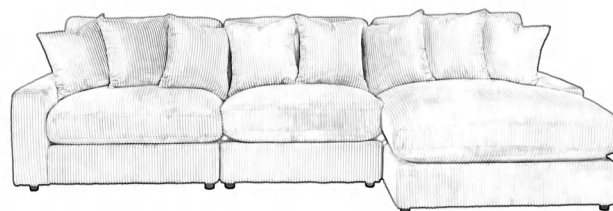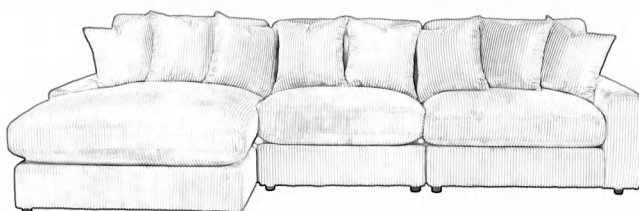

ITEM: 509897

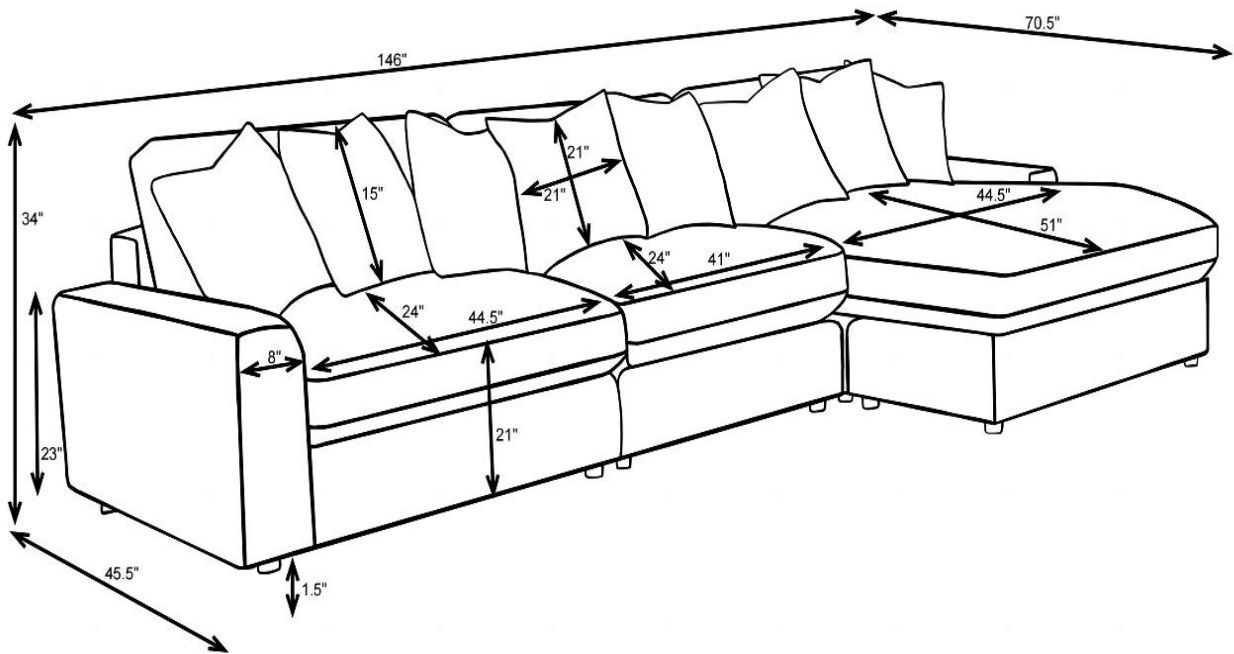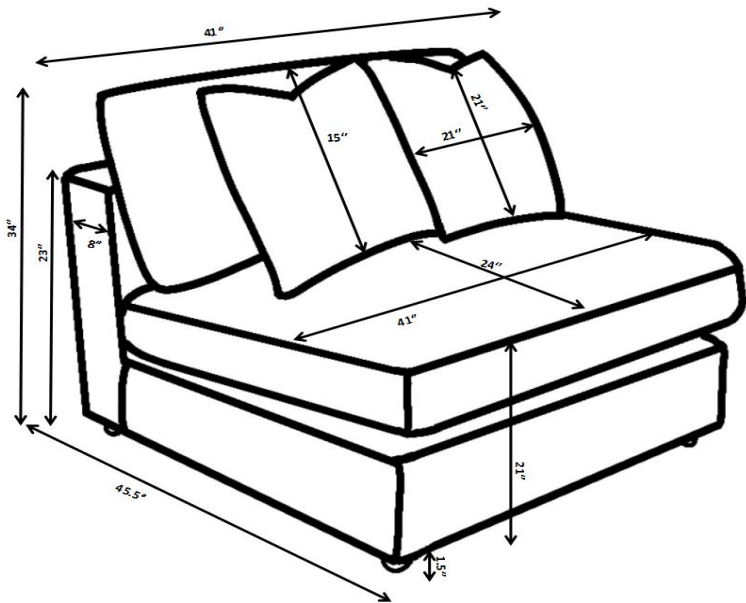  

Note : Dimension tolerance $\pm 5\%$

