



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

511211
Sofa

ITEM: 511211



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

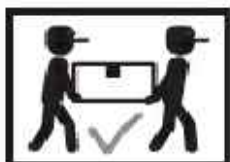

ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A SEAT



 
1PC

B BACK




1PC

C RIGHT ARM



1PC

 D LEFT ARM



1PC

E LEG



4PCS

HARDWARE IDENTIFICATION

1 PLASTIC WASHER
(Ø50 x 2mm - BLK)




4PCS

ITEM: **511211**


ASSEMBLY INSTRUCTIONS





STEP 1

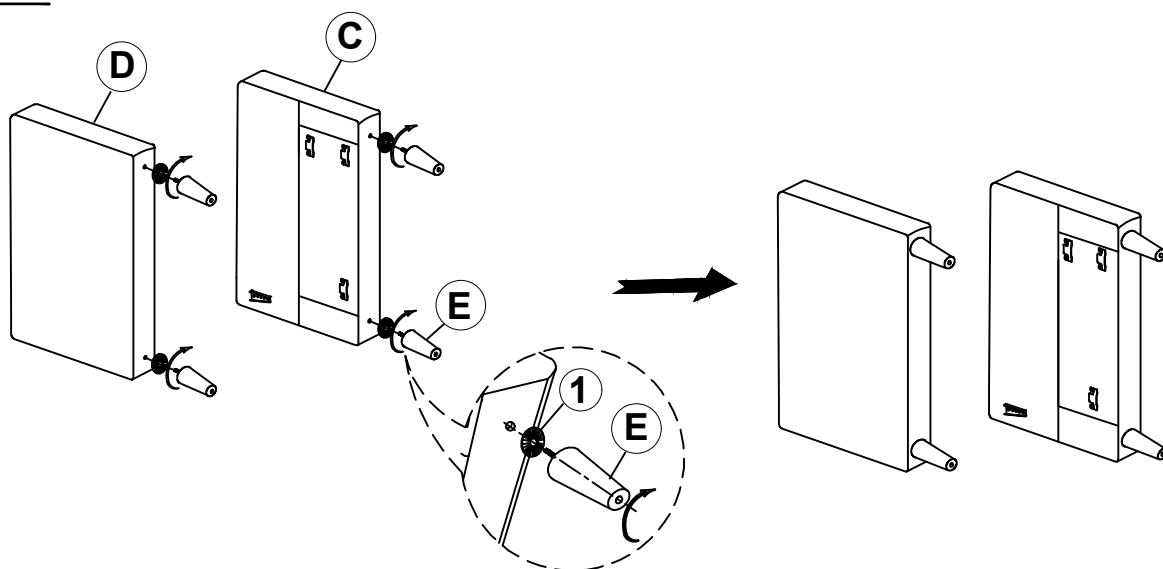


STEP 2

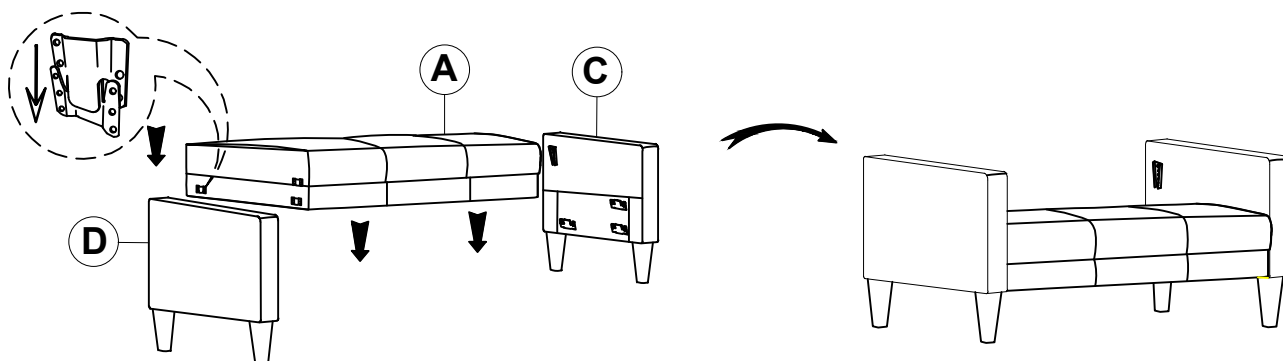

STEP 3 **COMPLETE**

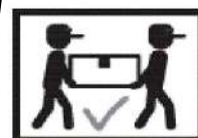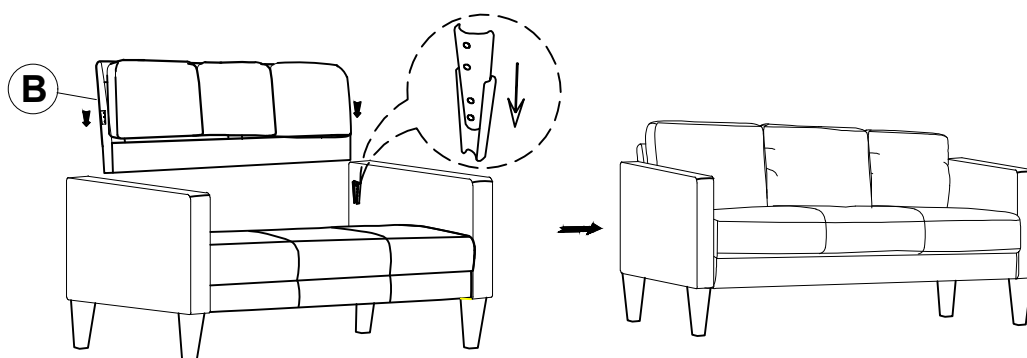

ITEM: **511211**

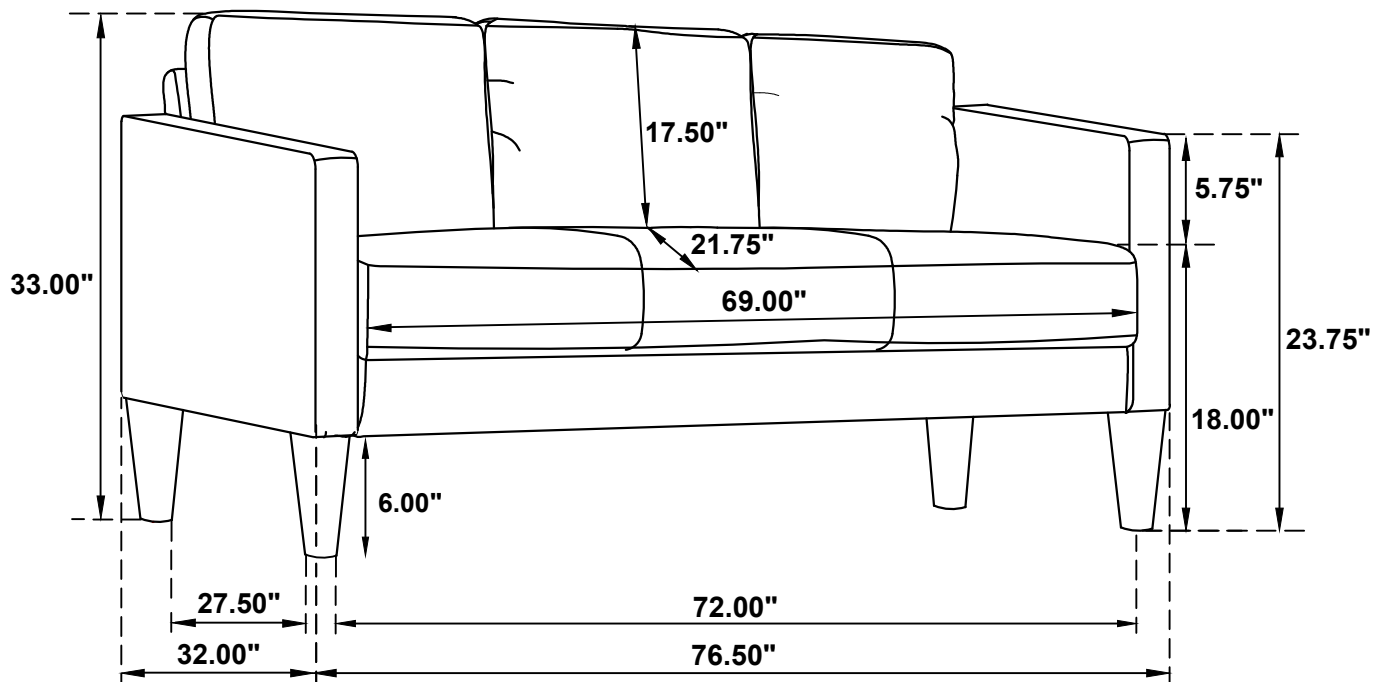

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

511212
Loveseat

ITEM: 511212



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

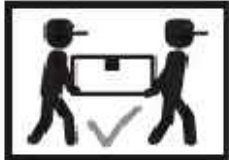

ASSEMBLY TIME

10 MINUTES

 
PARTS IDENTIFICATION

A SEAT




1PC

B BACK




1PC

 C RIGHT ARM



1PC

 D LEFT ARM



1PC

E LEG



4PCS

HARDWARE IDENTIFICATION

1 PLASTIC WASHER
(Ø50 x 2mm - BLK)




4PCS

ITEM: **511212**


ASSEMBLY INSTRUCTIONS





STEP 1

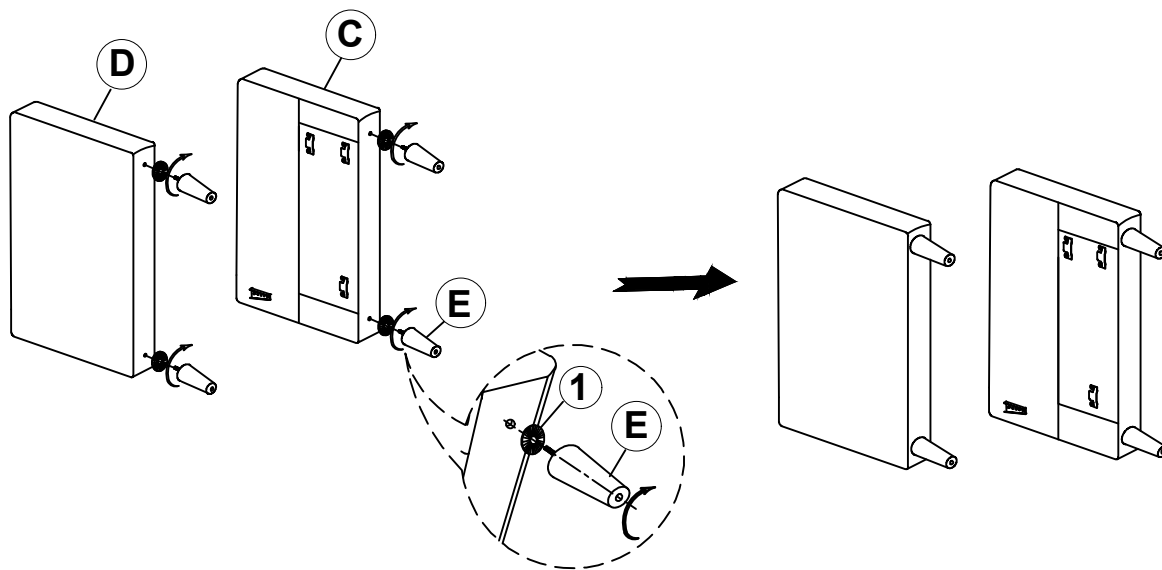


STEP 2

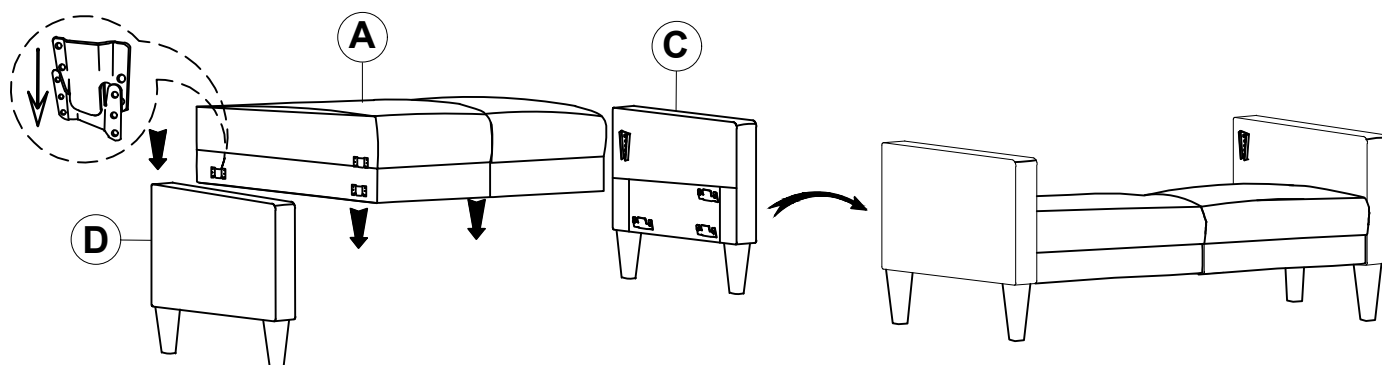

STEP 3 **COMPLETE**

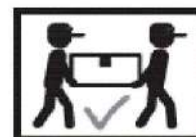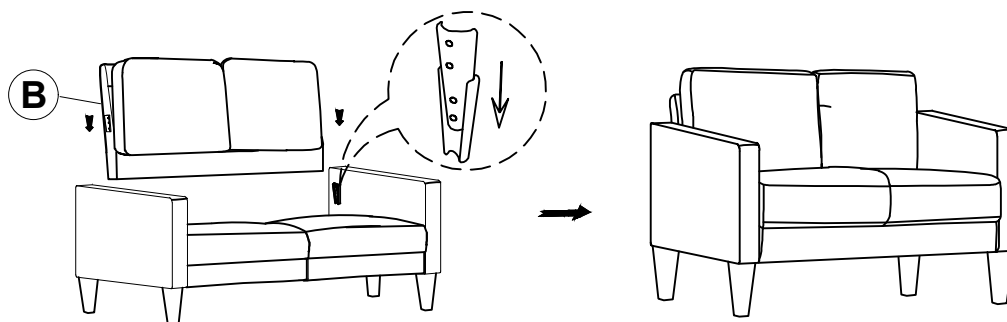

ITEM: **511212**

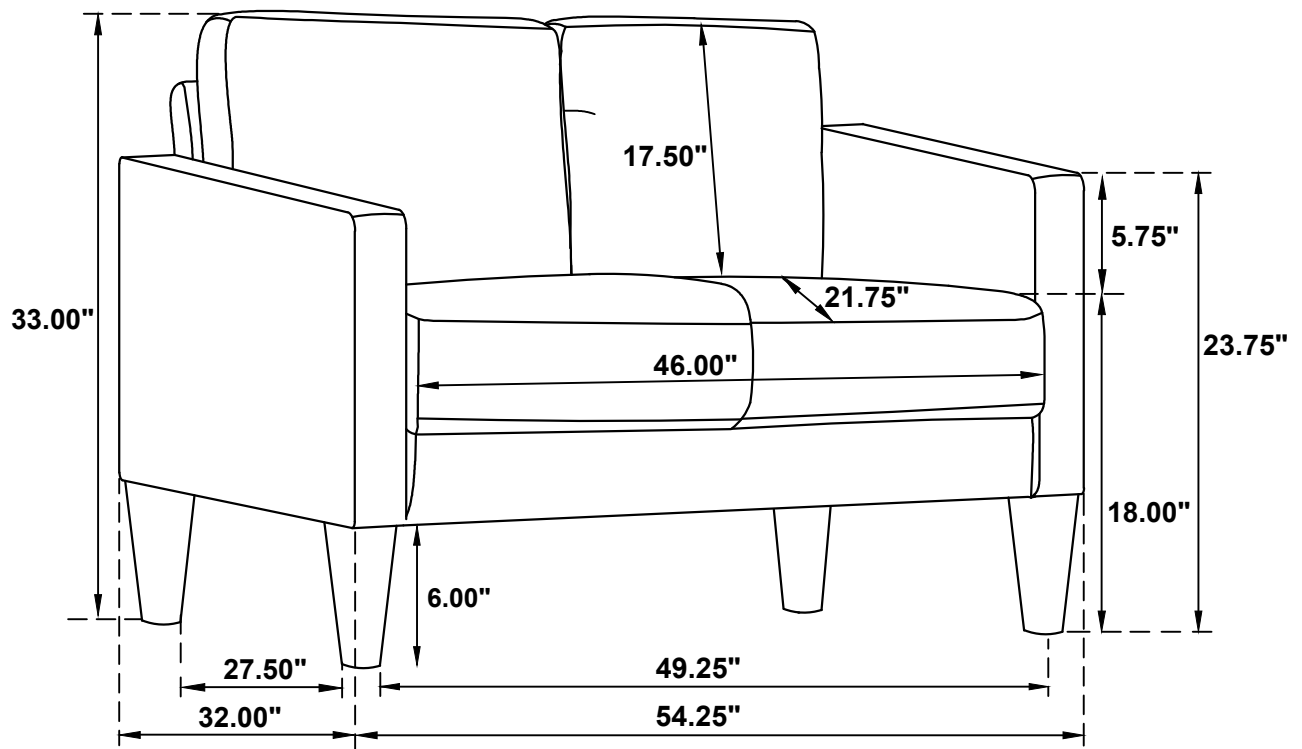

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

511213
Chair

ITEM: 511213



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

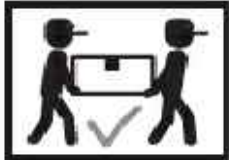

ASSEMBLY TIME

10 MINUTES

 
PARTS IDENTIFICATION

A SEAT




1PC

B BACK




1PC

 C RIGHT ARM



1PC

 D LEFT ARM



1PC

E LEG



4PCS

HARDWARE IDENTIFICATION

1 PLASTIC WASHER
(Ø50 x 2mm - BLK)




4PCS

ITEM: **511213**


ASSEMBLY INSTRUCTIONS





STEP 1

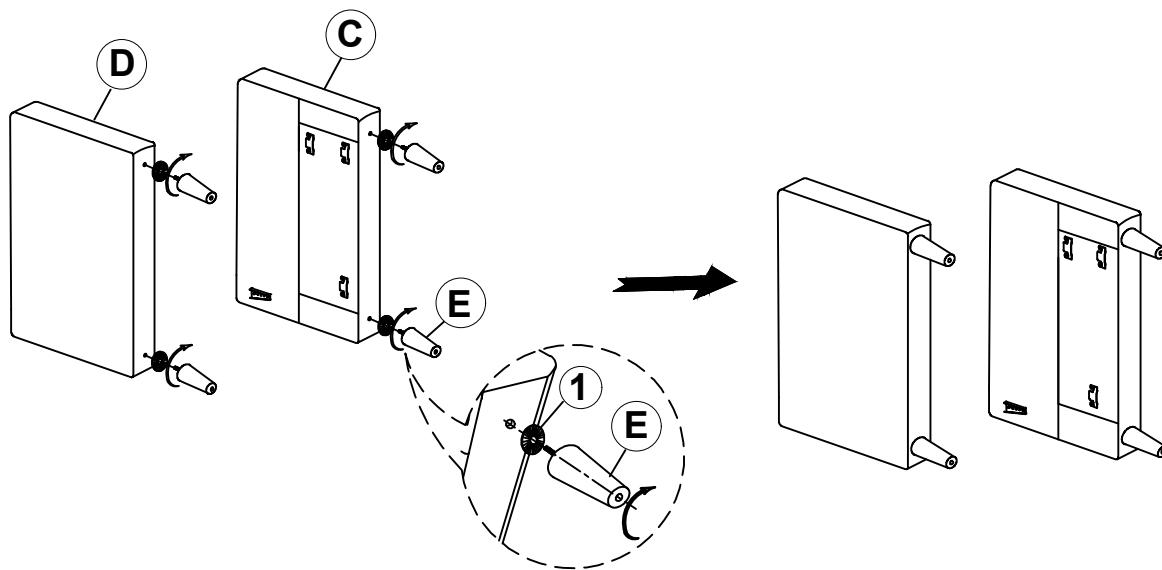


STEP 2

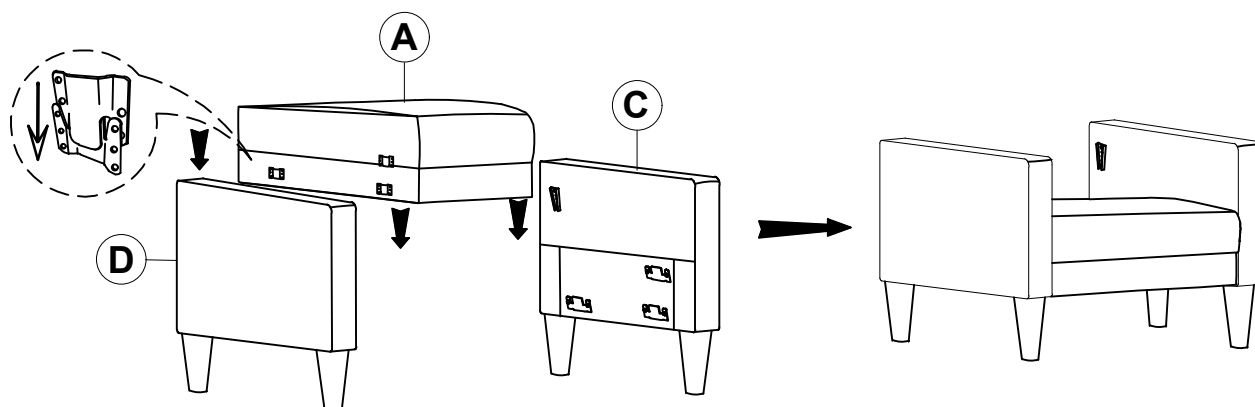

STEP 3 **COMPLETE**

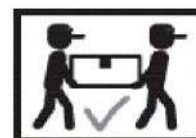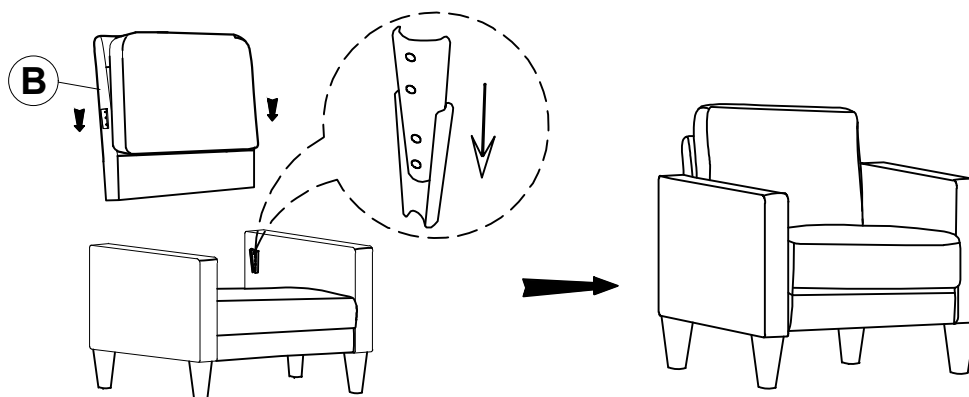

ITEM: **511213**

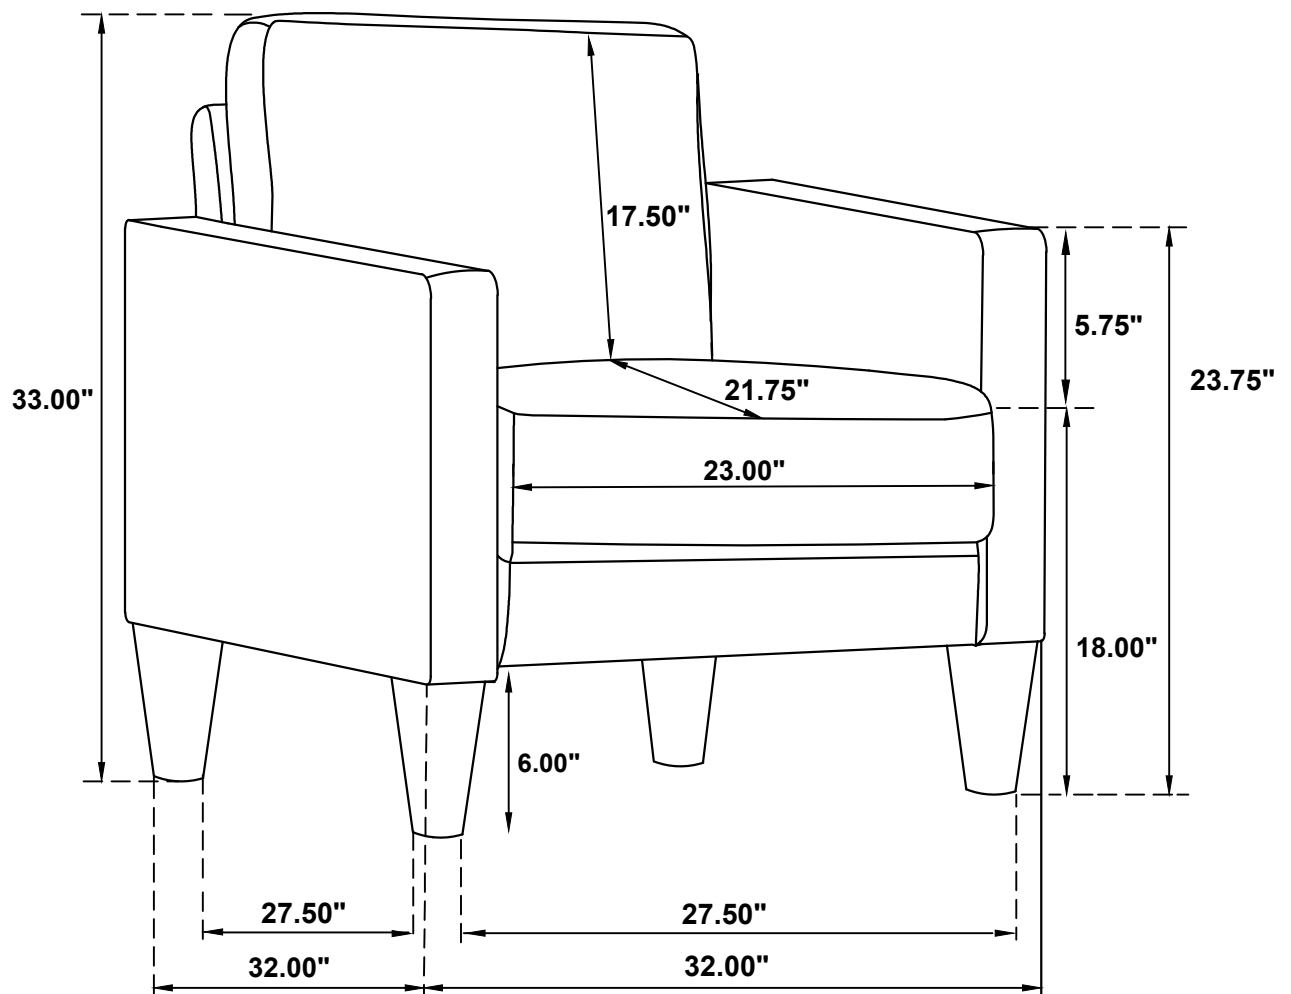

Note: Dimension tolerance $\pm 5\%$