



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

551931
Armless Chair

ITEM: 551931



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 


ASSEMBLY TIME

5 MINUTES


PARTS IDENTIFICATION

A ARMLESS CHAIR

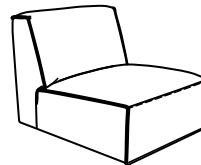

1PC

 B LEG




4PCS

ITEM: **551931**


ASSEMBLY INSTRUCTIONS



 STEP 1

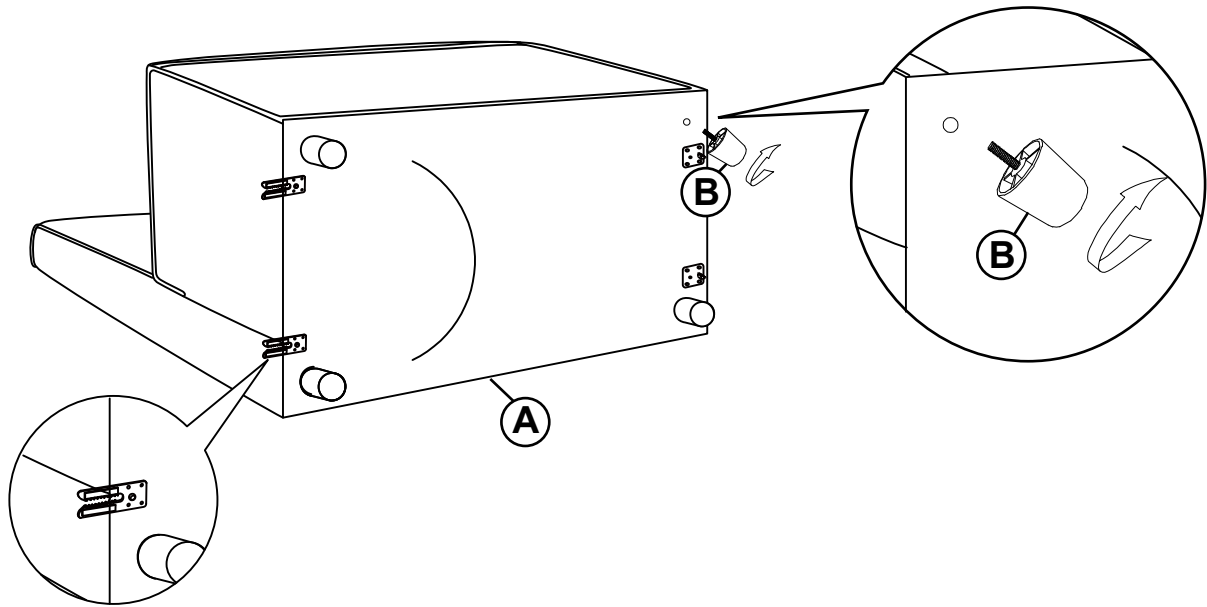

 STEP 2 COMPLETE

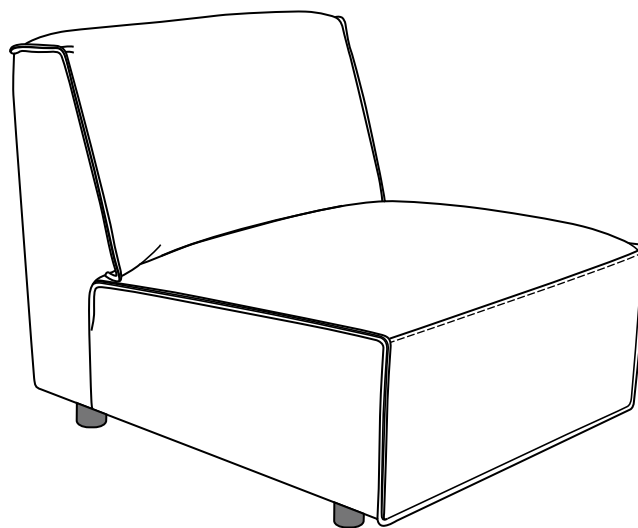


ITEM: 551931

ASSEMBLY INSTRUCTIONS



 
STEP 3

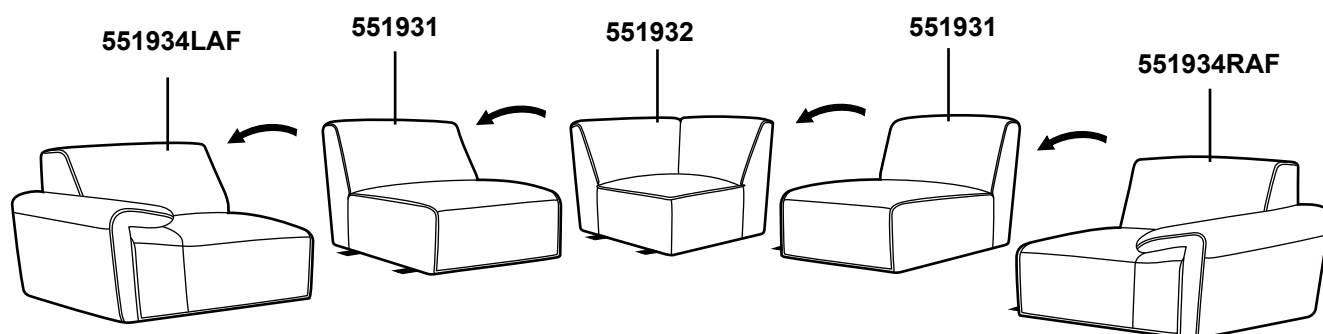

CONNECTOR LOCATION



 
FRONT VIEW

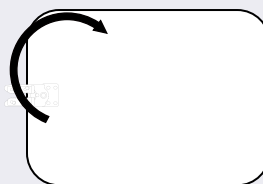

UNDERSIDE - INNER/LEFT SIDE


1

 ROTATE

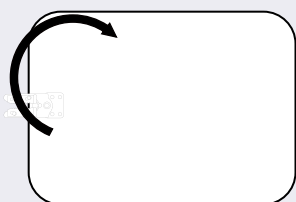


2

 ALIGN / LOCK

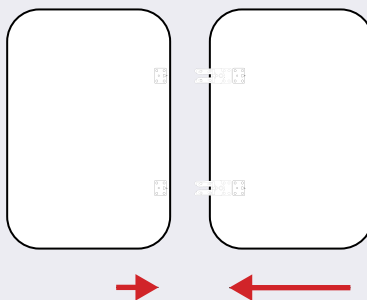


3


 
LIFT / SEPARATE

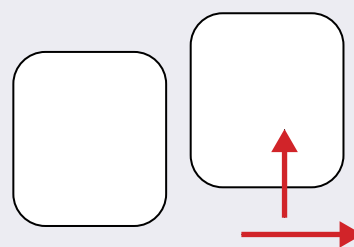

 STEP 4

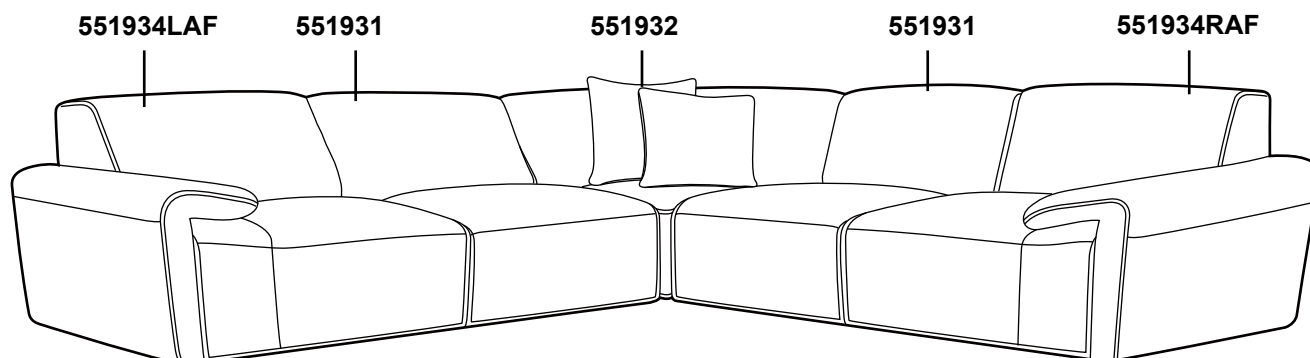

ITEM: 551931

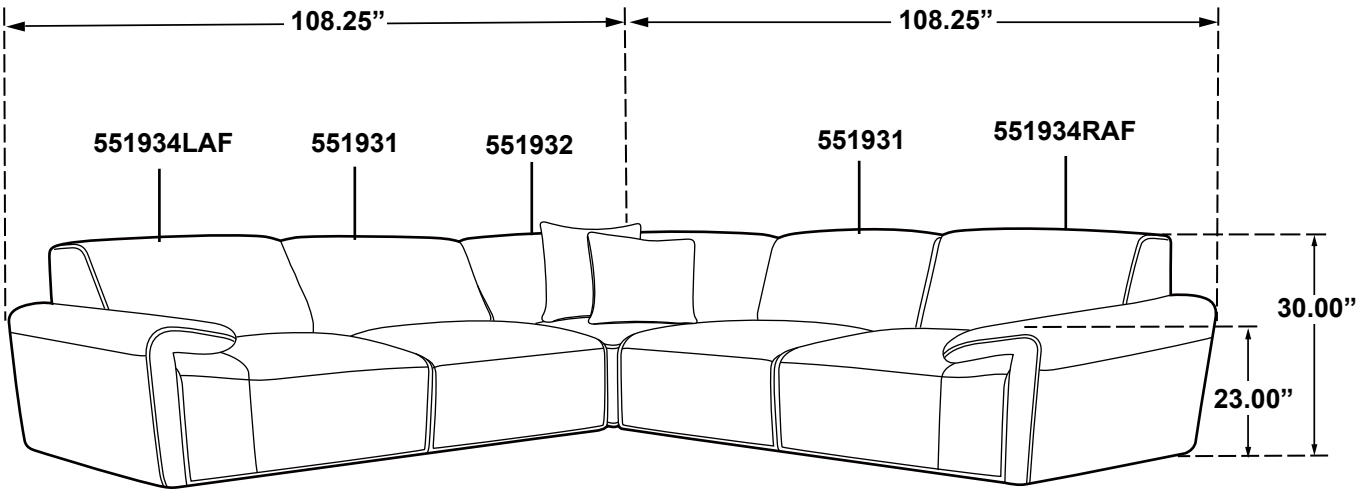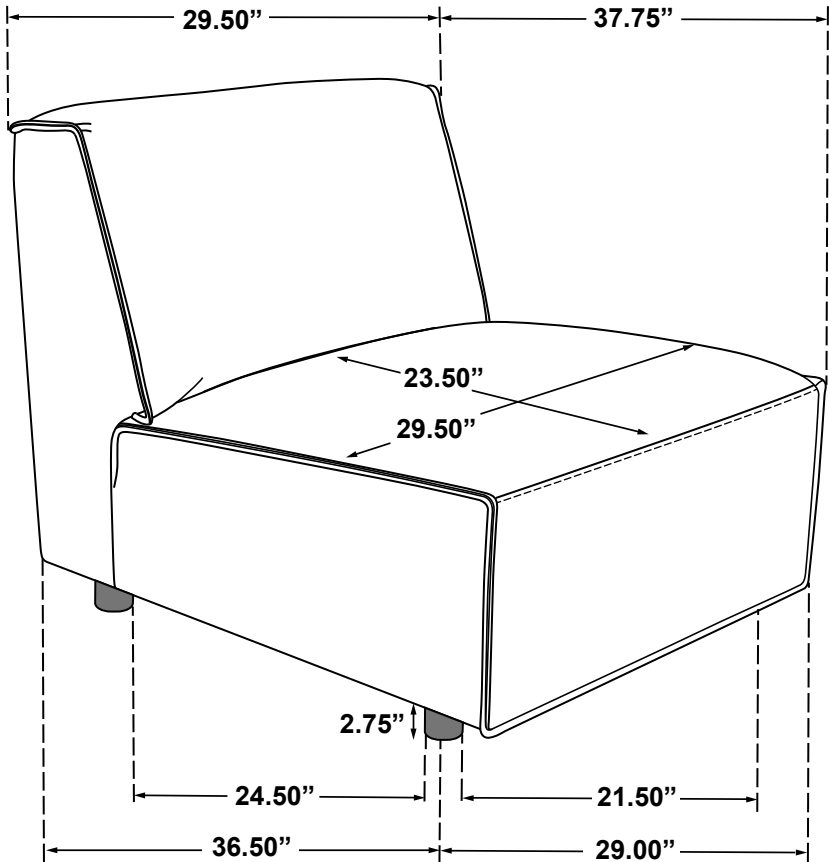  

Note : Dimension tolerance $\pm 5\%$