



ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

552081

ARMLESS CHAIR

ITEM: 552081

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

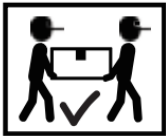

ASSEMBLY TIME 5 MINUTES

PARTS IDENTIFICATION


	PART NAME	FIGURE	QUANTITY
A	ARMLESS CHAIR		1PC
B	LEG		4PCS

ITEM: 552081


ASSEMBLY INSTRUCTIONS



STEP 1

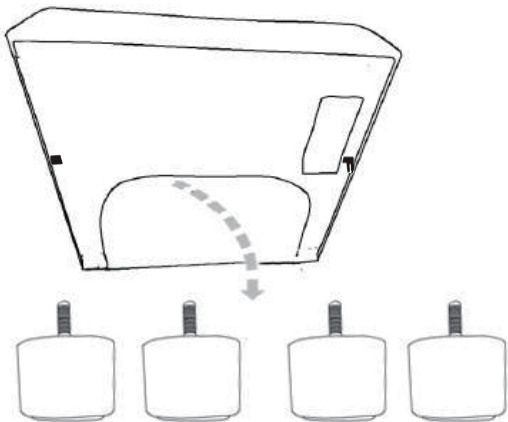

STEP 2

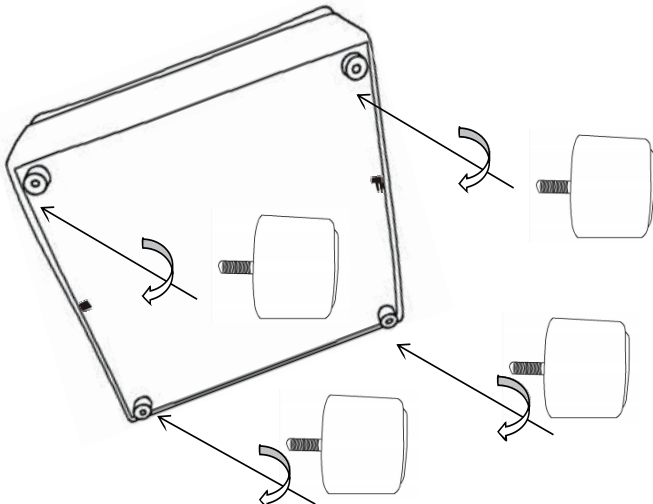

STEP 3
COMPLETE




ITEM: 552081


ASSEMBLY INSTRUCTIONS




STEP 1 Turn over the item and take out the legs from zippered pouch and install the legs as pictures show

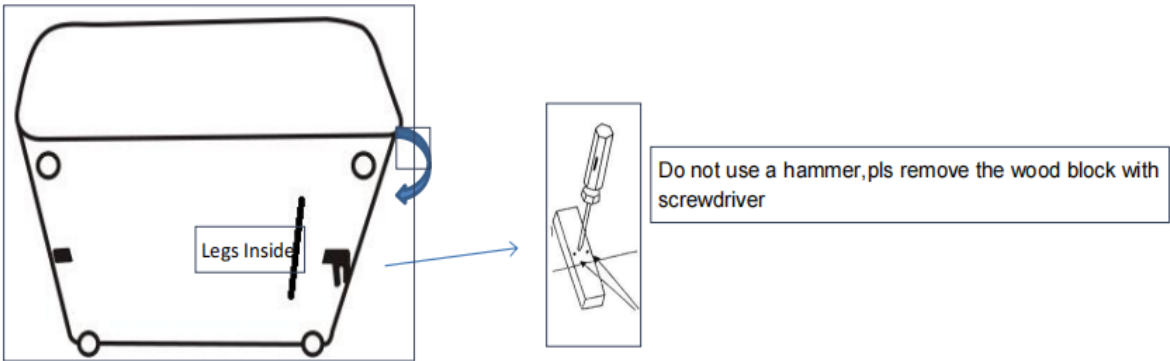



STEP 2

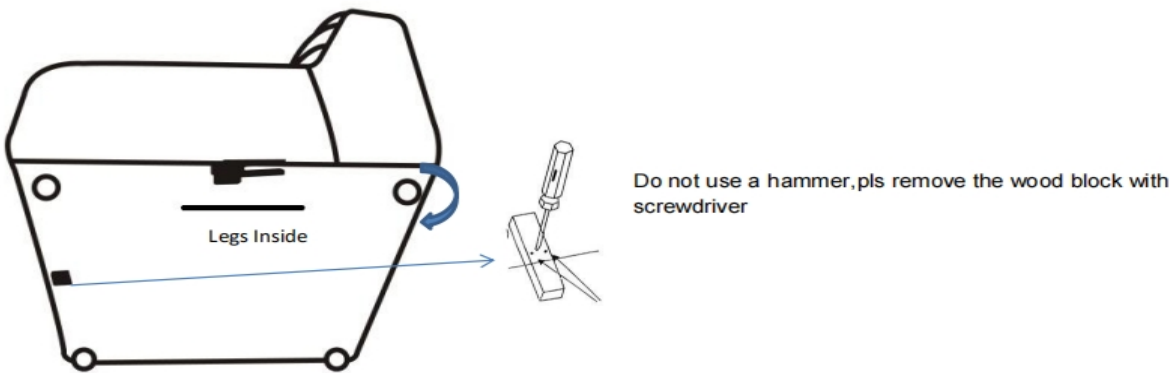

STEP3:Insert the metal grooves to connect other units as pictures show

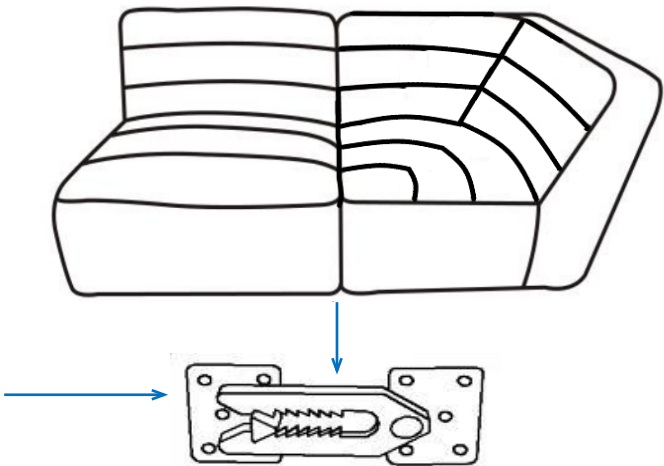

ITEM: 552081

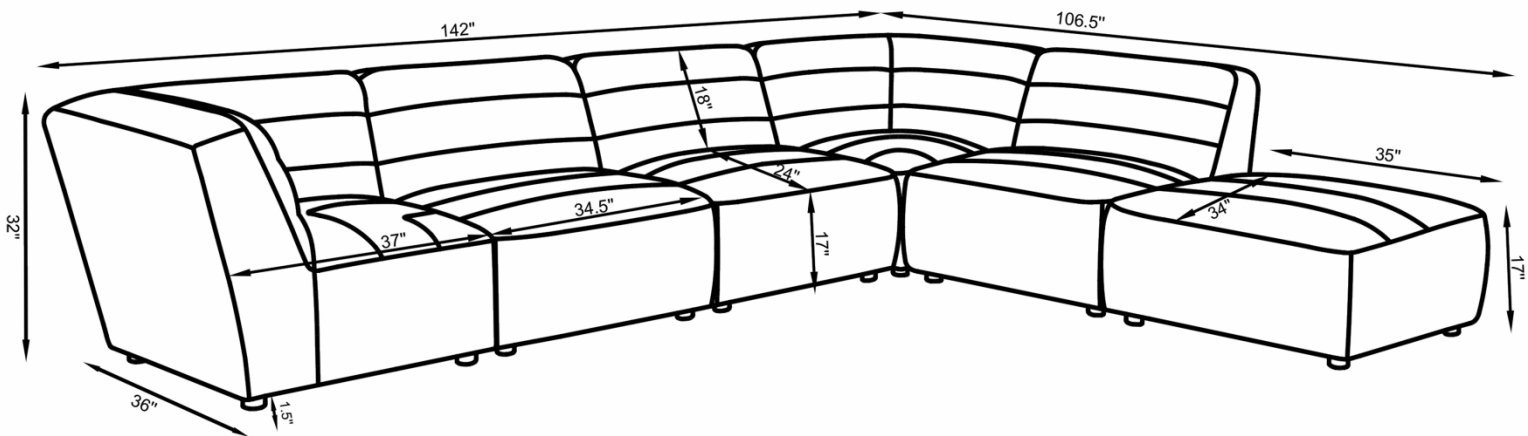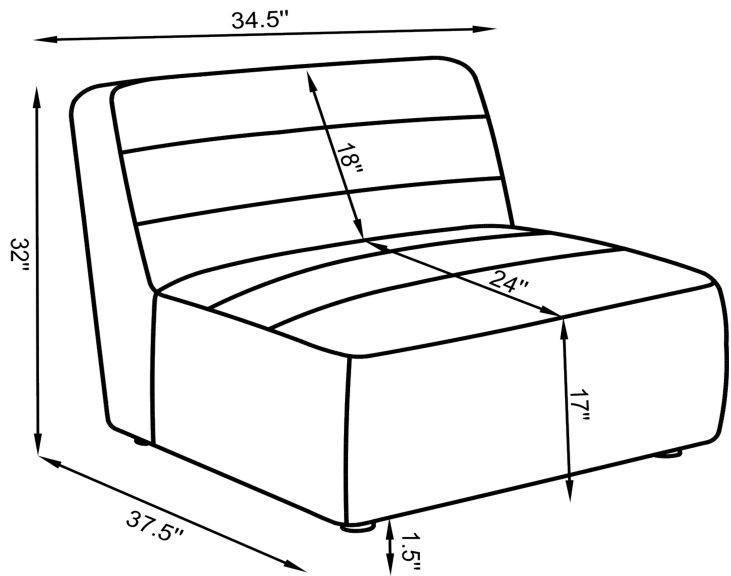

Note:Dimension tolerance $\pm$ 5%

