


ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

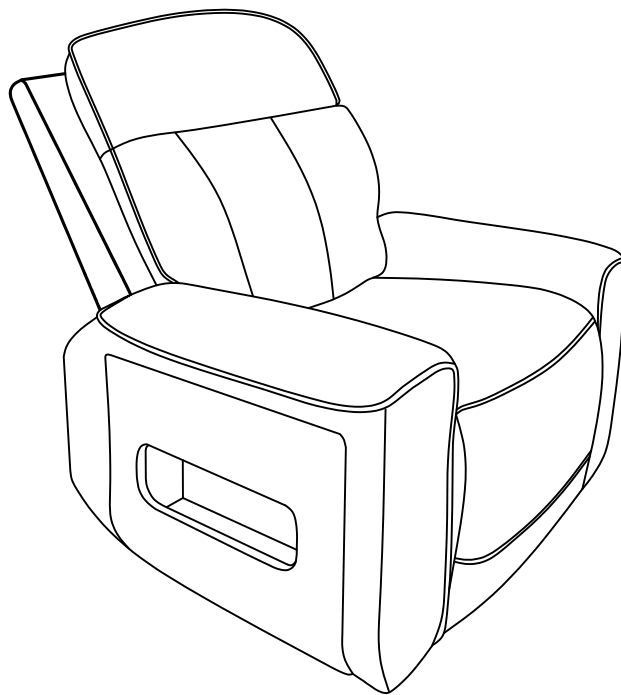

Fine Furniture for every stage of life

609617PP
DUAL POWER RECLINER

ITEM :609617PP



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!



- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

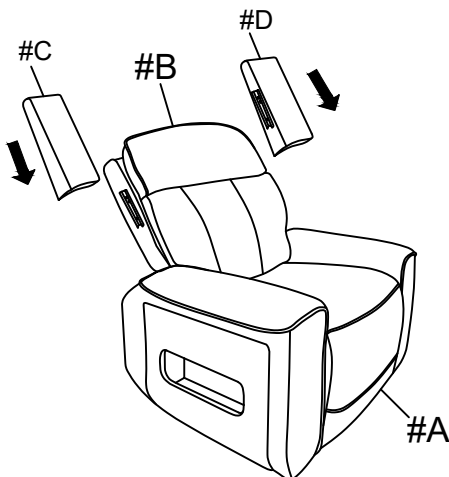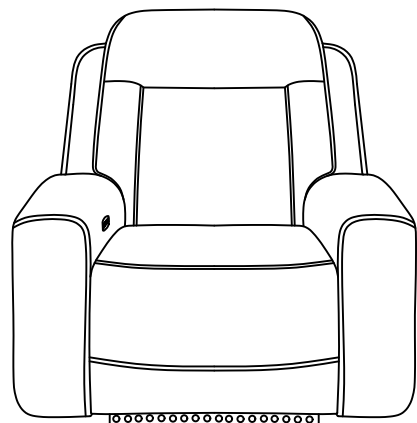

A BASE



1 PC

B BACK



1 PC

C LEFT EAR



1 PC

D RIGHT EAR







1 PC




**E PLUG-IN
POWER SUPPLY**



1 PC

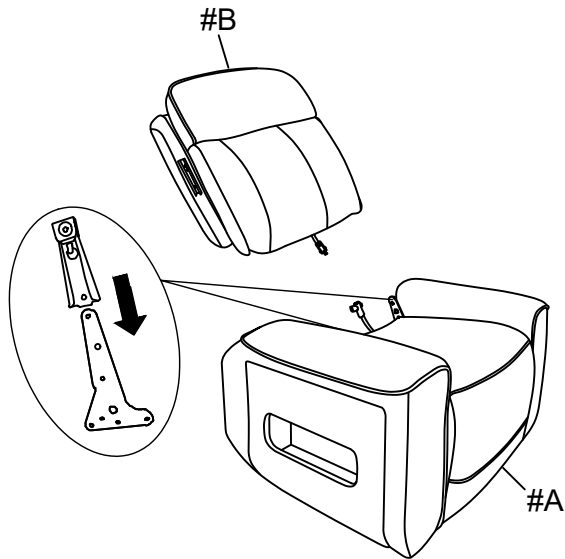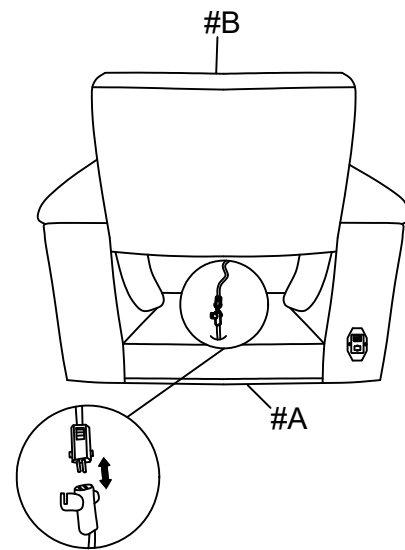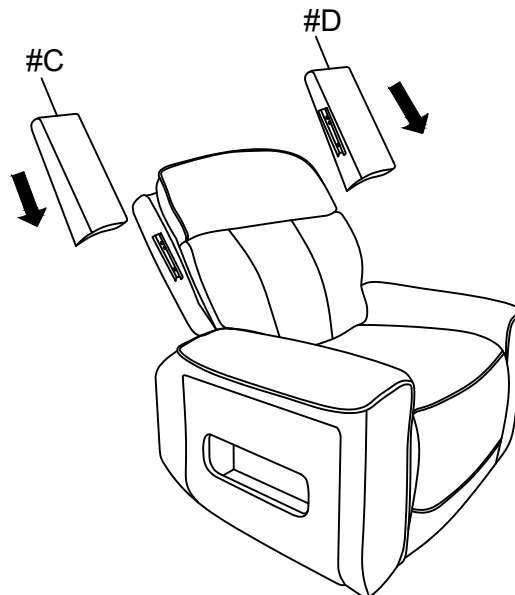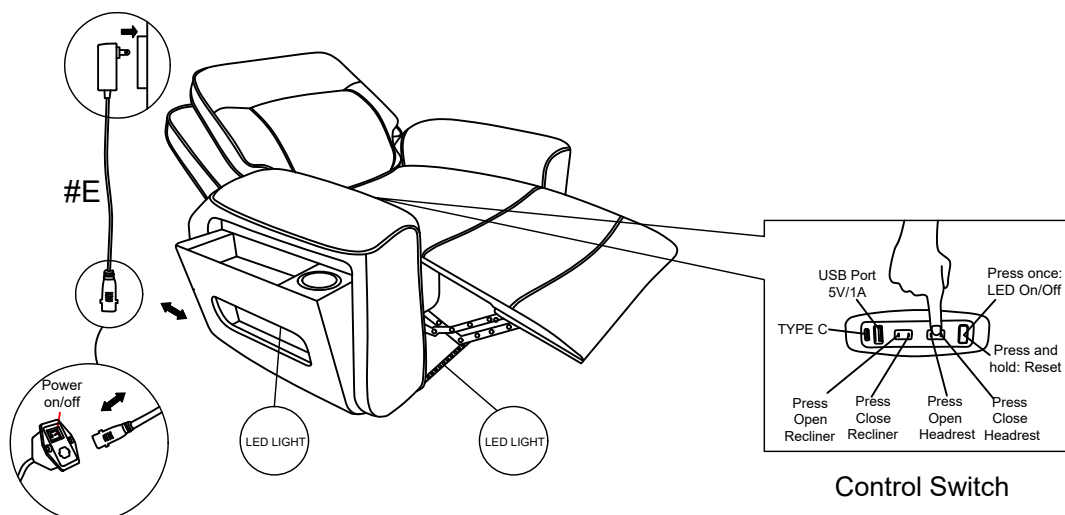STEP 1**STEP 2****STEP 3****STEP 4**

609617PP

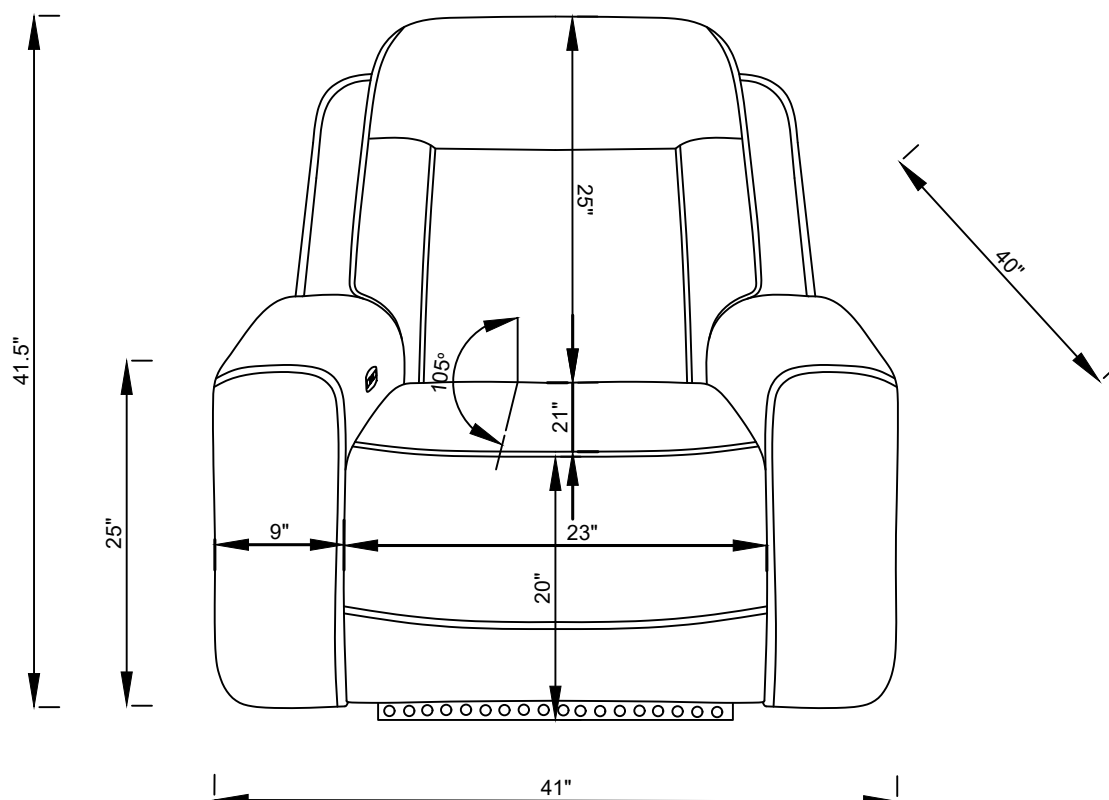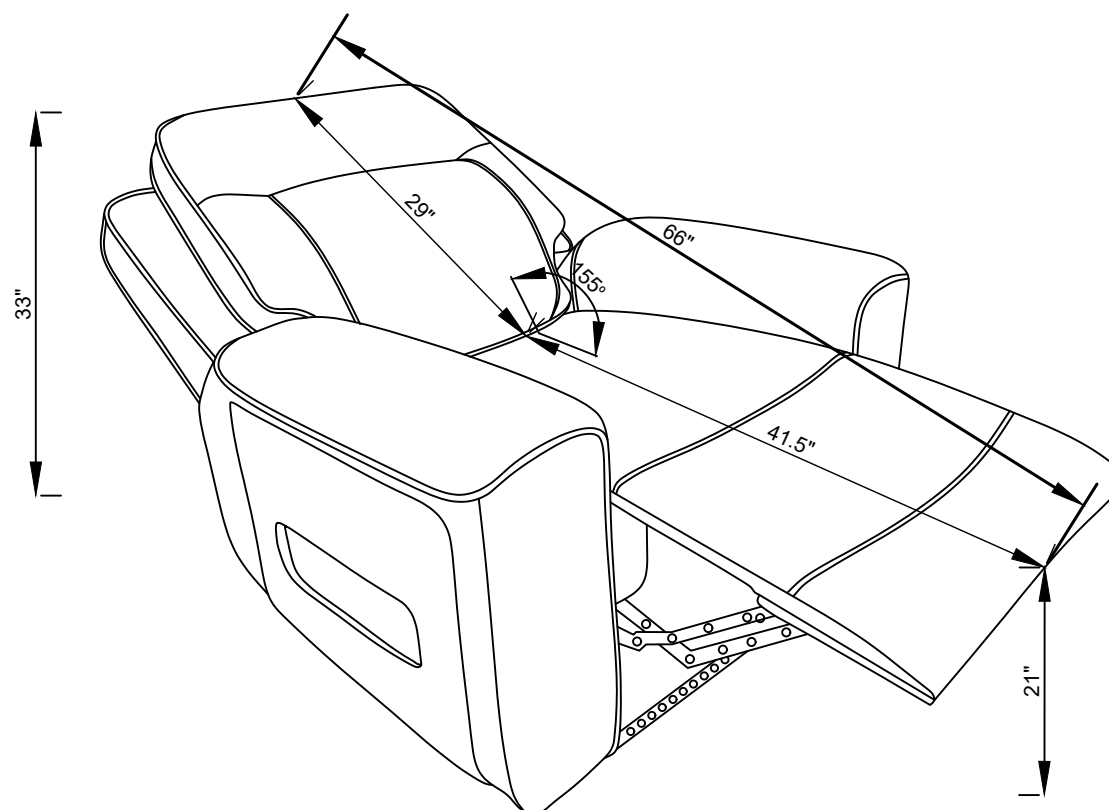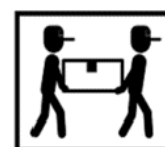

Note: Dimension tolerance $\pm 5\%$