


ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

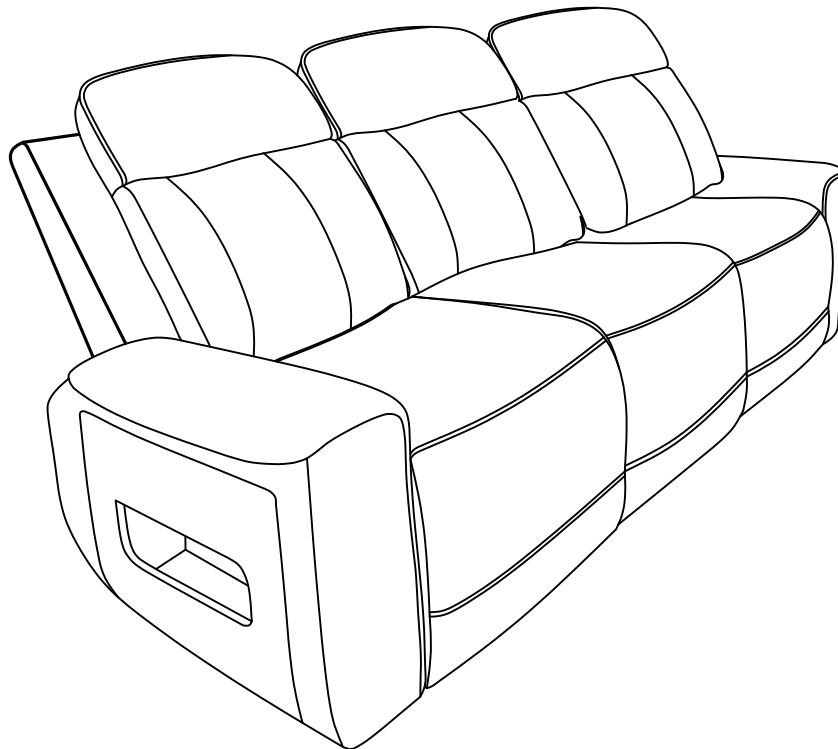

Fine Furniture for every stage of life

609621PP
DUAL POWER RECLINER SOFA

ITEM :609621PP



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!



- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.




ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

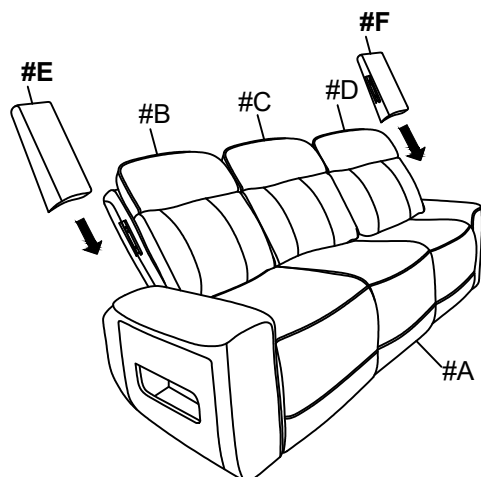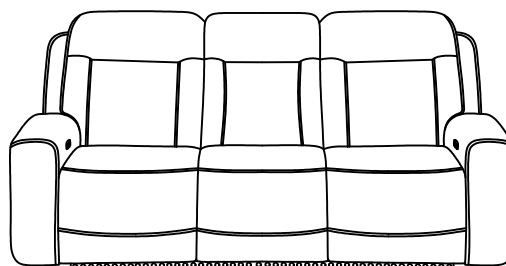

A BASE

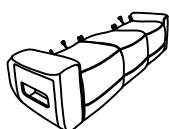

1 PC

C MID BACK



1 PC

E LEFT EAR



1 PC

**G PLUG-IN
POWER SUPPLY**



1 PC

B LEFT BACK



1 PC

D RIGHT BACK







1 PC




F RIGHT EAR



1 PC

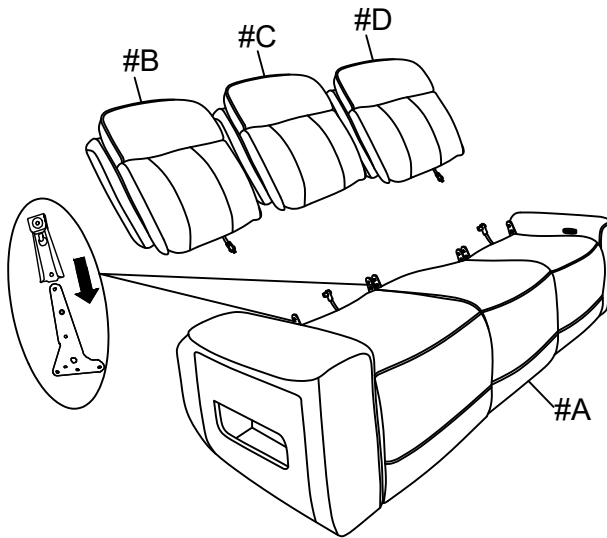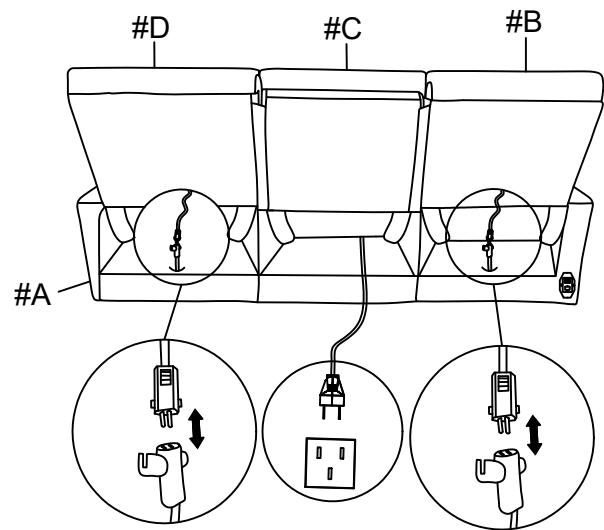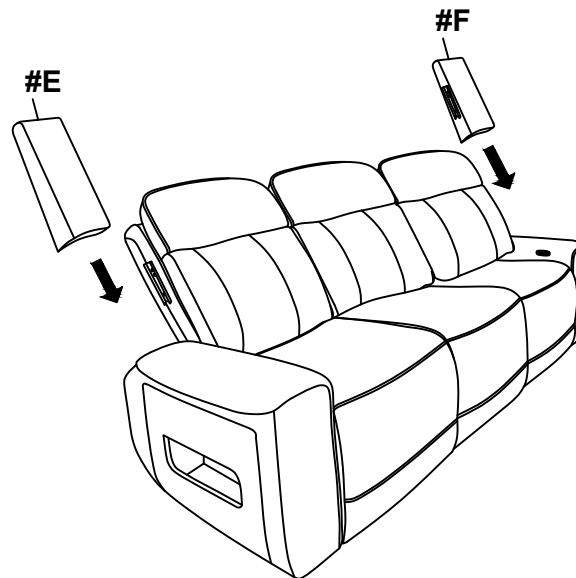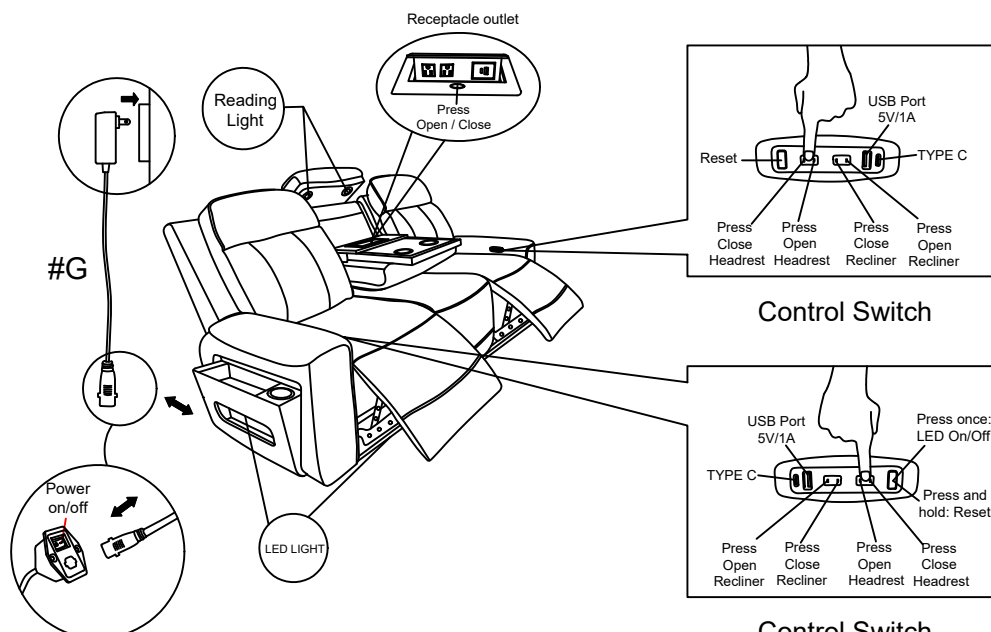STEP 1**STEP 2****STEP 3****STEP 4**

609621PP

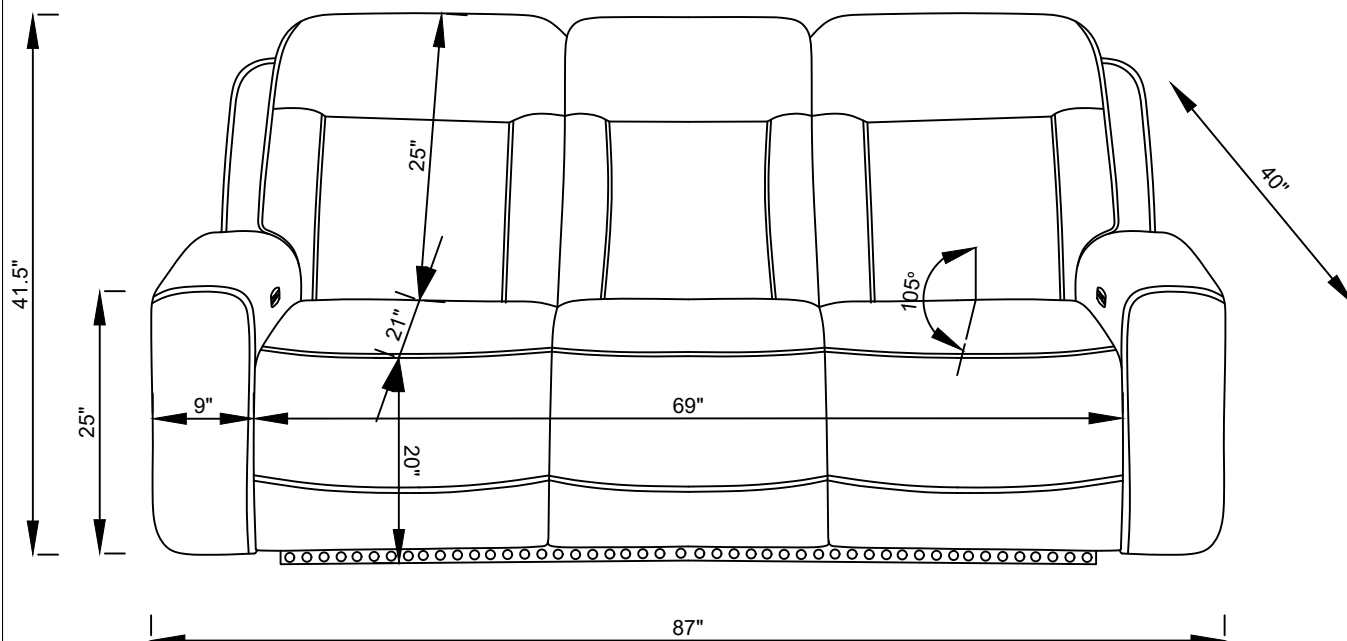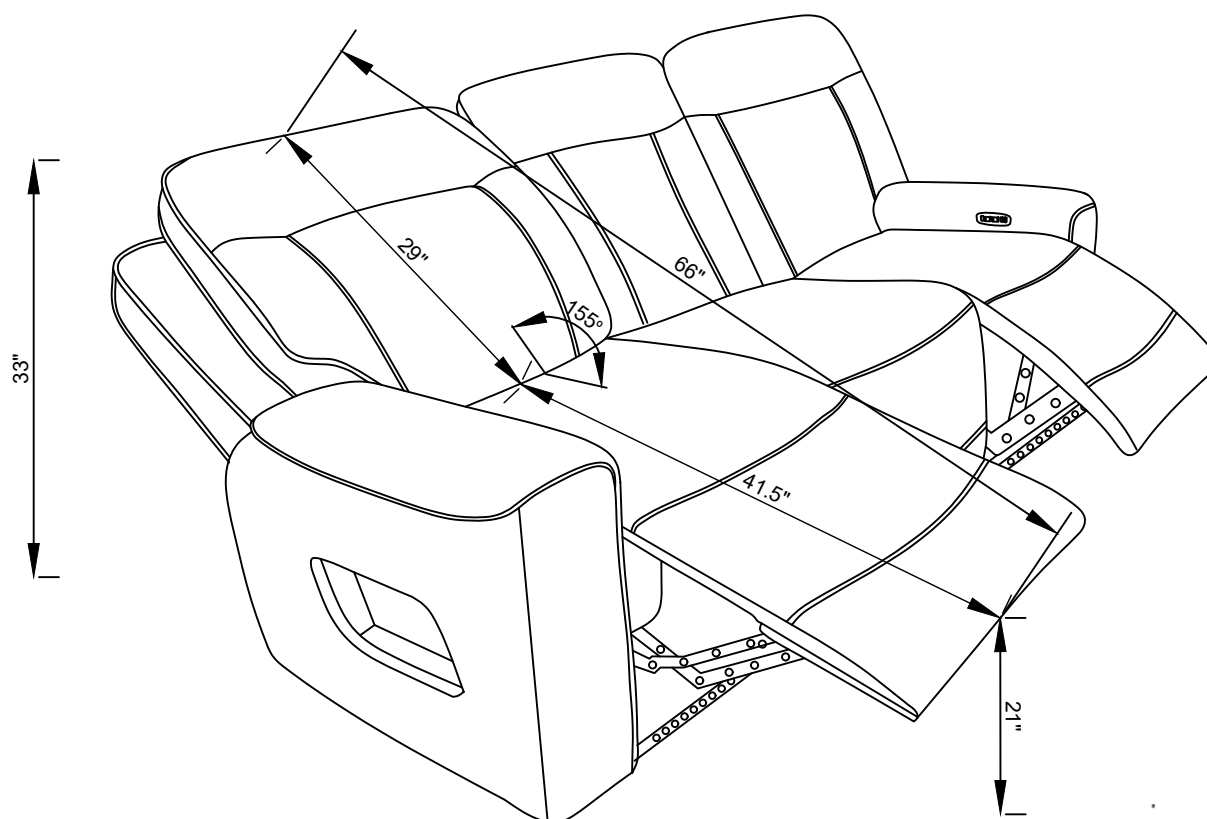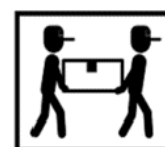

Note: Dimension tolerance $\pm 5\%$