



ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

609690RRP
RAF POWER RECLINER

ITEM :609690RRP

ASSEMBLY INSTRUCTIONS



 
ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

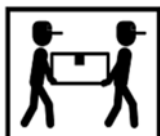

ASSEMBLY TIME

2 MINUTES

PARTS IDENTIFICATION

A BACK



 
1 PC

B BASE





1 PC

STEP 1

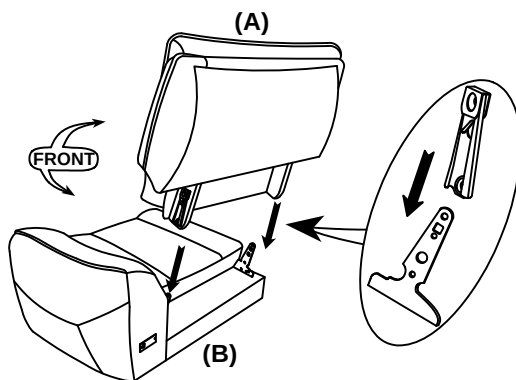


  STEP 2
COMPLETE

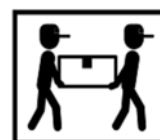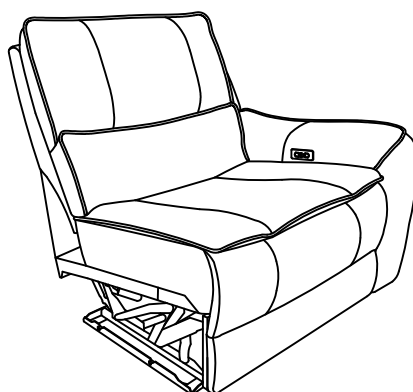


STEP 3

 
OPTION1:

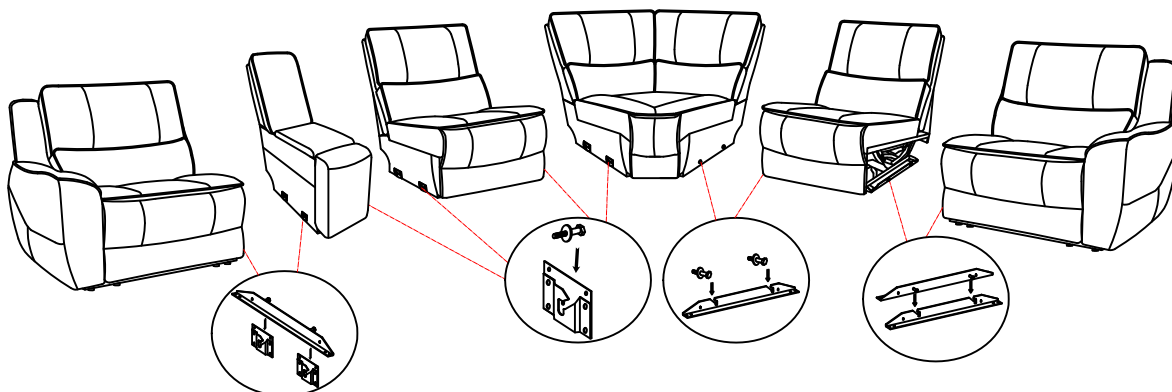


OPTION2:

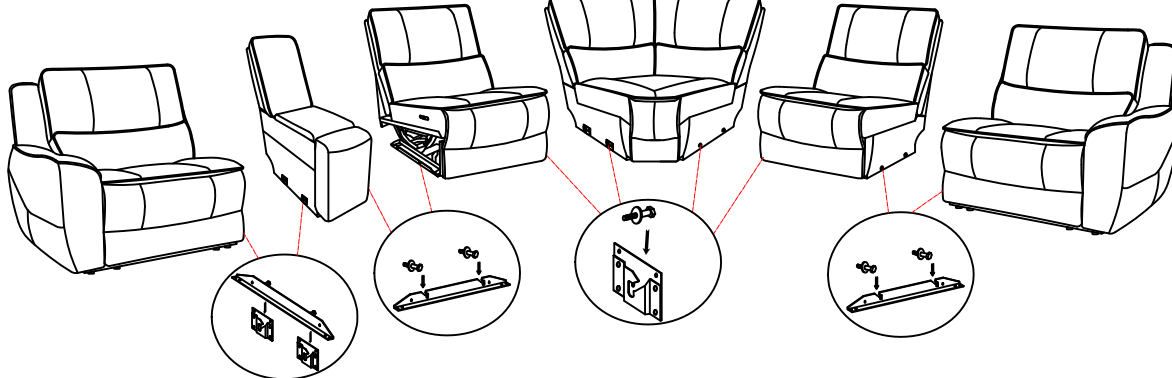 

 STEP 4

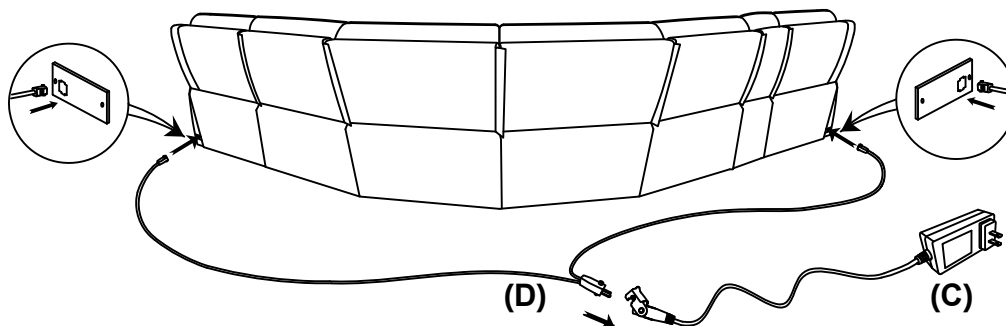

 
STEP 5

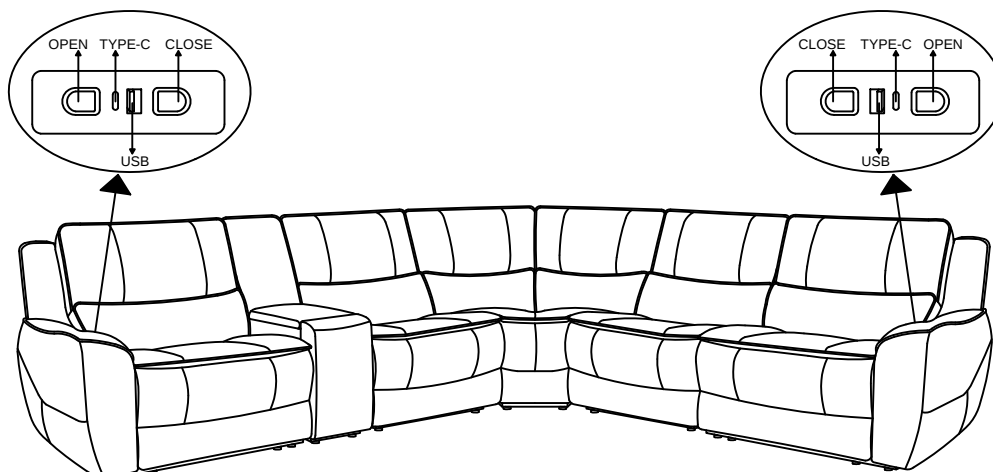


Please follow below steps to install the 9V batteries when there is no power to operate the motion sofa.(Any model of 9V battery is applicable)

STEP 1

 
Open the marked battery door on the backup battery box.

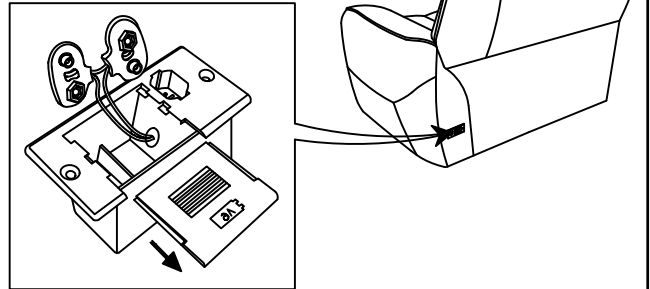**STEP 2**

 Install two 9V batteries in the backup battery box.(batteries are not included)

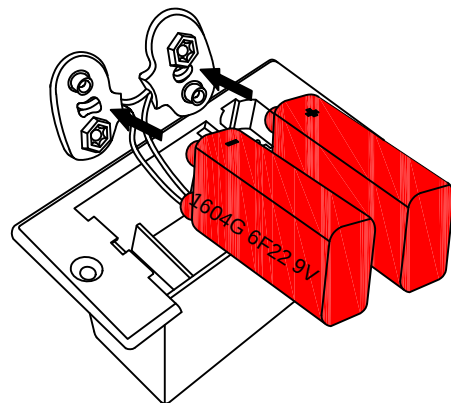
**STEP 3**

 
Push the batteries in.

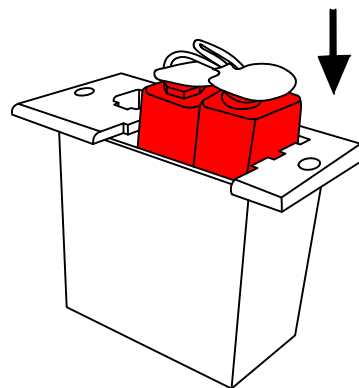**STEP 4**

Close the box door.

  Notice: Please don't keep the battery in the box when the power motion sofa is under daily use within power supply.

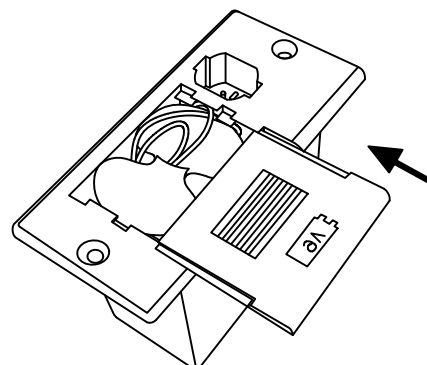

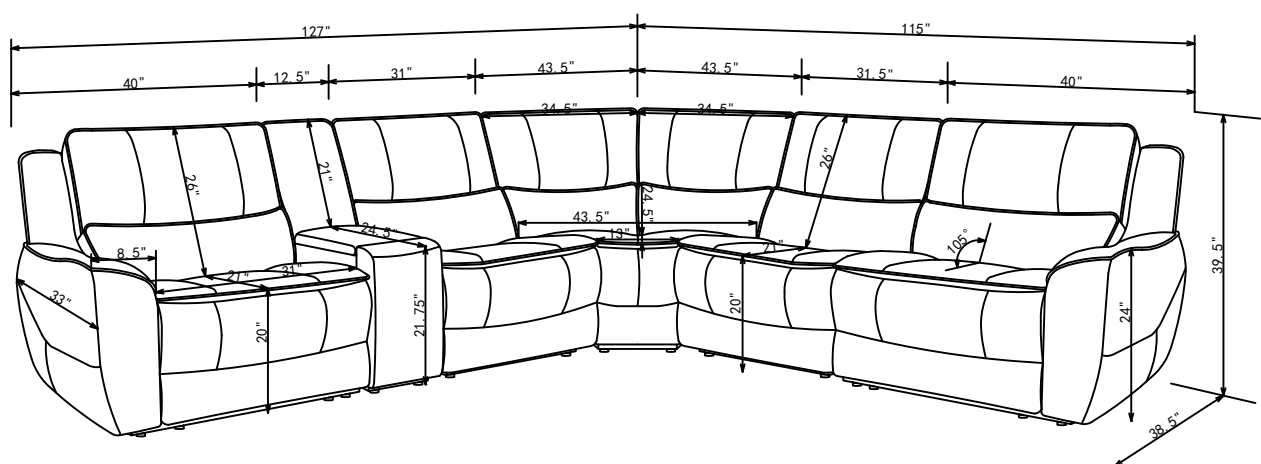

PAGE 6 OF 6