



*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**610521P**  
**POWER RECLINING SOFA**

**ITEM : 610521P**  
**ASSEMBLY INSTRUCTIONS**



 
**ASSEMBLY TIPS:**

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



**WARNING!**



- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

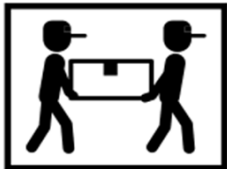

**ASSEMBLY TIME**

**10 MINUTES**

  
**PARTS IDENTIFICATION**

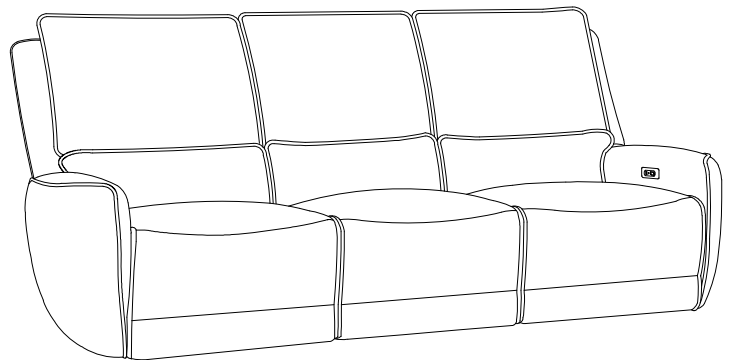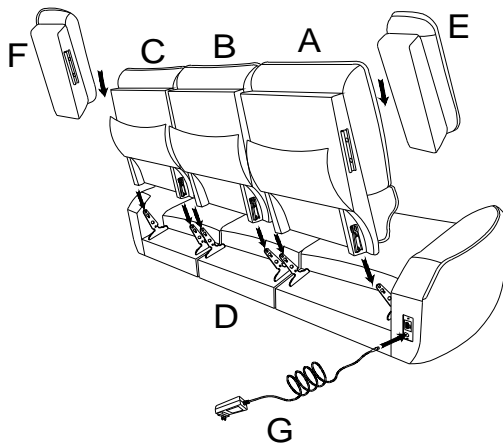


**PARTS LIST**

A		LEFT BACK CUSHION	1PC
B		MIDDLE BACK CUSHION	1PC
C		RIGHT BACK CUSHION	1PC
D		BASE	1PC
E		LEFT EAR	1PC
F		RIGHT EAR	1PC
G		PLUG-IN POWER SUPPLY	1PC

 
## STEP 1

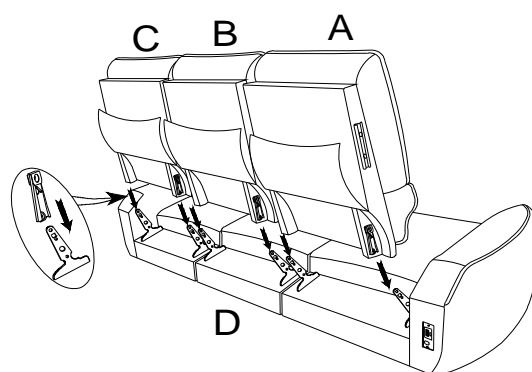



## STEP 2

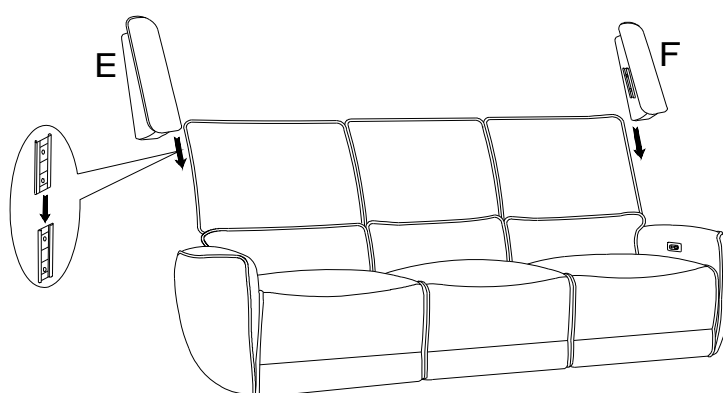 

## STEP 3

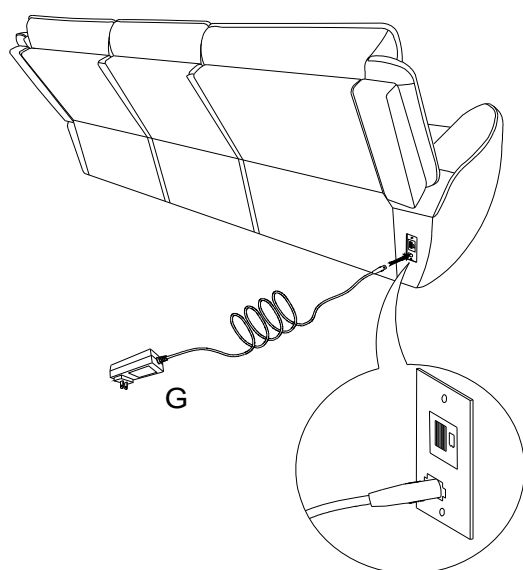 



## STEP 4

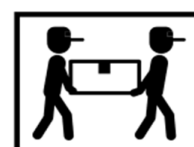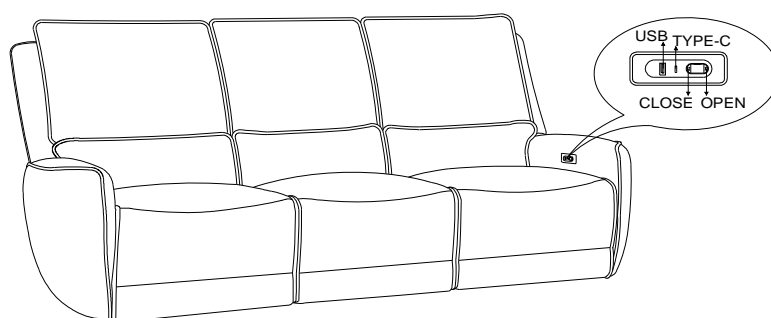  

Please follow below steps to install the 9V batteries when there is no power to operate the motion sofa.(Any model of 9V battery is applicable)


STEP 1

  Open the marked battery door on the backup battery box.

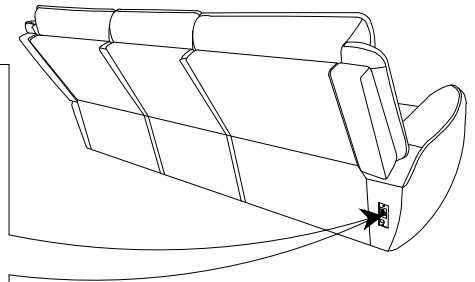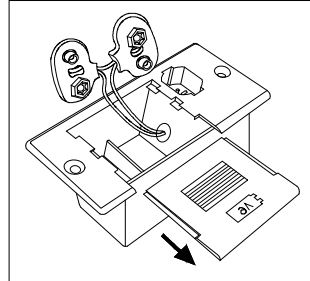


STEP 2

 Install two 9V batteries in the backup battery box.(batteries are not included)

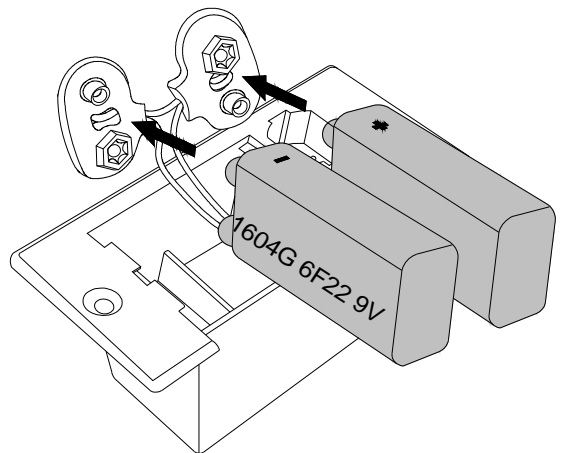


STEP 3

 Push the batteries in.

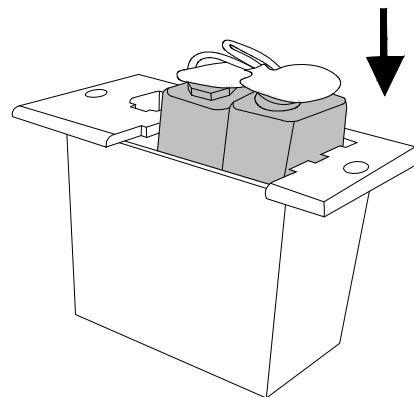

STEP 4

 Close the box door.

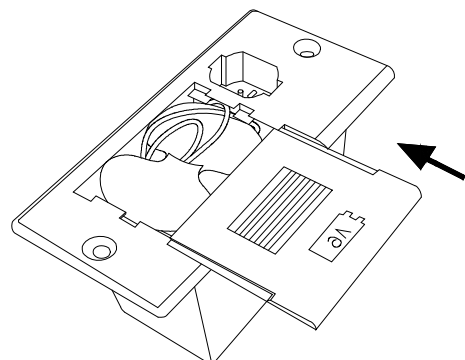

Notice: Please don't keep the battery in the box when the power motion sofa is under daily use with power supply.

ITEM : 610521P

ASSEMBLY INSTRUCTIONS

