

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**700881**  
**TV CONSOLE**

ITEM:700881

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 


ASSEMBLY TIME

60 MINUTES

MAX TV SIZE: 65"

## PARTS IDENTIFICATION

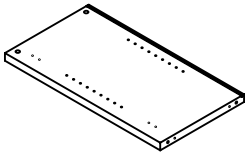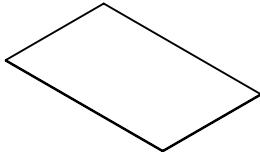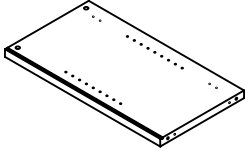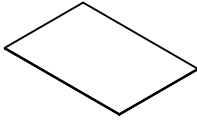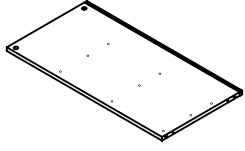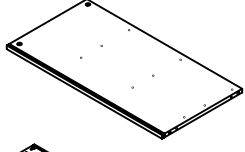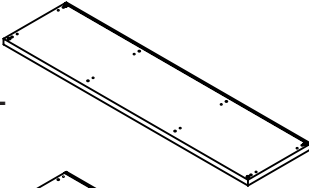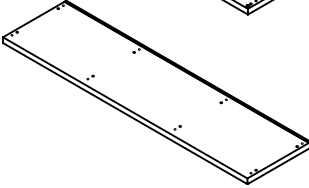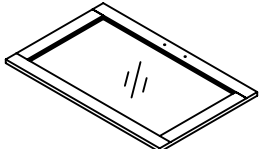A	LEFT SIDE PANEL		1 PC	I	BACK PANEL		2 PCS
B	RIGHT SIDE PANEL		1 PC	J	MIDDLE BACK PANEL		2 PCS
C	LEFT DIVIDER PANEL		1 PC	K	DRAWER FRONT PANEL		3 PCS
D	RIGHT DIVIDER PANEL		1 PC	L	DRAWER BACK PANEL		3 PCS
E	BOTTOM PANEL		1 PC	M	LEFT DRAWER SIDE PANEL		3 PCS
F	TOP PANEL		1 PC	N	RIGHT DRAWER SIDE PANEL		3 PCS
G	ADJUSTABLE SHELF		4 PCS	O	DRAWER BOTTOM PANEL		3 PCS
H	DOOR		2 PCS				

 
 







 








### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

 ITEM:700881

Z

 **HARDWARE IDENTIFICATION**

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	10	HINGE		4 PCS
2	WOODEN DOWEL Ø 8x30mm		28 PCS	11	SCREW Ø 4x15mm FOR HINGE		16 PCS
3	CAM BOLT Ø 7x35.5mm		14 PCS	12	HANDLE L=120mm		5 PCS
4	CAM LOCK Ø 15x12mm		14 PCS	13	HANDLE BOLT Ø 4x28mm		10 PCS
5	BOLT Ø 9.5x55mm FOR BOTTOM PANEL		8 PCS	14	SIDE FOOT 50x50x70mm		4 PCS
6	SCREW Ø 4.3x35mm FOR DRAWER		12 PCS	15	MIDDLE FOOT Ø 37x70mm		2 PCS
7	RAIL L = 350mm		3 SET	16	BOLT Ø 6.35x41mm FOR SIDE FOOT		4 PCS
8	SCREW FOR RAIL Ø 3x12mm		36 PCS	17	STICKER Ø 20mm		3 PCS
9	PIN Ø 4.9x8mm		16 PCS	18	I BAR L=527mm		1 PC

Z7,Z10,Z12,Z13,Z14,Z15,Z18 not included in blister packaging.







**NOTE:**

      Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.





ITEM: 700881

**STEP 1**

**COASTER**  
FINE FURNITURE

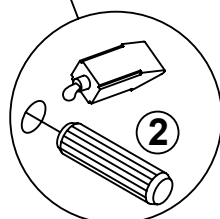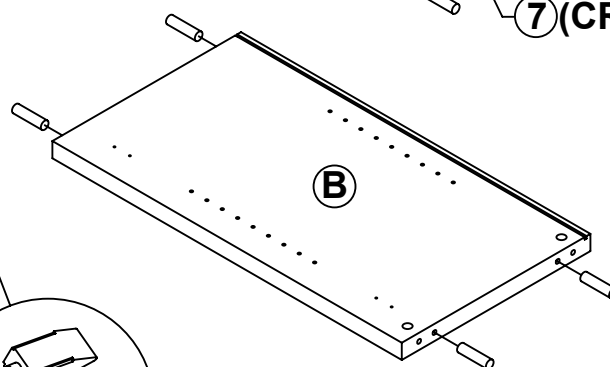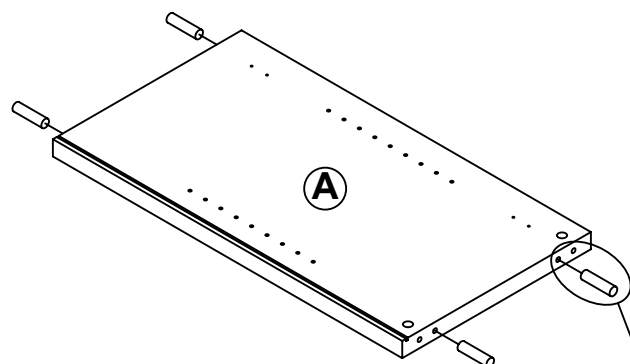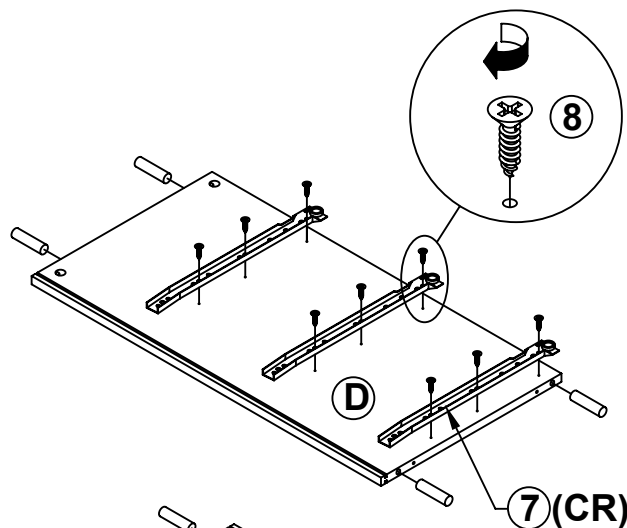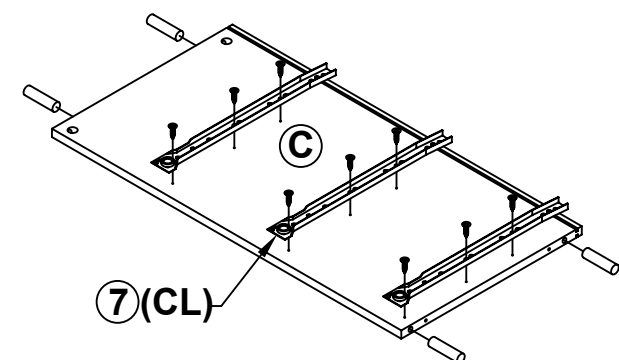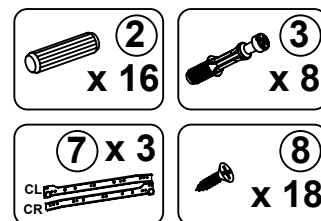

   
 
Apply glue on all wooden dowels to ensure integrity of the structure.

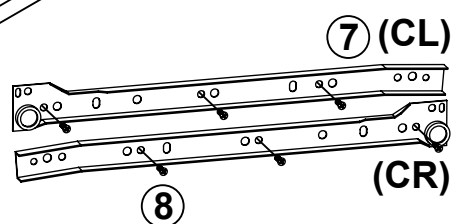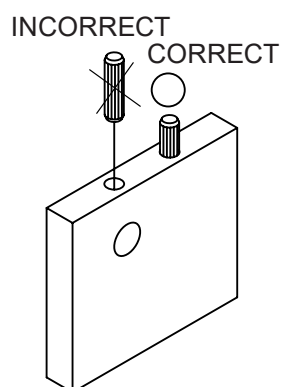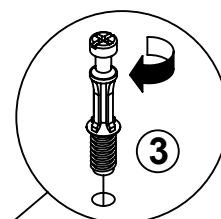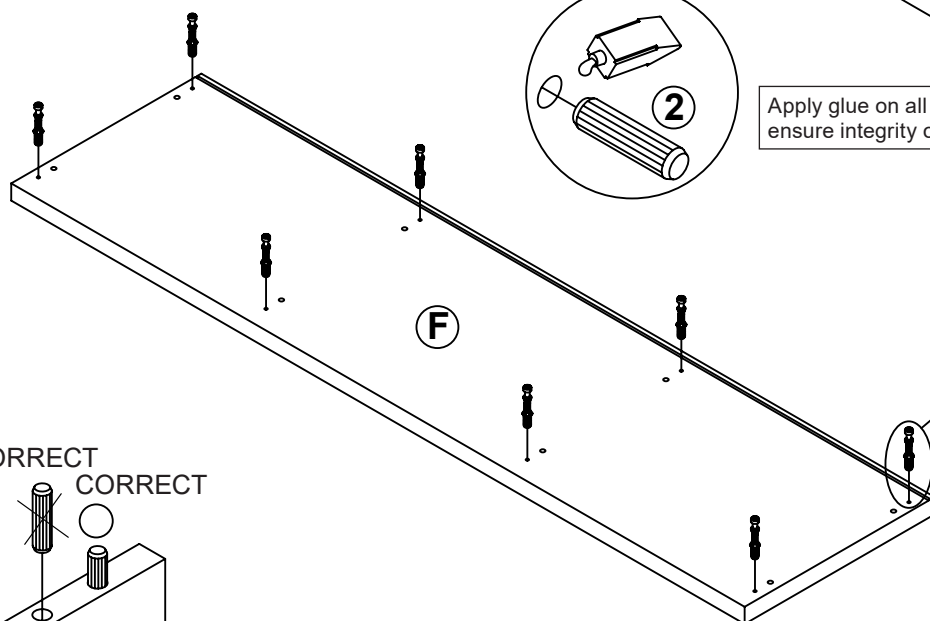


ITEM: **700881**

## STEP 2

  **COASTER**  
FINE FURNITURE

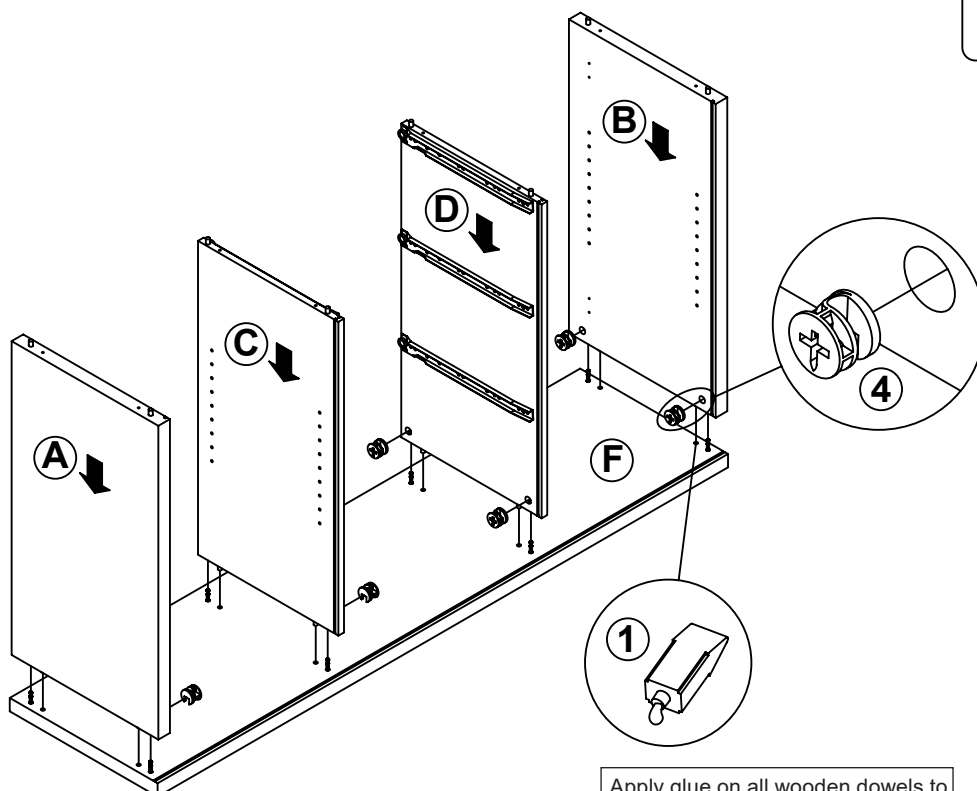

 
Apply glue on all wooden dowels to ensure integrity of the structure.

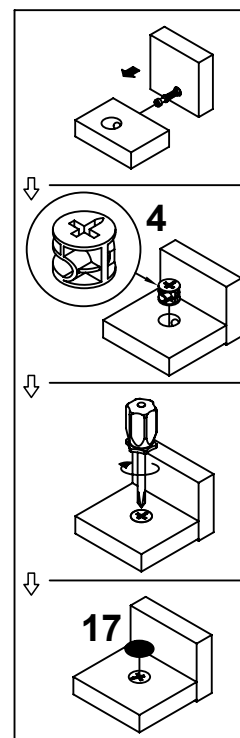

## STEP 3




 
Apply glue on all wooden dowels to ensure integrity of the structure.

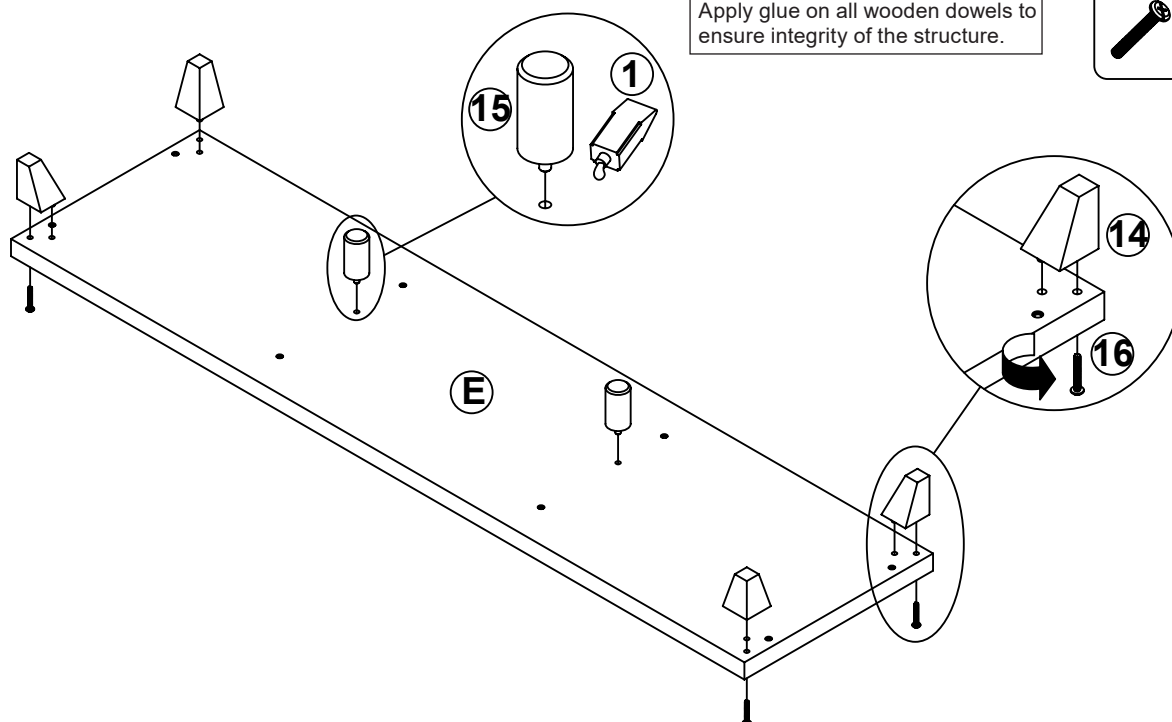

ITEM: **700881**



## STEP 4

  **COASTER**  
FINE FURNITURE

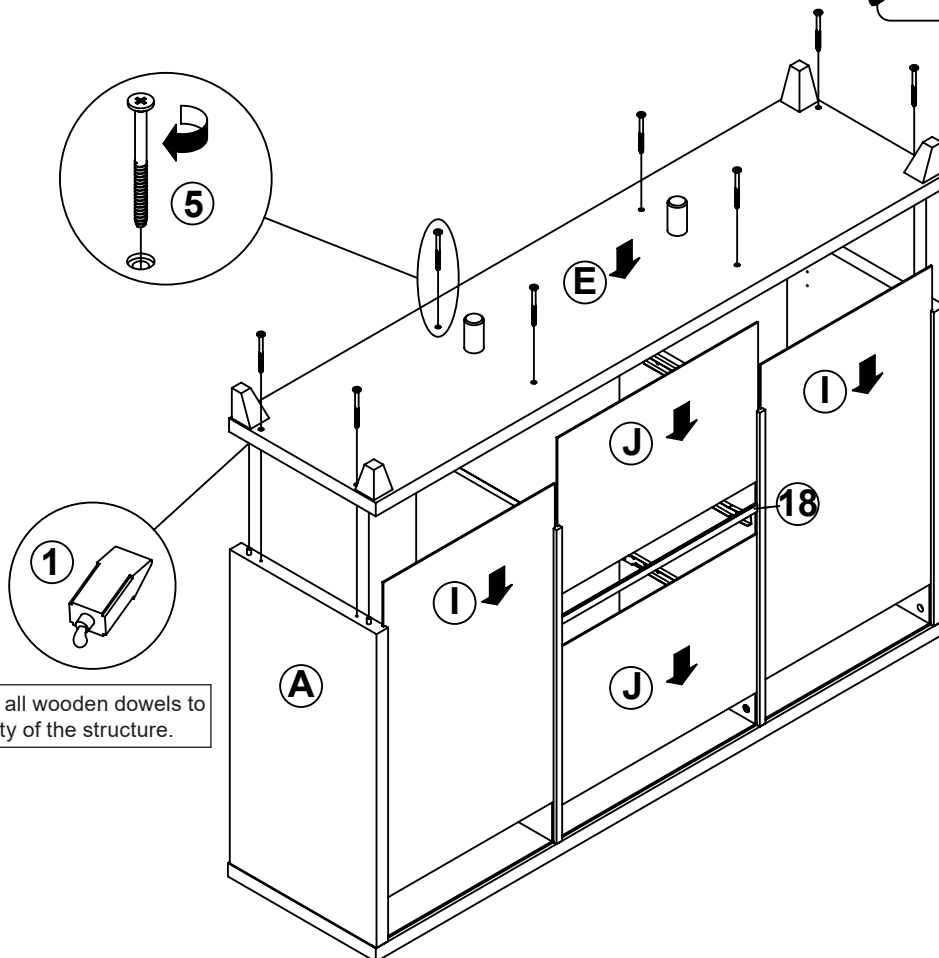


Apply glue on all wooden dowels to ensure integrity of the structure.

## STEP 5

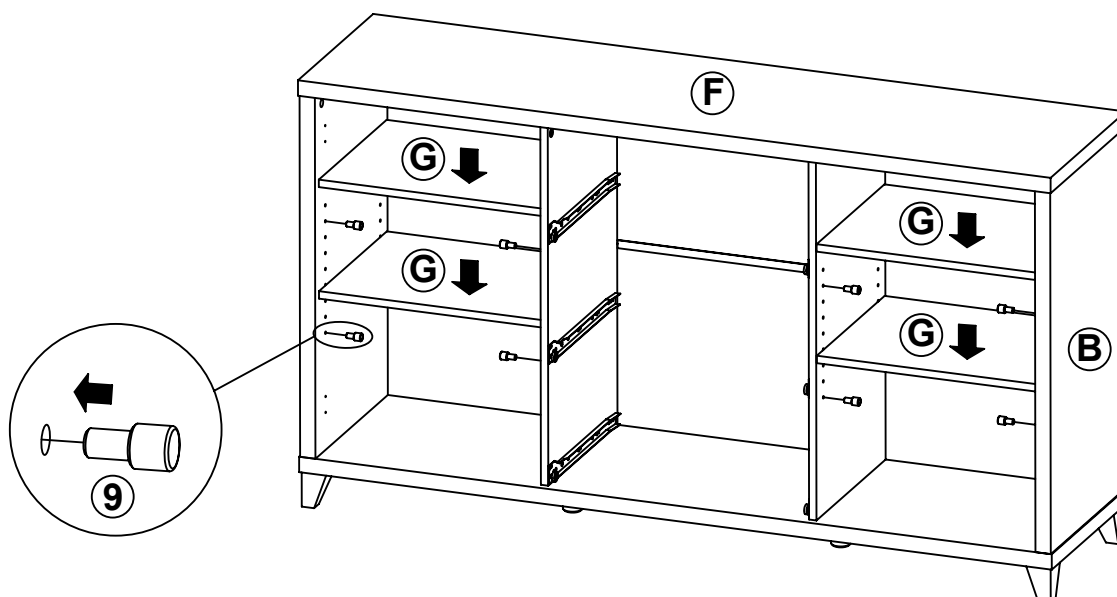  


ITEM: 700881

## STEP 6

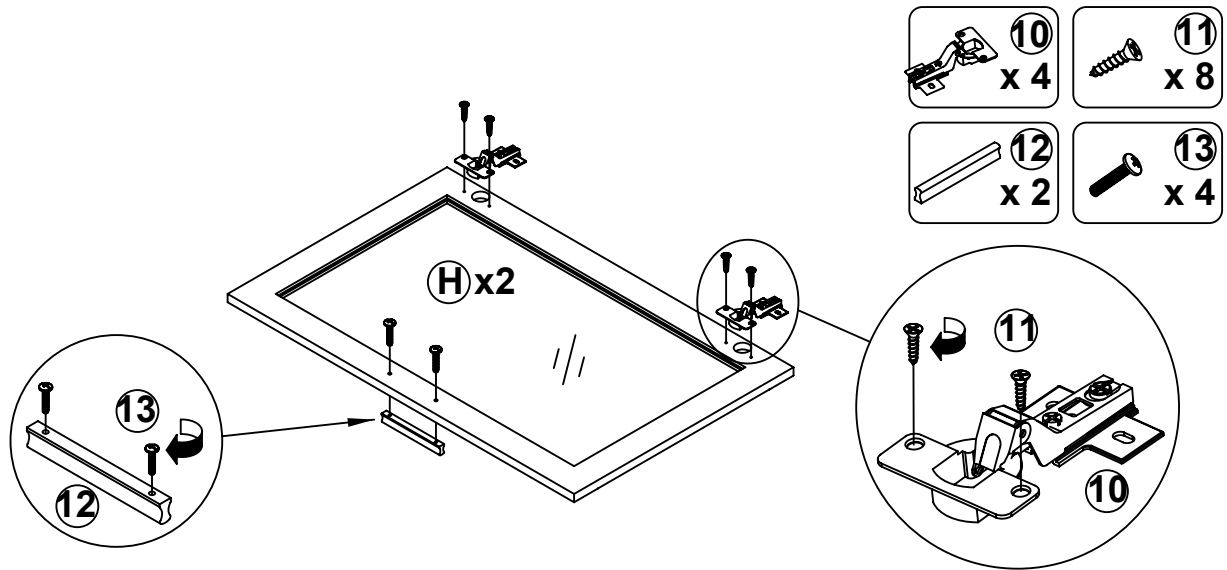 







## STEP 7

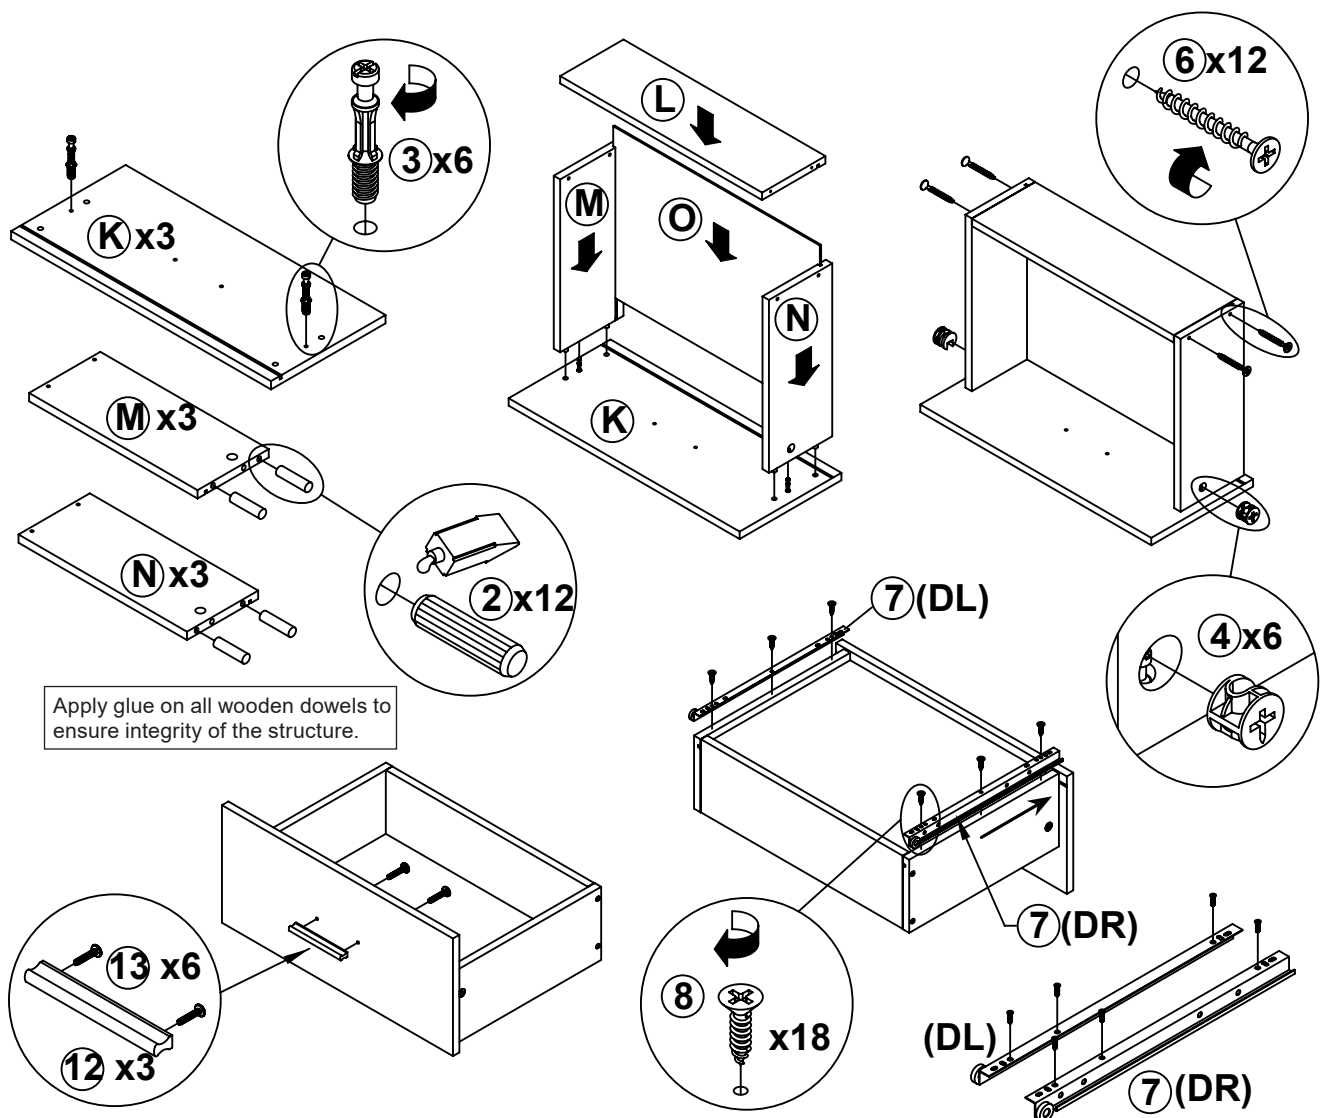 

ITEM: 700881


## STEP 8

      **COASTER**  
FINE FURNITURE

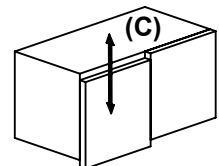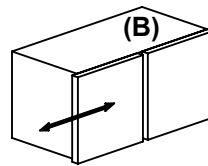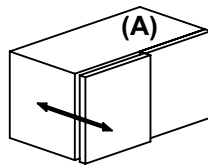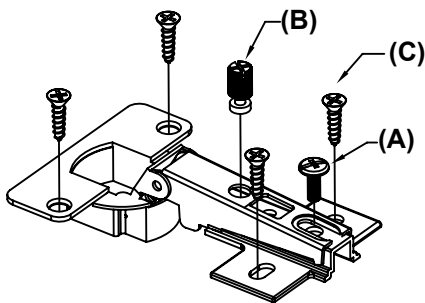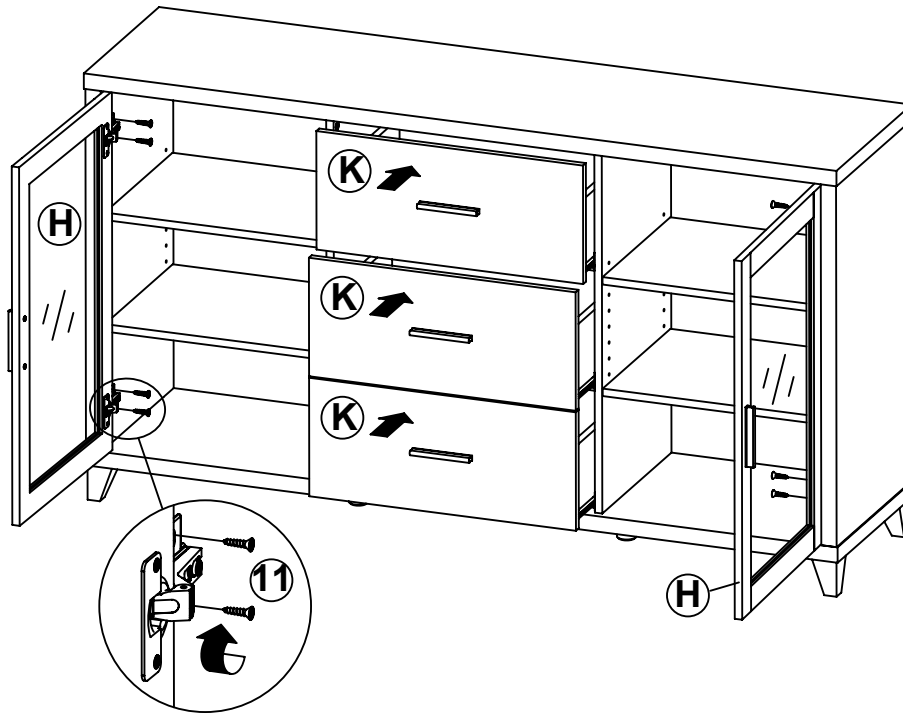

## STEP 9


 
COMPLETE

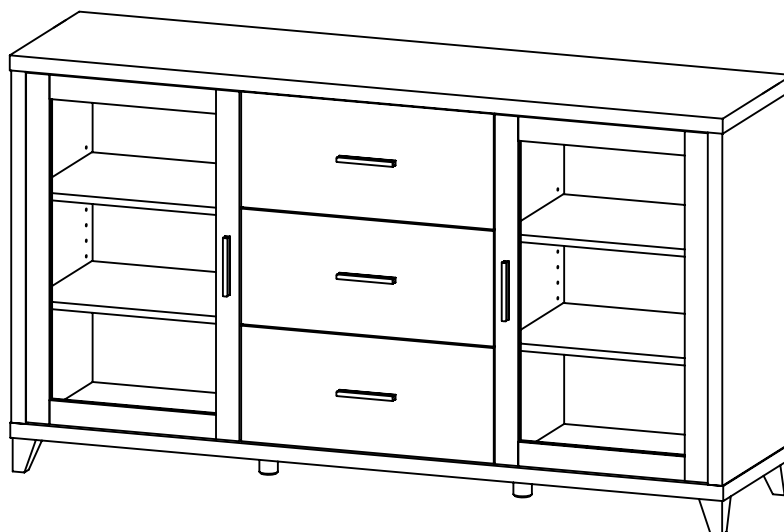



ITEM: 700881

  **COASTER**  
FINE FURNITURE

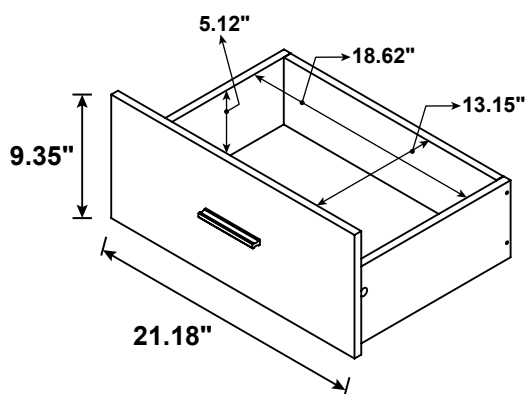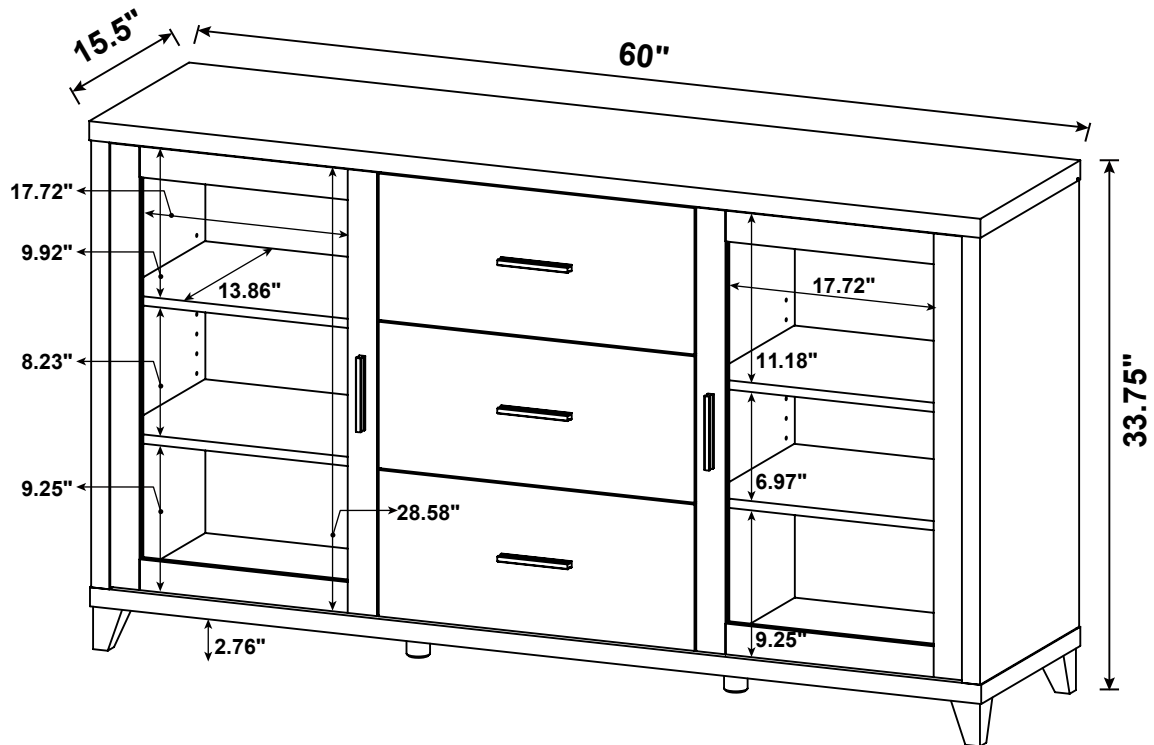

**Note :** Dimension tolerance  $\pm 5\%$

## ANTI-TIPPING INSTALLMENT INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT


#### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


#### STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

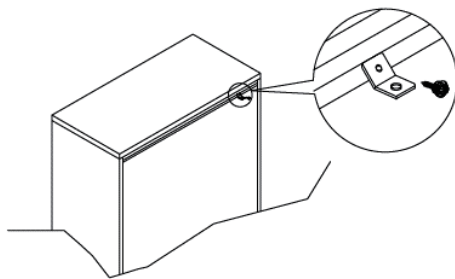


#### STEP 2

Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

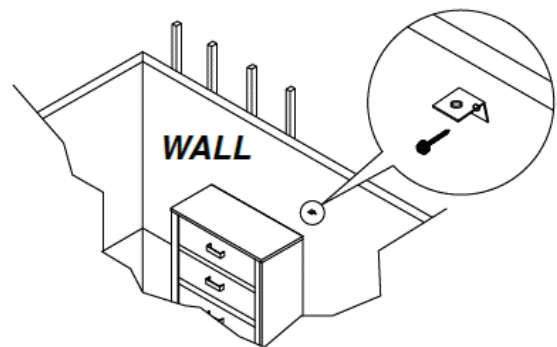

#### STEP 3

 Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

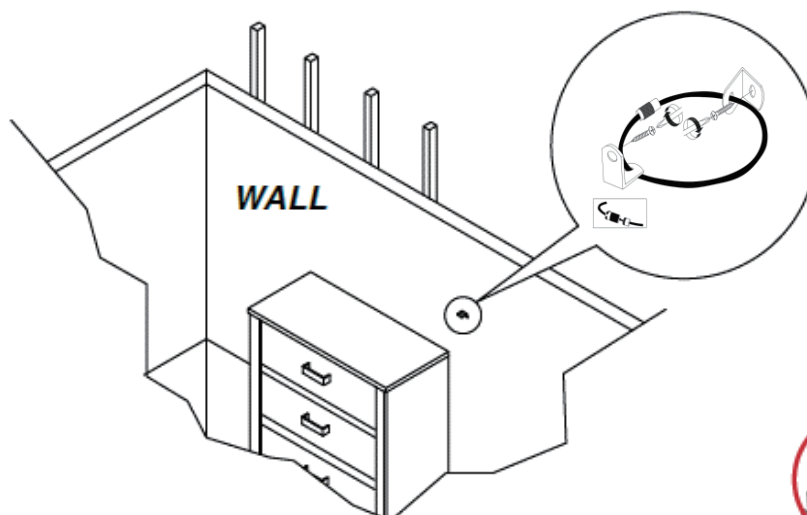

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**700881**  
**TV CONSOLE**

ITEM:700881



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 


ASSEMBLY TIME

60 MINUTES

MAX TV SIZE: 65"

 
 
 

 
 


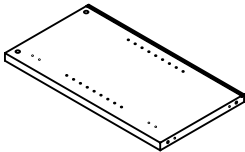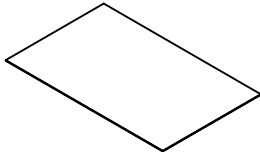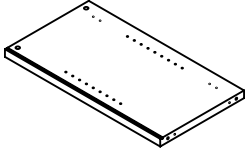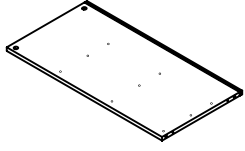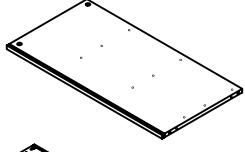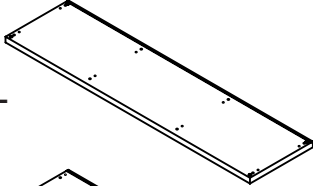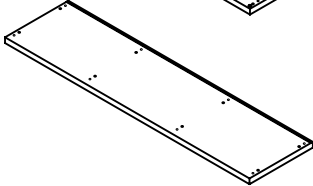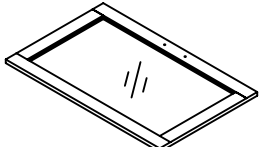






## PARTS IDENTIFICATION

A	LEFT SIDE PANEL		1 PC	I	BACK PANEL		2 PCS
B	RIGHT SIDE PANEL		1 PC	J	MIDDLE BACK PANEL		2 PCS
C	LEFT DIVIDER PANEL		1 PC	K	DRAWER FRONT PANEL		3 PCS
D	RIGHT DIVIDER PANEL		1 PC	L	DRAWER BACK PANEL		3 PCS
E	BOTTOM PANEL		1 PC	M	LEFT DRAWER SIDE PANEL		3 PCS
F	TOP PANEL		1 PC	N	RIGHT DRAWER SIDE PANEL		3 PCS
G	ADJUSTABLE SHELF		4 PCS	O	DRAWER BOTTOM PANEL		3 PCS
H	DOOR		2 PCS				
 
### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM:700881

 Z				HARDWARE IDENTIFICATION			
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	10	HINGE		4 PCS
2	WOODEN DOWEL Ø 8x30mm		28 PCS	11	SCREW Ø 4x15mm FOR HINGE		16 PCS
3	CAM BOLT Ø 7x35.5mm		14 PCS	12	HANDLE L=120mm		5 PCS
4	CAM LOCK Ø 15x12mm		14 PCS	13	HANDLE BOLT Ø 4x28mm		10 PCS
5	BOLT Ø 9.5x55mm FOR BOTTOM PANEL		8 PCS	14	SIDE FOOT 50x50x70mm		4 PCS
6	SCREW Ø 4.3x35mm FOR DRAWER		12 PCS	15	MIDDLE FOOT Ø 37x70mm		2 PCS
7	RAIL L = 350mm		3 SET	16	BOLT Ø 6.35x41mm FOR SIDE FOOT		4 PCS
8	SCREW FOR RAIL Ø 3x12mm		36 PCS	17	STICKER Ø 20mm		3 PCS
9	PIN Ø 4.9x8mm		16 PCS	18	I BAR L=527mm		1 PC

Z7,Z10,Z12,Z13,Z14,Z15,Z18 not included in blister packaging.







**NOTE:**

      Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



ITEM: 700881

**STEP 1**



**COASTER**  
FINE FURNITURE

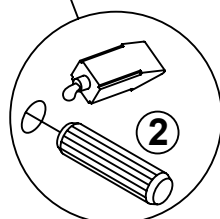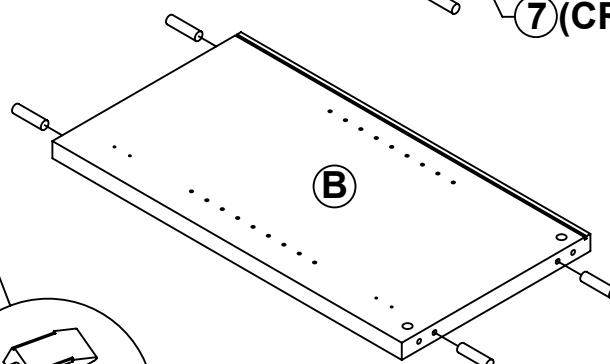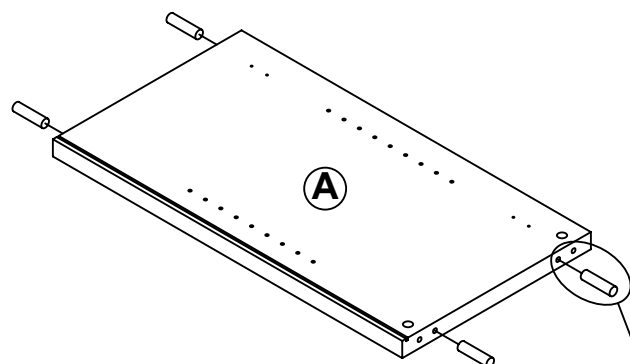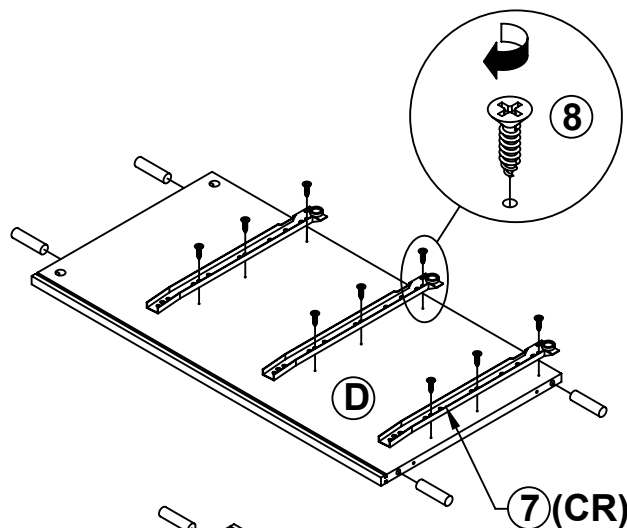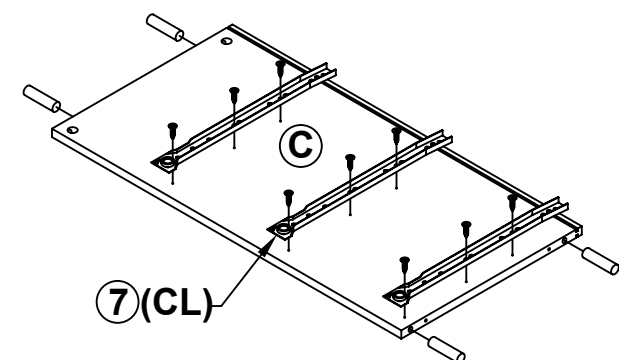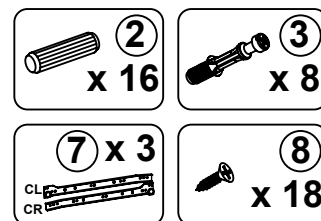

  Apply glue on all wooden dowels to ensure integrity of the structure.

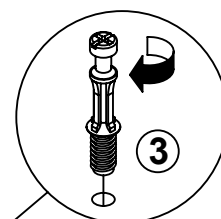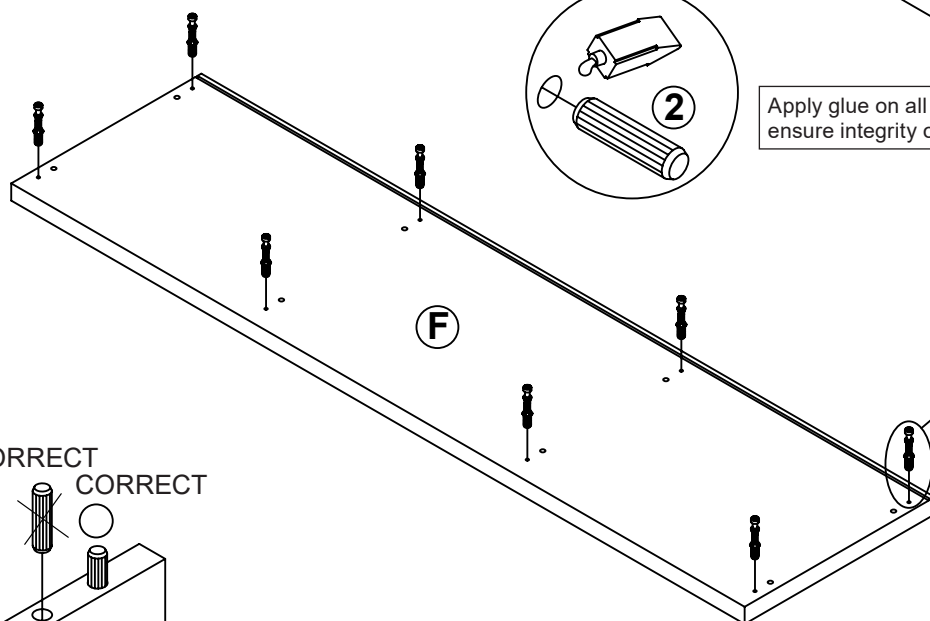




INCORRECT  
CORRECT

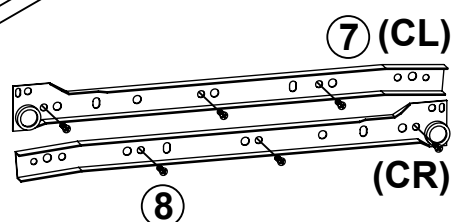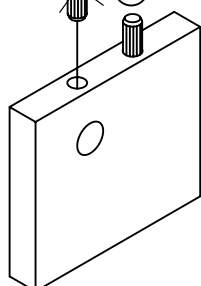  



ITEM: **700881**

## STEP 2

   **COASTER**  
FINE FURNITURE

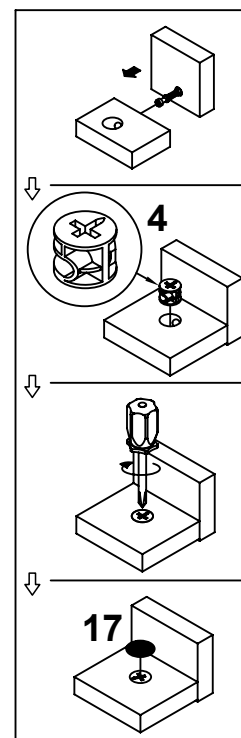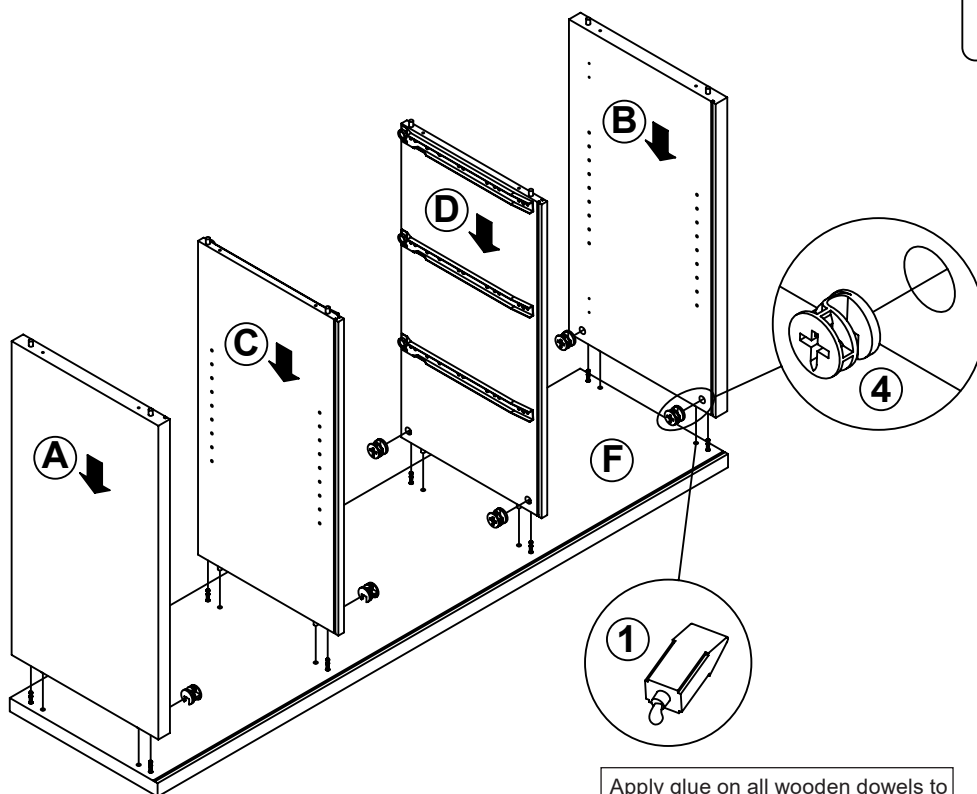



## STEP 3

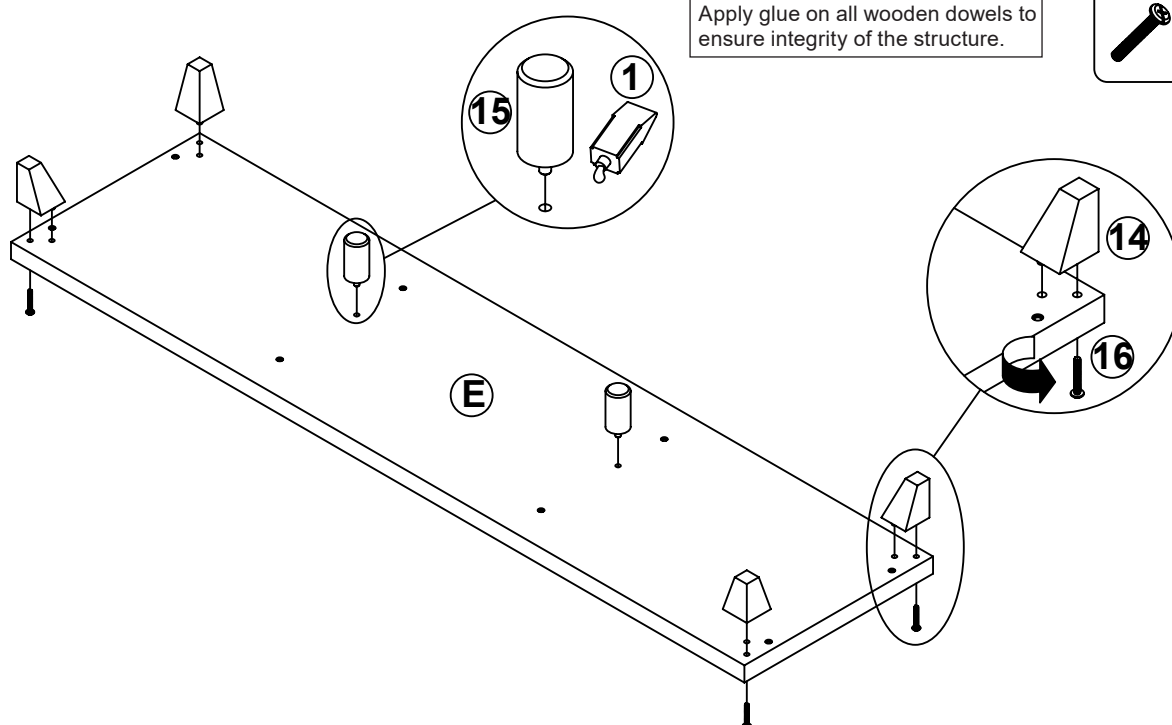  

ITEM: **700881**



## STEP 4

  **COASTER**  
FINE FURNITURE

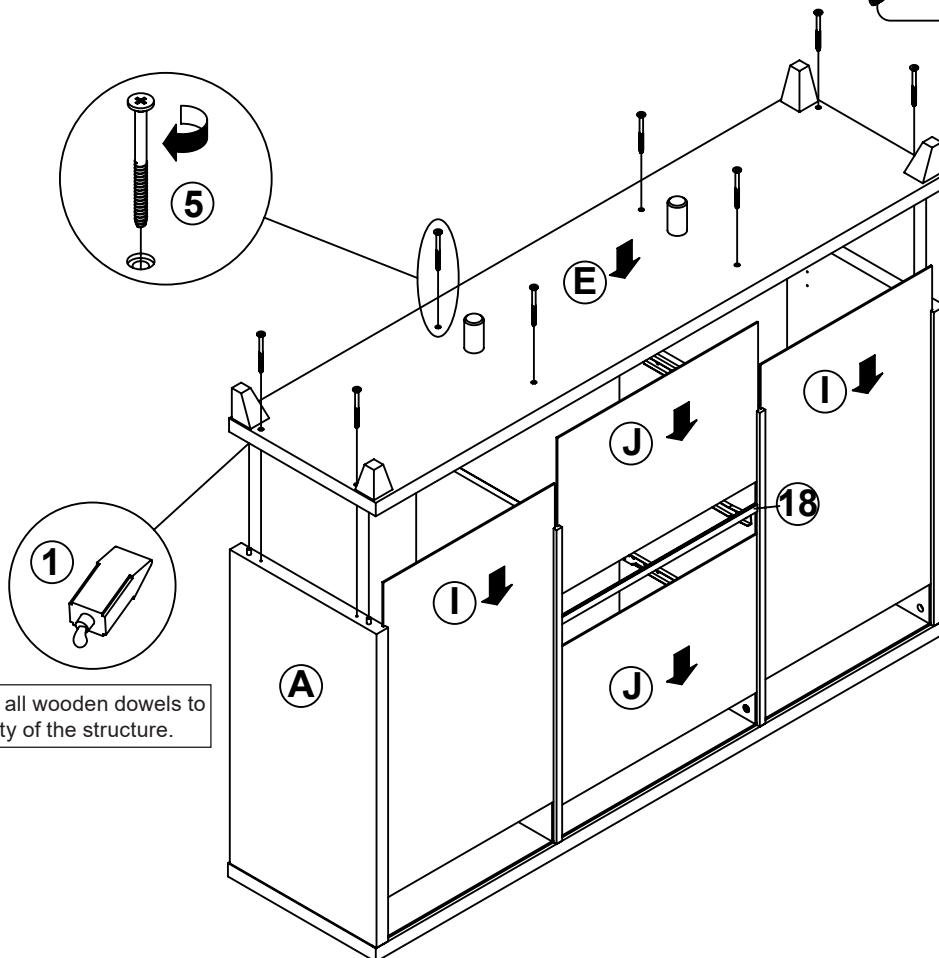

Apply glue on all wooden dowels to ensure integrity of the structure.

## STEP 5

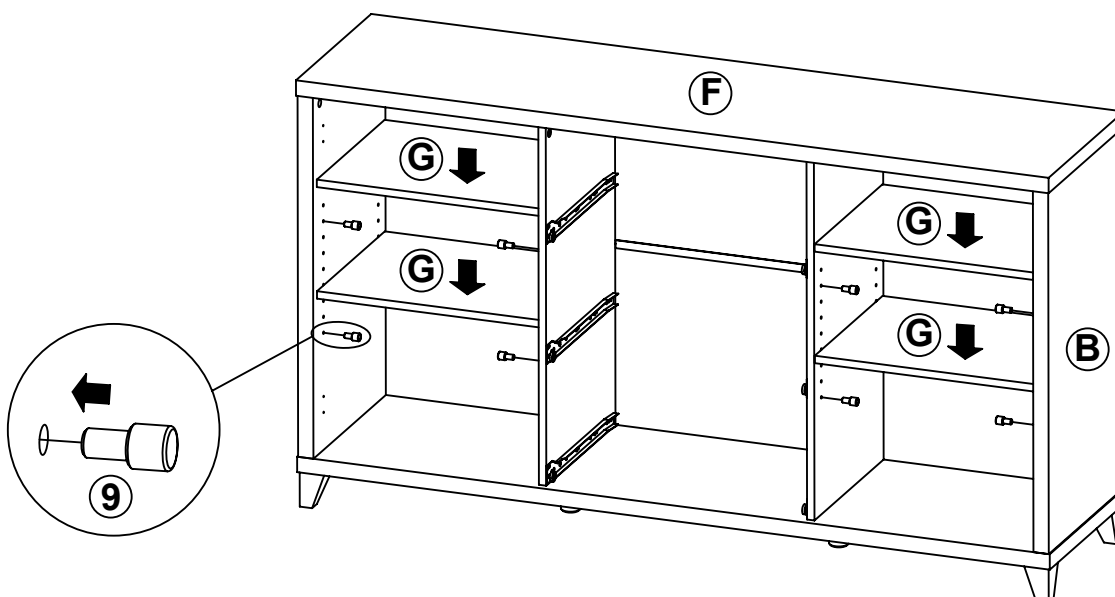  




ITEM: **700881**


## STEP 6



 **COASTER®**  
FINE FURNITURE

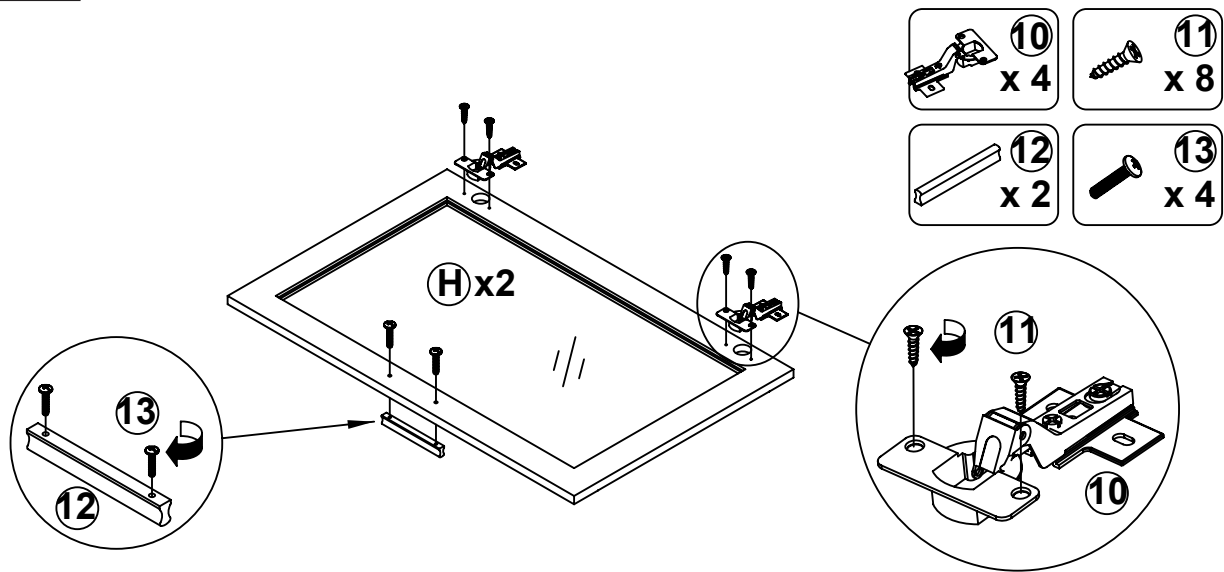







## STEP 7

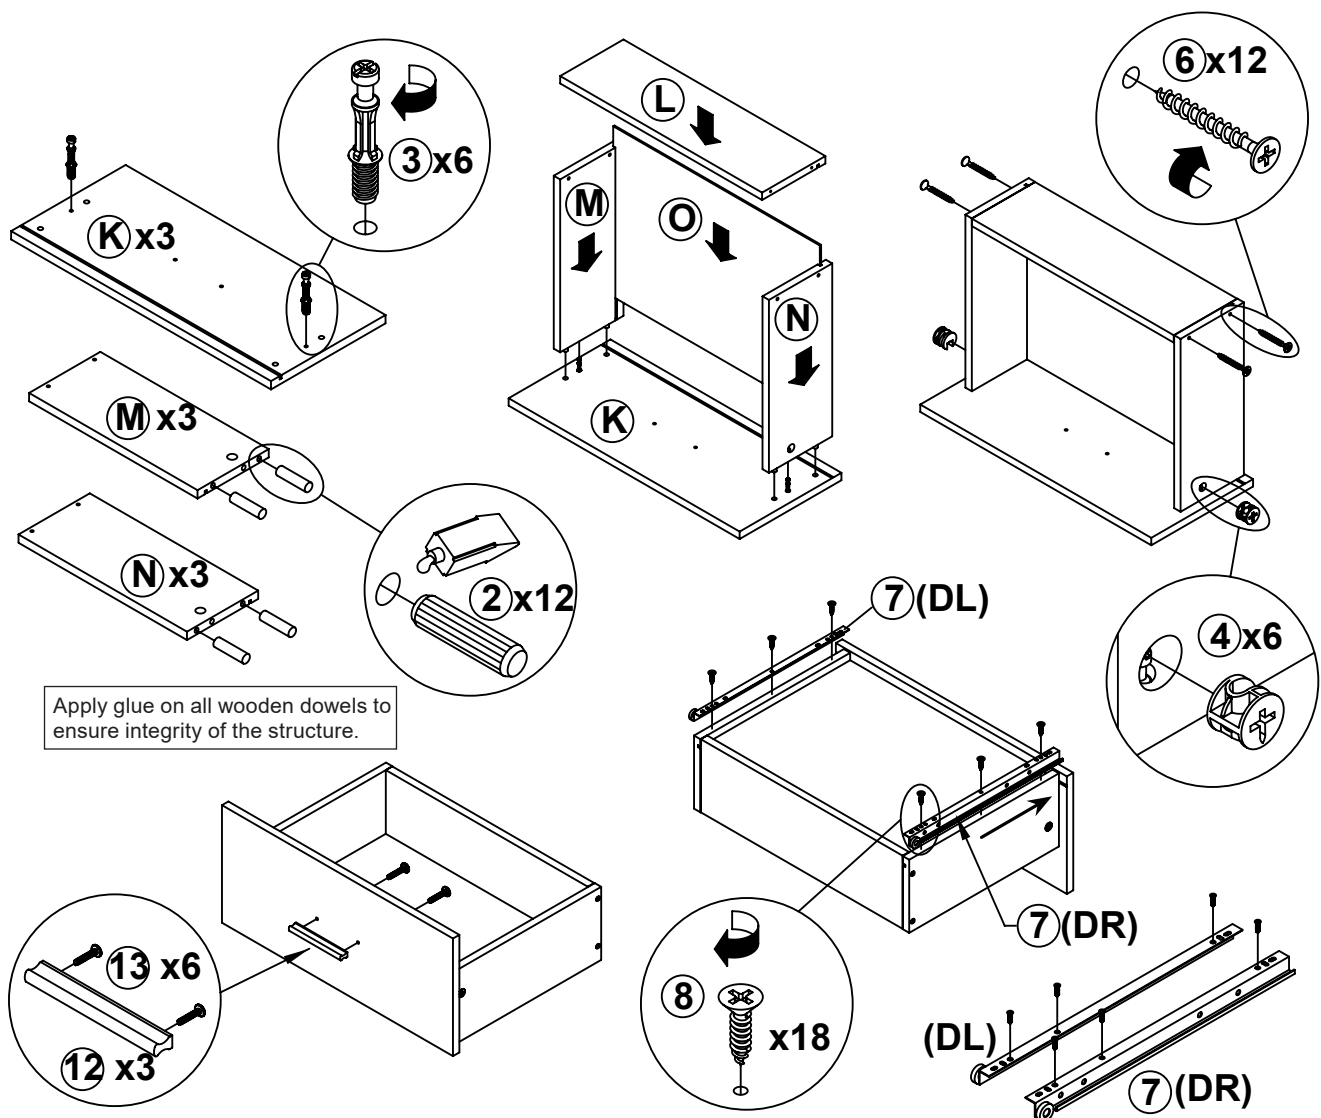 

ITEM: 700881


## STEP 8

      **COASTER**  
FINE FURNITURE

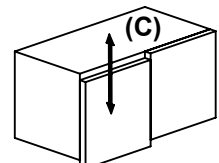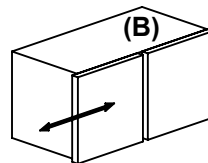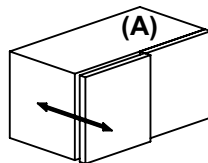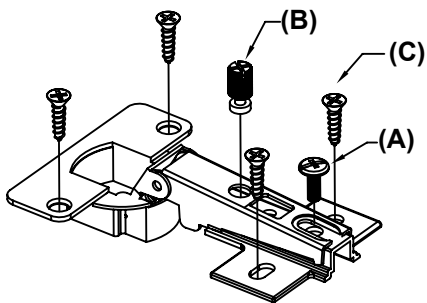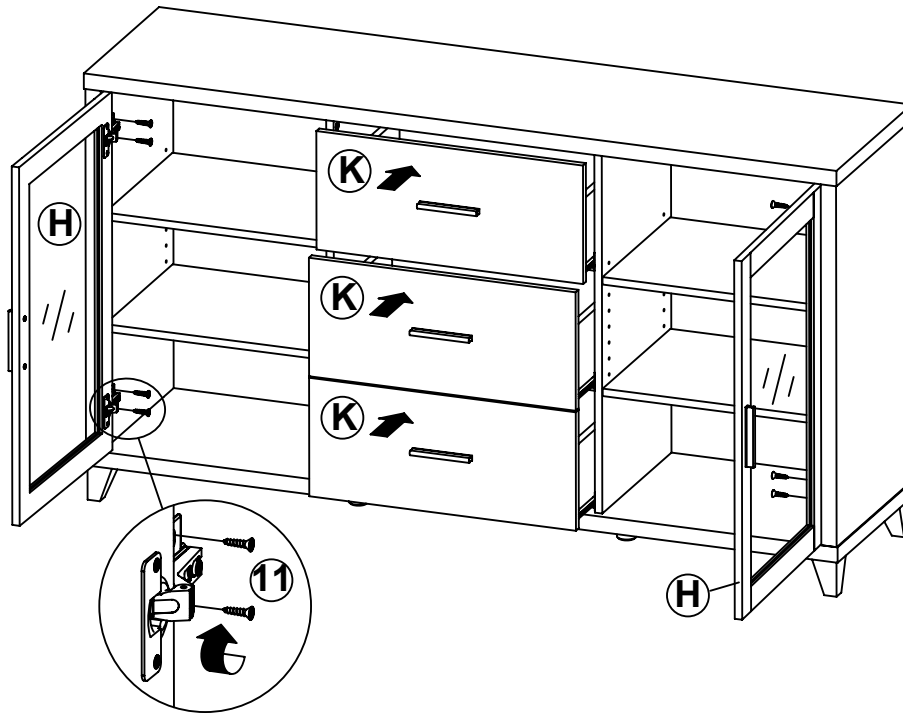



## STEP 9

 COMPLETE

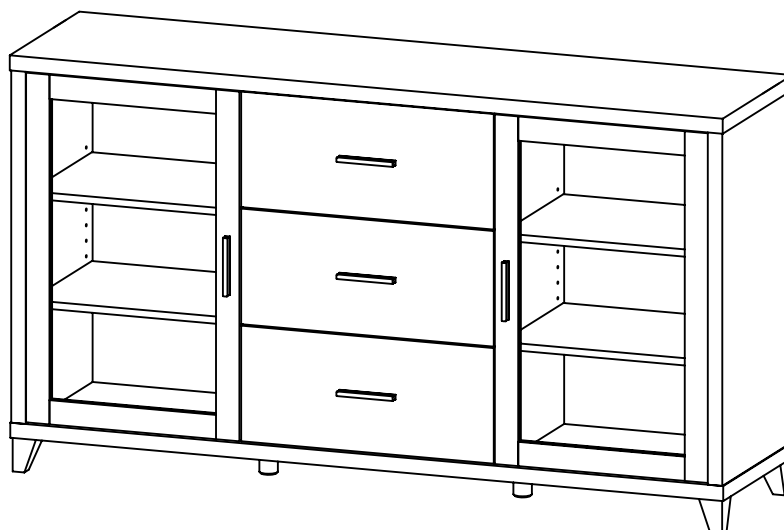

ITEM: 700881

  **COASTER**  
FINE FURNITURE

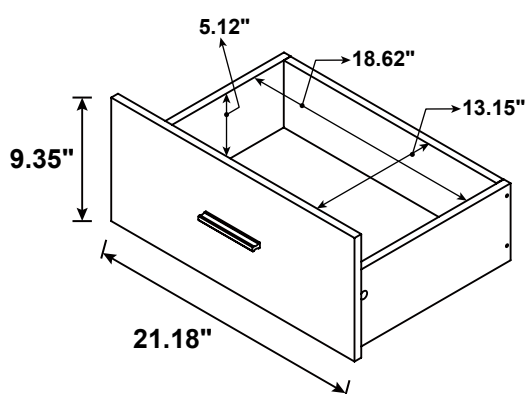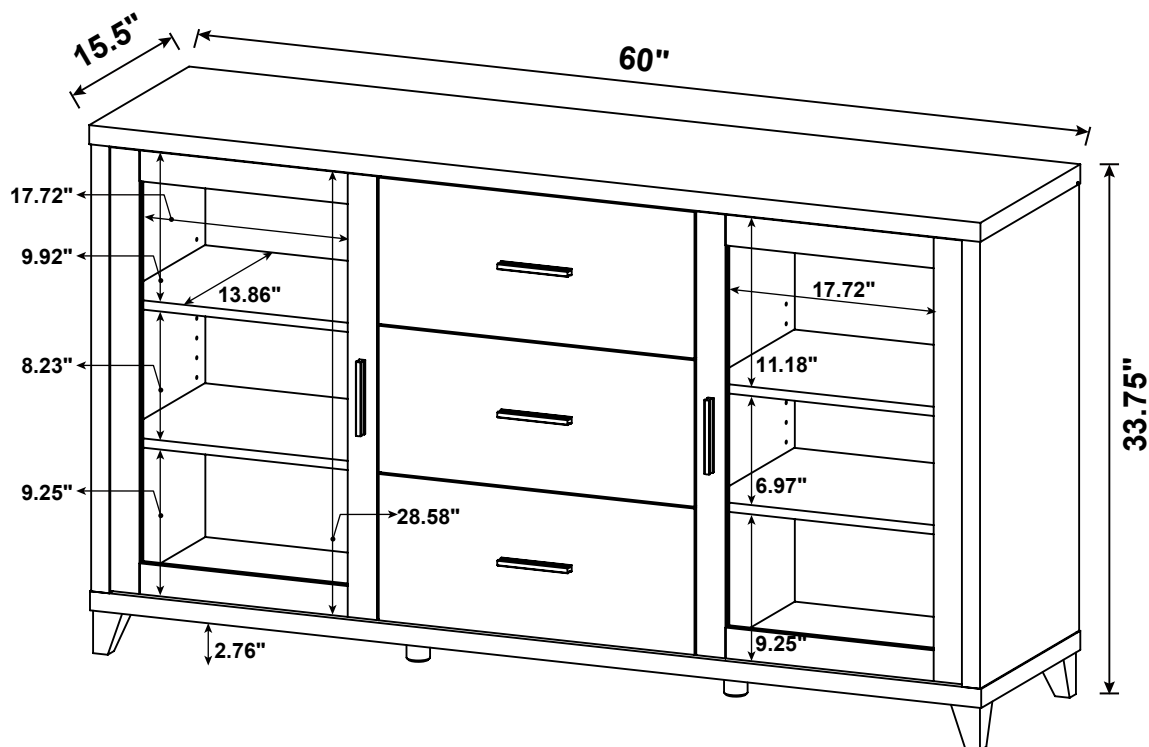

**Note :** Dimension tolerance  $\pm 5\%$

## ANTI-TIPPING INSTALLMENT INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

 
#### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


#### STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

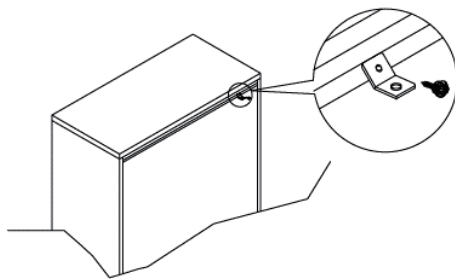


#### STEP 2

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

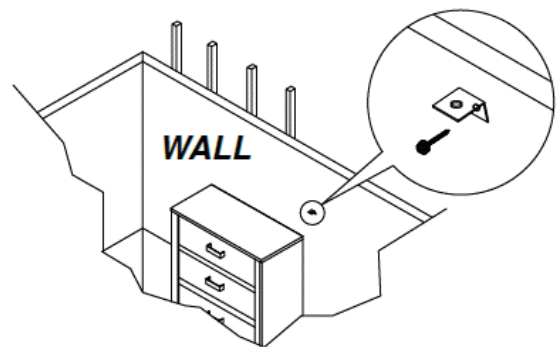

#### STEP 3

 Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

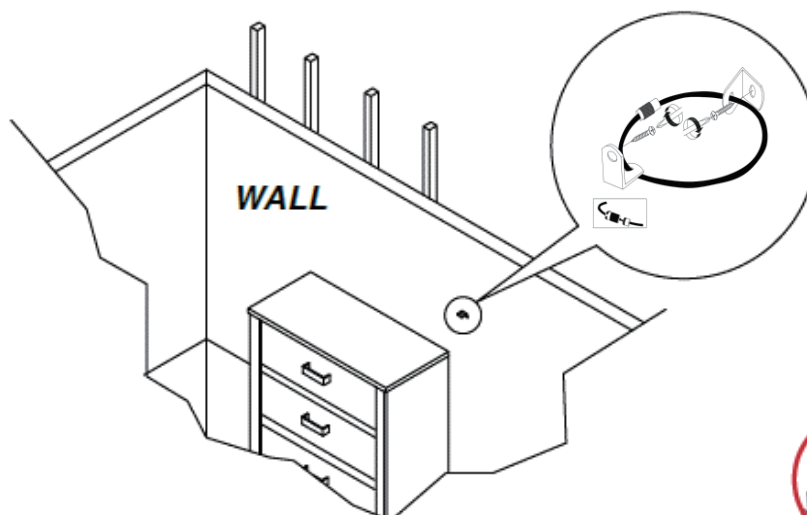

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**700882**  
**MEDIA TOWER**

ITEM:700882

## ASSEMBLY INSTRUCTIONS

 
### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

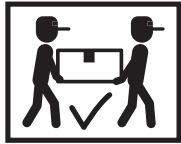

ASSEMBLY TIME

60 MINUTES

## PARTS IDENTIFICATION

A	LEFT SIDE PANEL		1 PC	H	LOWER BACK PANEL		1 PC
B	RIGHT SIDE PANEL		1 PC	I	DRAWER FRONT PANEL		2 PCS
C	BOTTOM PANEL		1 PC	J	DRAWER BACK PANEL		2 PCS
D	FIXED SHELF		2 PCS	K	DRAWER LEFT SIDE PANEL		2 PCS
E	TOP PANEL		1 PC	L	DRAWER RIGHT SIDE PANEL		2 PCS
F	ADJUSTABLE SHELF		2 PCS	M	DRAWER BOTTOM PANEL		2 PCS
G	UPPER BACK PANEL		1 PC	NN	MIDDLE BACK PANEL		1 PC

 


 



 



 
 


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM:700882

Z

## HARDWARE IDENTIFICATION

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	9	PIN Ø 4.9x8mm		8 PCS
2	WOODEN DOWEL Ø 8x30mm		24 PCS	10	HANDLE L=120mm		2 PCS
3	CAM BOLT Ø 7x35.5mm		16 PCS	11	HANDLE BOLT Ø 4x28mm		4 PCS
4	CAM LOCK Ø 15x12mm		16 PCS	12	FOOT 50x50x70mm		4 PCS
5	BOLT Ø 9.5x55mm FOR BOTTOM PANEL		4 PCS	13	BOLT Ø 6.35x41mm FOR FOOT		4 PCS
6	SCREW Ø 4.3x35mm FOR DRAWER		8 PCS	14	STICKER Ø 20mm		3 PCS
7	RAIL L = 250mm		2 SET	15	PLASTIC COVER Ø 52mm		1 PC
8	SCREW FOR RAIL Ø 3x12mm		20 PCS				

 
Z7,Z10,Z11,Z12 not included in blister packaging.

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 700882



**STEP 1**

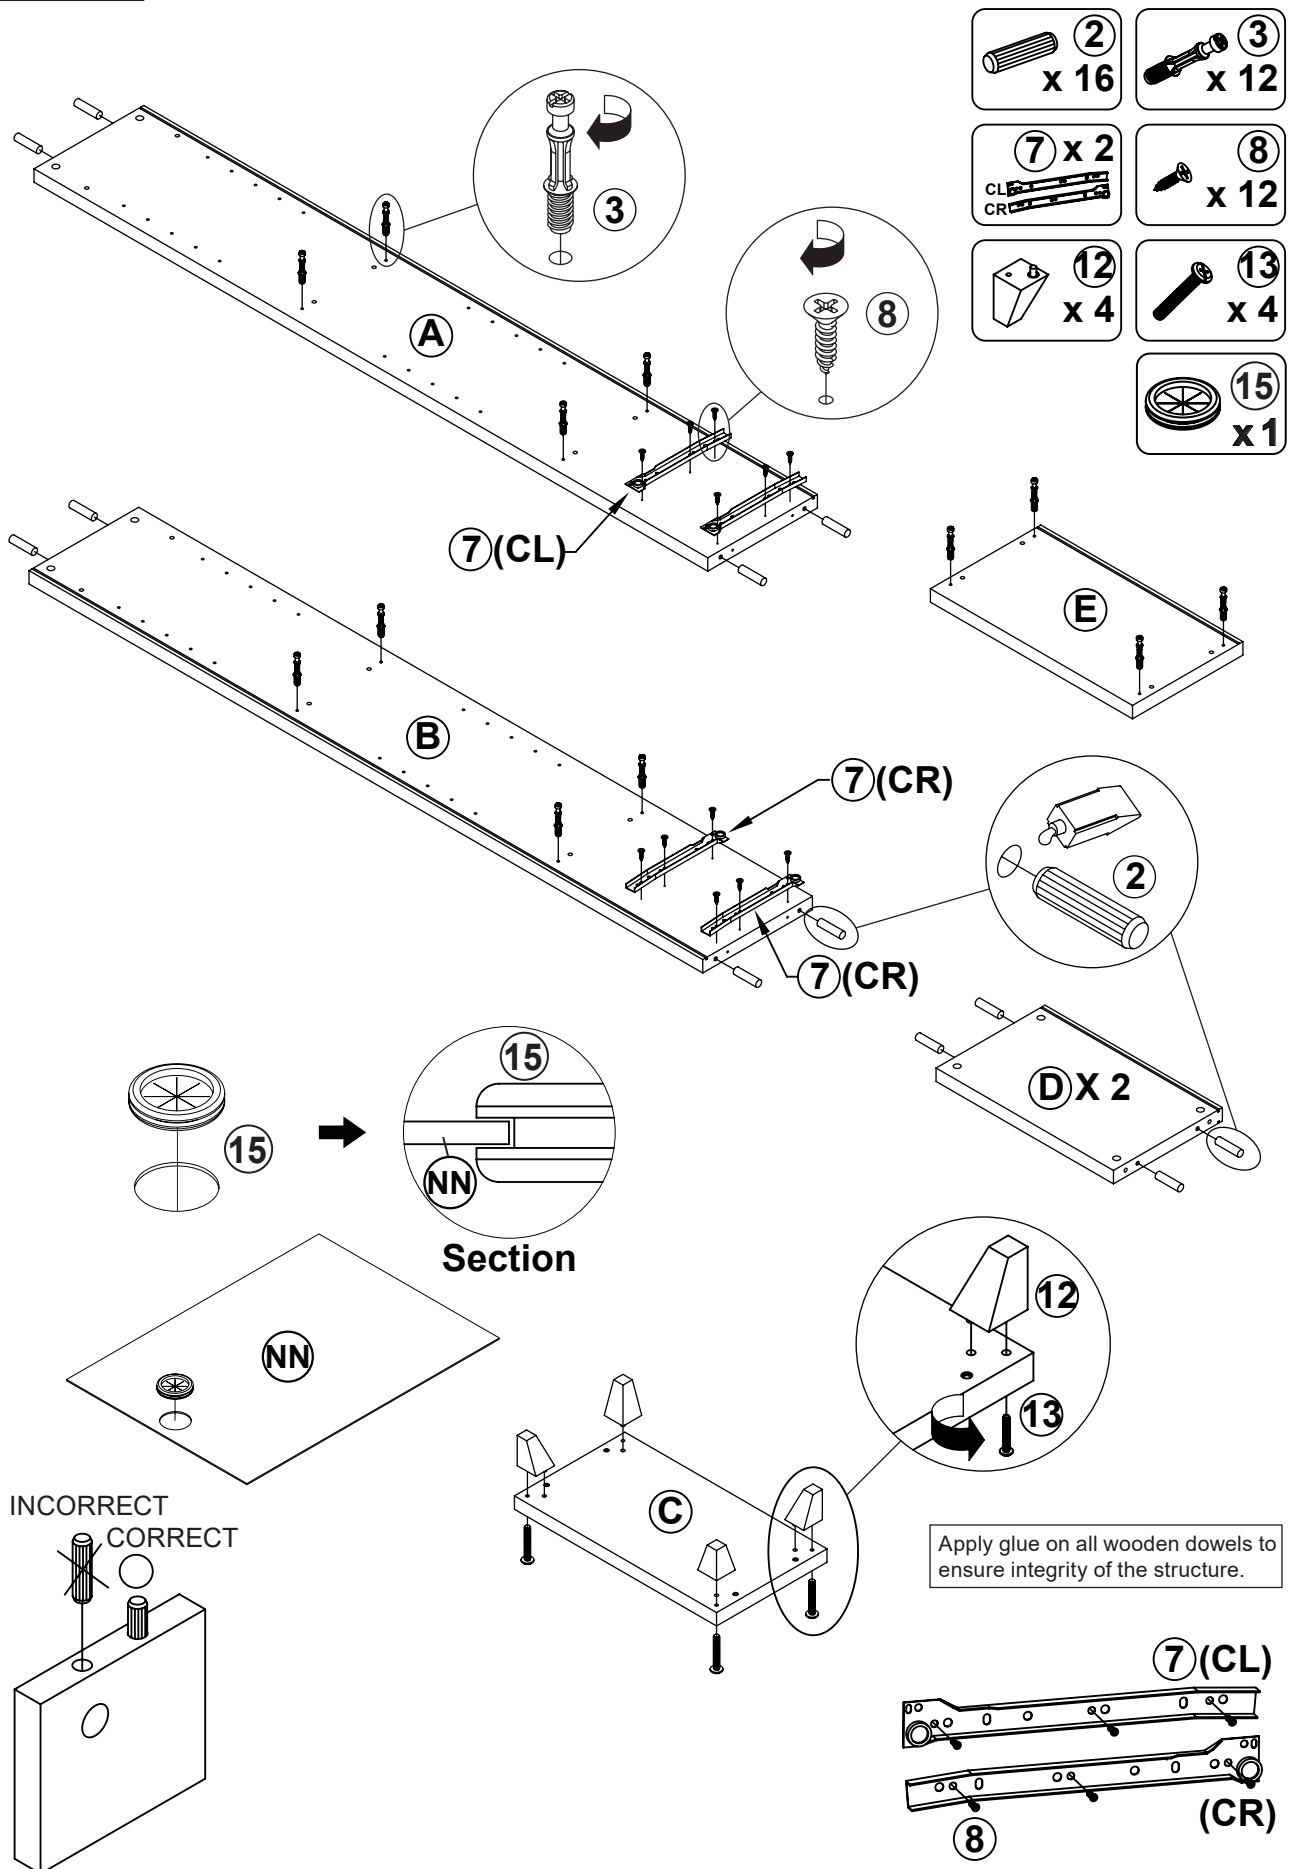




ITEM: 700882



**STEP 2**

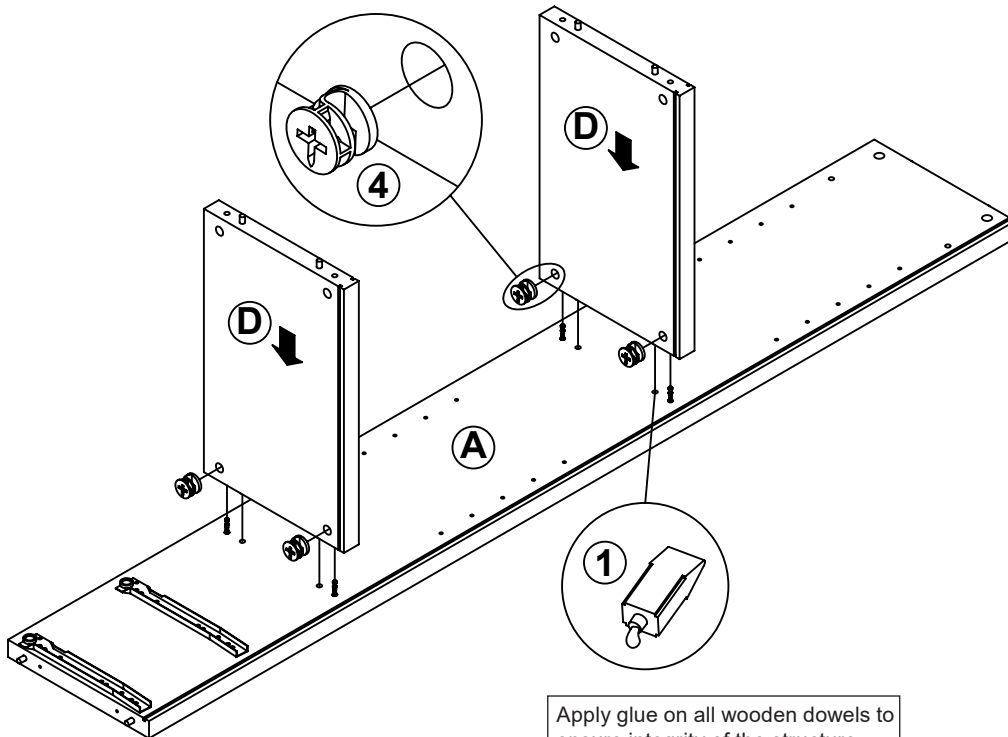  

 Apply glue on all wooden dowels to ensure integrity of the structure.

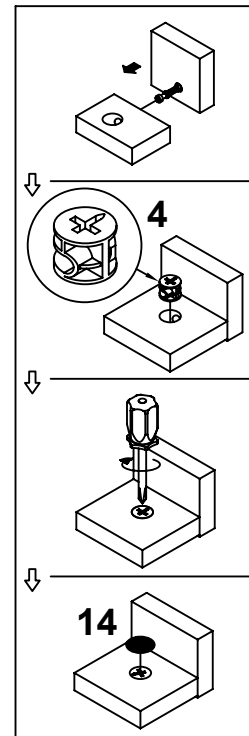


**STEP 3**

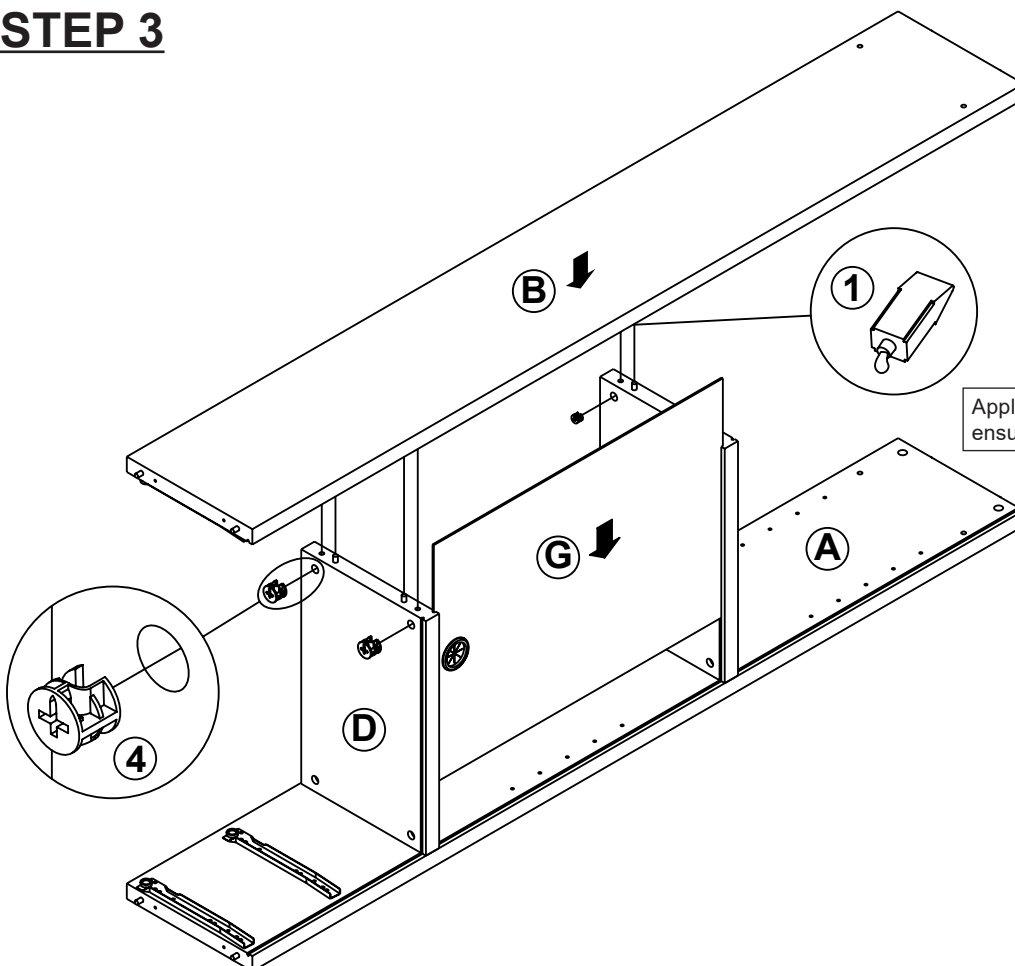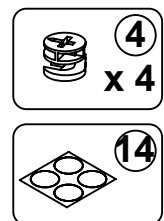  


Apply glue on all wooden dowels to ensure integrity of the structure.

ITEM: **700882**

## STEP 4


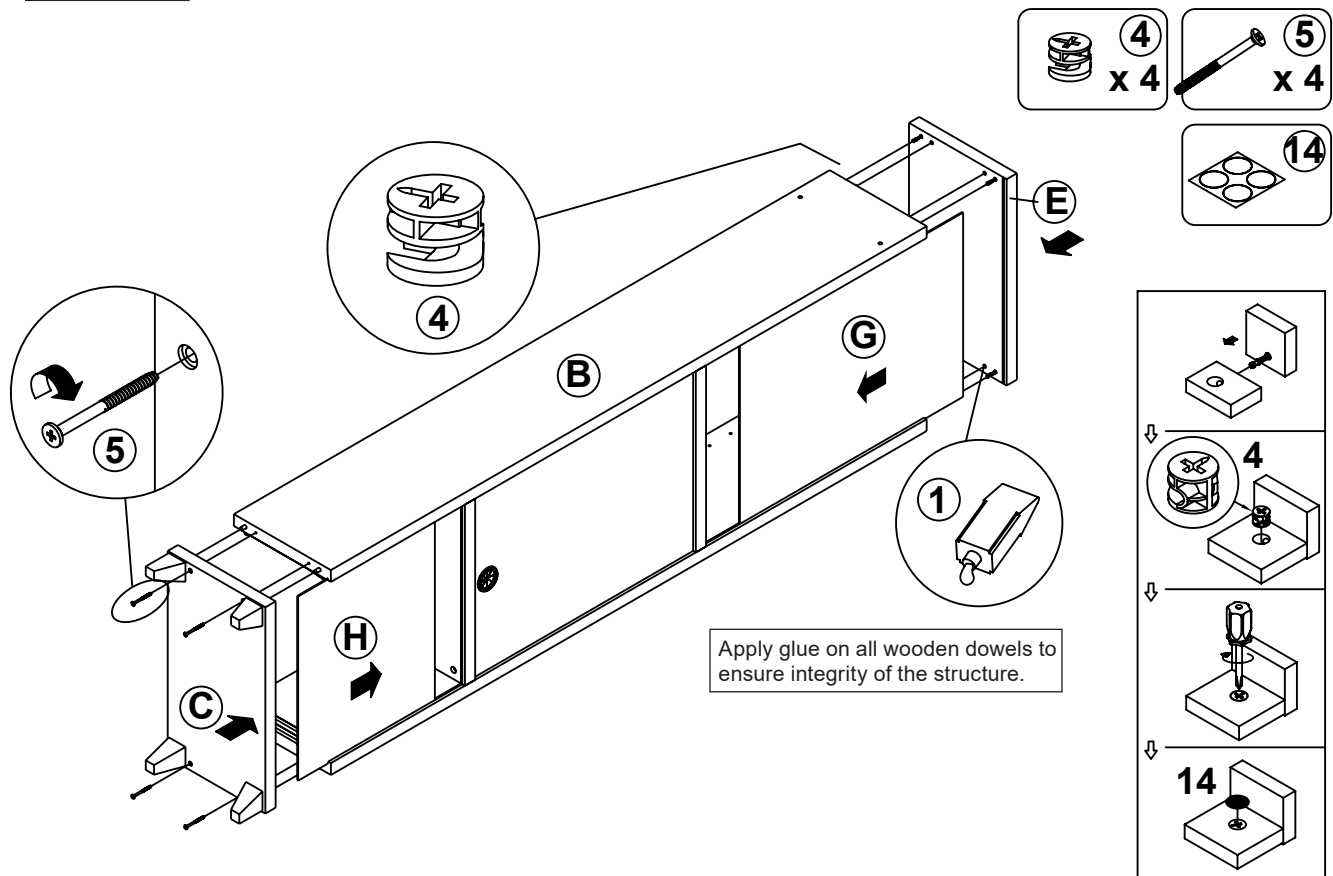 
The logo for Coaster Fine Furniture, featuring a red curved line above the word "COASTER" in a bold, sans-serif font, with "FINE FURNITURE" in a smaller font below it.

## STEP 5

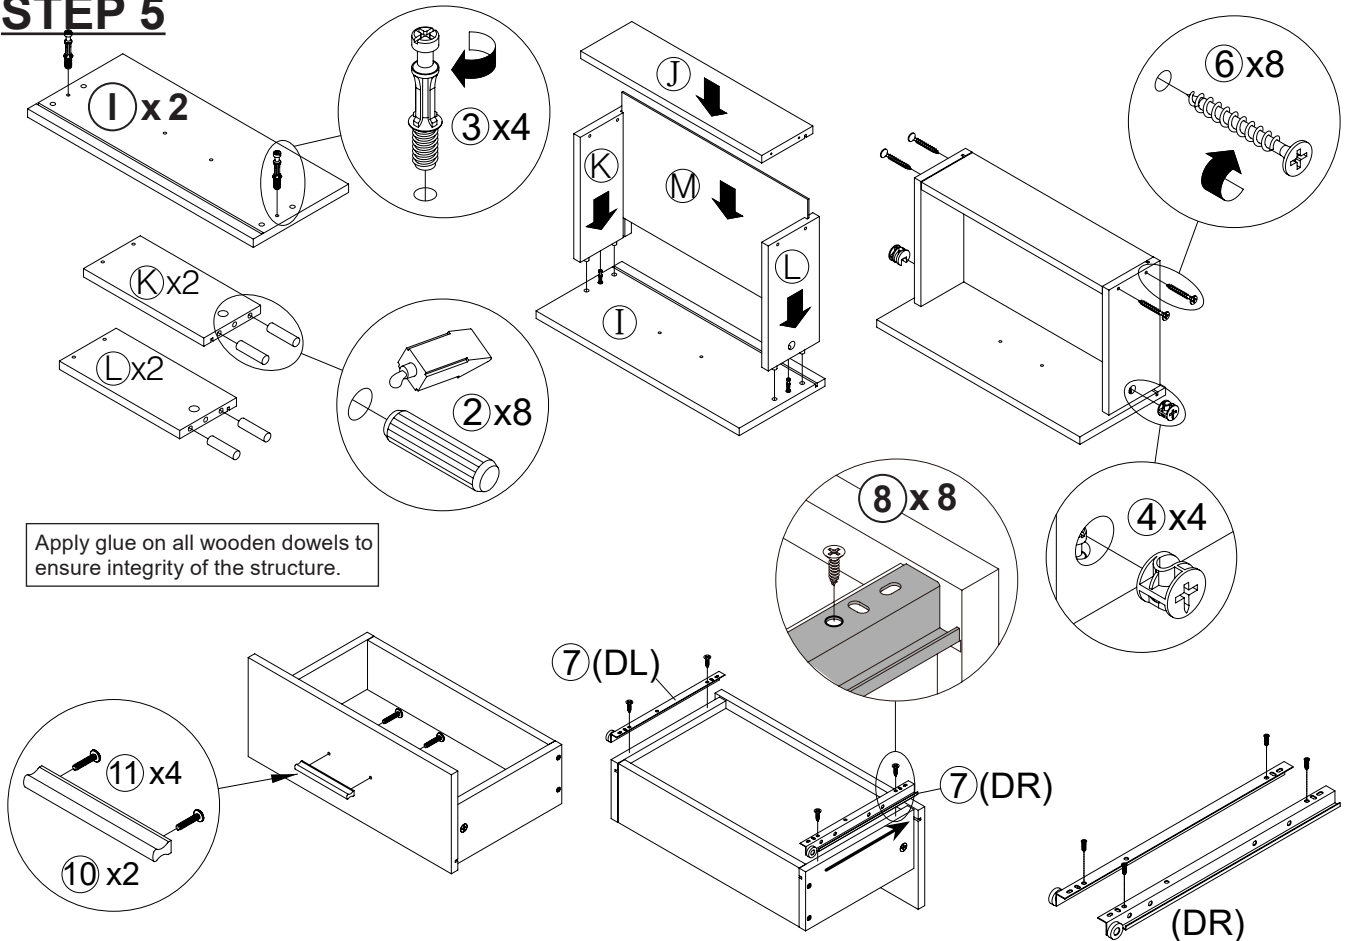 





ITEM: 700882

**STEP 6**

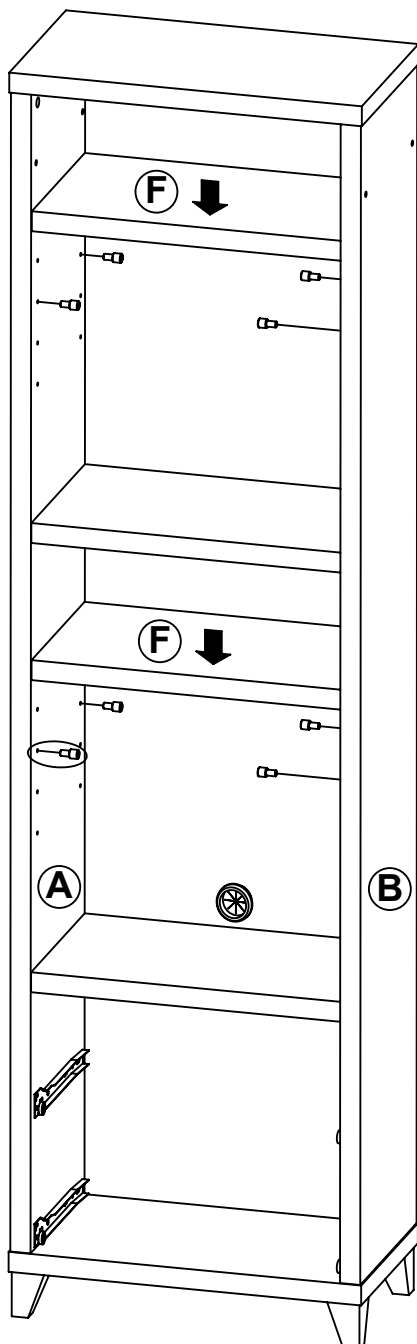  


**STEP 7**

    **COASTER**  
FINE FURNITURE

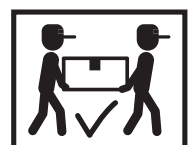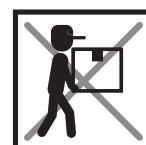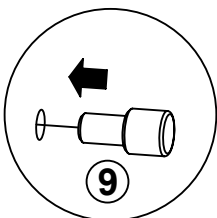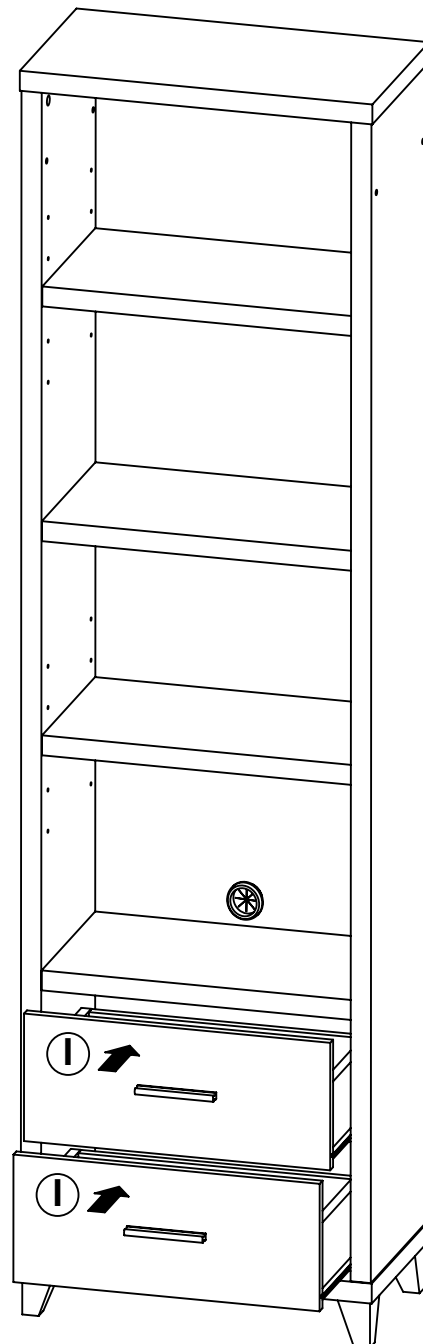

ITEM: 700882

 **COASTER**  
FINE FURNITURE

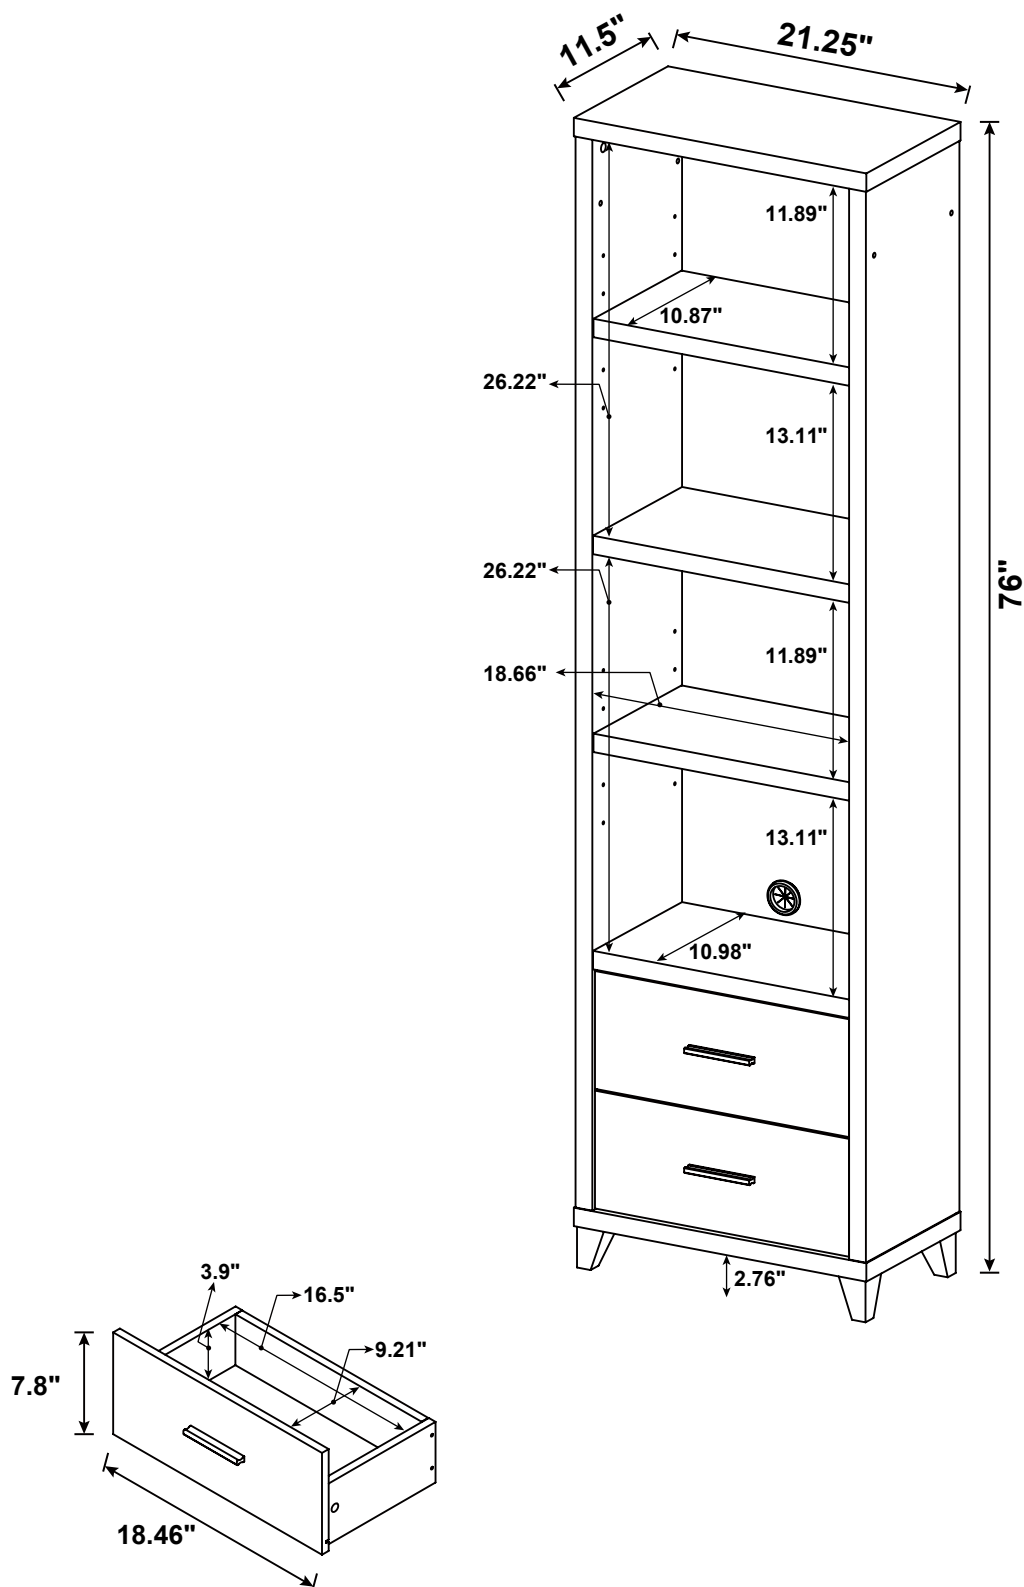

**Note :** Dimension tolerance  $\pm 5\%$

## ANTI-TIPPING INSTALLMENT INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

 
#### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


#### STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

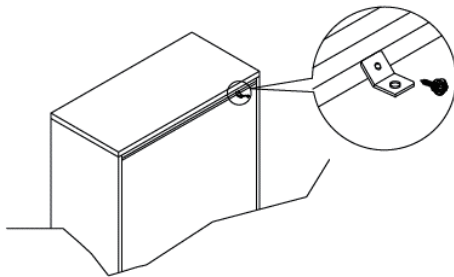


#### STEP 2

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

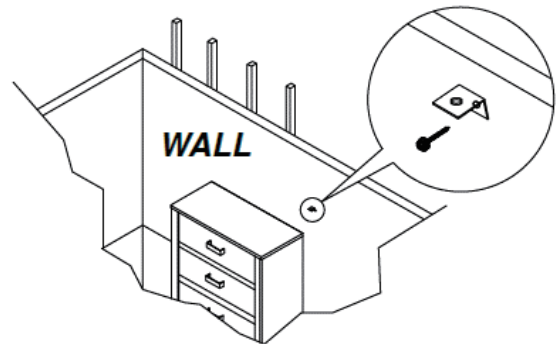

#### STEP 3

 Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

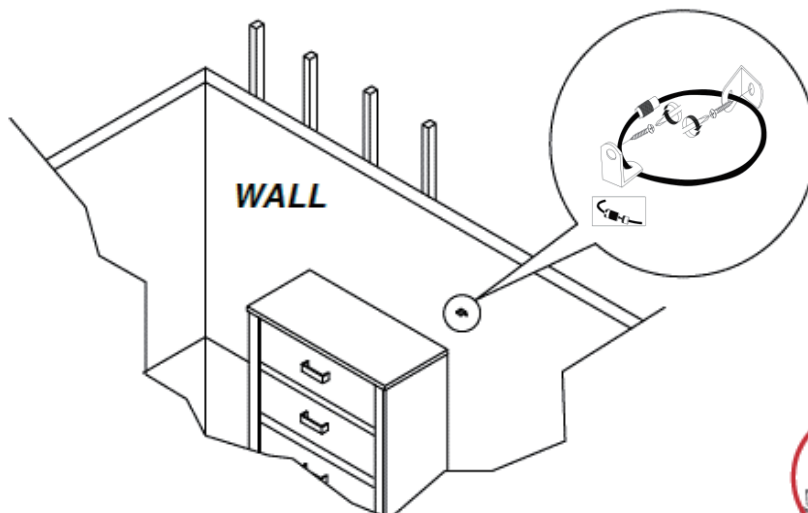



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**700883**  
**BRIDGE**

REVISION 0 : 06/26/2013  
REVISION 1 : 12/17/2018  
REVISION 2 : 06/21/2019  
REVISION 3 : 01/20/2020

REVISION 4 : 08/08/2022

**PAGE 1 OF 6**

COASTERFURNITURE.COM

# ITEM:700883

## ASSEMBLY INSTRUCTIONS

 
### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

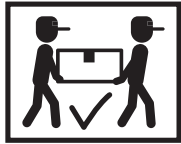


ASSEMBLY TIME

20 MINUTES


## PARTS IDENTIFICATION

 A SIDE PANEL

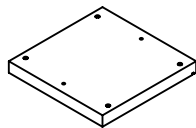


2 PCS

 C DIVIDER PANEL




1 PC

 B CROSS PANEL

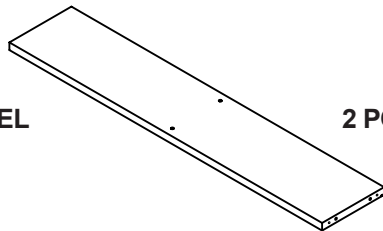

2 PCS

 D BACK PANEL

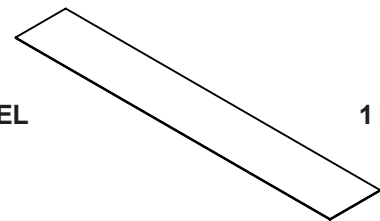

1 PC

## HARDWARE IDENTIFICATION

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1PC	4	PIPE THREAD Ø 6.2x45mm SR		4PCS
2	WOODEN DOWEL Ø 8x30mm		8PCS	5	BOLT Ø 4.5x20mm SR		4PCS
3	CAM BOLT Ø 9.5x55mm SR FOR BOTTOM PANEL		12PCS	6	STICKER Ø 20mm		4PCS

 
 
### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.




ITEM: **700883**

**STEP 1**

**COASTER**  
FINE FURNITURE

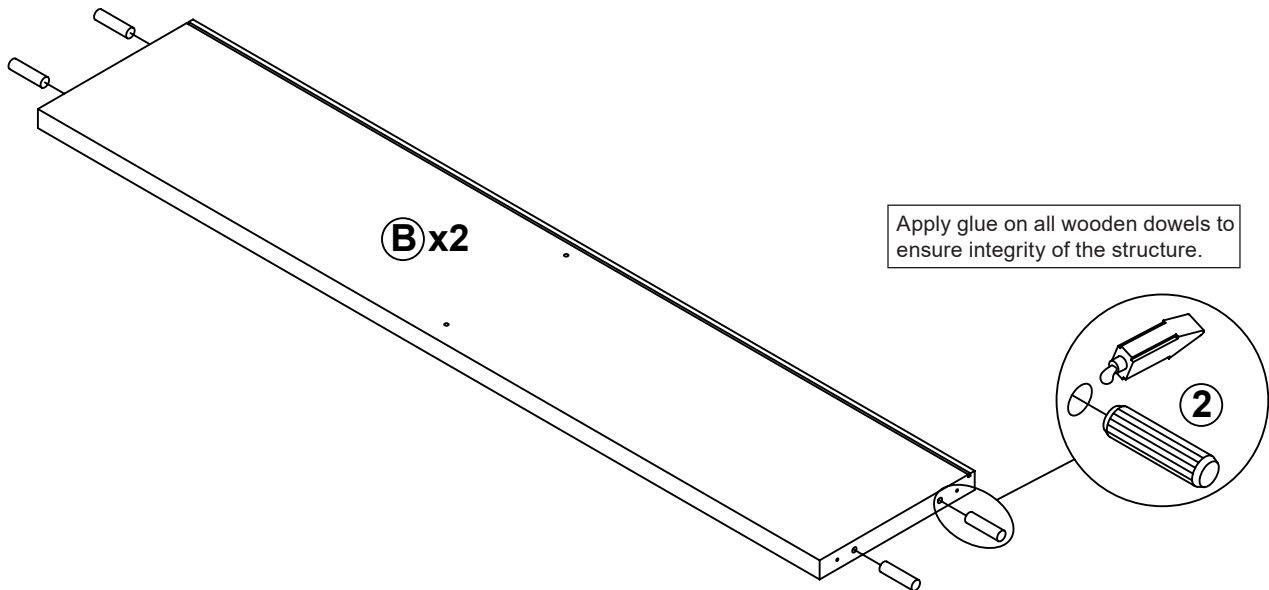

**STEP 2**

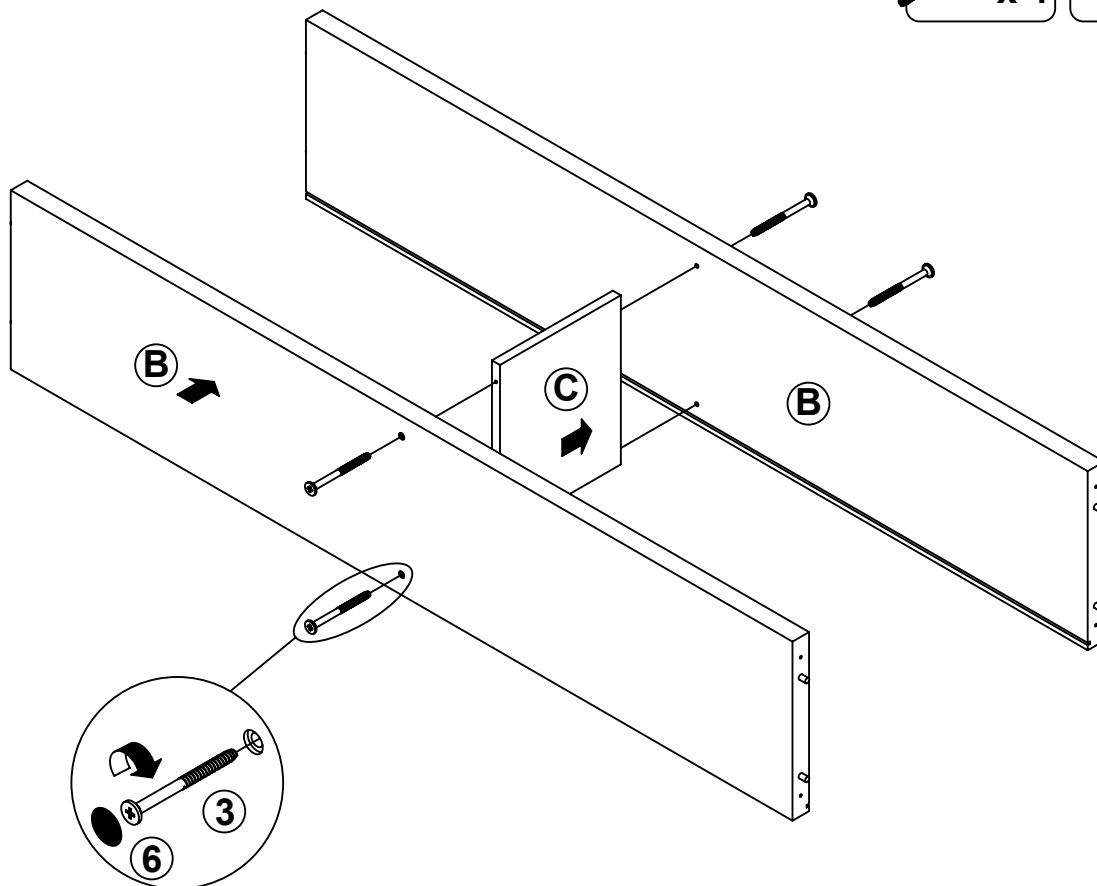  
 






ITEM: **700883**

**COASTER**  
FINE FURNITURE

**STEP 3**

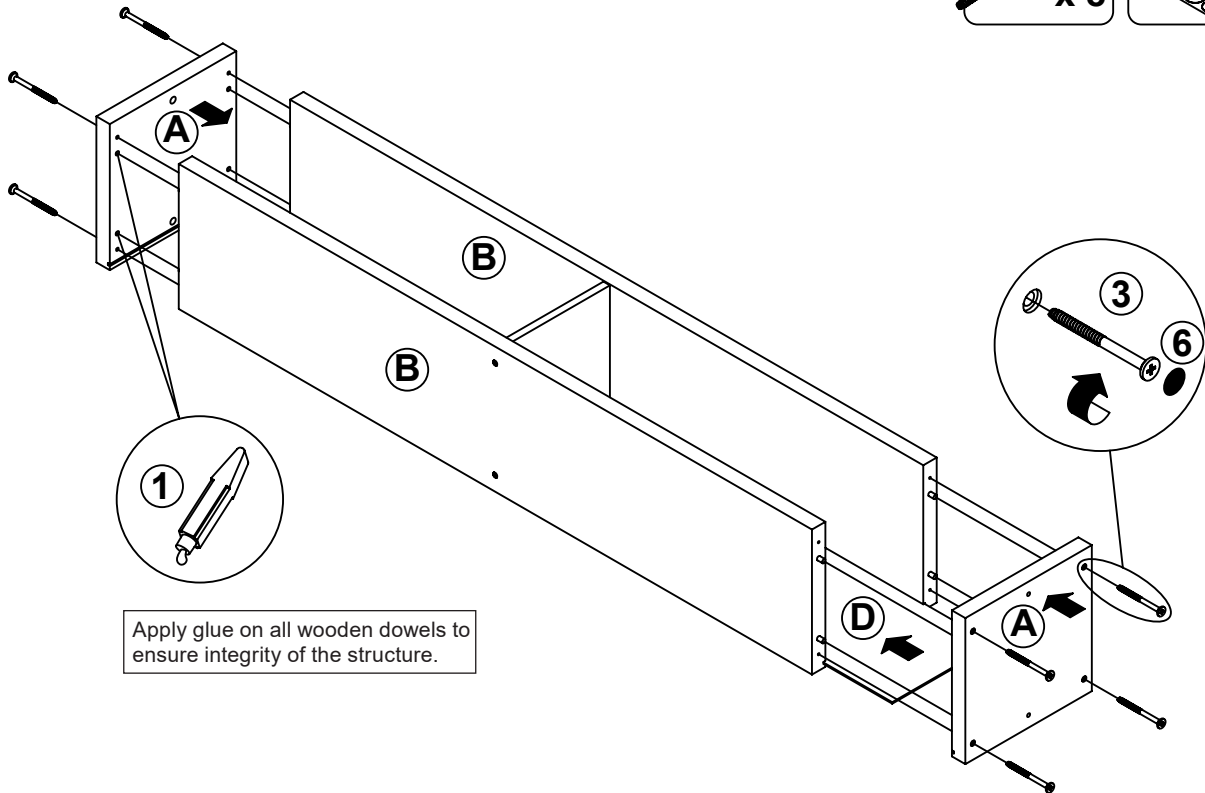  


**STEP 4**

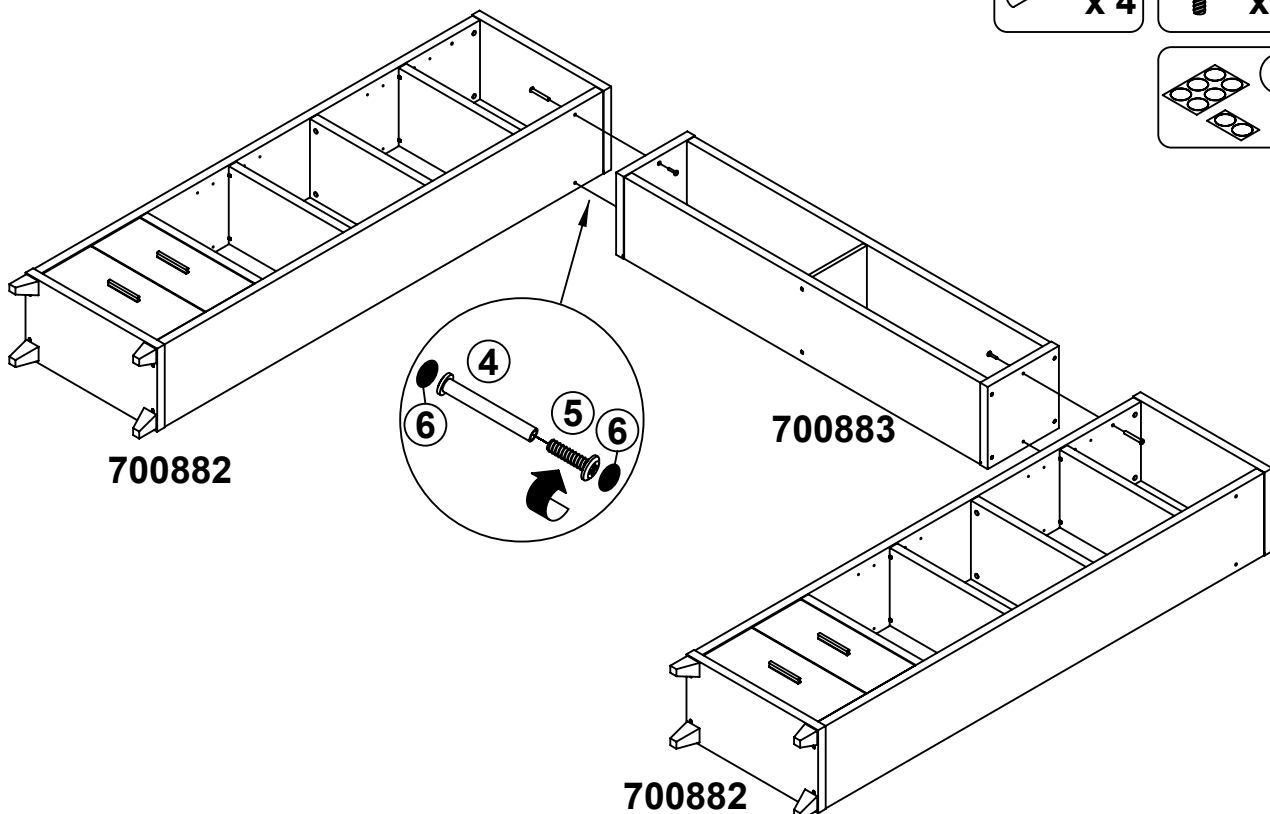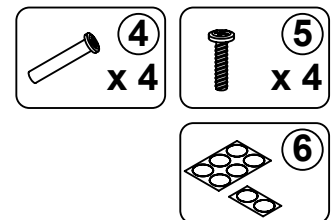  


ITEM: **700883**

**STEP 5**

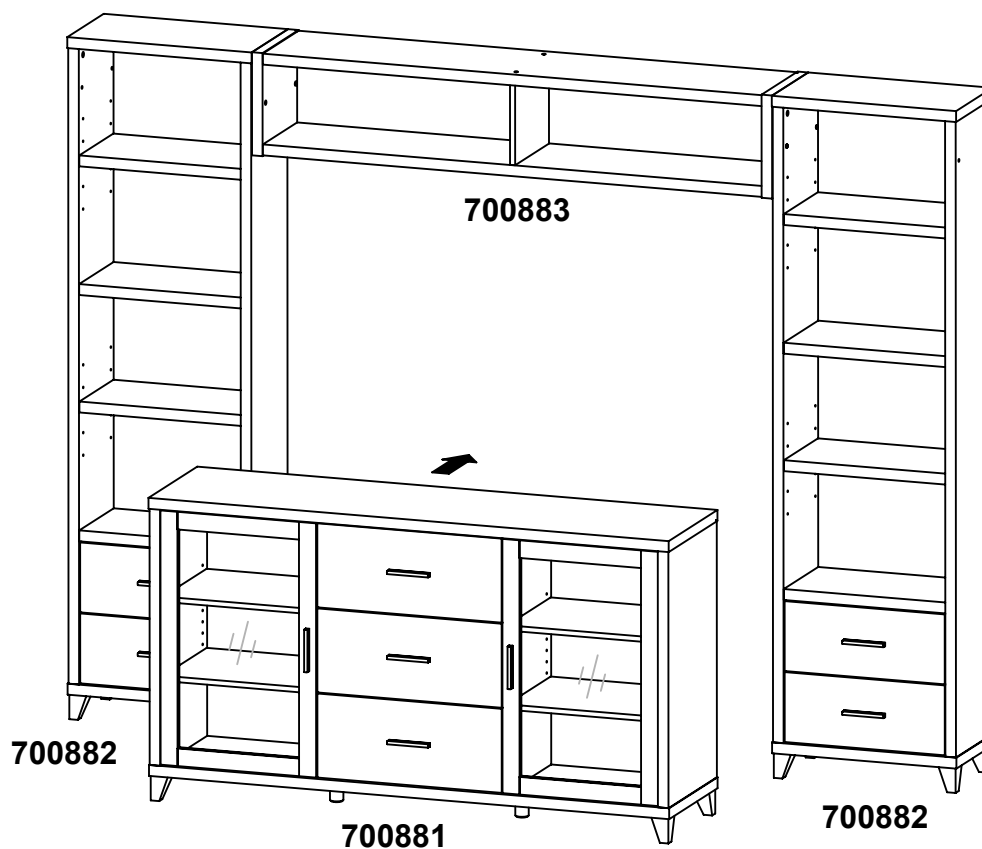 


**STEP 6**

 **COMPLETE**

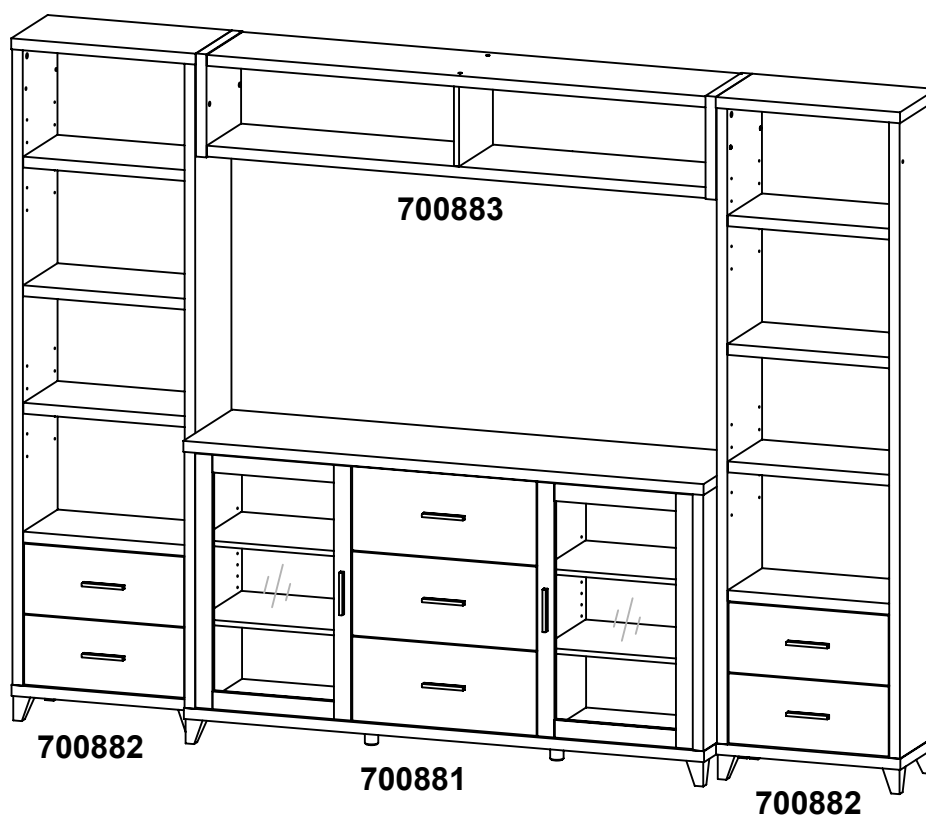

ITEM: 700883

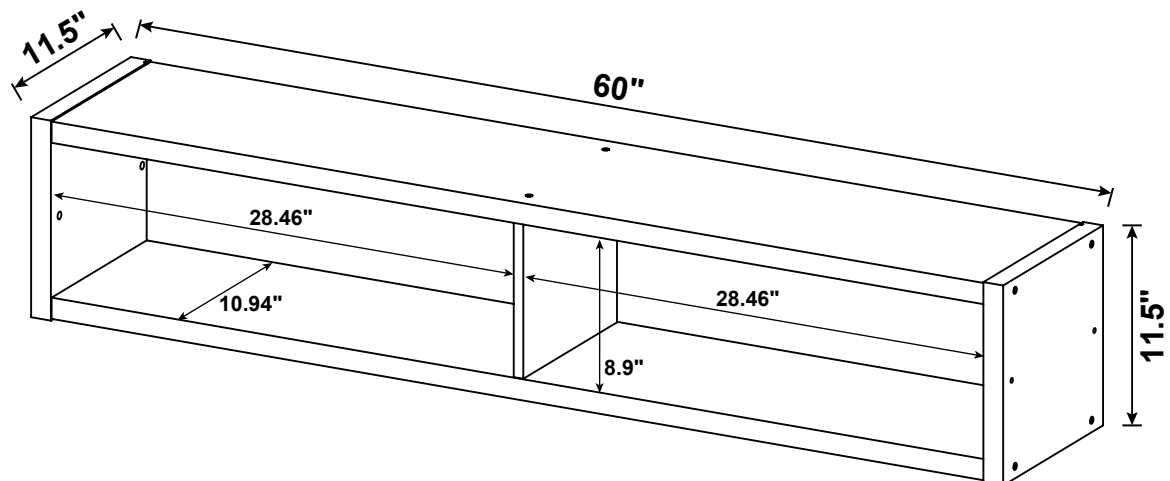 

**Note :** Dimension tolerance  $\pm 5\%$

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**700882**  
**MEDIA TOWER**

ITEM:700882

## ASSEMBLY INSTRUCTIONS

 
### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

 
 
 
 
 

 
 
 
 
 
 
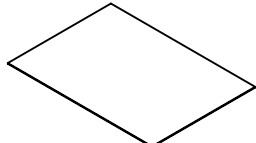 
 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

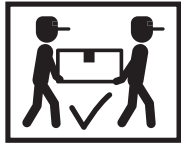

ASSEMBLY TIME

60 MINUTES

## PARTS IDENTIFICATION

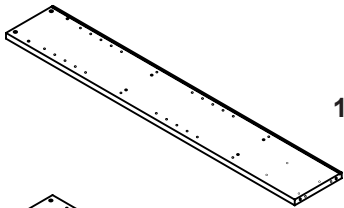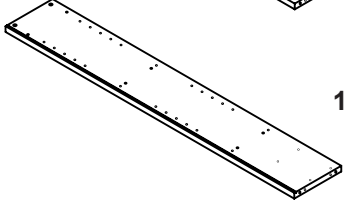A	LEFT SIDE PANEL		1 PC	H	LOWER BACK PANEL		1 PC
B	RIGHT SIDE PANEL		1 PC	I	DRAWER FRONT PANEL		2 PCS
C	BOTTOM PANEL		1 PC	J	DRAWER BACK PANEL		2 PCS
D	FIXED SHELF		2 PCS	K	DRAWER LEFT SIDE PANEL		2 PCS
E	TOP PANEL		1 PC	L	DRAWER RIGHT SIDE PANEL		2 PCS
F	ADJUSTABLE SHELF		2 PCS	M	DRAWER BOTTOM PANEL		2 PCS
G	UPPER BACK PANEL		1 PC	NN	MIDDLE BACK PANEL		1 PC

 


 



 



 
 


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM:700882

Z

## HARDWARE IDENTIFICATION

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	9	PIN Ø 4.9x8mm		8 PCS
2	WOODEN DOWEL Ø 8x30mm		24 PCS	10	HANDLE L=120mm		2 PCS
3	CAM BOLT Ø 7x35.5mm		16 PCS	11	HANDLE BOLT Ø 4x28mm		4 PCS
4	CAM LOCK Ø 15x12mm		16 PCS	12	FOOT 50x50x70mm		4 PCS
5	BOLT Ø 9.5x55mm FOR BOTTOM PANEL		4 PCS	13	BOLT Ø 6.35x41mm FOR FOOT		4 PCS
6	SCREW Ø 4.3x35mm FOR DRAWER		8 PCS	14	STICKER Ø 20mm		3 PCS
7	RAIL L = 250mm		2 SET	15	PLASTIC COVER Ø 52mm		1 PC
8	SCREW FOR RAIL Ø 3x12mm		20 PCS				

Z7,Z10,Z11,Z12 not included in blister packaging.

 
### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 700882



# STEP 1

**COASTER**  
FINE FURNITURE

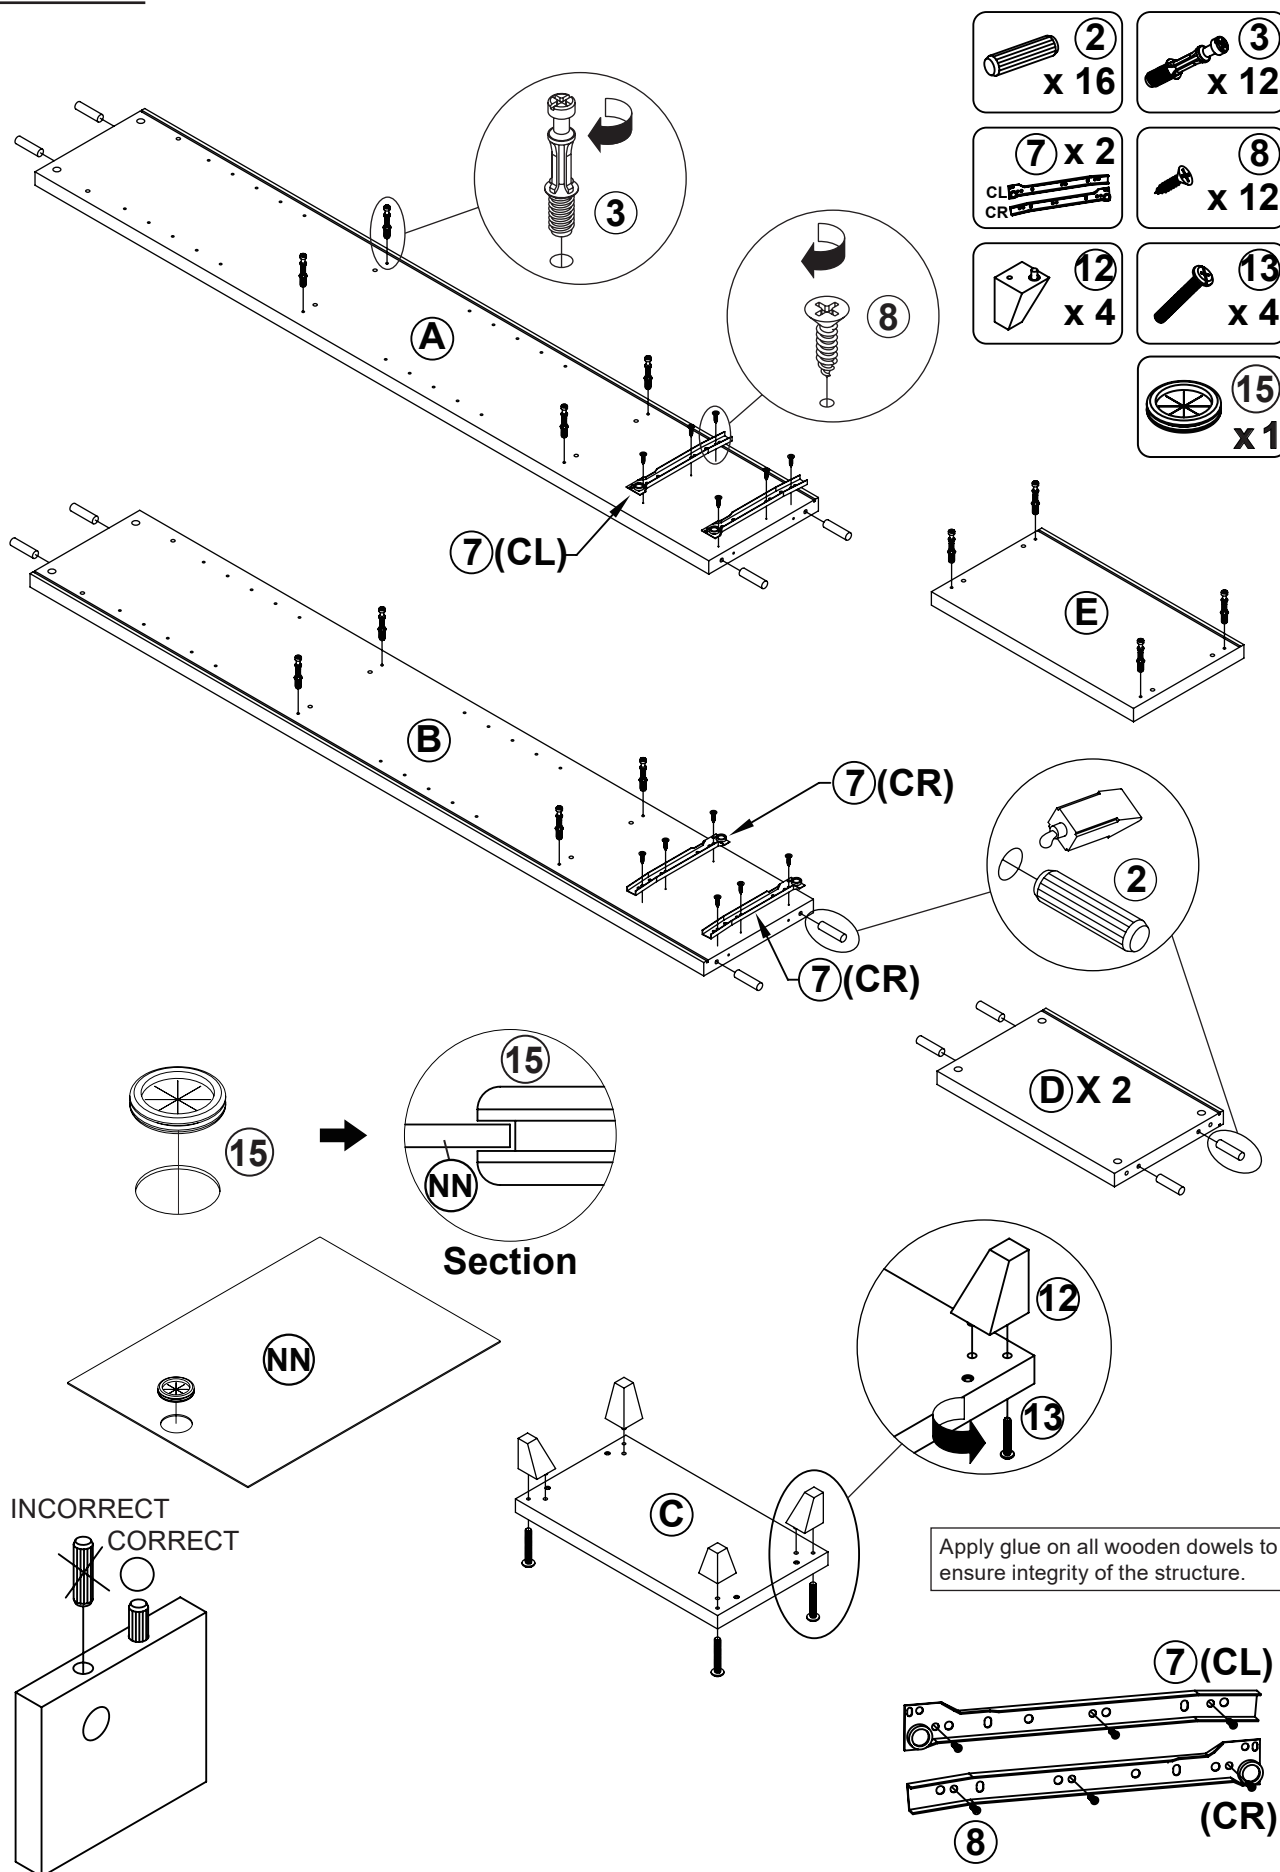


ITEM: 700882




**STEP 2**

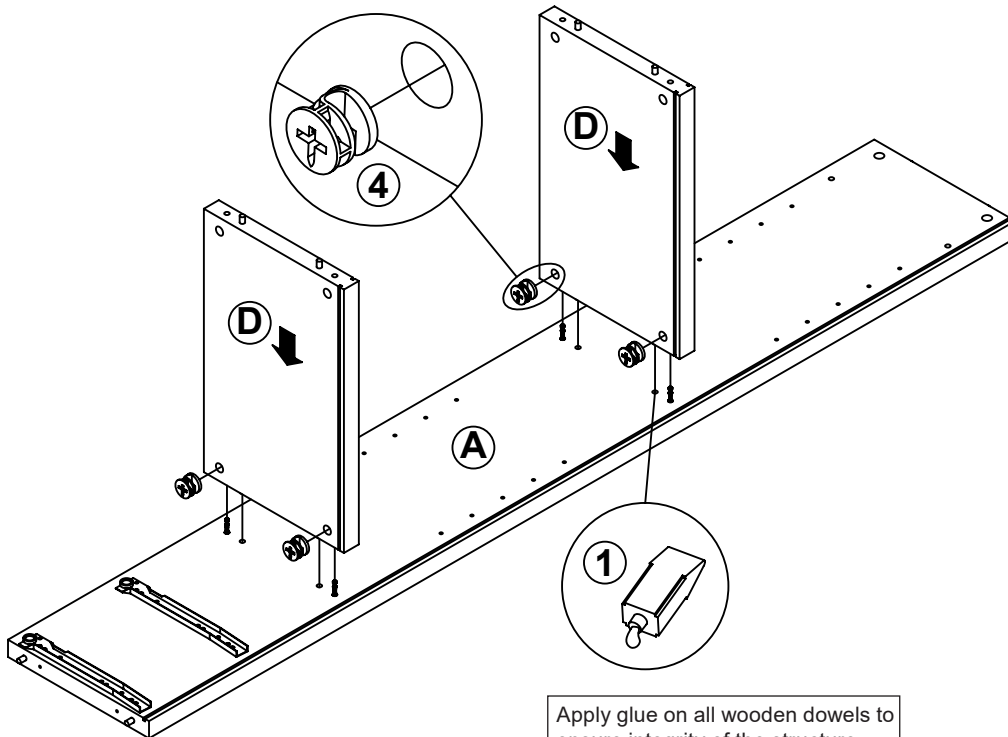  

 Apply glue on all wooden dowels to ensure integrity of the structure.

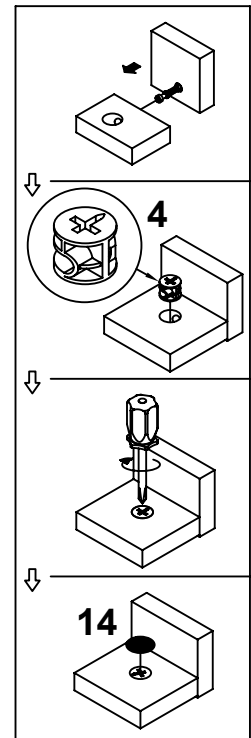

**STEP 3**

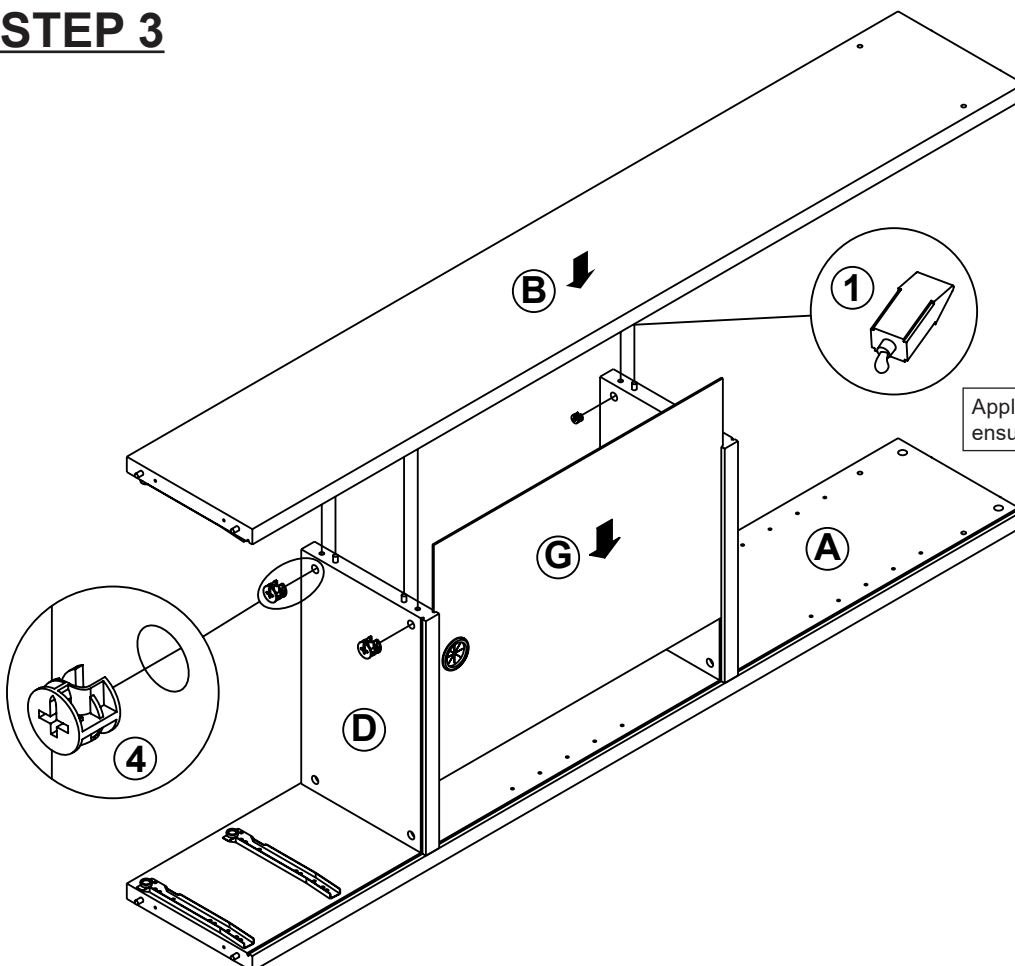   


Apply glue on all wooden dowels to ensure integrity of the structure.




ITEM: 700882

## STEP 4

 **COASTER**  
FINE FURNITURE


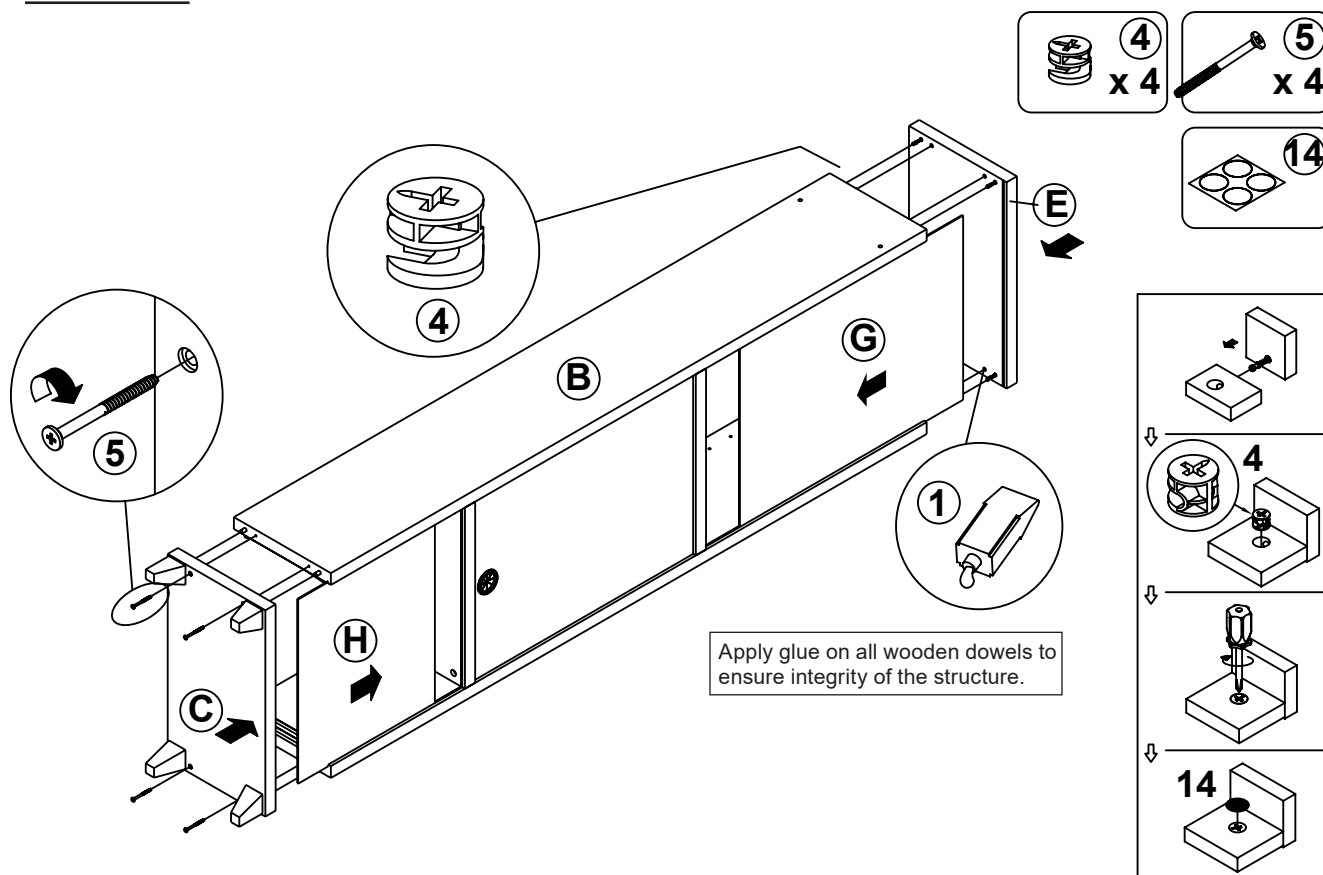


## STEP 5

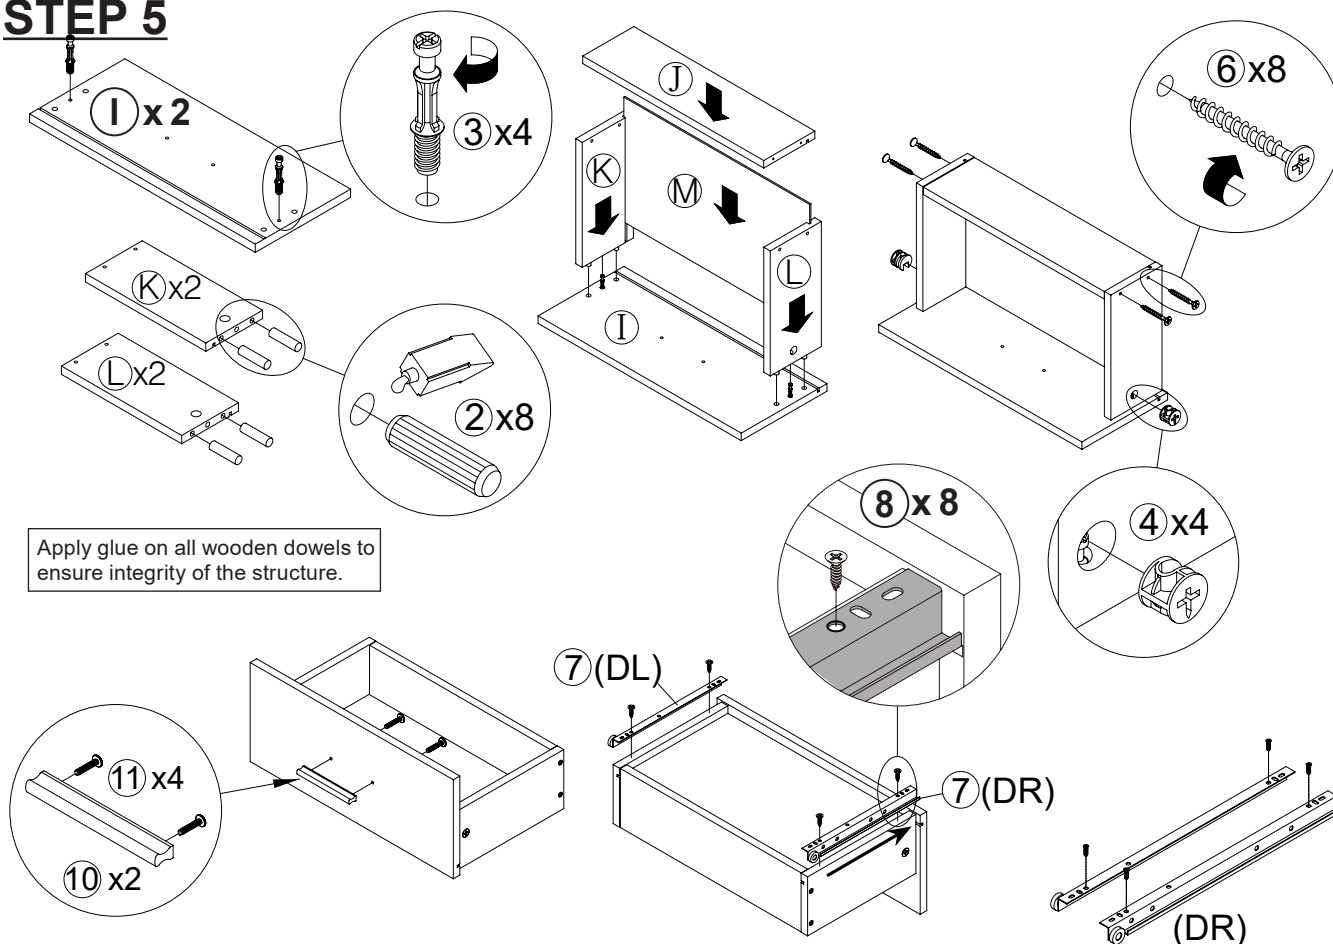 




ITEM: 700882

**STEP 6**

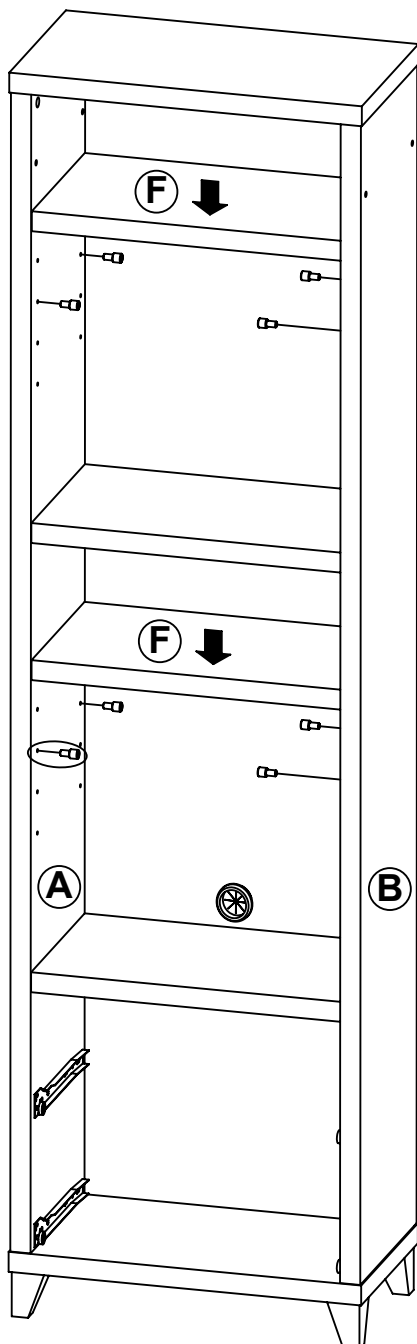  


**STEP 7**

   **COASTER**  
FINE FURNITURE

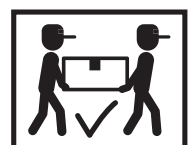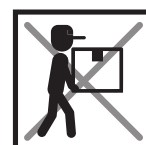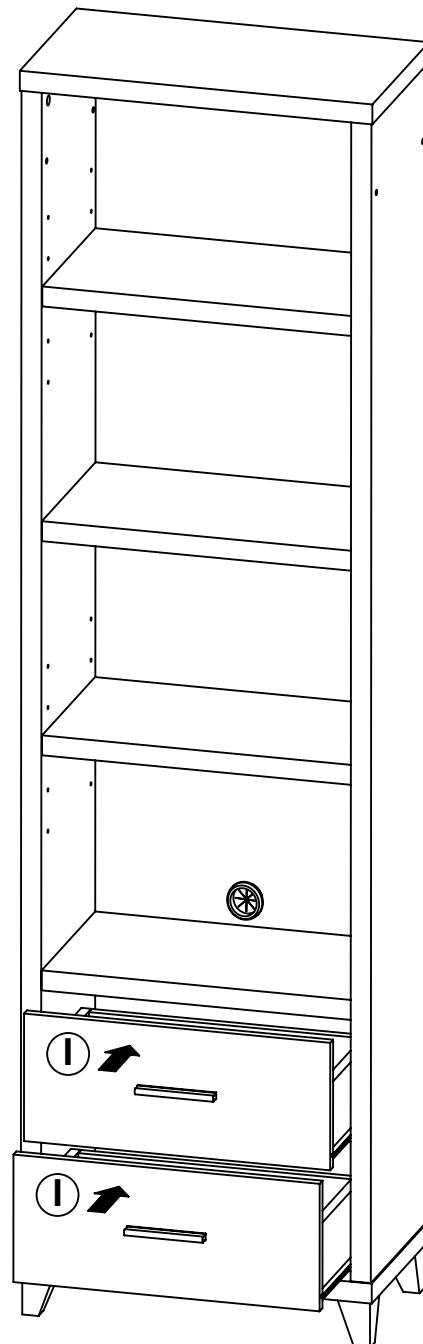

ITEM: 700882

 **COASTER**  
FINE FURNITURE

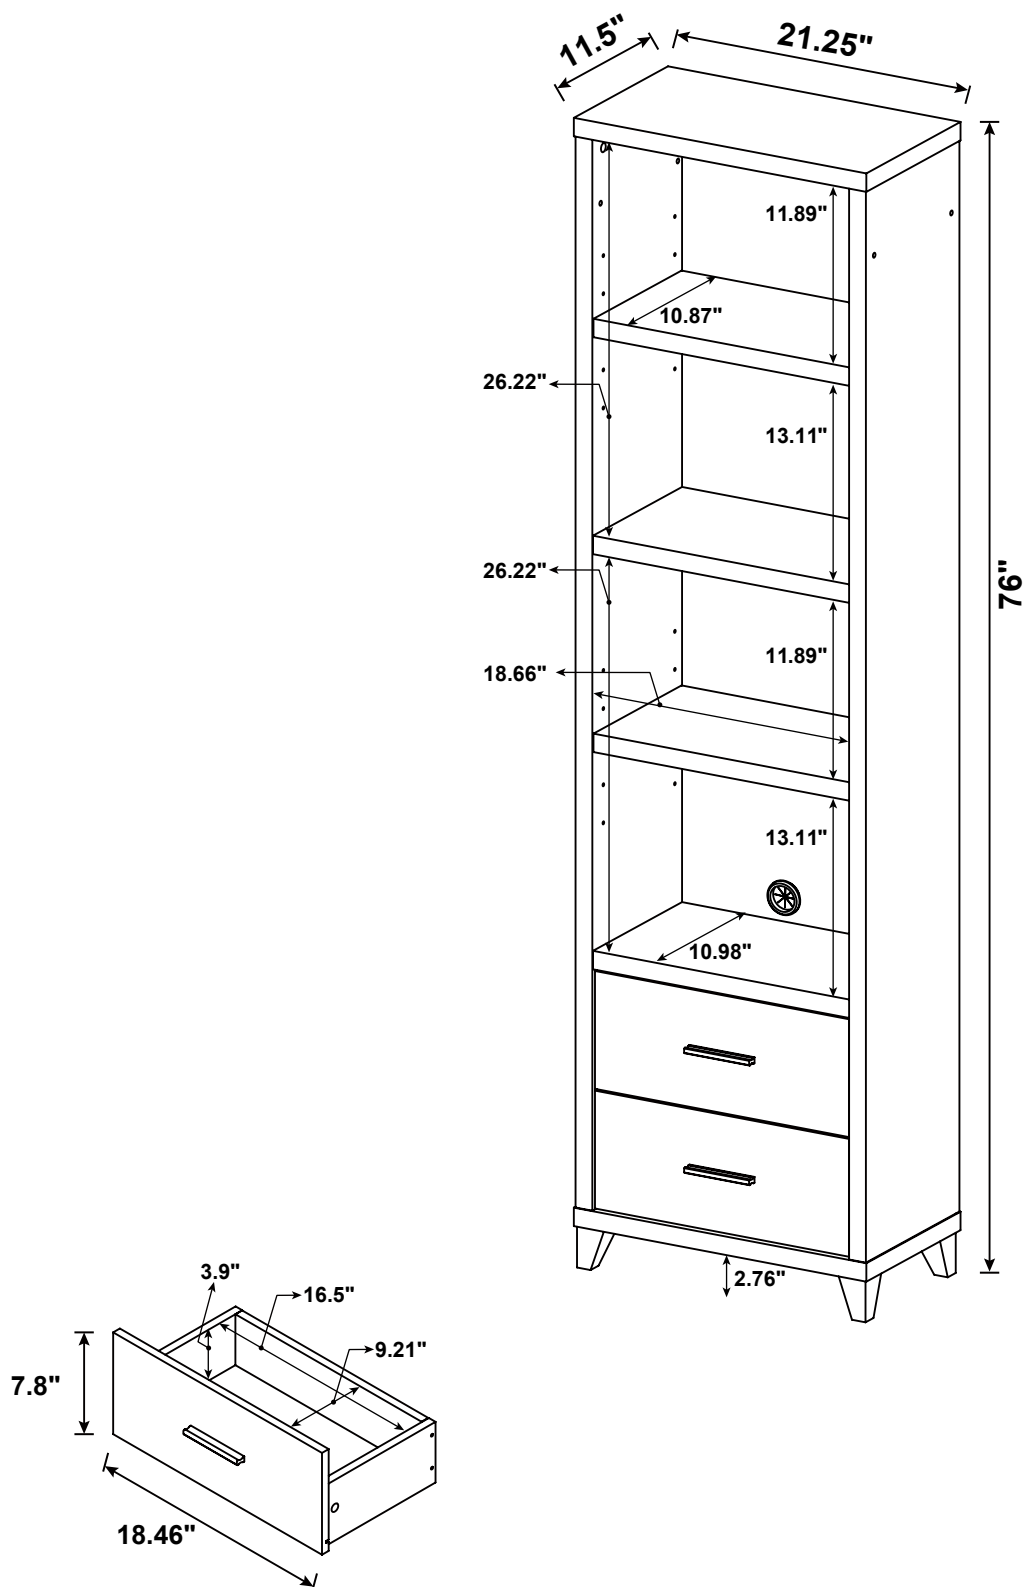

**Note :** Dimension tolerance  $\pm 5\%$

## ANTI-TIPPING INSTALLMENT INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

 
#### WARNING

Injury may result from tipping furniture.  
 This restraint may protect against tipping furniture.  
 Do not allow children to climb on furniture.  
 This restraint is not a substitute for proper adult supervision.  
 Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


#### STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

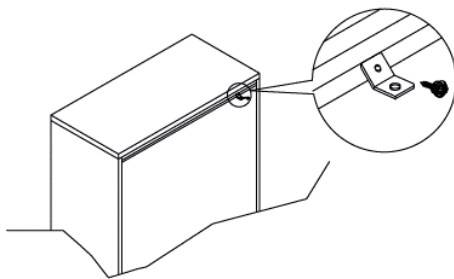



#### STEP 2

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

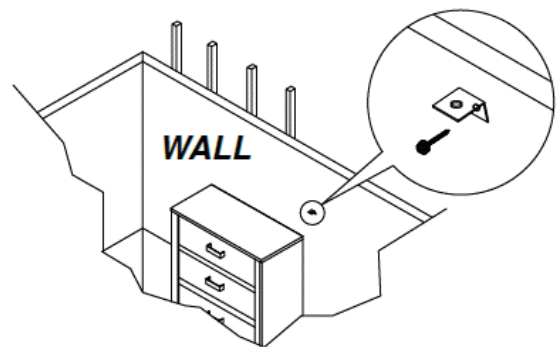

#### STEP 3

  Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

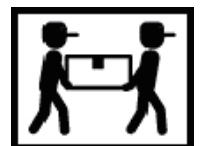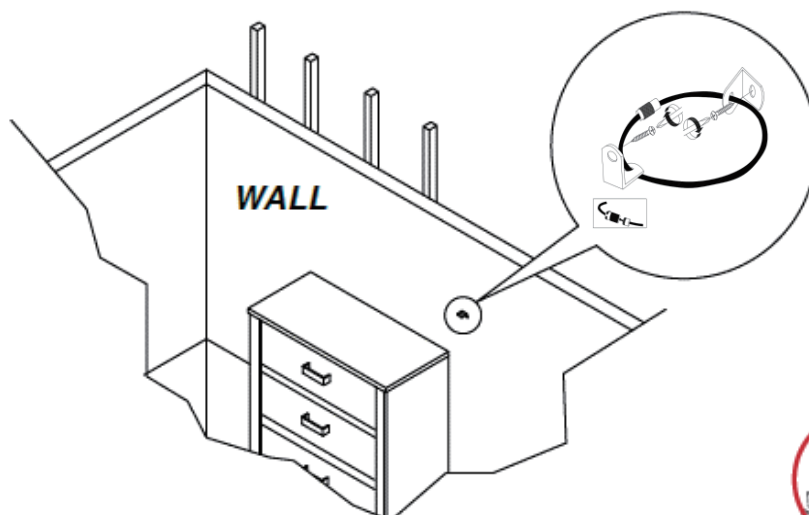



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**700883**  
**BRIDGE**

REVISION 0 : 06/26/2013  
REVISION 1 : 12/17/2018  
REVISION 2 : 06/21/2019  
REVISION 3 : 01/20/2020

REVISION 4 : 08/08/2022

**PAGE 1 OF 6**

COASTERFURNITURE.COM

# ITEM:700883

## ASSEMBLY INSTRUCTIONS

 
### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

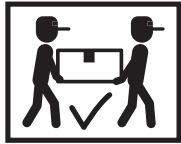


ASSEMBLY TIME

20 MINUTES


## PARTS IDENTIFICATION

 A SIDE PANEL

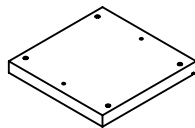


2 PCS

 C DIVIDER PANEL




1 PC

 B CROSS PANEL

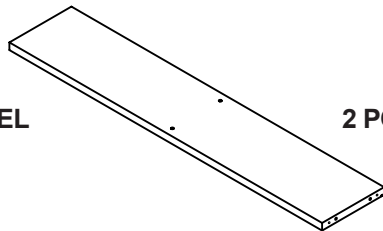

2 PCS

 D BACK PANEL

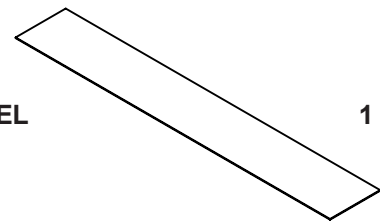

1 PC

## HARDWARE IDENTIFICATION

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1PC	4	PIPE THREAD Ø 6.2x45mm SR		4PCS
2	WOODEN DOWEL Ø 8x30mm		8PCS	5	BOLT Ø 4.5x20mm SR		4PCS
3	CAM BOLT Ø 9.5x55mm SR FOR BOTTOM PANEL		12PCS	6	STICKER Ø 20mm		4PCS

 
 
### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **700883**

**STEP 1**




**COASTER**  
FINE FURNITURE

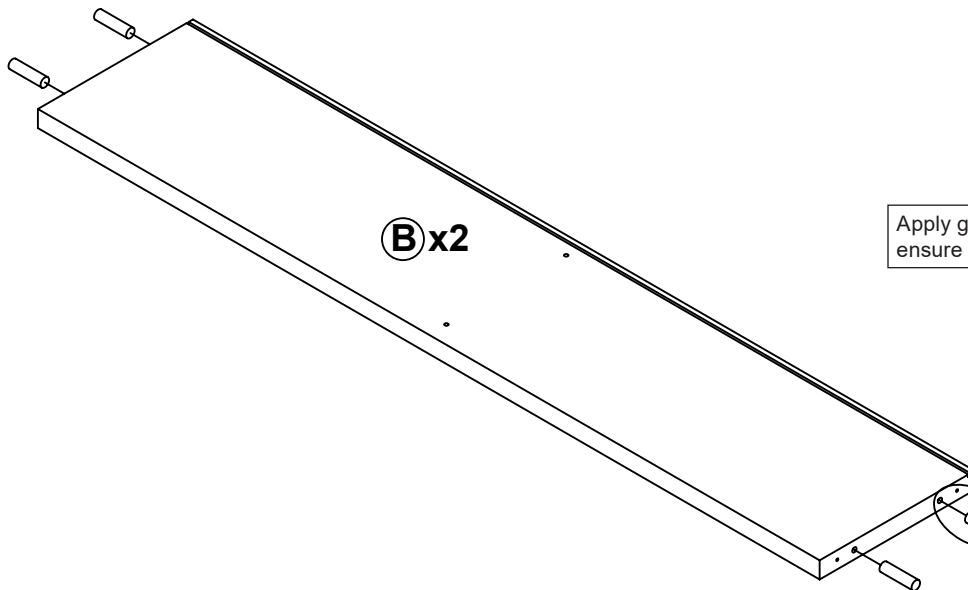

 Apply glue on all wooden dowels to ensure integrity of the structure.

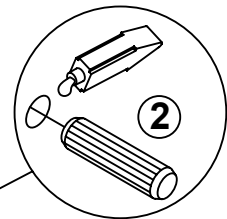



**STEP 2**

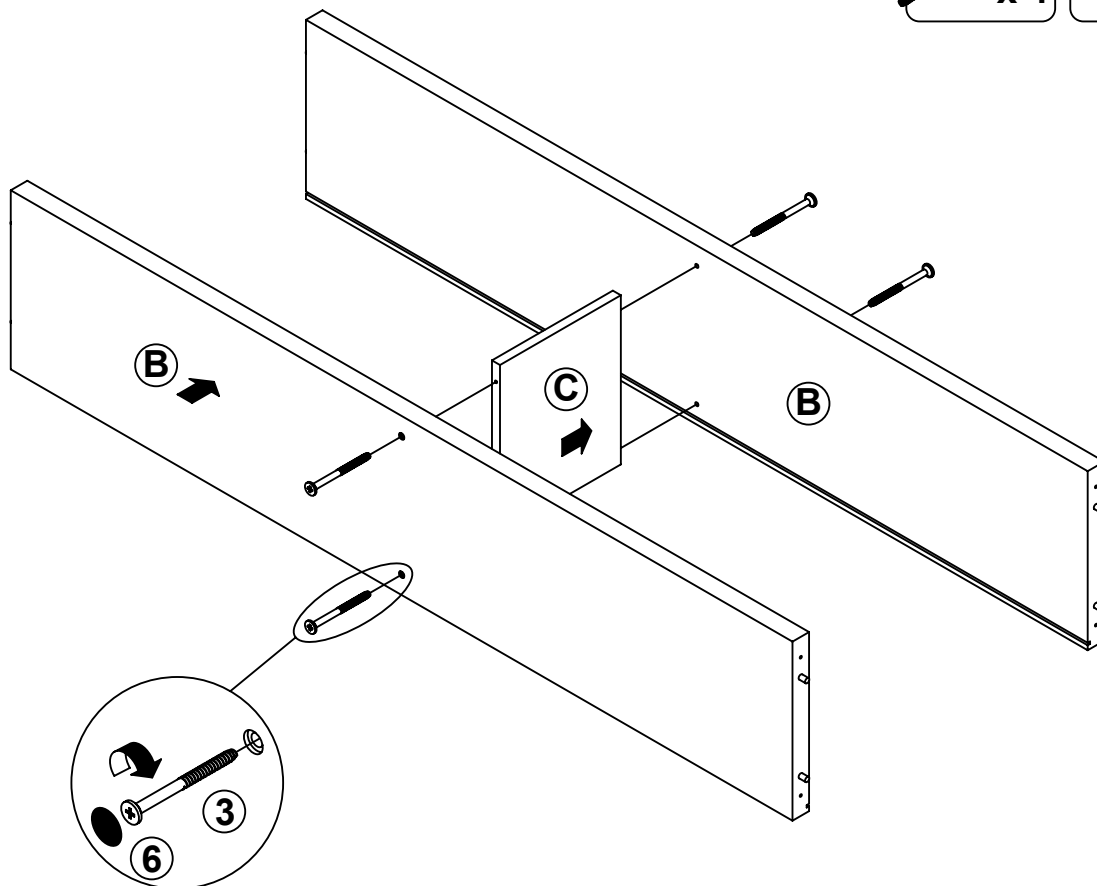   



ITEM: **700883**

**COASTER**  
FINE FURNITURE

**STEP 3**

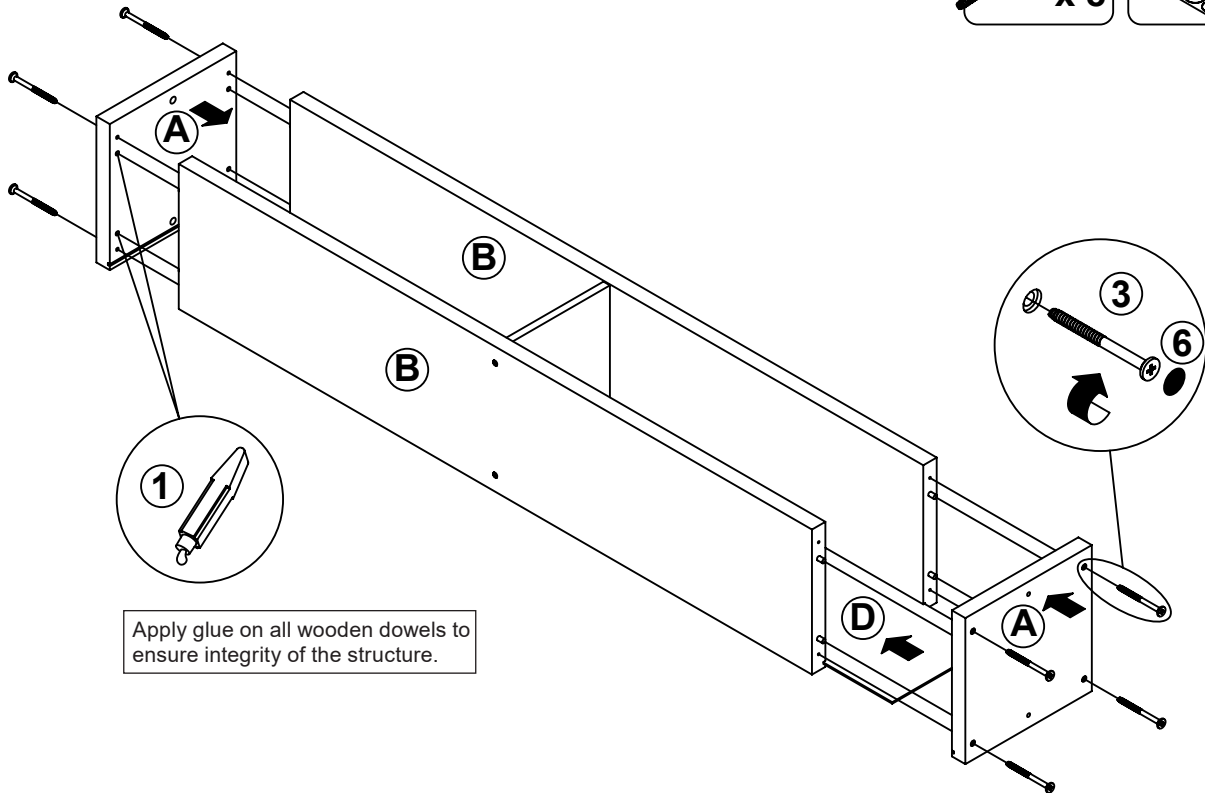  


**STEP 4**

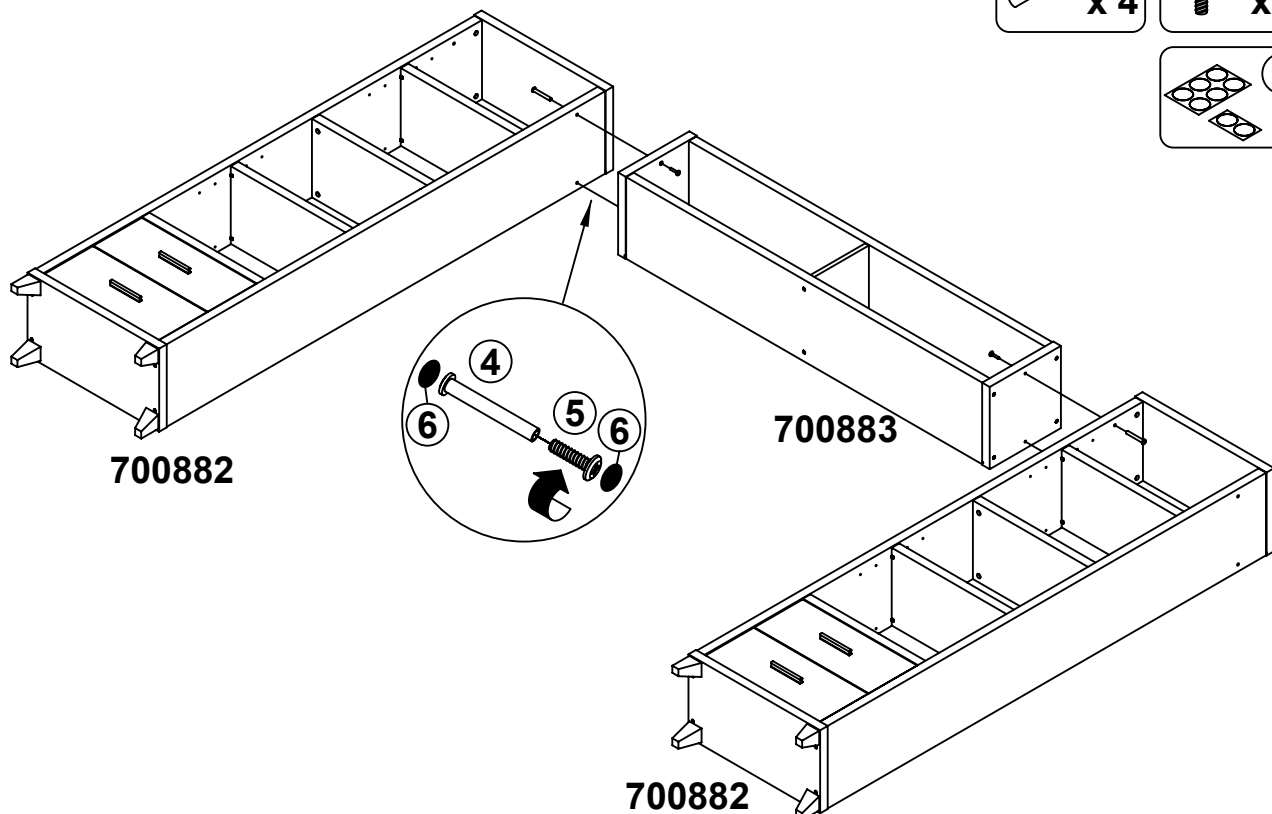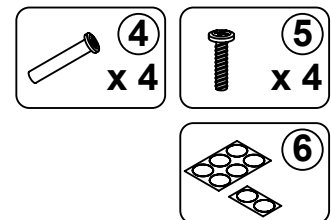  




ITEM: **700883**

**STEP 5**

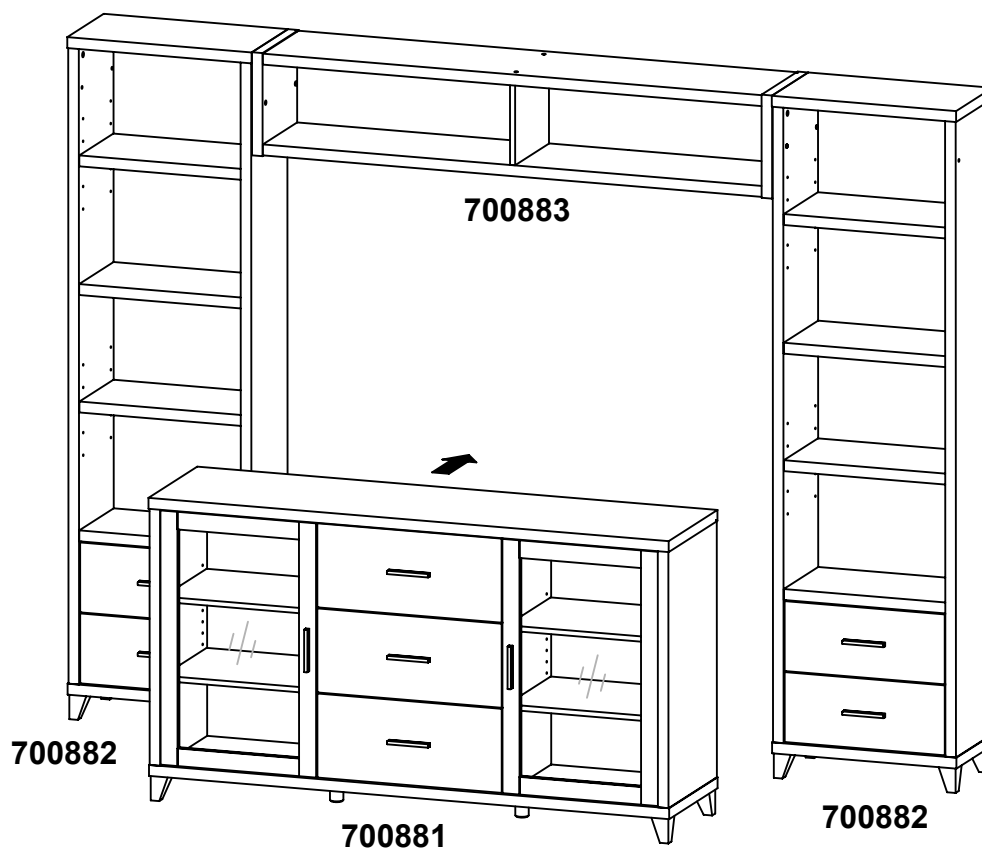 


**STEP 6**

 **COMPLETE**

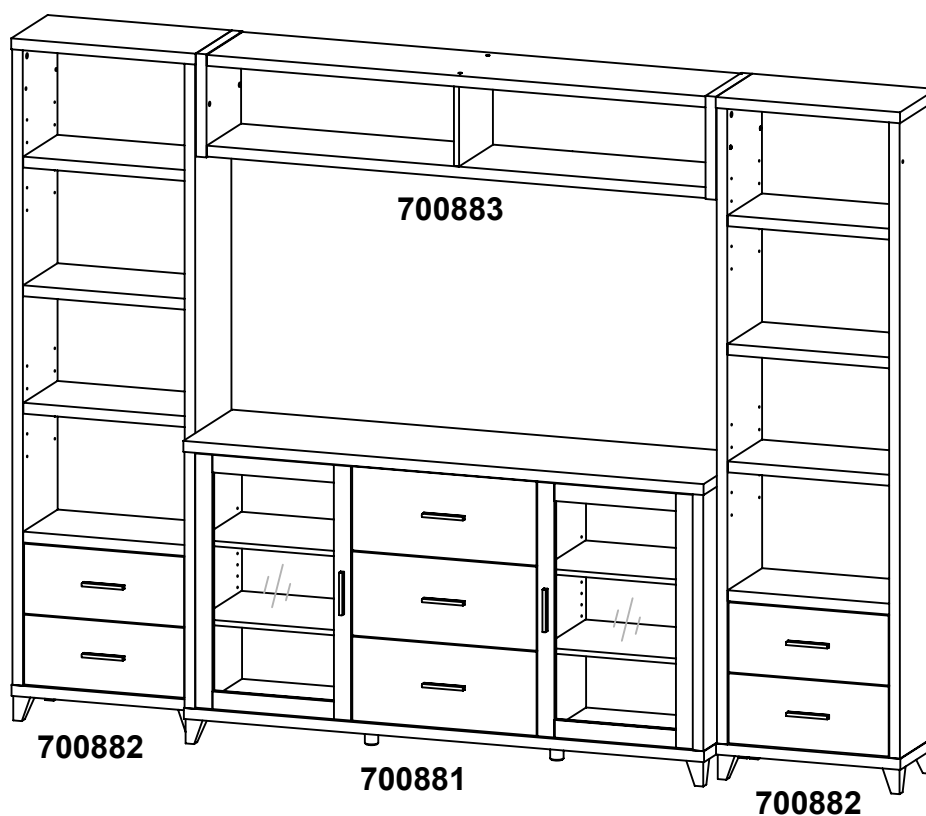

ITEM: 700883

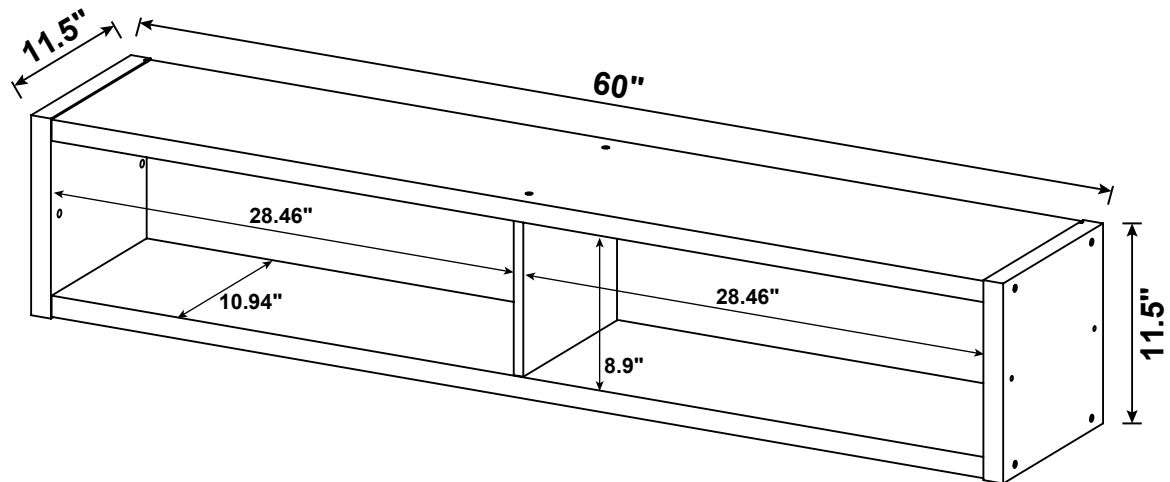 

**Note :** Dimension tolerance  $\pm 5\%$