

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

701037
END TABLE

ITEM:701037



ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

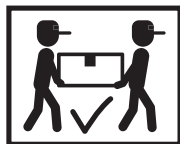


ASSEMBLY TIME

30 MINUTES


PARTS IDENTIFICATION

 A LEFT SIDE
PANEL

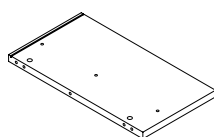


1 PC

 B RIGHT SIDE
PANEL

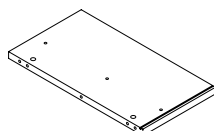


1 PC

 C BOTTOM PANEL

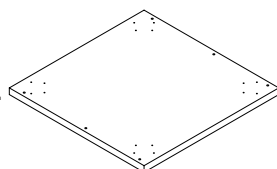


1 PC

 D CROSS PANEL

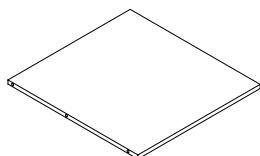


1 PC

 E TOP PANEL

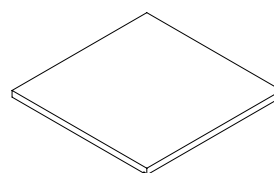


1 PC

 F BACK PANEL

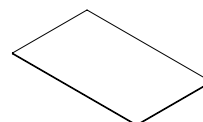

1 PC

 G LEG








4 PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:701037

     HARDWARE IDENTIFICATION**Z**

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	5	SCREW Ø4.5x42mm SR		6 PCS
2	WOODEN DOWEL Ø8x30mm		16 PCS	6	STICKER Ø20mm		1 PC
3	CAM BOLT Ø7x35.5mm SR		4 PCS	7	SPACER SR		4 PCS
4	CAM LOCK Ø15x12mm SR		4 PCS	8	SCREW Ø4x15mm SR		16 PCS

 
 
 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 701037

STEP 1

COASTER
FINE FURNITURE

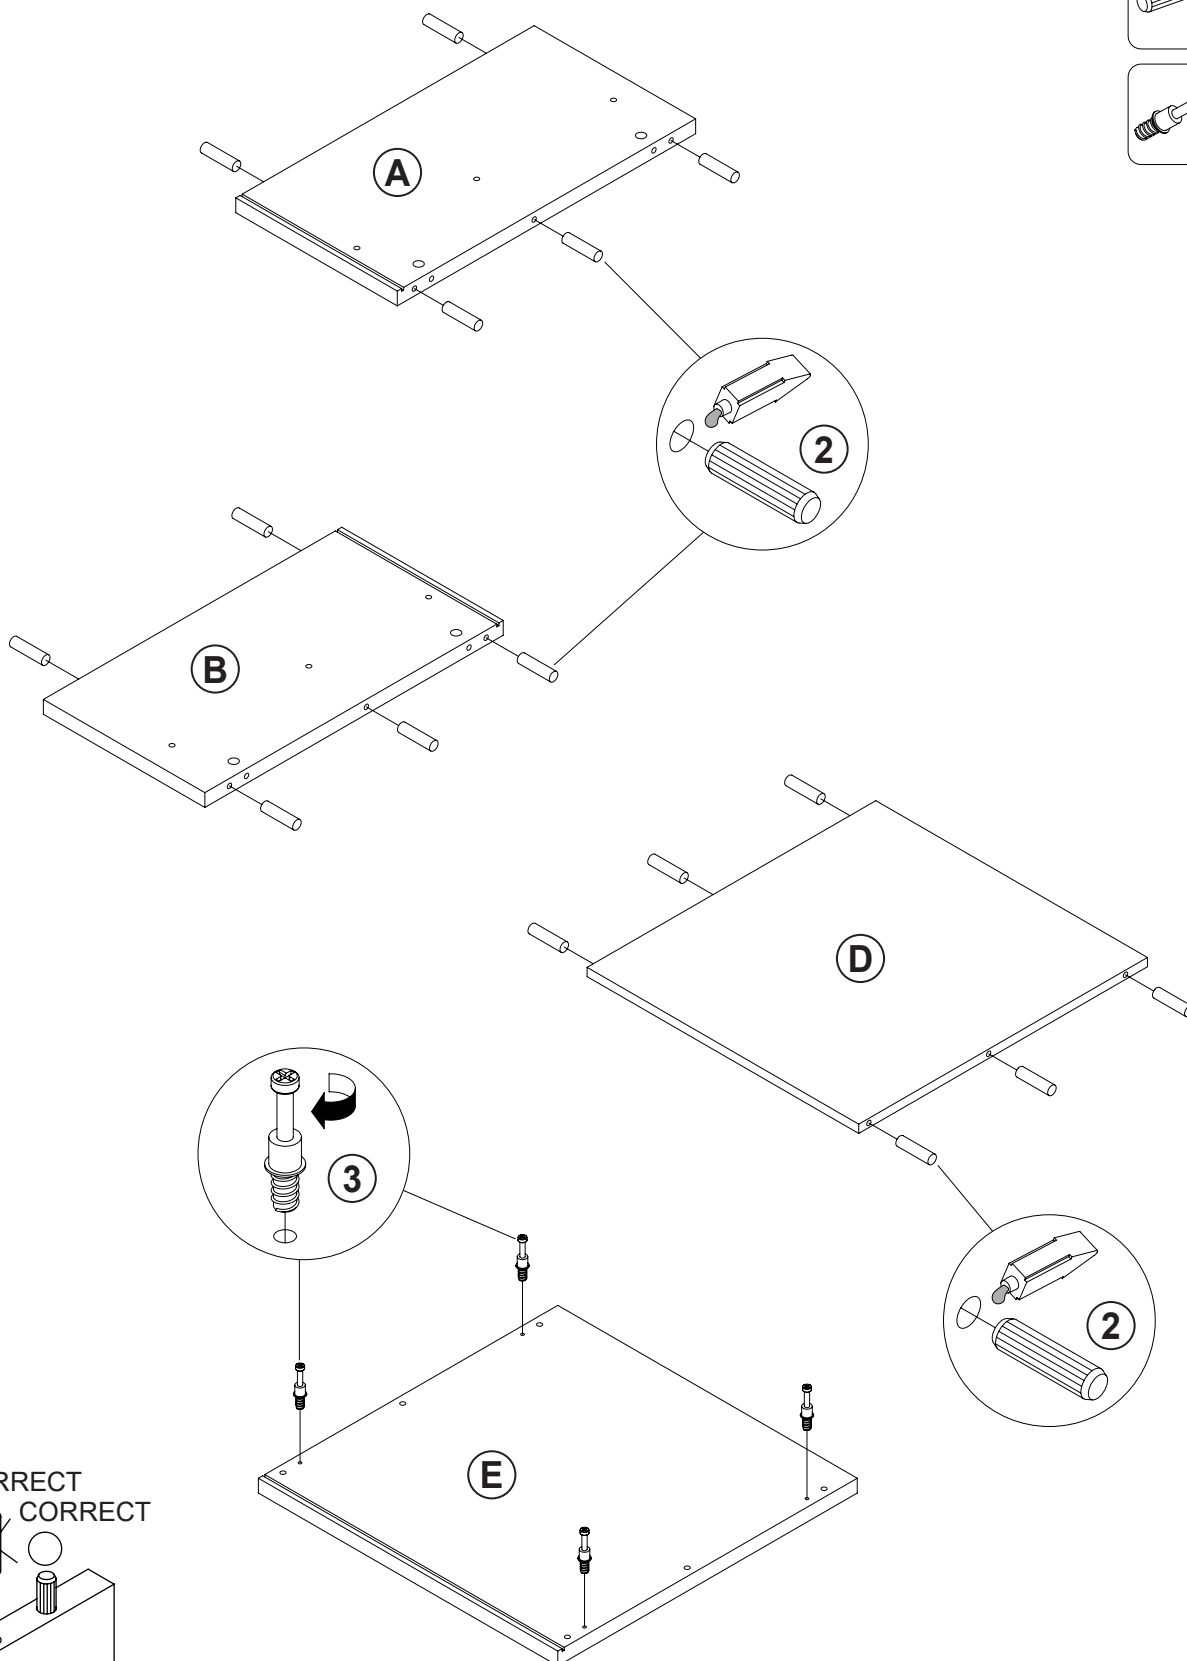


INCORRECT
CORRECT

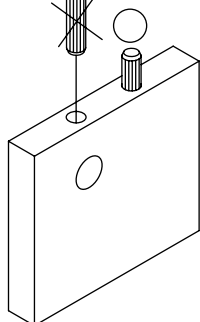 


Apply glue on all wooden dowels to ensure integrity of the structure.

ITEM: **701037**

 STEP 2

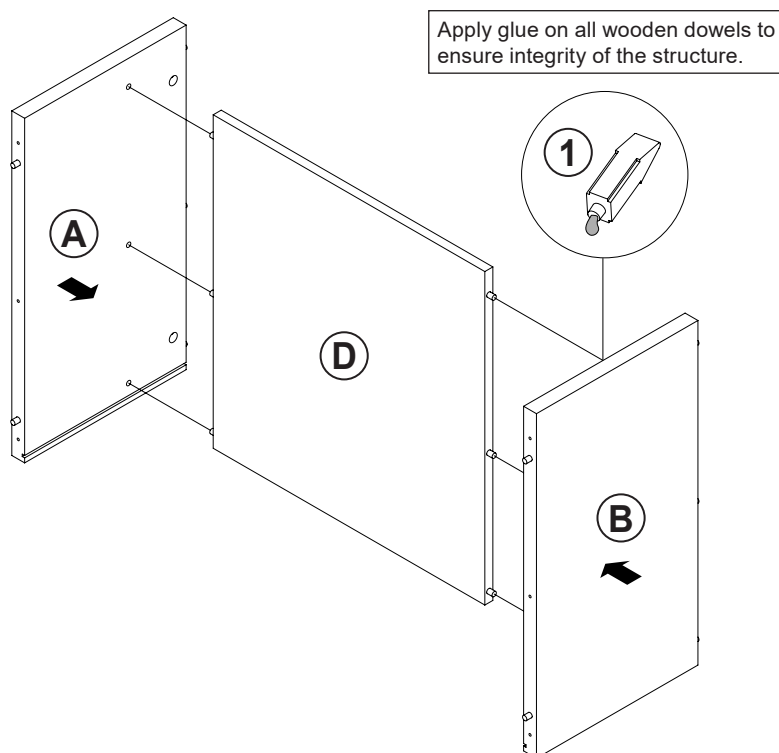



 
STEP 3

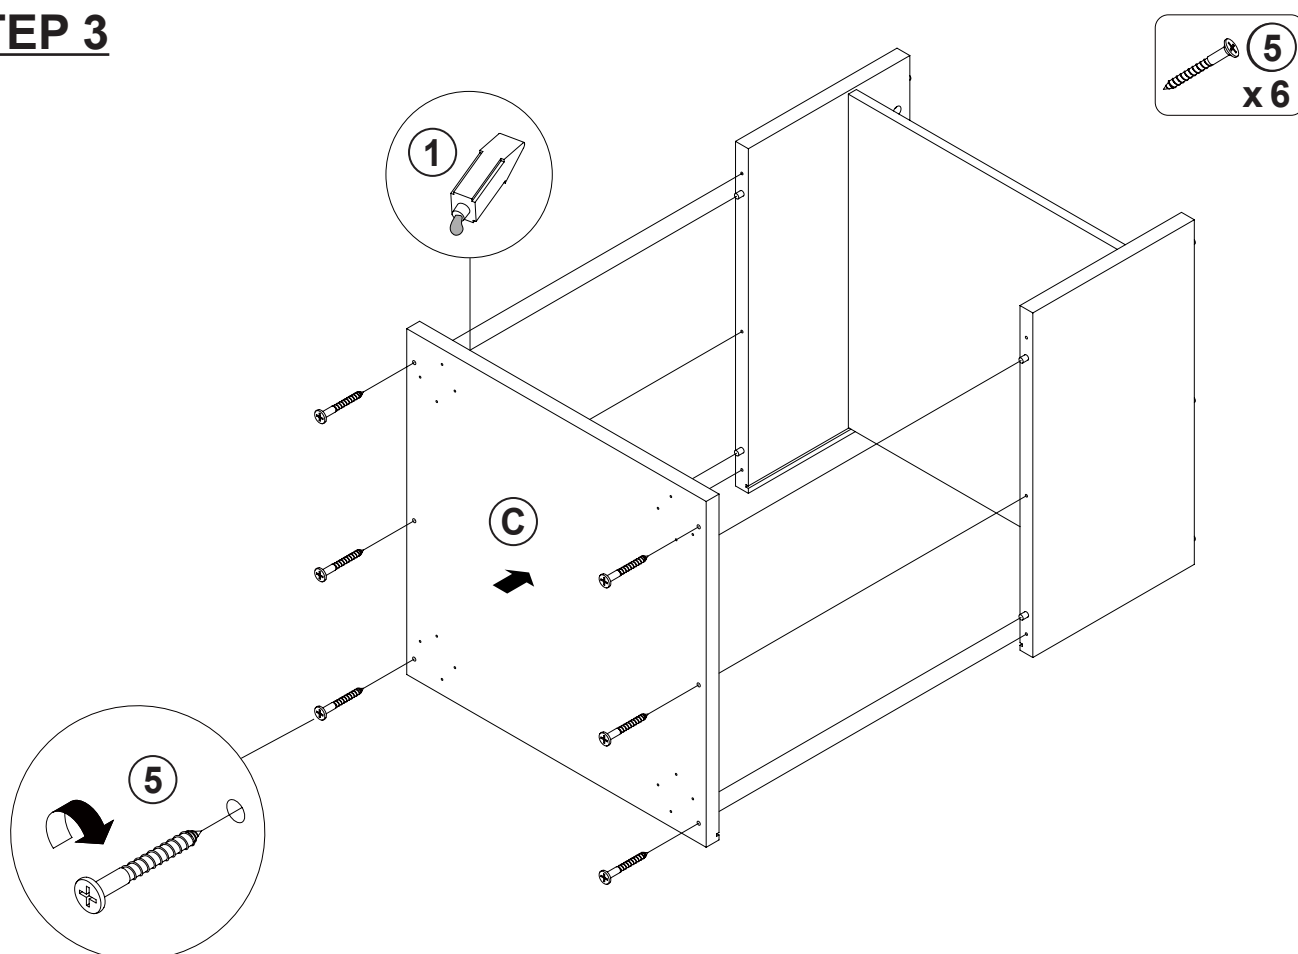




ITEM: **701037**

STEP 4

   COASTER
FINE FURNITURE

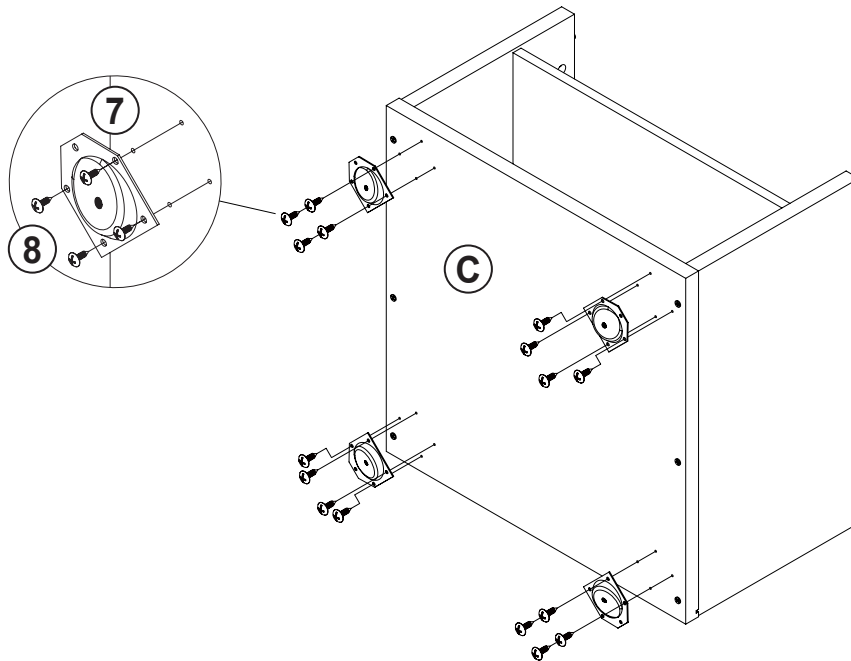

   STEP 5

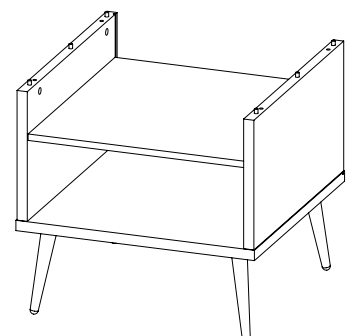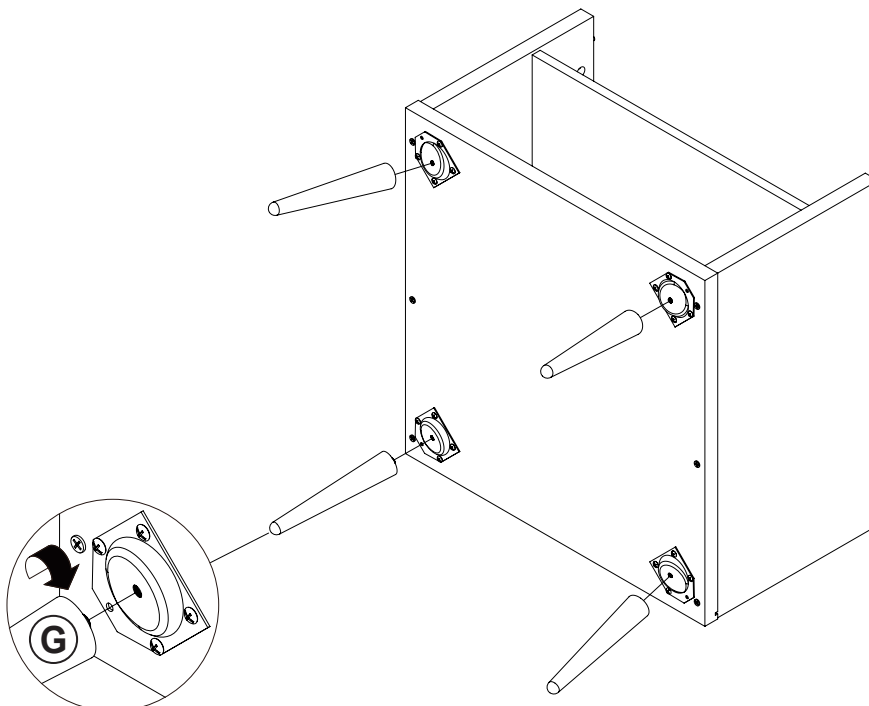

ITEM: **701037**

STEP 6

 
 
COASTER
FINE FURNITURE



4
x 4



6
x 4

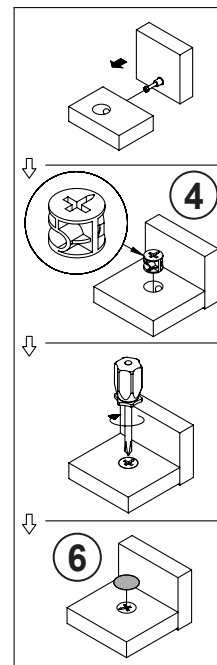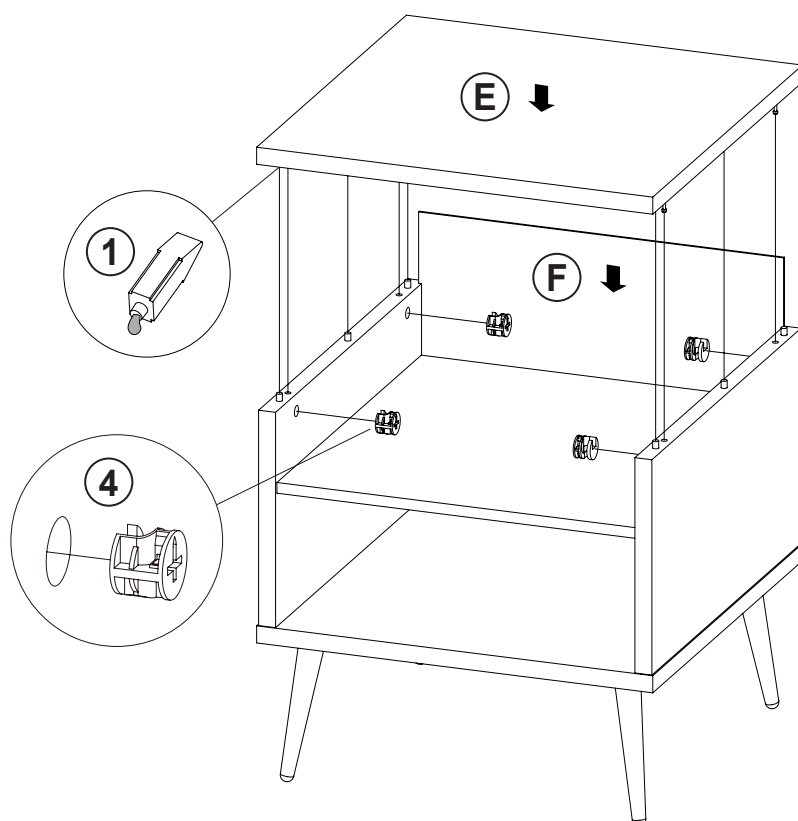


STEP 7

COMPLETE



 ITEM: 701037

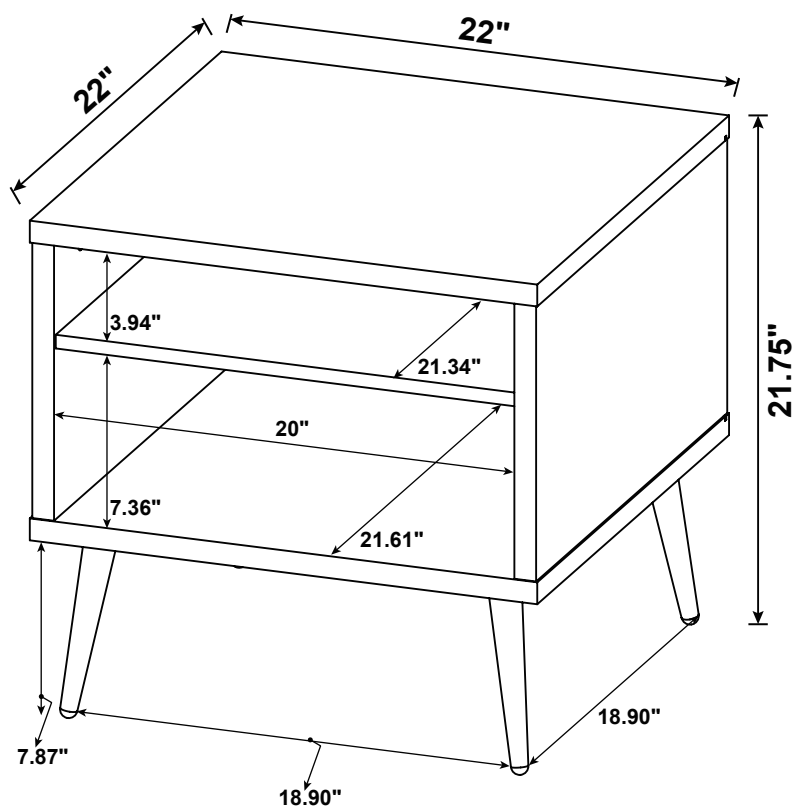

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

701038
COFFEE TABLE

ITEM:701038



ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

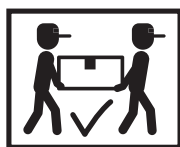


ASSEMBLY TIME

50 MINUTES


PARTS IDENTIFICATION

 A LEFT SIDE
PANEL

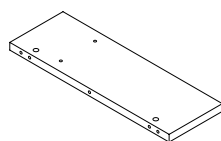


1 PC

 B RIGHT SIDE
PANEL

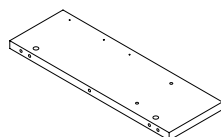


1 PC

 C DIVIDER PANEL




1 PC

 D BOTTOM PANEL

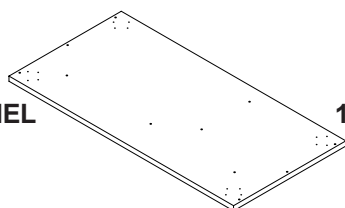


1 PC

 E BACK PANEL

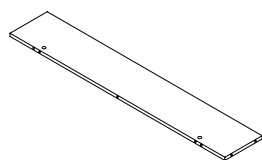


1 PC

 F TOP PANEL

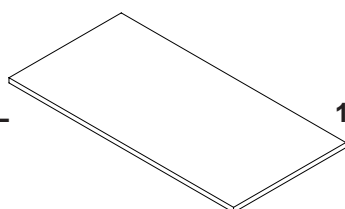


1 PC

 G DRAWER
FRONT PANEL




1 PC

 H DRAWER
BACK PANEL




1 PC

 I DRAWER LEFT
SIDE PANEL




1 PC

 J DRAWER RIGHT
SIDE PANEL




1 PC

 K DRAWER
BOTTOM PANEL



1 PC

 L LEG









4 PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:701038

      HARDWARE IDENTIFICATION**Z**

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	8	SCREW Ø4x15mm SR		16 PCS
2	WOODEN DOWEL Ø8x30mm		27 PCS	9	HANDLE		1 PC
3	CAM BOLT Ø7x35.5mm SR		10 PCS	10	HANDLE BOLT Ø4x25mm BLK		1 PC
4	CAM LOCK Ø15x12mm SR		10 PCS	11	RAIL L = 350mm BLK		1 SET
5	SCREW Ø4.5x42mm SR		11 PCS	12	SCREW Ø3x12mm BLK		12 PCS
6	STICKER Ø20mm		2 PCS	13	SCREW Ø4.3x35mm SR		4 PCS
7	SPACER SR		4 PCS				

Z11 not included in blister packaging.

 
 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 701038

STEP 1


COASTER
FINE FURNITURE

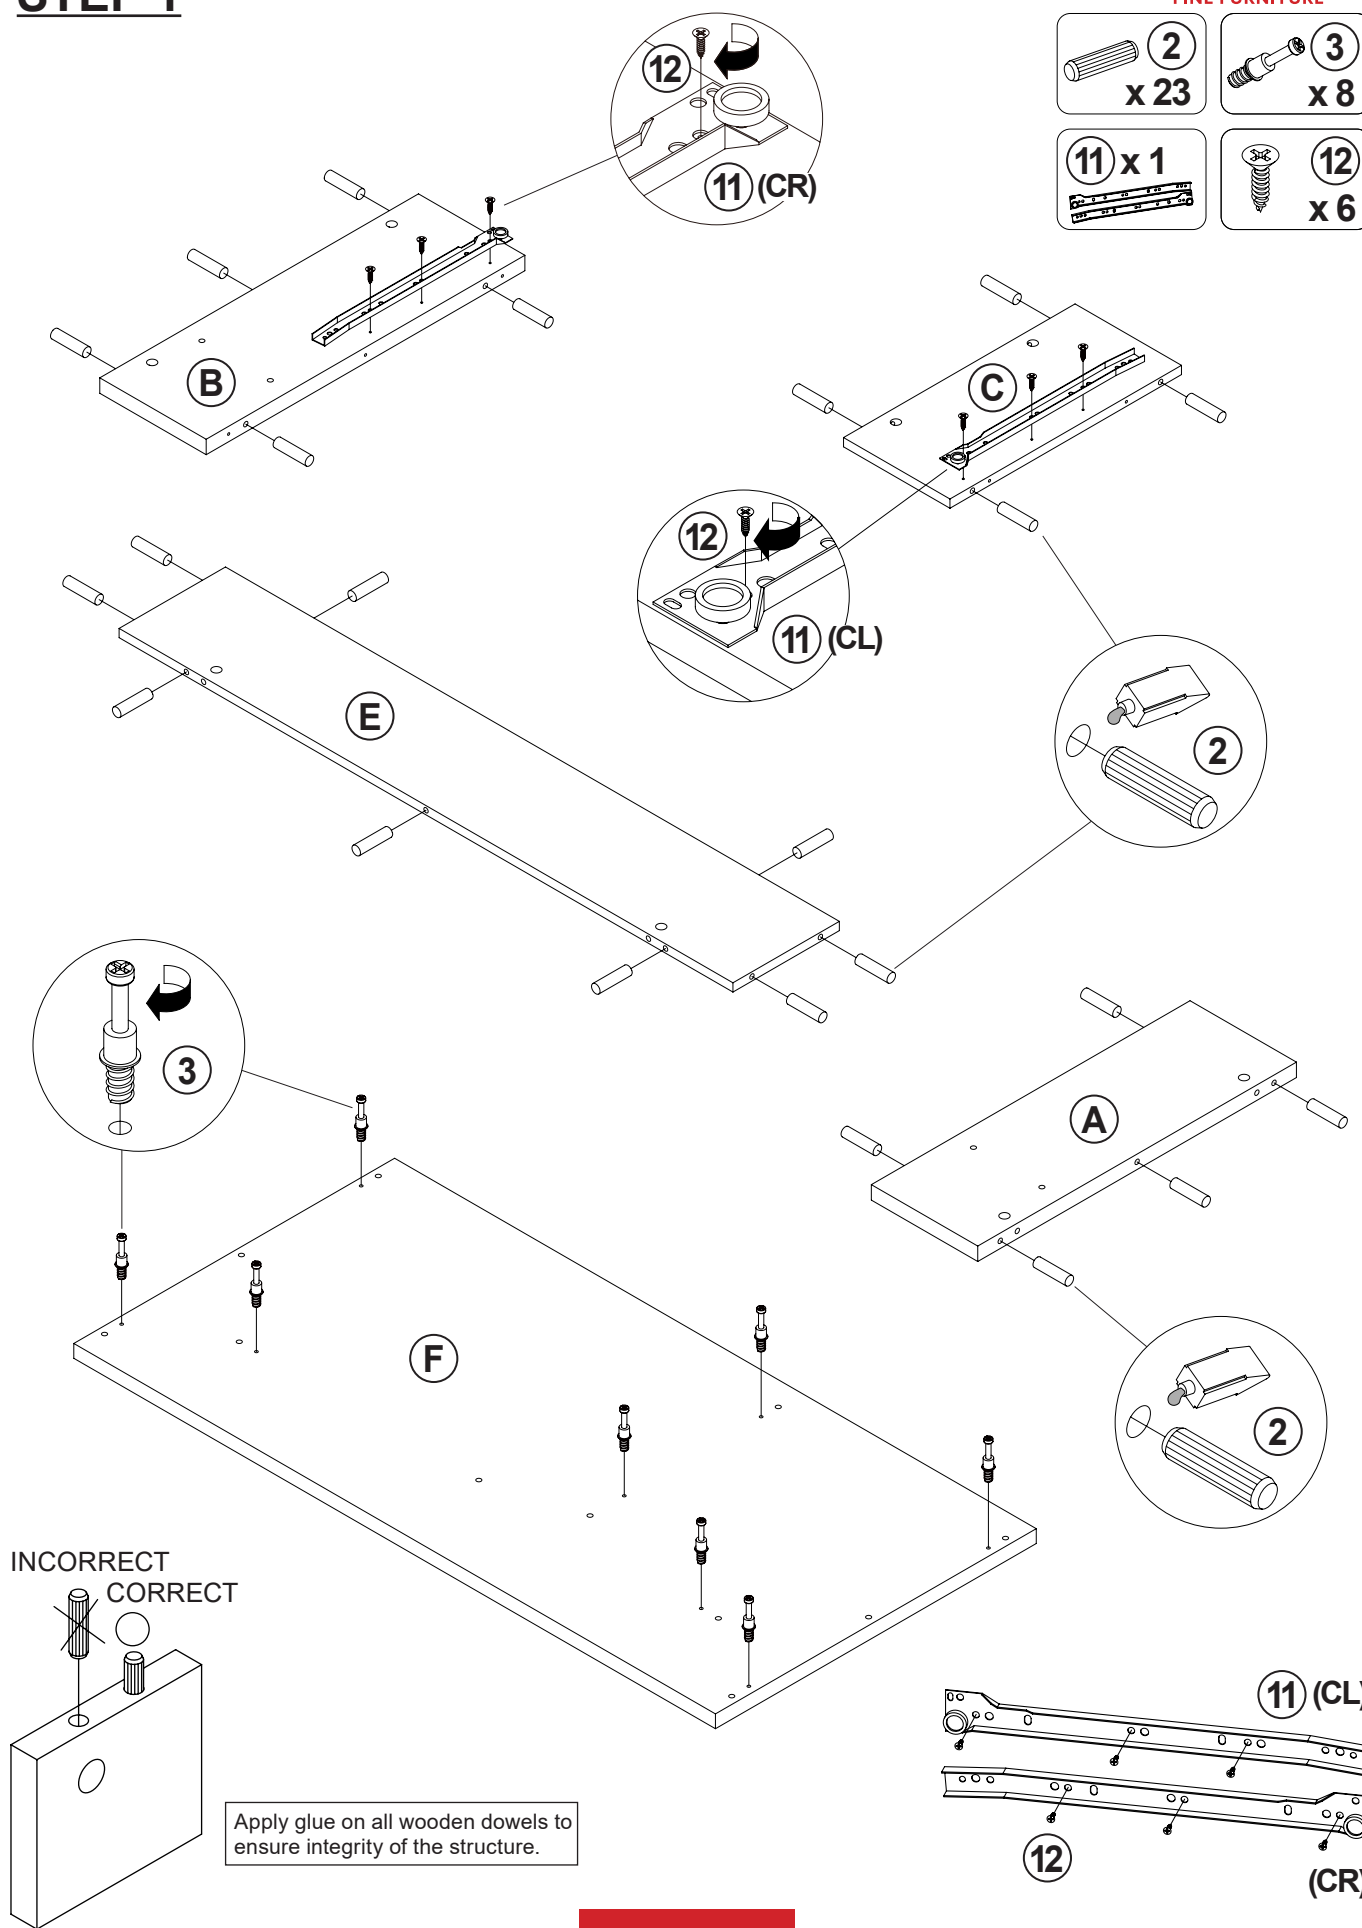

INCORRECT
CORRECT

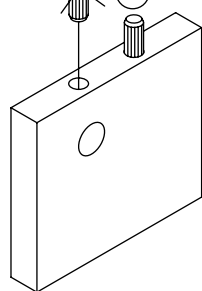 


 Apply glue on all wooden dowels to ensure integrity of the structure.


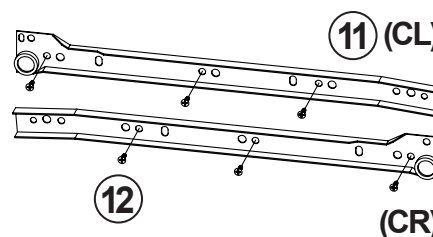


ITEM: **701038**

 STEP 2

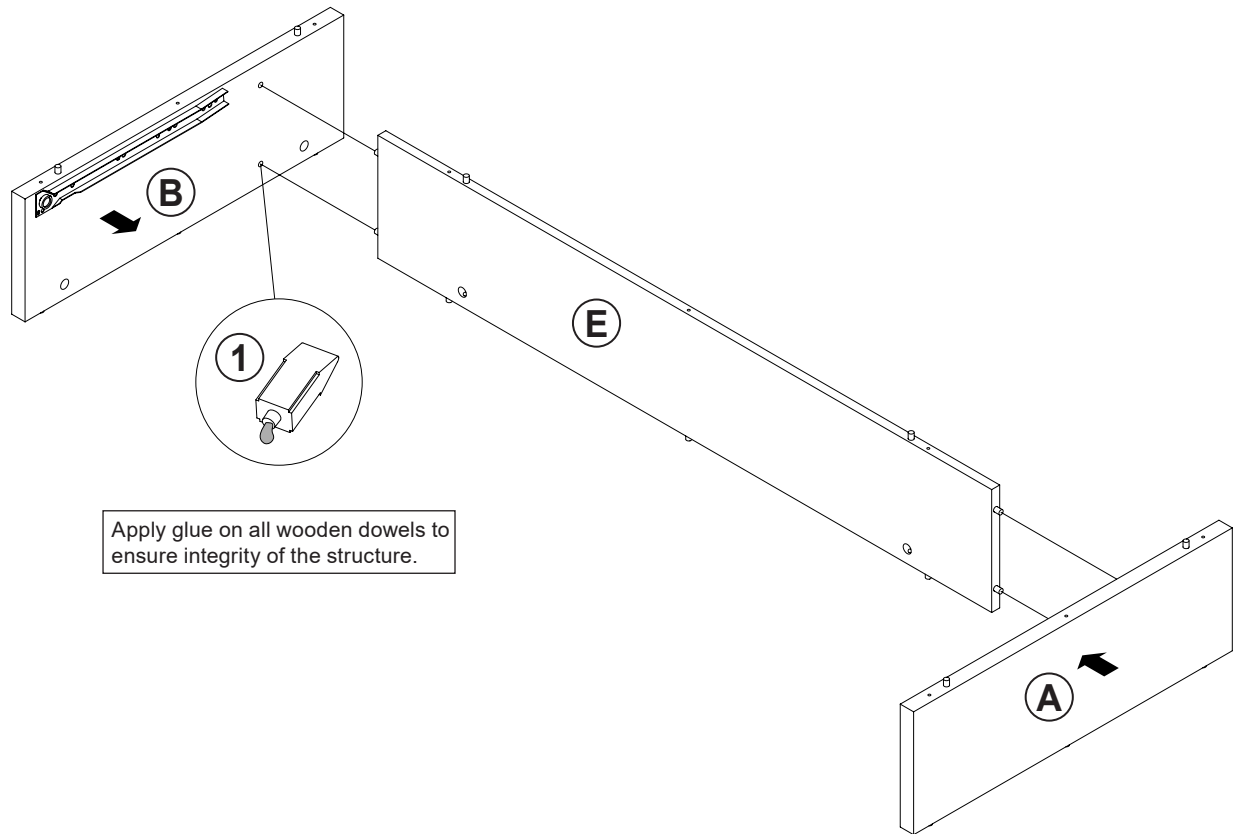

  
STEP 3

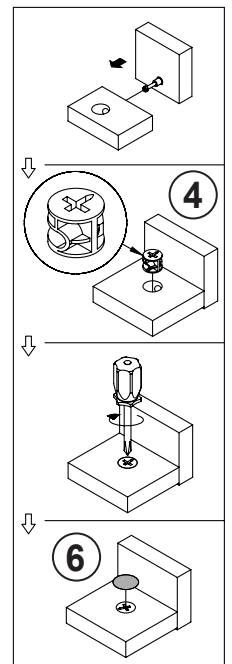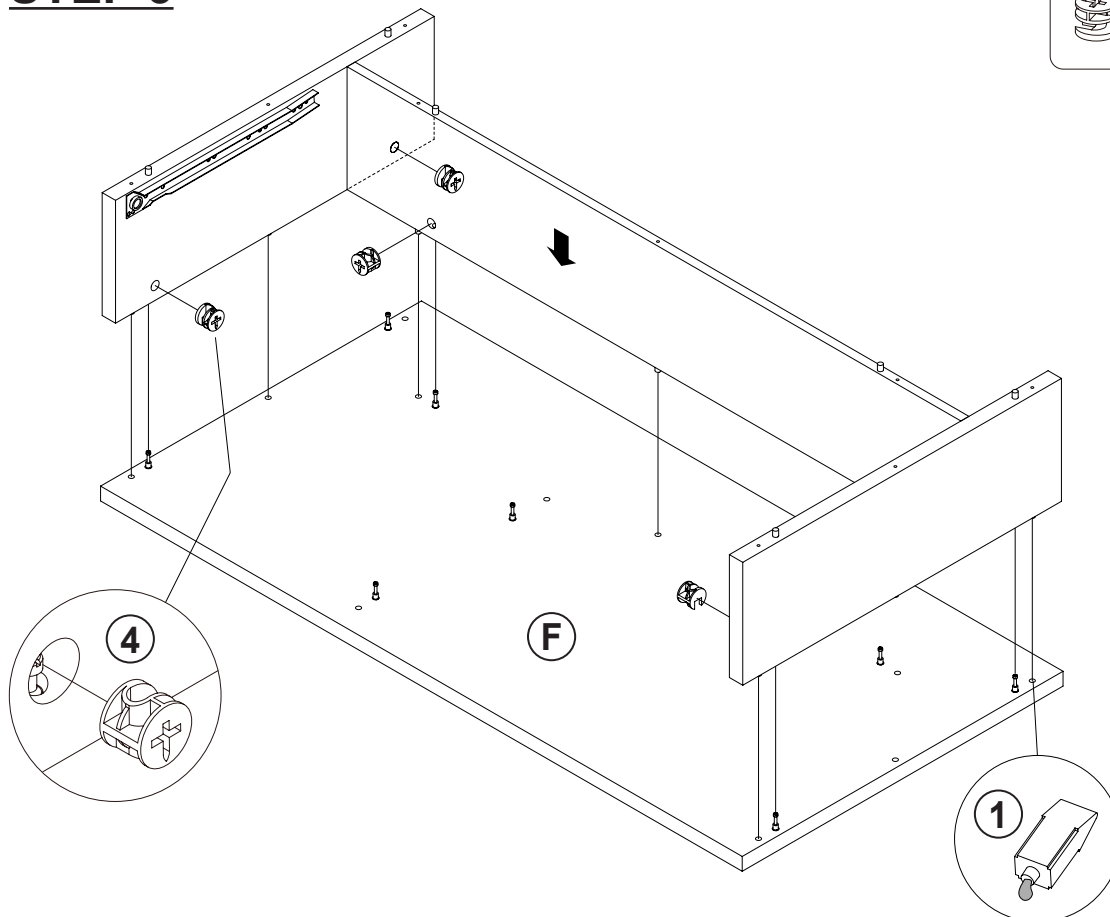


ITEM: **701038**

STEP 4


 
COASTER
FINE FURNITURE



 Apply glue on all wooden dowels to ensure integrity of the structure.

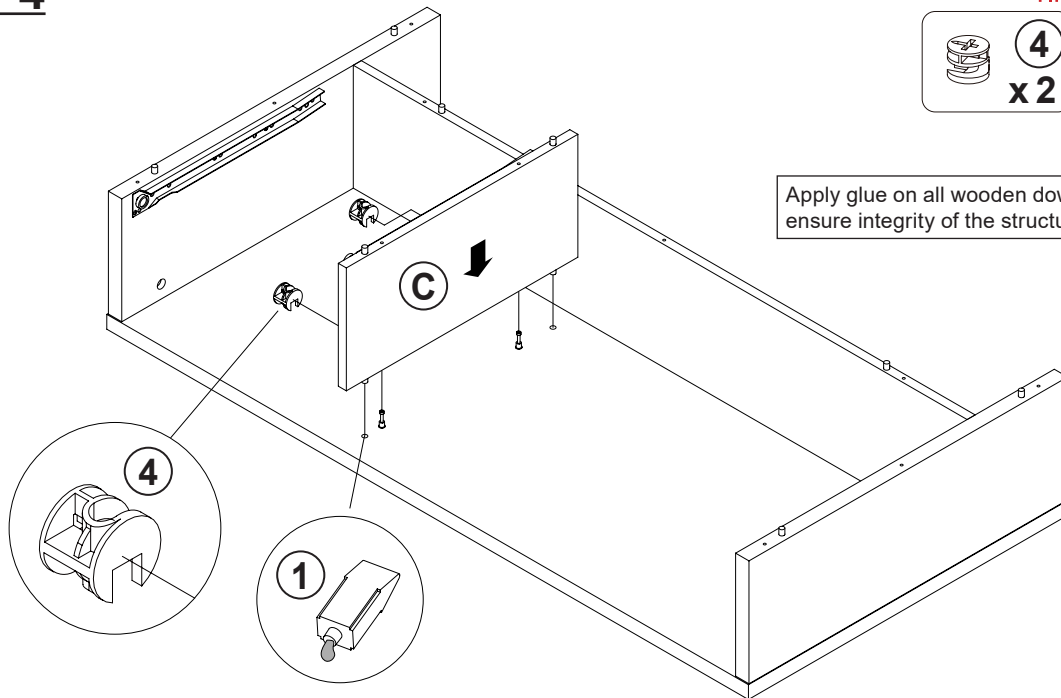


 
 
STEP 5

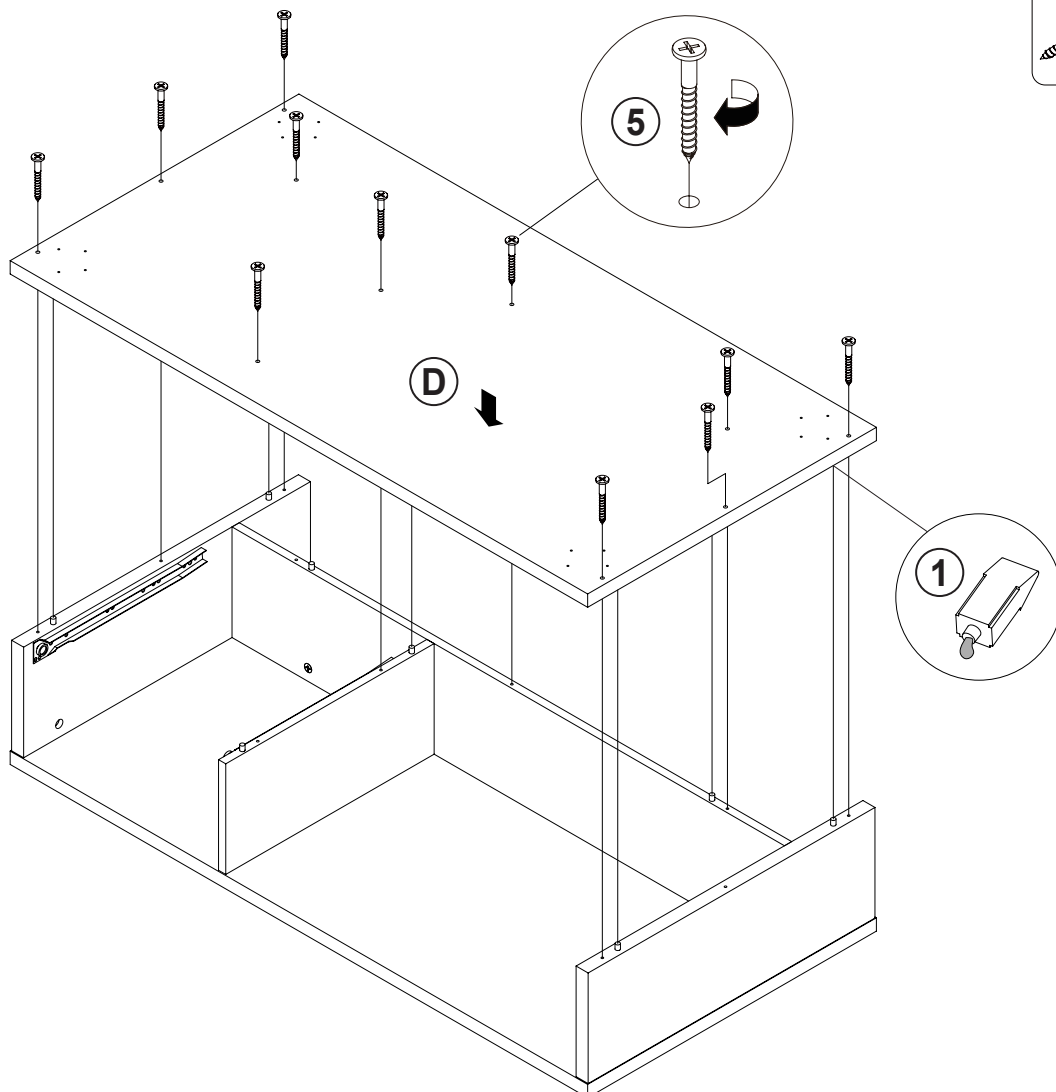



ITEM: 701038

COASTER
FINE FURNITURE

   STEP 6

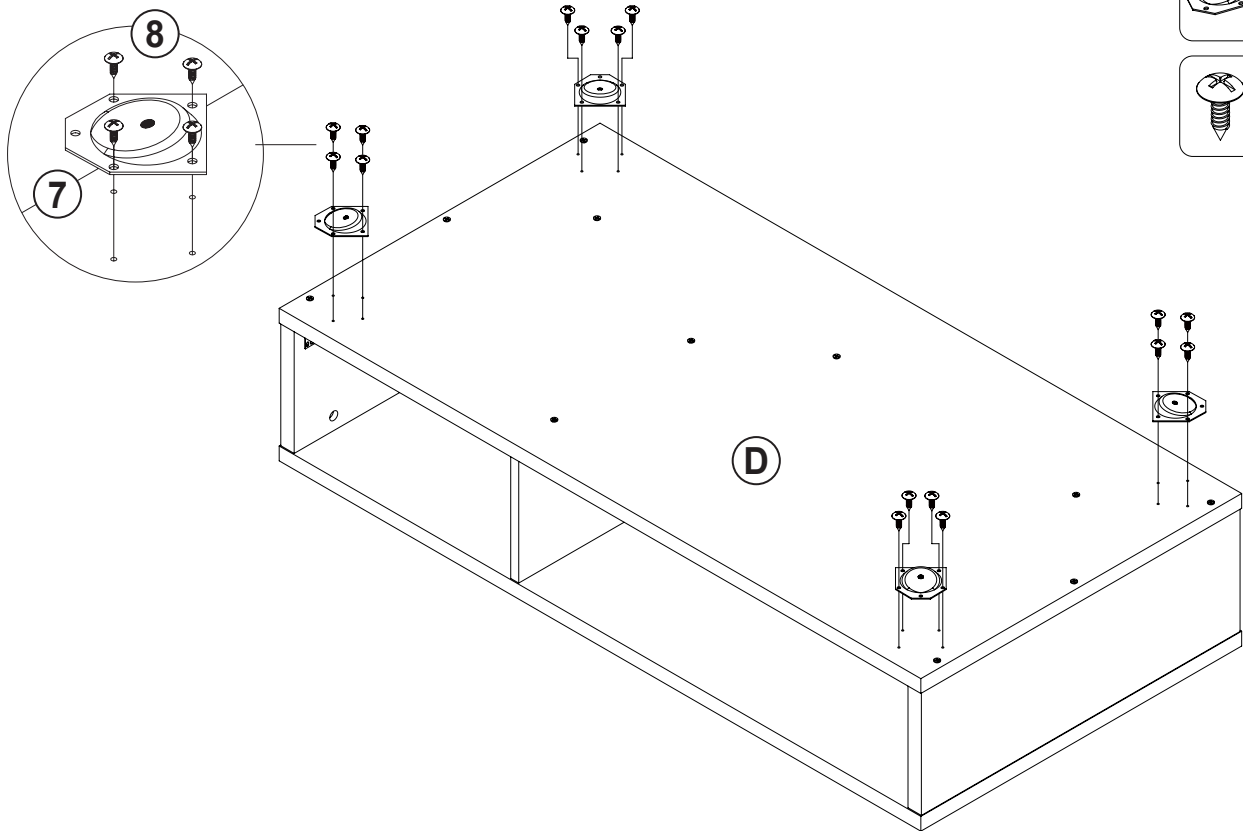


  STEP 7

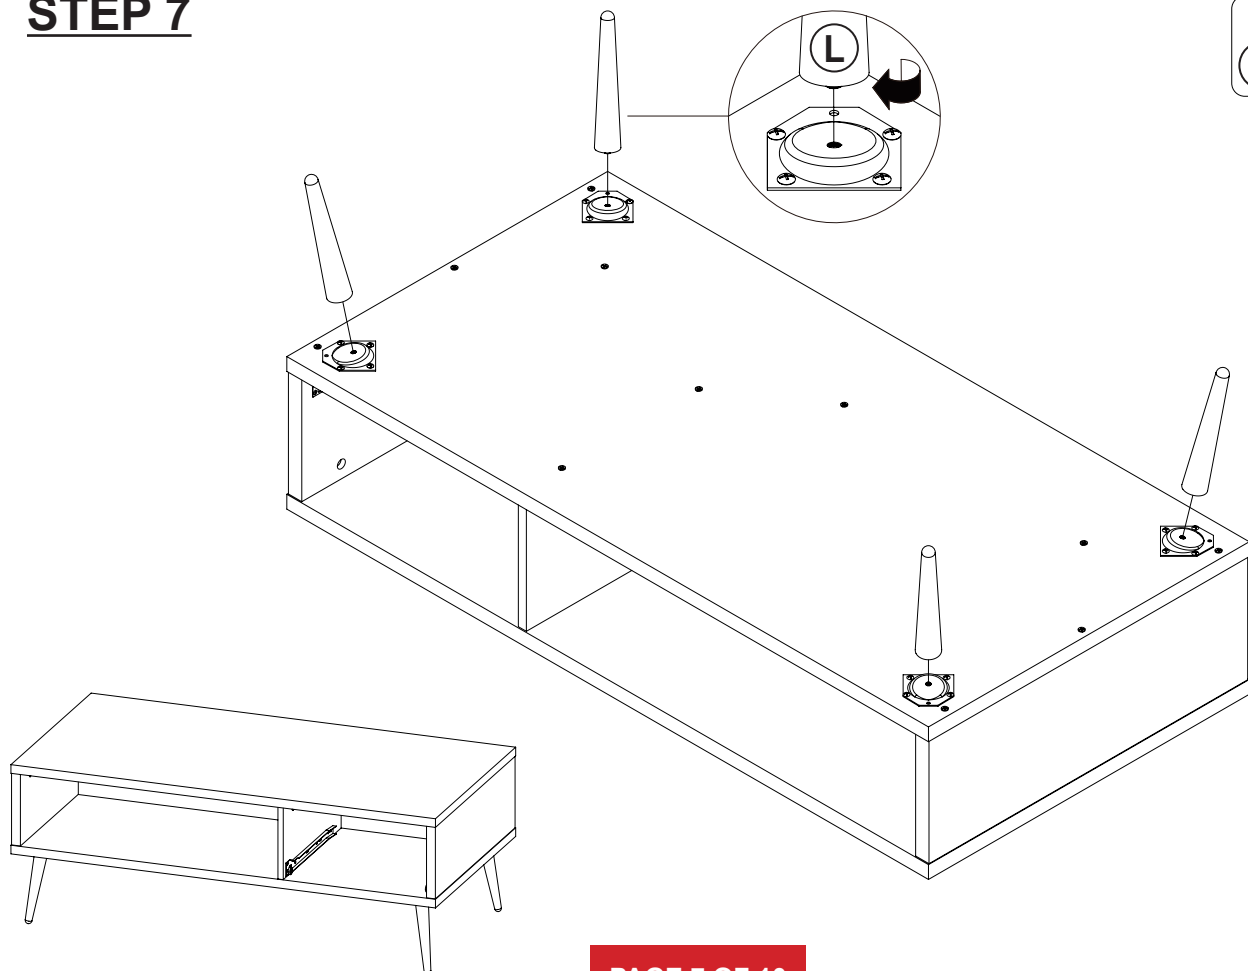


ITEM: **701038**

 
STEP 8

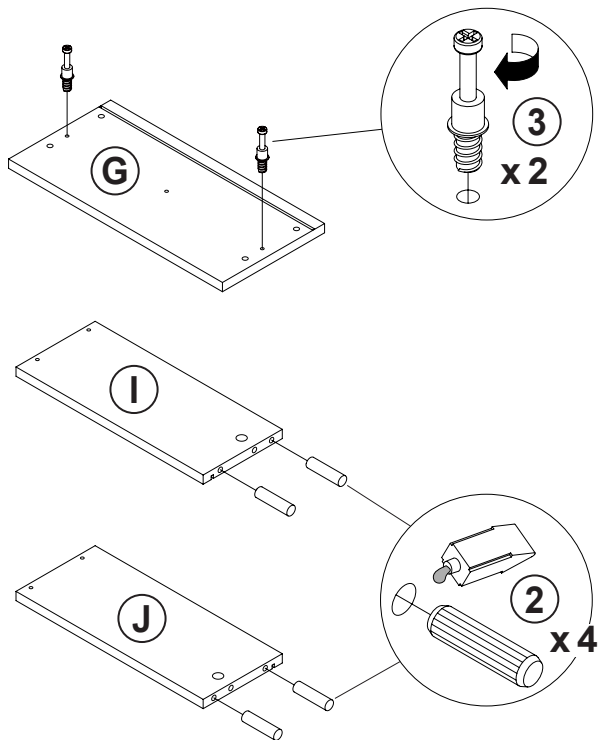

 
STEP 9

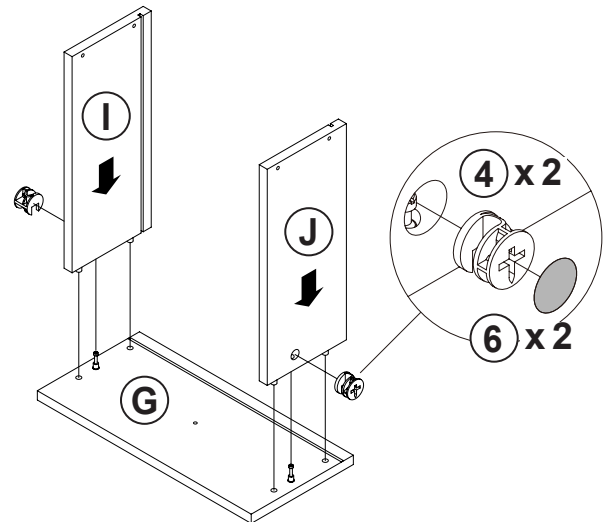

 STEP 10

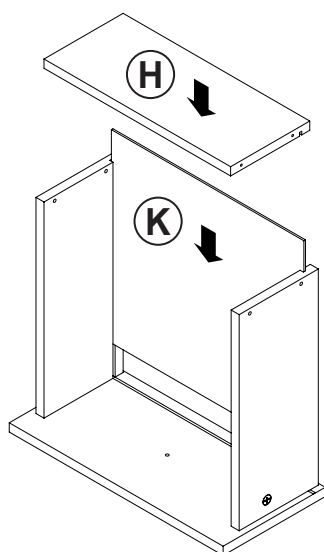


 STEP 11

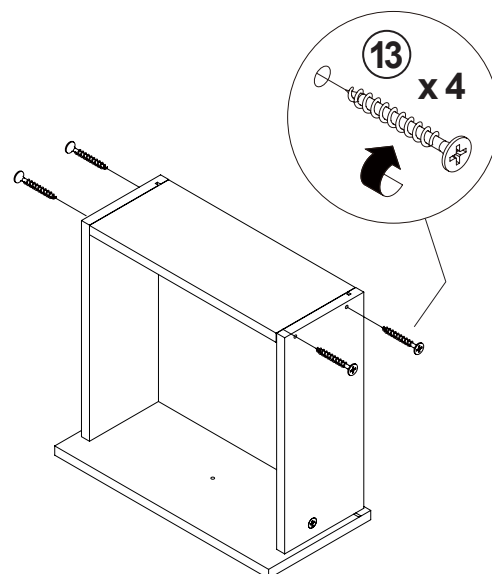


ITEM: **701038**




 
STEP 12

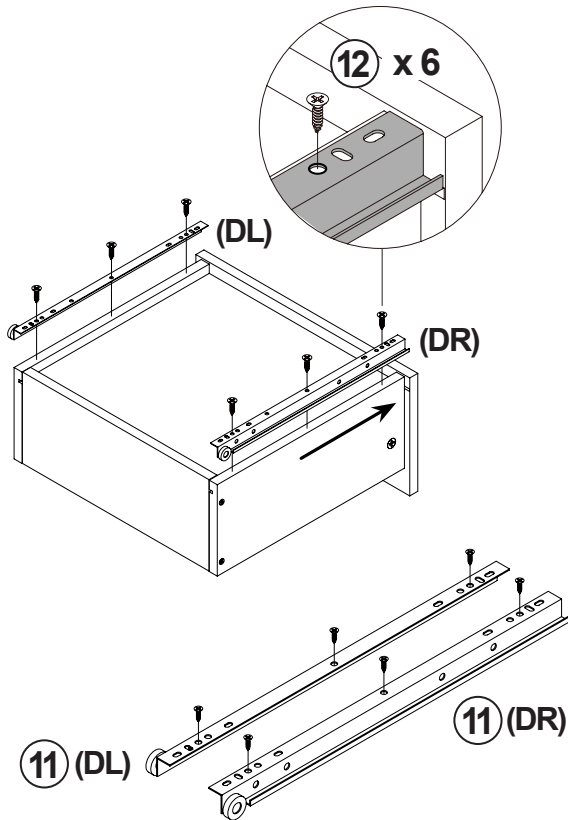

 STEP 13


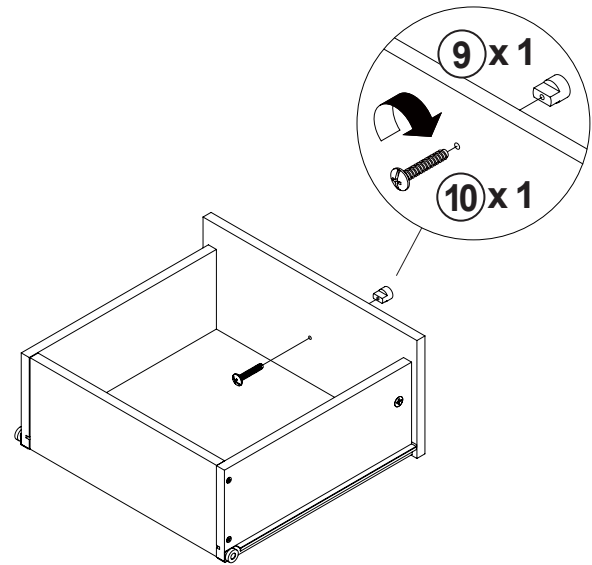


    STEP 14

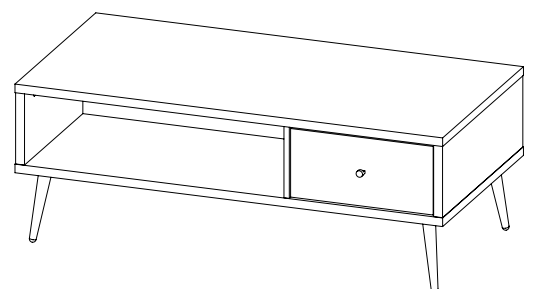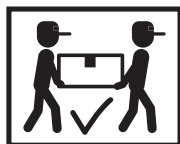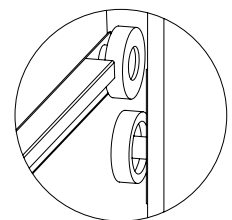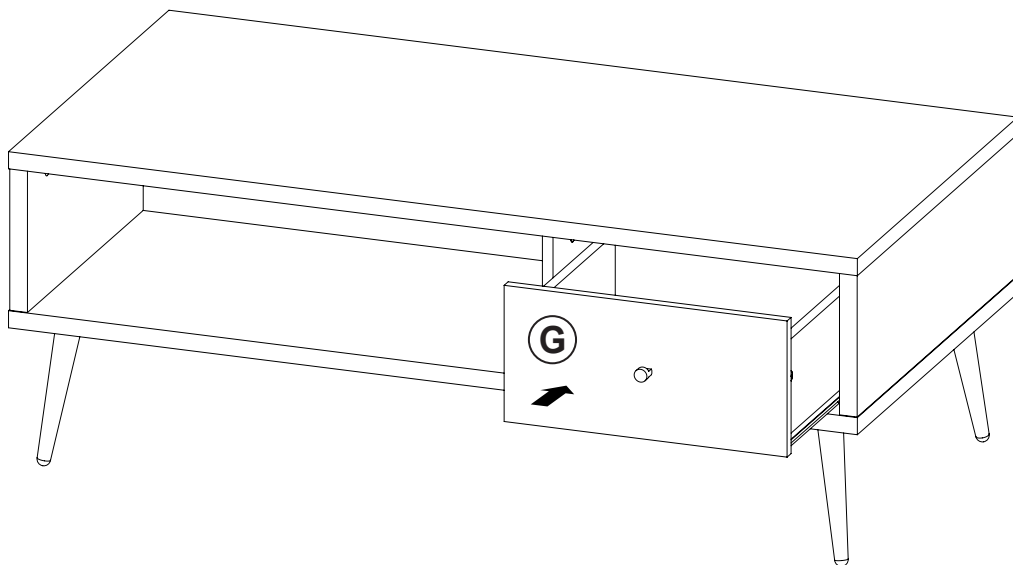

ITEM:701038

  COASTER
FINE FURNITURE

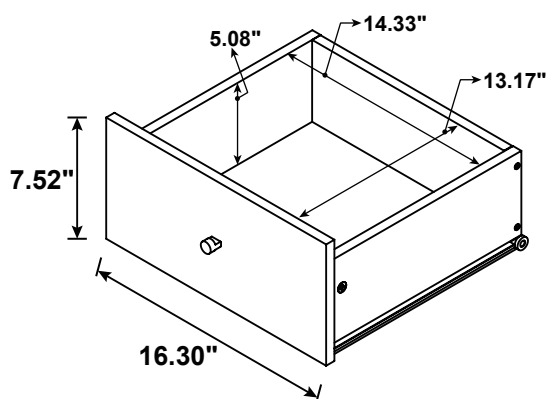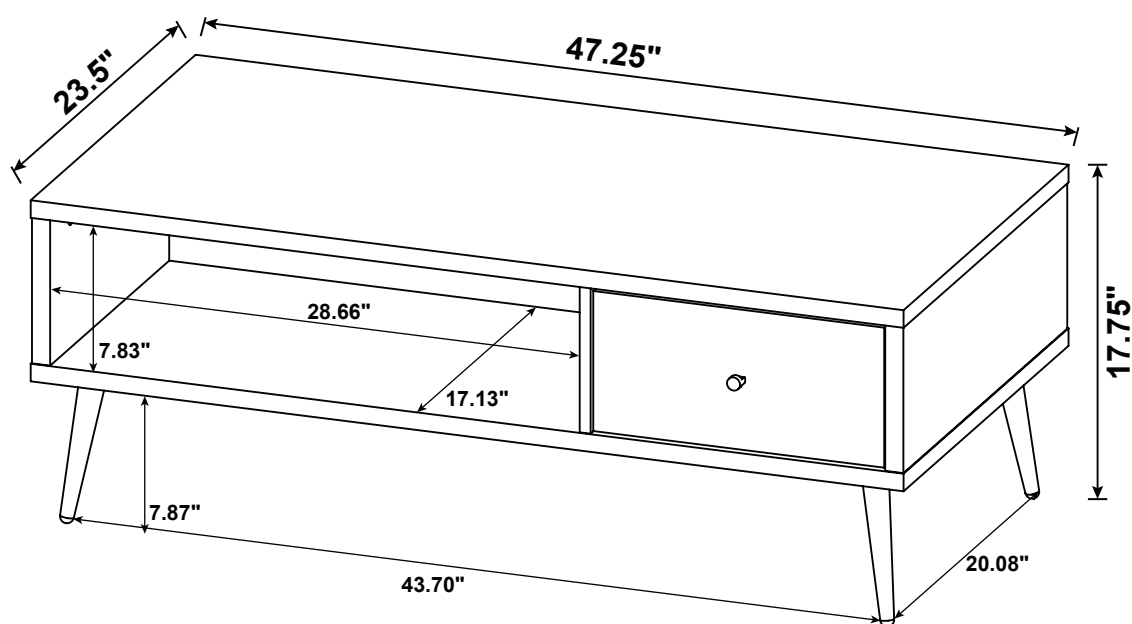

Note : Dimension tolerance $\pm 5\%$