

**ASSEMBLY INSTRUCTIONS**  
**COASTER FINE FURNITURE**



*Fine Furniture for every stage of life*

**701702**  
**TV CONSOLE**

# ITEM:701702



## ASSEMBLY INSTRUCTIONS


### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

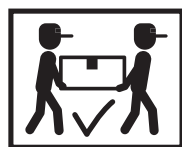

ASSEMBLY TIME


60 MINUTES

MAX TV SIZE : 65"

## PARTS IDENTIFICATION

 A


LEFT SIDE  
PANEL

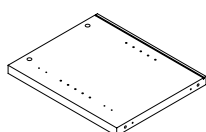

1 PC

B

 
RIGHT SIDE  
PANEL

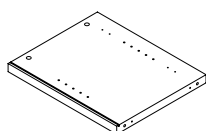

1 PC

C

 
LEFT DIVIDER  
PANEL

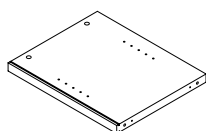

1 PC

D

 
RIGHT DIVIDER  
PANEL

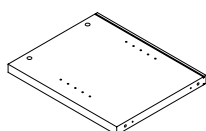

1 PC

E

 
BOTTOM PANEL

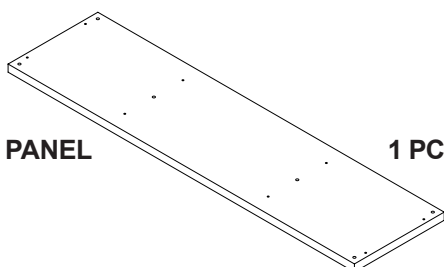

1 PC

F

 
CROSS PANEL

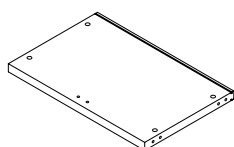

1 PC

G

 
ADJUSTABLE  
PANEL



2 PCS

H

 
TOP PANEL

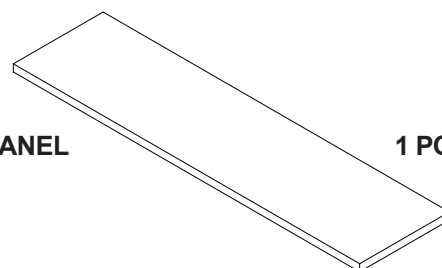

1 PC

I

 
BACK PANEL

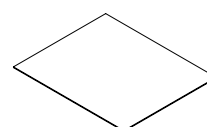

2 PCS

J

 
UPPER BACK  
PANEL



1 PC

K

 
LOWER BACK  
PANEL

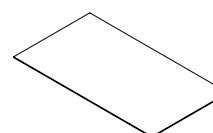

1 PC

L

 LARGE LEFT  
DOOR


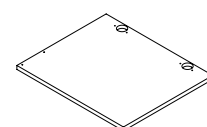


1 PC

   

 
 
 


 
 
 
 

 
 
 
### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.
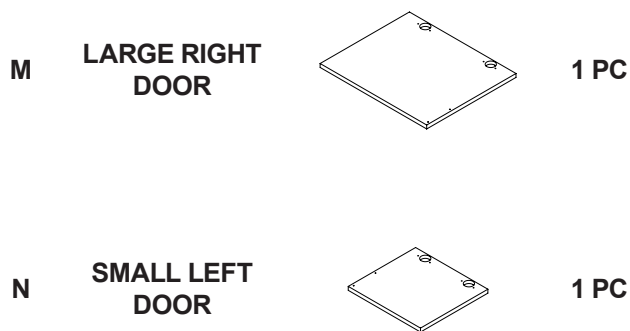
# ITEM:701702



## HARDWARE IDENTIFICATION

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	9	HANDLE SCREW ø3x15mm BLK		8 PCS
2	WOODEN DOWEL ø8x30mm		20 PCS	10	HINGE ø35mm SR		8 SET
3	CAM BOLT ø7x35.5mm SR		12 PCS	11	HINGE SCREW ø4x15mm SR		32 PCS
4	CAM LOCK ø15x12mm SR		12 PCS	12	FOOT ø35xH19mm		6 PCS
5	BOLT ø9.5x55mm SR		8 PCS	13	FIXER		6 PCS
6	PIN FOR ADJUSTABLE SHELF ø4.9x8mm SR		8 PCS	14	FIXER SCREW ø3x19mm SR		6 PCS
7	DOOR CATCH		3 PCS	15	STICKER ø20mm		2 PCS
8	HANDLE L=120mm BLK		4 PCS				

Z8,Z10,Z12 not included in blister packaging.

 
 
### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.




ITEM: **701702**

**COASTER**  
FINE FURNITURE

## STEP 1

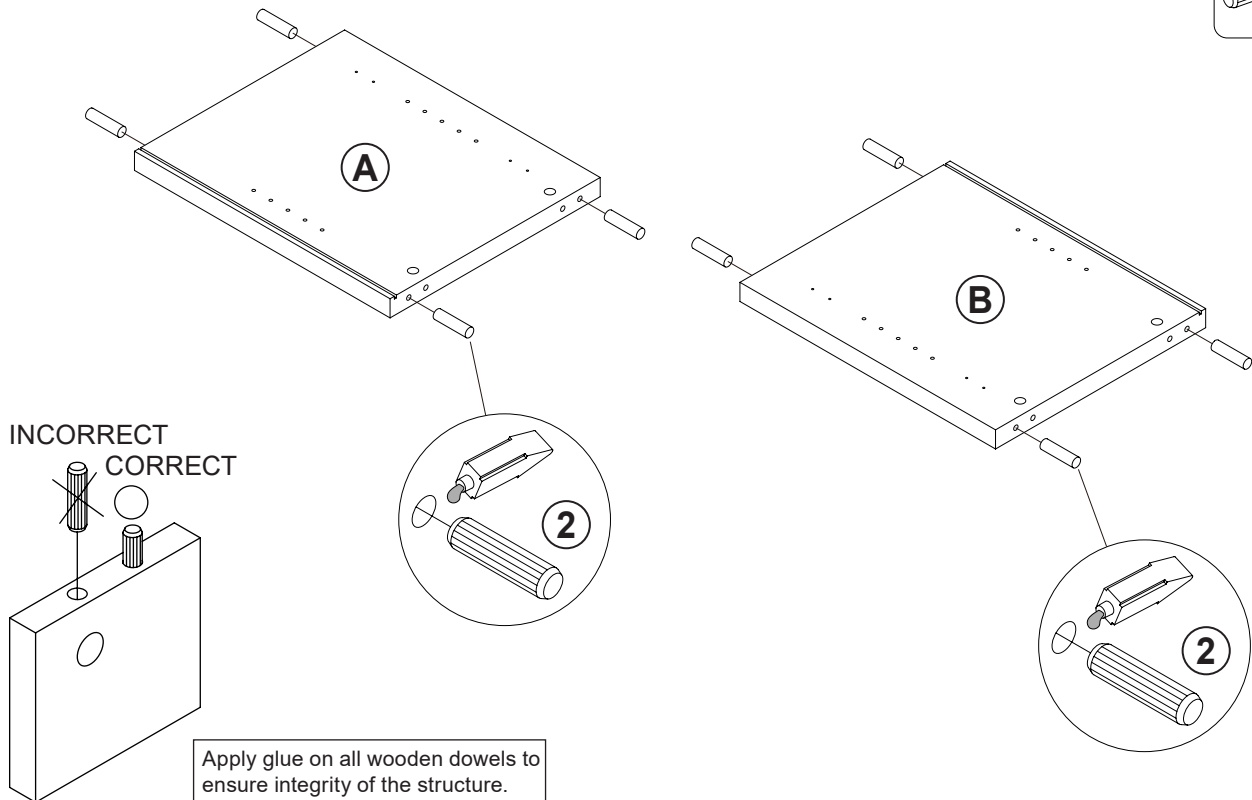


## STEP 2

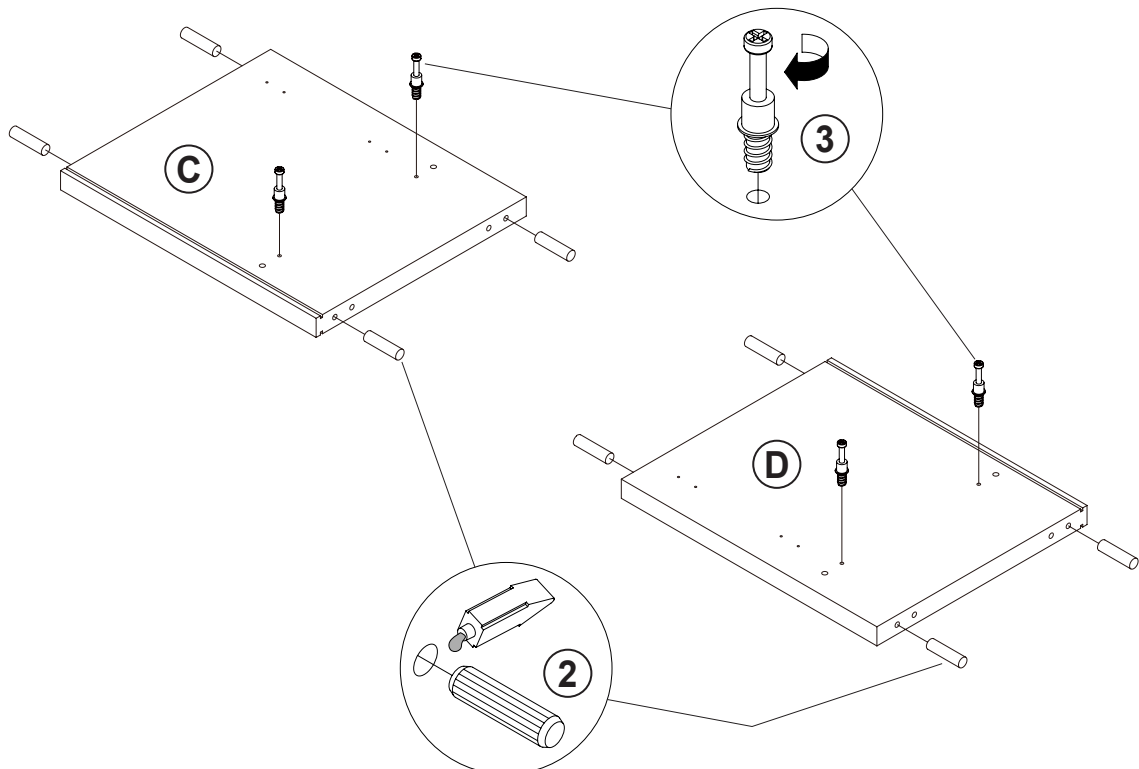   


ITEM: 701702

**STEP 3**

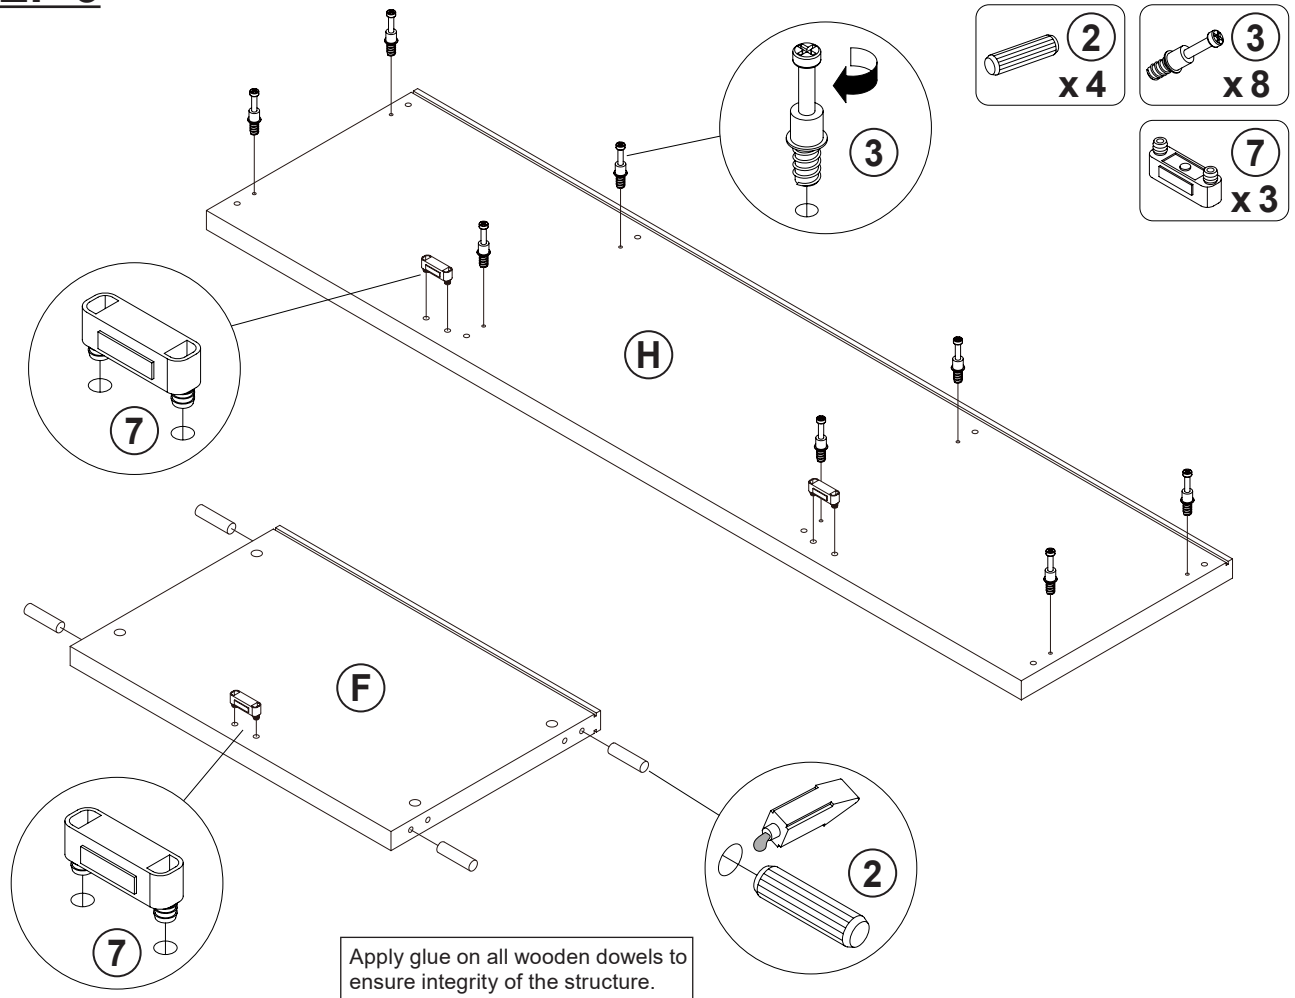 



**STEP 4**

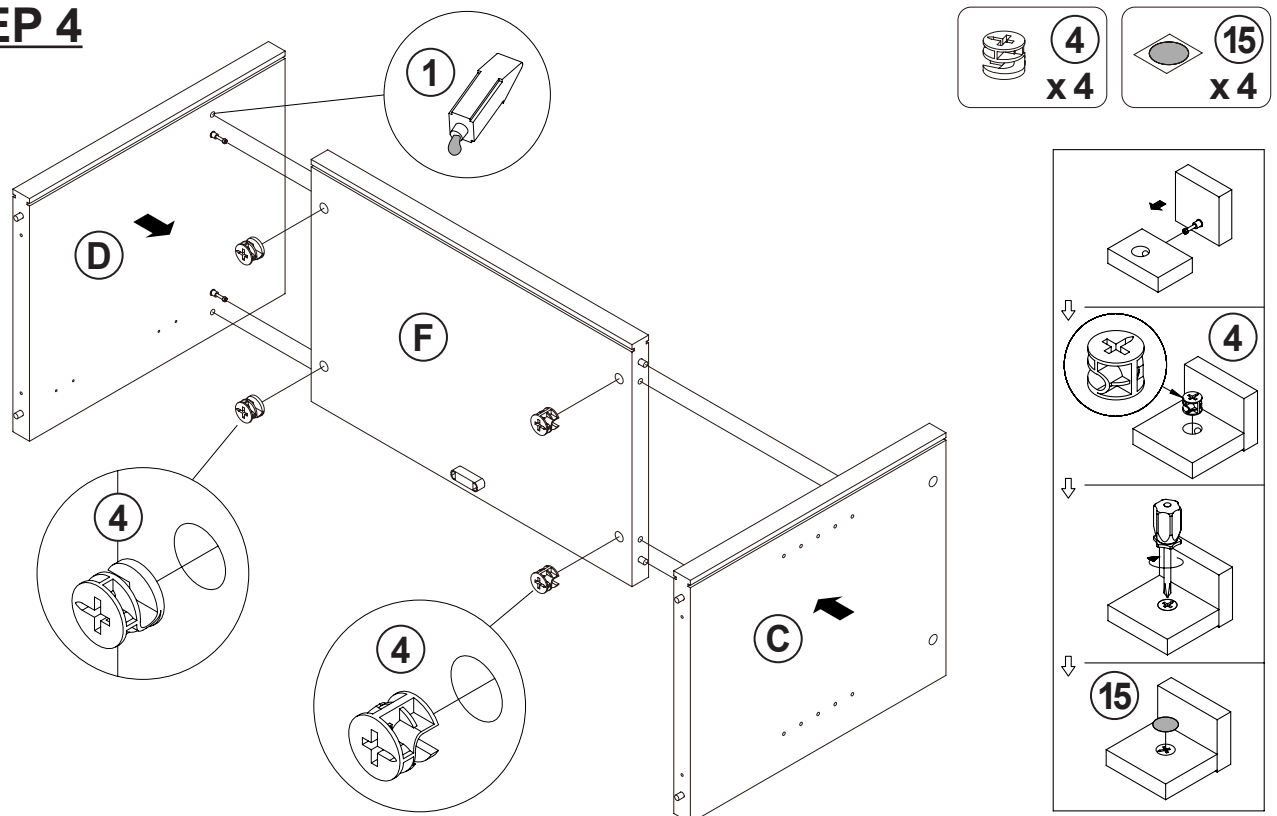 



ITEM: **701702**

**STEP 5**

  **COASTER**  
FINE FURNITURE

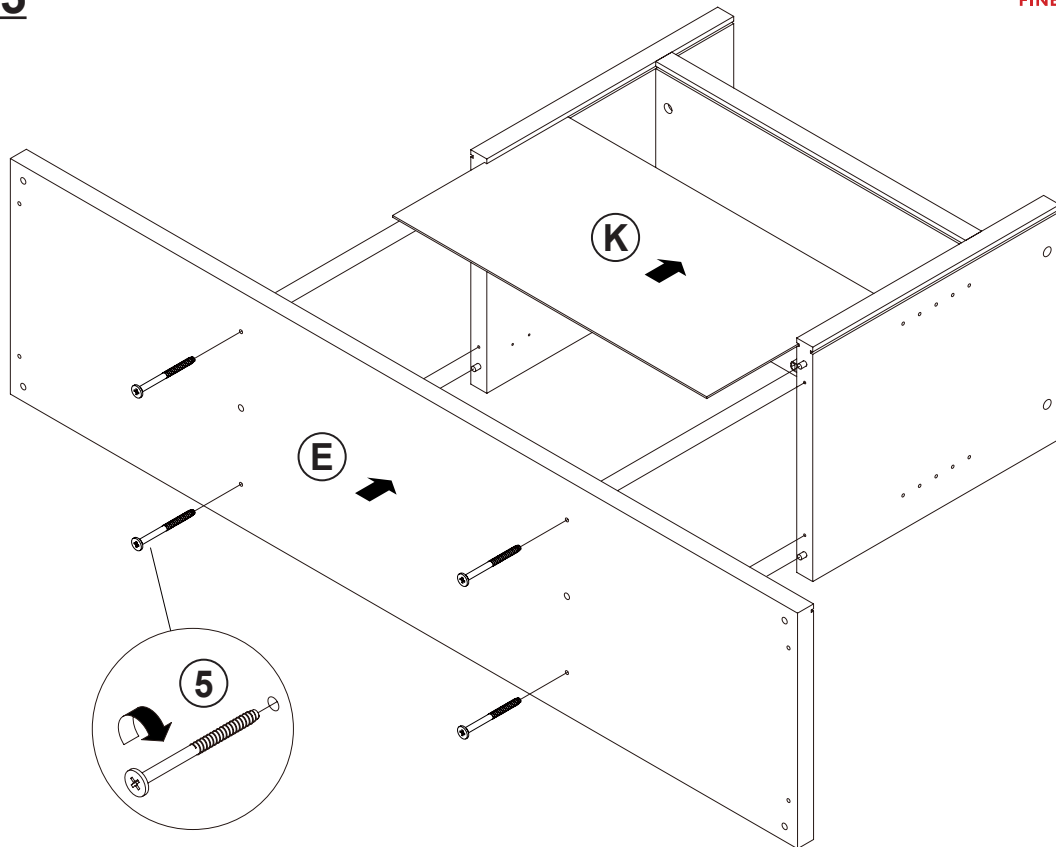



**STEP 6**

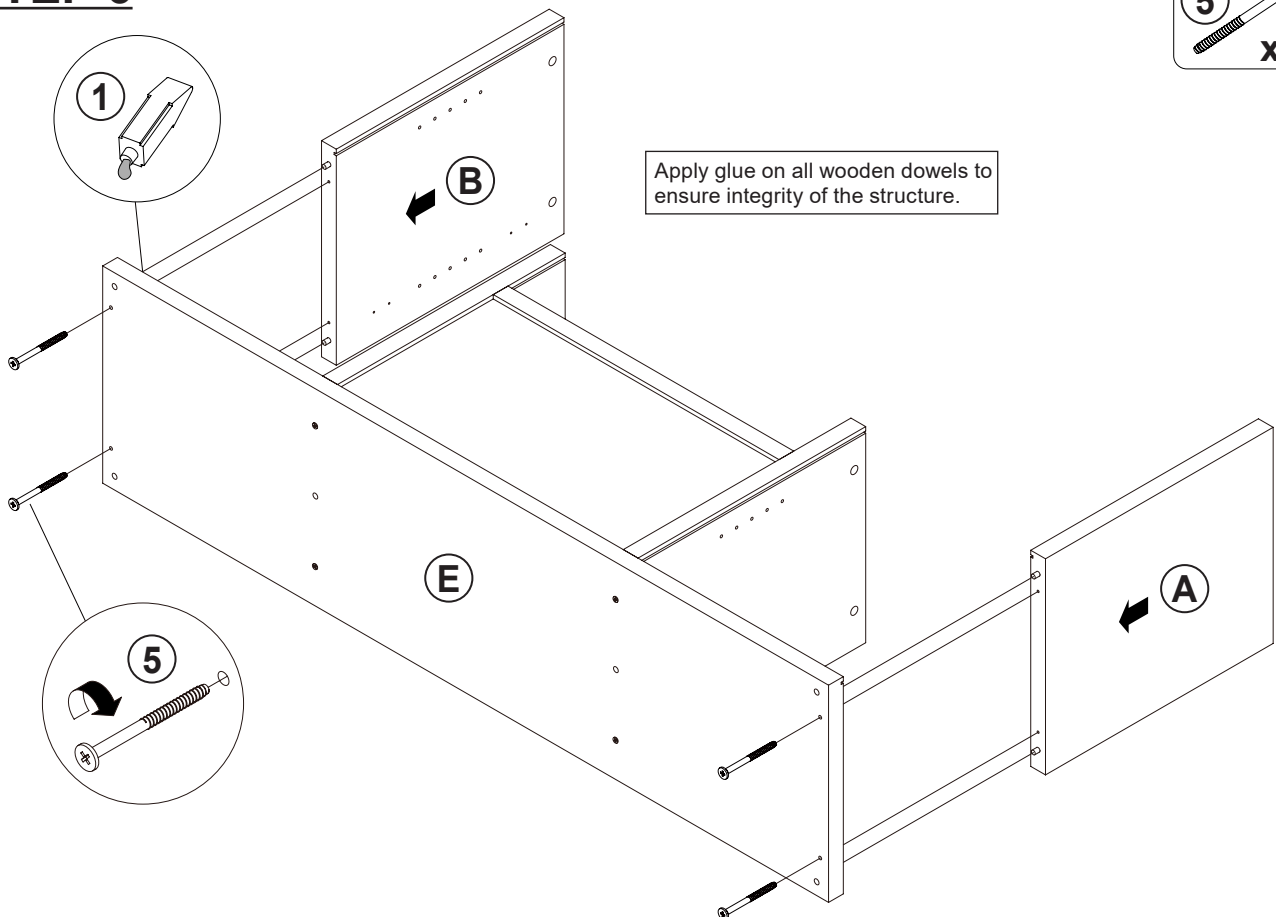  



ITEM: **701702**

**COASTER**  
FINE FURNITURE

**STEP 7**

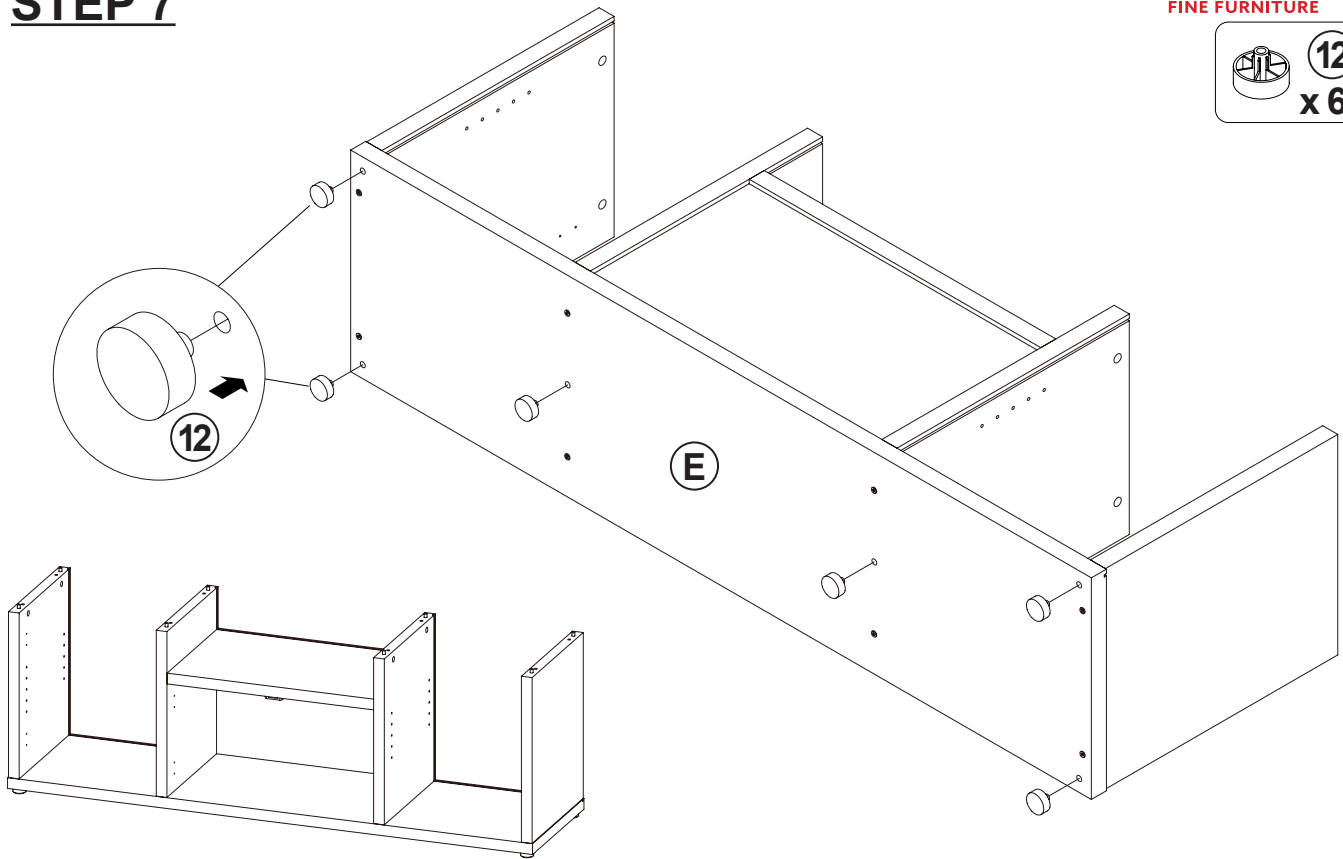  


**STEP 8**

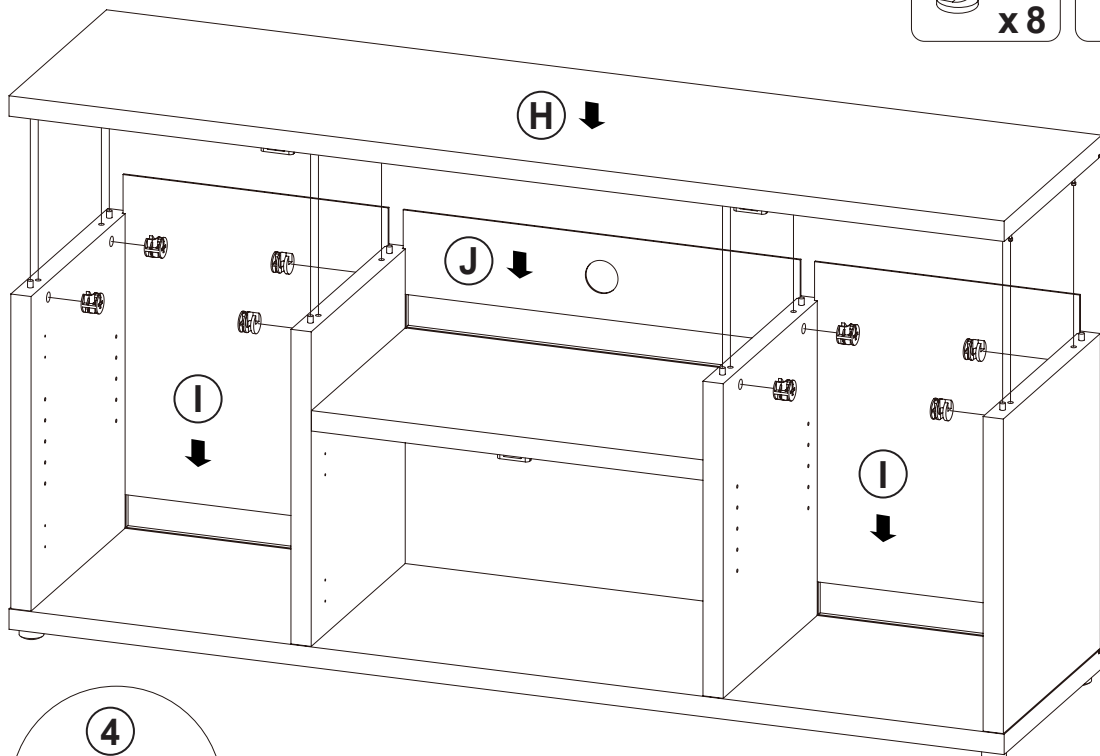  


ITEM: 701702

## STEP 9

 **COASTER**  
FINE FURNITURE

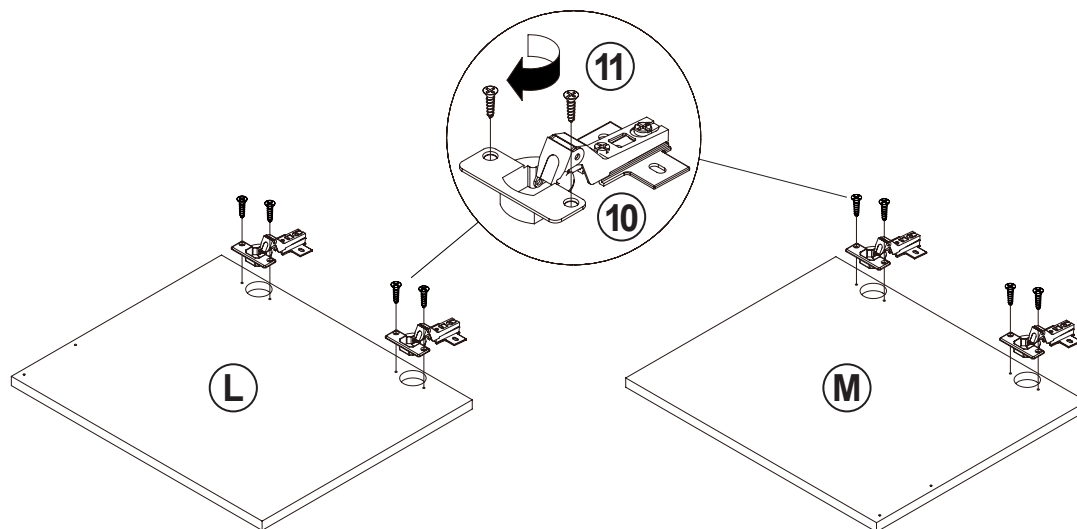

## STEP 10



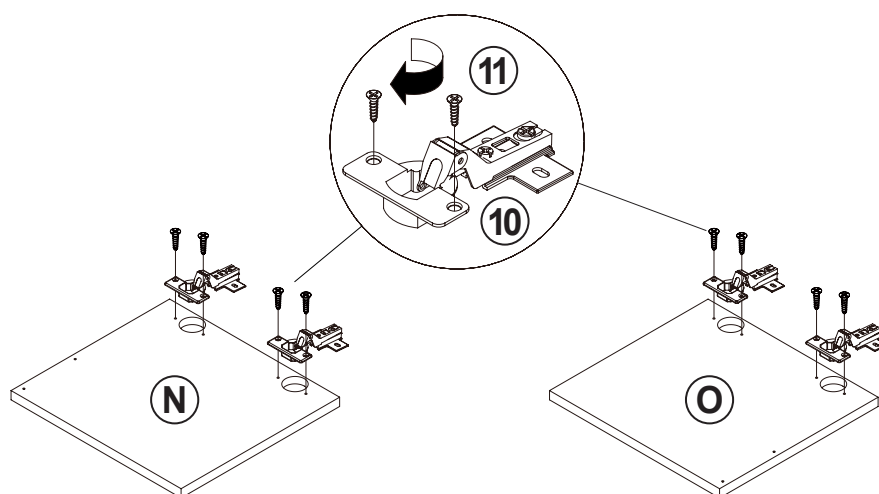 




ITEM: **701702**

**COASTER**  
FINE FURNITURE




## STEP 11

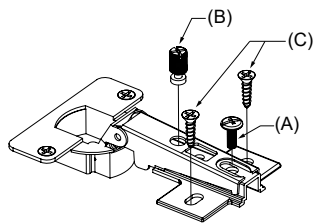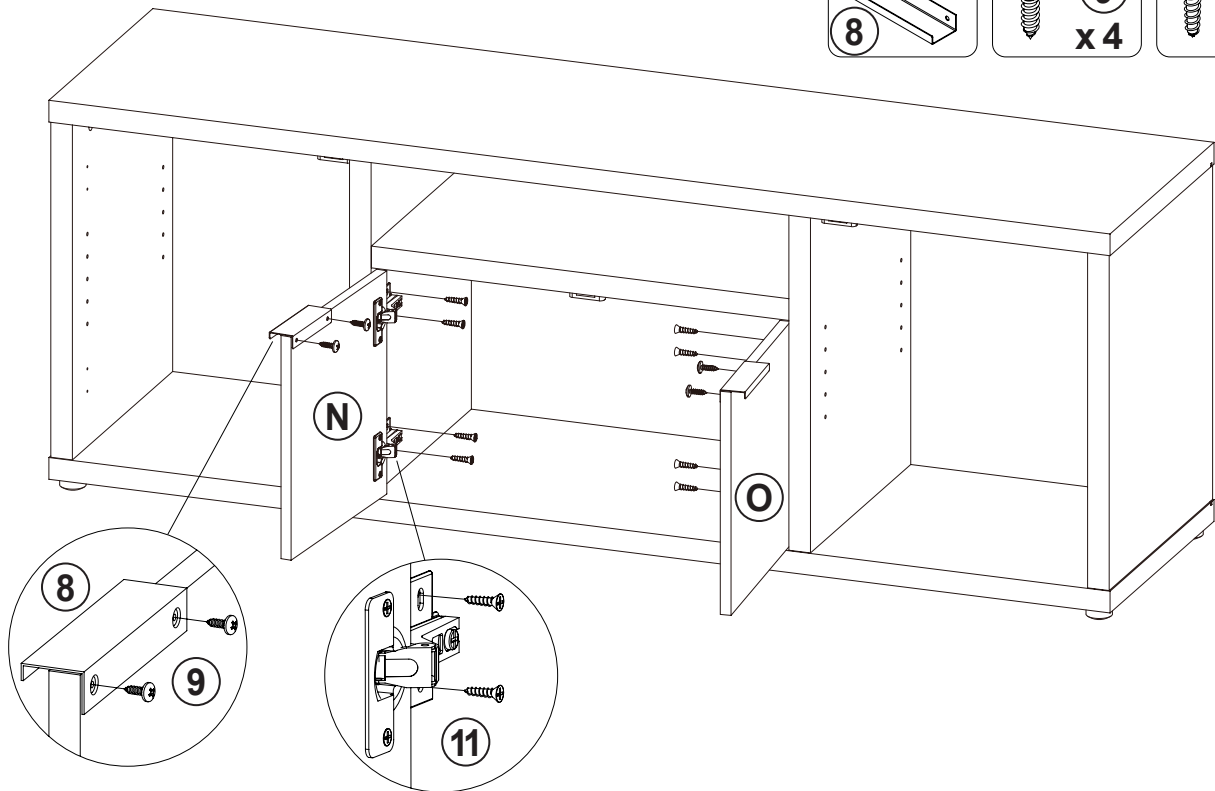   




HORIZONTAL BY  
SCREW A ADJUSTMENT

LATERAL BY  
SCREW B ADJUSTMENT

   VERTICAL BY  
SCREW C ADJUSTMENT

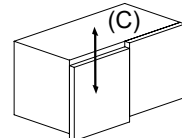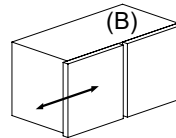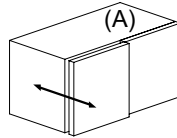



## STEP 12

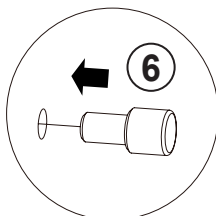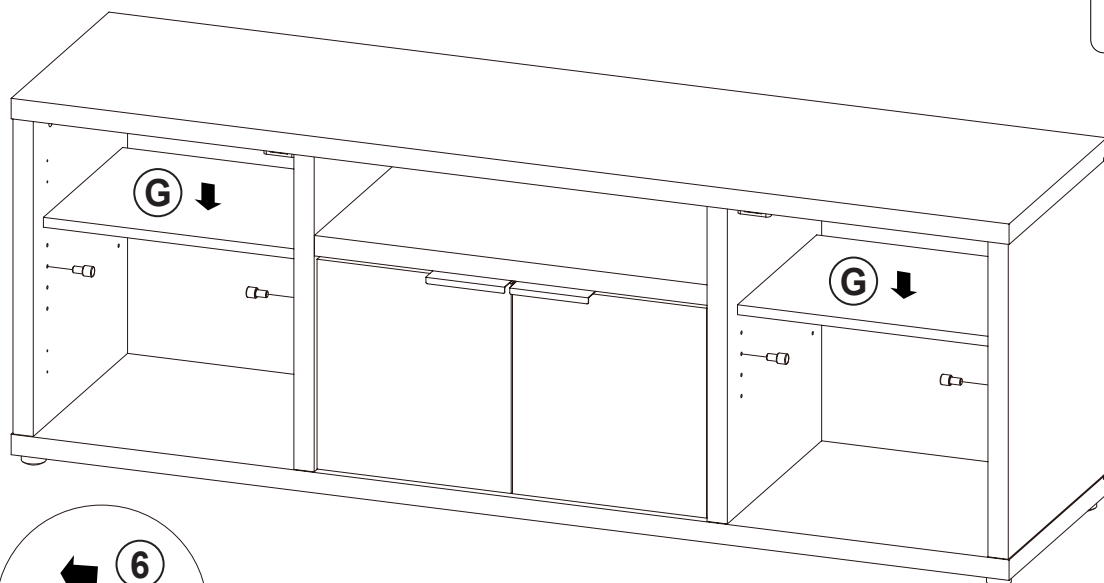   

ITEM: 701702

**COASTER**  
FINE FURNITURE




## STEP 13

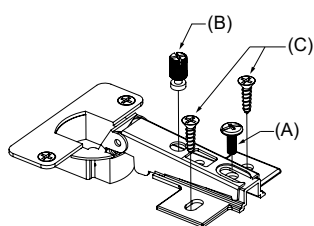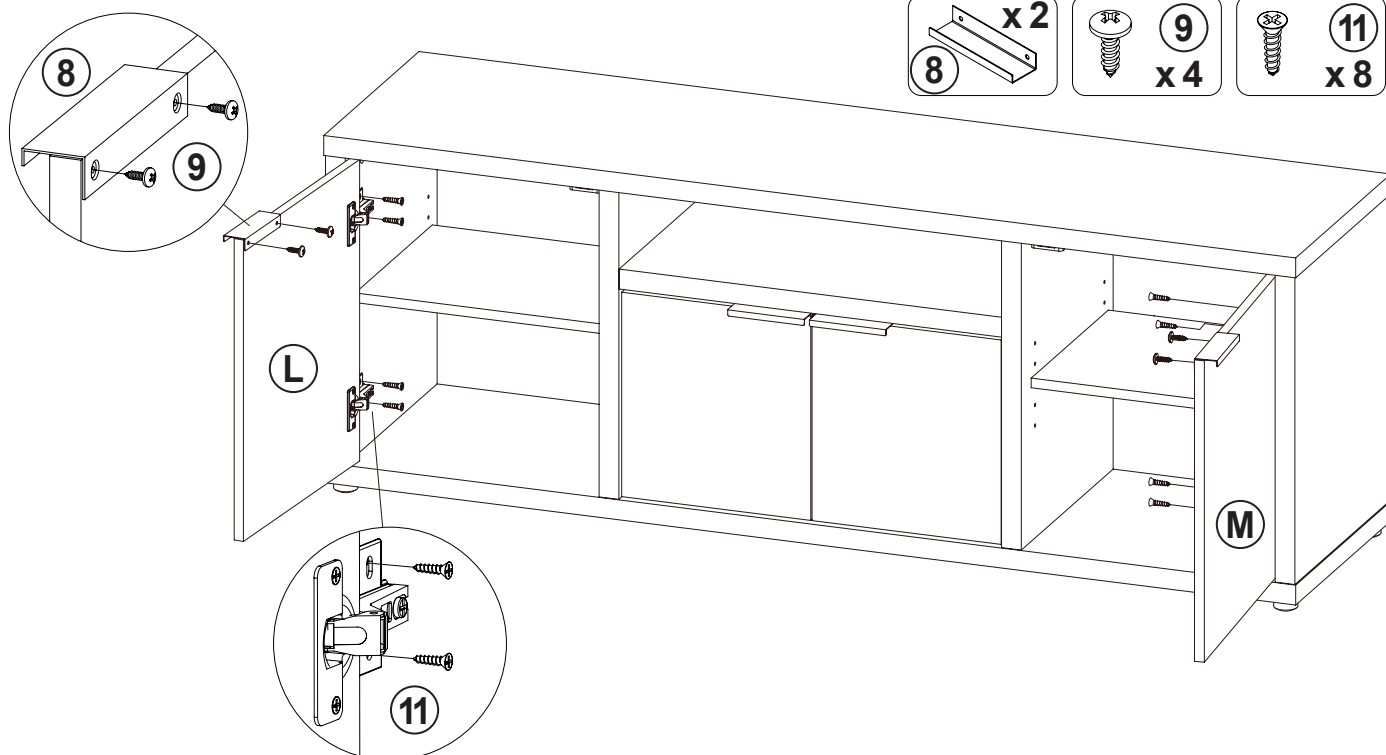  



HORIZONTAL BY  
SCREW A ADJUSTMENT

LATERAL BY  
SCREW B ADJUSTMENT

   
VERTICAL BY  
SCREW C ADJUSTMENT

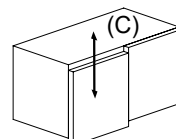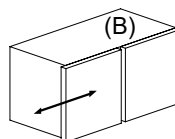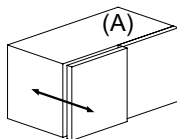

## STEP 14

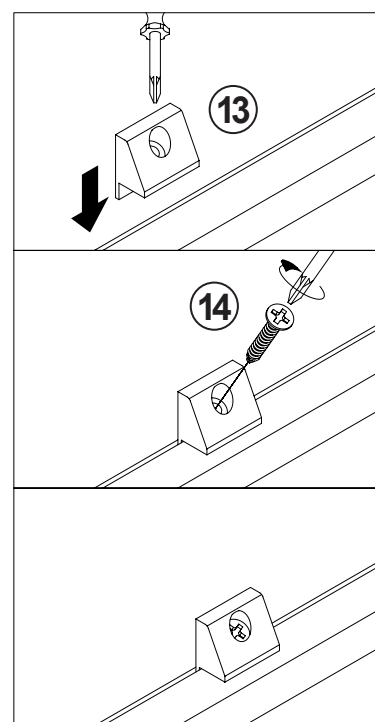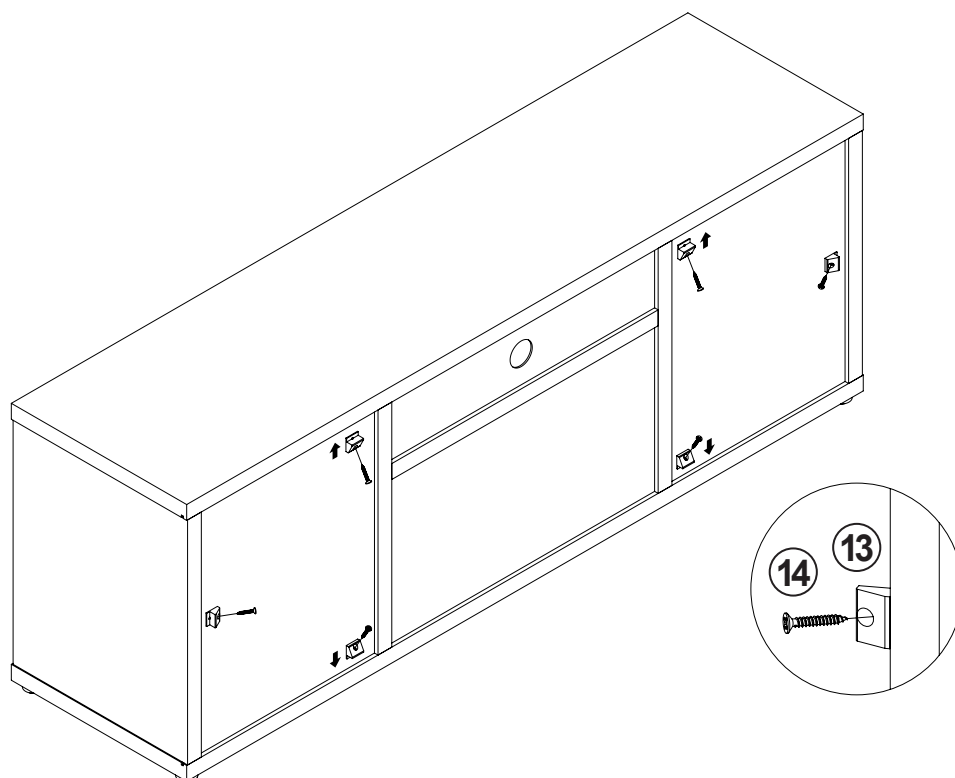  

ITEM: 701702

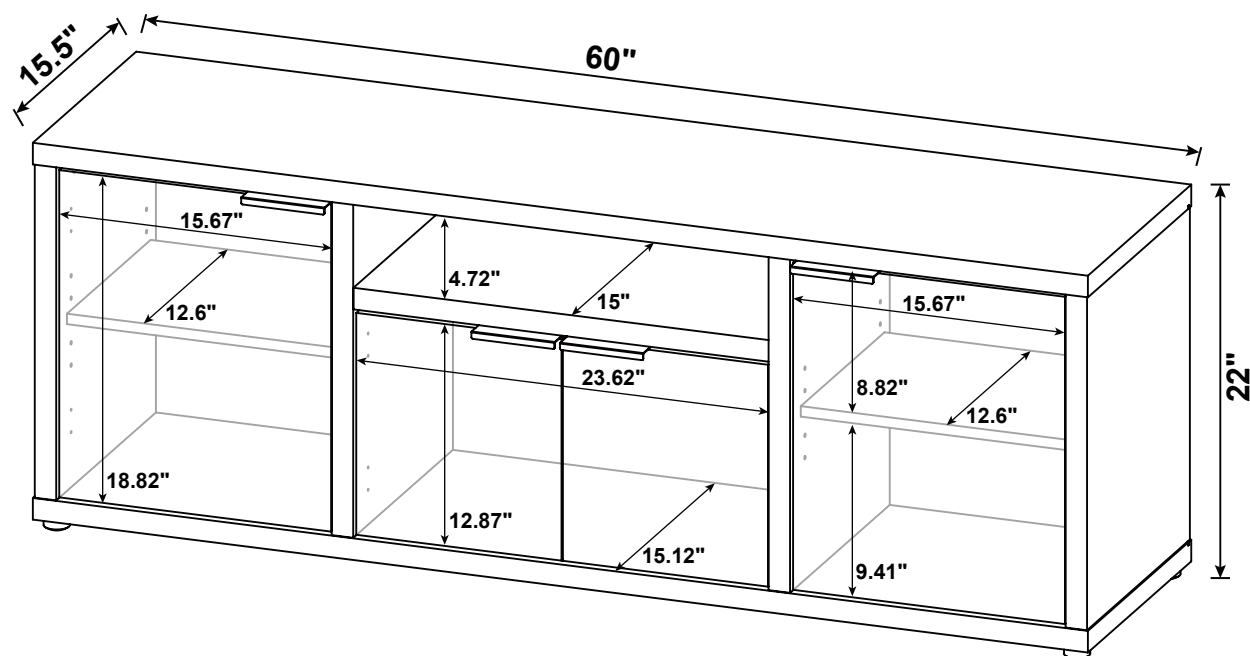 

**Note :** Dimension tolerance  $\pm 5\%$