



*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

703003
TV Console

ITEM: 703003



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A TV CONSOLE

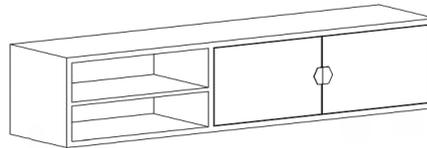

1PC

 
B LEG FRAME



2PCS

HARDWARE IDENTIFICATION

1 BOLT
(8 X 20MM-BLK)



8PCS

2 ALLEN WRENCH
(5 X 70MM-BLK)



1PC

3 FLAT WASHER
(10 mm - BLK)




8PCS

ITEM: **703003**





ASSEMBLY INSTRUCTIONS



STEP 1

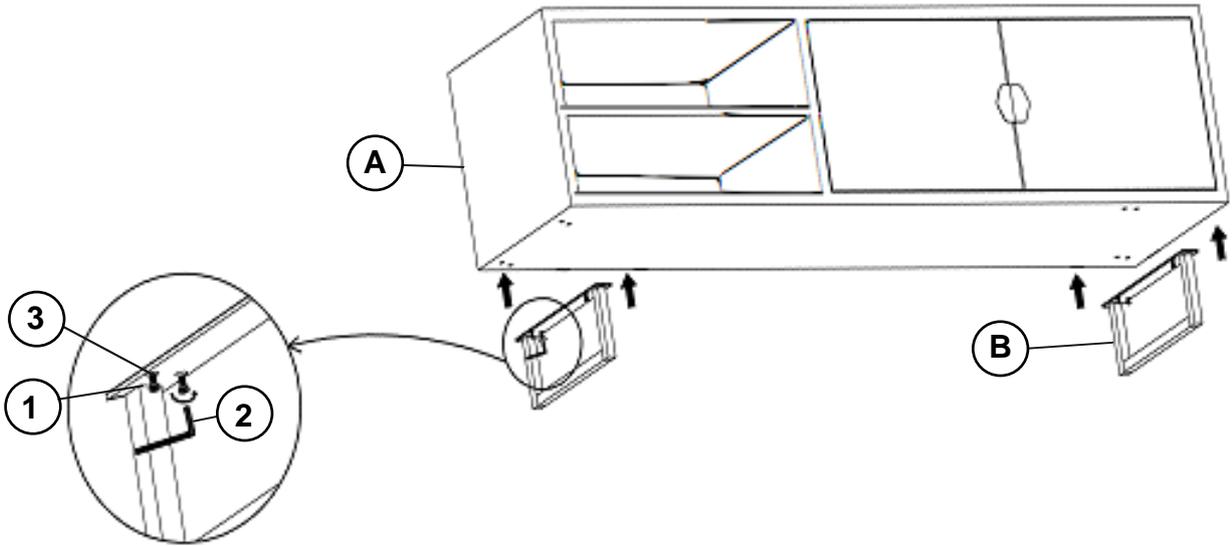

STEP 2
COMPLETE

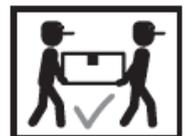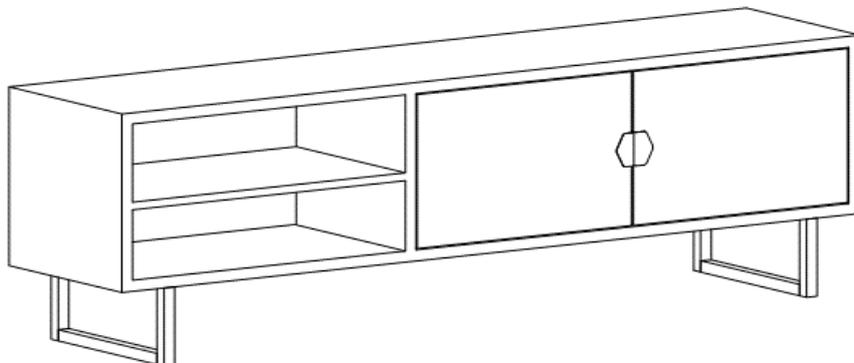

ITEM: 703003

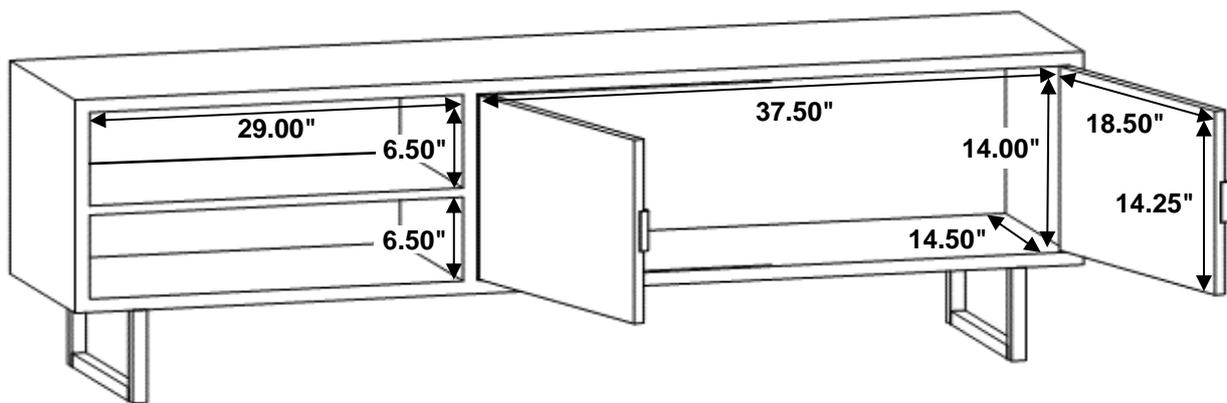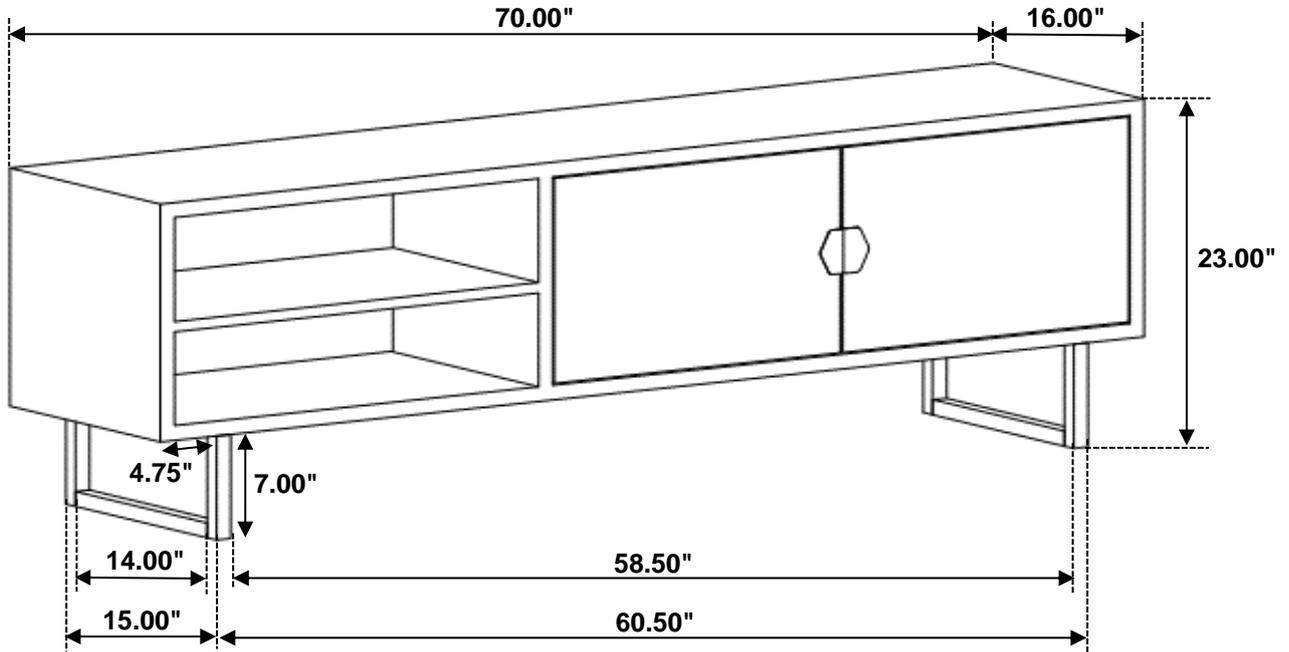

Note : Dimension tolerance $\pm 5\%$